

WAVEWIN

**DEVICE MANAGER, DISPATCH TABLE,
FILE MANAGEMENT & ANALYSIS**

OPERATIONS GUIDE

SOFTSTUF INC.

SOFTSTUF, INC.
SOFTWARE STRUCTURE FOR UNLIMITED FUNCTIONALITY
P.O. Box 40245
PHILADELPHIA, PA 19106-0245
1-800-818-3463 · 215-922-6880

www.softstuf.com
www.wavewin.net

Copyright © 1991-2009 by Softstuf, Inc.
All rights reserved.
Printed in the United States of America.

Last Update: 09/01/2009

Acknowledgments

Wavewin is a registered trademark of Softstuf Incorporated.
Windows is a registered trademark of Microsoft Corporation.
All other products and brand names are trademarks or registered trademarks of their respective holders.

Preface

This document contains information about data collection with Wavewin. The document also describes the Wavewin Dispatch application. A number of examples are provided including communicating with devices from Hathaway, Mehta, Schweitzer, ABB, GE, etc.

Documentation Format

The documentation is structured to the following format:

- Chapter 1: Installation and Requirements.
- Chapter 2: Device Manager Quick Start.
- Chapter 3: Dispatch Table Quick Start.
- Chapter 4: File Manager Quick Start.
- Chapter 5: Analysis Quick Start.
- Chapter 6: Fields and features in the system.
- Appendix A defines the script language used in the Drivers.ini file.
- Appendix B lists the available function keys, navigational keys, and menu buttons.

This document is intended for use by individuals working in protection, engineering, and system operations.

Table of Contents

CHAPTER 1	1
SYSTEM REQUIREMENTS & INSTALLATION	1
System Requirements	1
Installation	1
Technical Support	3
CHAPTER 2	5
DEVICE MANAGER QUICK START	5
Configuration Example	5
Device Manager Table	5
Polling Timers	6
Initialize Modems	6
RS232 Devices (Poll Drivers)	6
Dialup Devices (Dial Drivers)	14
Ethernet Star (Network Drivers)	42
Stop Modems	68
System Services	68
Device Manager Features	68
Device Configuration Fields	68
Long File Naming Format	71
Opening Device Table	71
Creating/Editing Device Records	72
Duplicating Devices Records	73
Save & Archive Dialog	73
Export	75
Import	75
Navigating	75
Marking/Unmarking Devices	76
Deletng Devices	76
Sorting Devices	76
Customizing the Device Table	76
Querying Devices	77
Creating Function Keys	77
Communicating with an ASCII Device	79
Communicating with A Binary Device	80
Viewing Event Data	81
Capturing Data	82
Multiport Interrogation Display	82
Animated CAD-DXF	83
Exporting devices to the Dispatch Table	85
Preparing the Device Manager for Dispatch Requests	85
CHAPTER 3	87
DISPATCH TABLE QUICK START	87
Dispatch Example	87
Open the Dispatch Table	89

Command Line Parameter	90
Dispatch Polling	91
Table Features	92
Requesting a Poll	93
Displaying Event Files	93
Viewing Meter Information	93
Refresh the Table	94
Customizing the Dispatch Table	95
Querying Devices	95
Sorting Devices	96
Marking/Unmarking Devices	96
Deleting Devices	96
Saving the Dispatch Table	96

CHAPTER 497

FILE MANAGER QUICK START	97
File Manager Features	97
Long File Naming Format	98
ComName(s) Rename	98
ComName Properties	99
Command Line Parameters	100
Navigating	101
Updating the Active Directory	102
Marking Files	103
Sorting Files	103
Copying or Moving Files	103
Email Files	105
Zip Files	105
Customizing the Table Display	106
Printing the File Table	106
Compressing COMTRADE ASCII Files	107
Saving as COMTRADE	107
Running Applications	108
Displaying Oscillography Records	108
Associating File Types	109
Device Configuration	111
Dau-Def Editor	112
Tesla Files	113
Load Analysis	114
Viewing/Modifying ASCII Files	120
Viewing/Modifying Binary Files	121
Viewing Waveform Summaries	122
Waveform File(s) Options	124
Open Selected File	124
Open All Marked Files	124
Append Waveform Files	124
Merge Waveform Files	126
File Reports	129
Generating Calibration Reports	129
Generating Sequence of Events (SOE) Reports	129

Generating Sequence of Events (SOE) Summaries	130
Appending Log Files	131
Combining Log Files	131
Viewing CAD-DXF Files	131
Viewing ASCII Files in Database Format	133
Show/Hide Channel Titles	134
Querying Files	135
Dsiturbance Report.....	136

CHAPTER 5 143

ANALYSIS QUICK START..... 143

Analysis Features	143
Phasors	144
Harmonics	144
Periodic Log Files	147
Circular Chart	148
Display Driver's Data Type	149
ReOpen Waveform File	150
Email Active File	151
Navigating	151
Setting the Cursor Bars	152
Data Bar	152
Reference Bar	152
RMS Bar	152
Fault Bar	152
Horizontal Bars	152
Save Displayed Values	153
Select Analog Columns	153
Select Analog Channels	154
Arrange Analog Channels.....	154
Setup the Values File.....	154
Mark & Save.....	154
Open Values File	154
Clear Values File	155
Default Format.....	155
User Formats.....	156
Open Format File.....	156
Create New Format Files	156
Marking, Deleting, and Restoring Channels.....	156
Scaling Analog Channels.....	157
Zooming Channels	157
Selecting Predefined Views	157
Repositioning Channels.....	158
Printing Waveform Files.....	158
Saving as COMTRADE	158
Viewing Analog Data	159
Viewing Digital Data.....	161
Customizing the Analysis Display	162
Time & Sample Based Displays.....	163
Fault Reference Time Bar.....	163

Superimposing Analog Channels.....	163
Changing Analog Channel Colors.....	163
Synchronizing Data Cursors	163
Append Open Files	164
Merge Open Files	164
Change Frequency	169
Truncate Cycles.....	171
Duplicate Cycles.....	173
Restore Original Data	174
Mark Raw Values	174
Mark Peak Values	175
Mark Change in Sign Values	176
Change Analog Values (Primary \leftrightarrow Secondary).....	177
Adjust Files Time	179
Creating Virtual Channels.....	180
Single Ended Fault Location.....	185
Play Channels Audio	189
Align Channel Data.....	190
User Views	192

CHAPTER 6 195

FIELDS & FEATURES	195
Active Topic - Help	195
Adjust Files Time	195
Align Channel Data.....	195
Ametek TR*/DL*/PQR128 Driver	196
Analog Mark/Unmark All	196
Analog Table View.....	196
Animated CAD- DXF.....	197
Append Logs	197
Append Open Files	197
Append Waveform Files	198
Ascending Sort.....	198
ASCII Driver	198
ASCII Editor.....	198
ASCII Event Files	199
ASCII Terminal Mode	199
AS Status Field.....	199
AtFile	200
AtRec	200
AtTab.....	200
Audio Wave Driver.....	200
Auto Detect Driver	200
Auto Scaling	200
Background Color.....	201
Binary Event File	201
Binary Terminal Mode.....	201
BPRO Driver.....	202
Calibration Report.....	202
Change Device Configuration.....	203

Change Drive/Directory	203
Change DXF Files	203
Change Frequency	204
Change Passwords	204
Change Query Operators	205
Channel Background Color.....	205
Channel Information (On/Off).....	205
Clear Analog Colors.....	206
Clear Query Area.....	206
Combine Logs	206
Combined View	206
Comma Delimited Table Driver.....	207
ComName Properties	207
ComName(s) Rename.....	207
Company Column.....	208
Company Name (Save & Archive)	208
Compress COMTRADE Files	208
COMTRADE Driver.....	208
Condense Time	209
Copy/Cut/Paste Files.....	209
Copy Device Records.....	209
Copy Files	209
Copy Text.....	210
Create Directory	210
Cut Text.....	211
Cycle Hop.....	211
D&T	211
Data Bar	211
Decrease Amplitude	212
Delete Devices	212
Delete Files	212
Delete Text.....	213
Delta X	213
Delta Y	213
Descending Sort.....	213
Device Column	213
Device Field.....	214
DFR I II IIB & 2000 Driver	214
Digital Mark/Unmark All	214
Display Dialog.....	214
Disturbance Report.....	215
DLP1/DLP3 Driver.....	215
Double Quotes/Comma Delimited Table Driver	216
Drawing Properties	216
Driver Column.....	216
Driver Configuration Dialog.....	217
Driver Data Type	217
Duplicate Cycles.....	217
Duplicate Device Record	218
DXF Animated CAD.....	219
DXF Control Dialog.....	219

DXF Driver.....	220
Edit DAU-DEF	220
Edit Device Record	220
Email Files.....	222
EMAX Long Term Driver.....	222
Equal To (=).....	222
Expand Time	223
Export.....	223
F-Type Column.....	223
Fault Bar.....	223
Fault Date Column.....	224
Fault Reference Time Bar.....	224
Fault Time Column	224
Faxtrax II (12-bit) & Director Driver	224
File Name Column.....	224
Flip Marks.....	225
Folder Tree	225
FPRO Driver	225
Free.....	226
Fs	226
Fst.....	226
Fst-Change.....	226
FTP Connection.....	226
Function Keys.....	227
Group Marked Analog Channels.....	227
Group Marked Rows.....	227
Harmonics Table	228
Harmonic Vectors	228
Help	228
Hexadecimal Editor	229
Hexadecimal Driver	229
Hide Mark(s).....	229
Histogram	230
Horizontal Bars	230
HP-Dif.....	230
HPeak-Dn.....	231
HPeak-Up.....	231
IEEE Long File Naming Format	231
Import	231
Increase Amplitude.....	232
InstPeak Column	232
InstVal Column	232
IntelliRupter Driver	232
Latitude Field.....	233
Less Than (<)	233
LP-Dif	233
LPeak-Dn	233
LPeak-Up	233
LPRO Driver	233
Lst	234
Lst-Change.....	234

Mark All Rows.....	234
Mark/Unmark All Channels	235
Mark/Unmark Row	235
Mark Change in Sign	235
Mark Peak Values	235
Mark Raw Values	236
Max X Pixels.....	236
Max Y Pixels.....	236
MaxPeak Column	236
MaxVal Column	237
MaxWin Column	237
MDAR REL 301/302 Driver.....	237
Medium Display	237
Merge Open Files	238
Merge Waveform Files.....	238
MinPeak Column	238
MinVal Column	239
Move Files	239
Move RMS Bar to Reference Bar.....	239
Move Reference Bar to Data Bar	240
MrkSize	240
Multiport Interrogation Display (MID)	240
New Device Configuration	241
New Device Record	241
New Device Configuration	241
New File	242
OneBit	243
Open All Marked Waveform Files	243
Open File.....	243
Optional Columns	243
Paste Device Records	243
Paste Text	244
Path/Filename (No Ext.)	244
Phasor/Circular Chart Scale Multiplier (ASM)	244
PixsDisp Column	245
Play Channels Audio	245
Primary Values	245
Print All Data	246
Print All Rows	246
Print DXF File	246
Printer Setup	246
Print File	247
Query All Rows.....	247
Query Marked Rows	247
Query Unmarked Rows	247
Recorded Channels	248
Reference Bar	248
Refresh.....	248
RefVal Column	249
Rename File/Directory	249
Reopen Waveform File	249

Replay Plus Driver	249
Resize Columns	250
Resize Sliding Window	250
Restore Mark(s).....	250
Restore Original.....	251
RFL 9300 Driver	251
RMS Column	251
RMS Bar	251
Run.....	252
Sample Based Display.....	252
Save & Archive Dialog	252
Save As	253
Save As COMTRADE (ASCII/Binary)	253
Save As Text.....	254
Save Date Column	254
Save Displayed Values(Default Format)	254
Save Time Column	255
Save User Views	255
Secondary Values	256
SEL Load Profile Driver	256
SEL Relay Driver	256
Select Lines/Views	256
Select User Views	257
Sequence of Events List.....	257
Sequence of Events Summary	258
Set Drawing Properties.....	258
Set Opening Frequency	259
Set Sort Field.....	259
Shift Marks Down	259
Shift Marks Up.....	260
Show/Hide Channel Titles	260
Show All Digital Channels.....	260
Show All Hidden	261
Show Channel Information.....	261
Single Ended Fault Location	261
Size	262
Size Column	262
Size To Original Coordinates	262
Size To Window.....	263
Software Analog Channels	263
Software Digital Channels	263
Sort All Rows	264
Sort Field	264
Sort Marked Rows	264
SR745/489 Driver	264
Start Date Field.....	265
Start Time Field	265
Substation Field.....	265
Super Impose	265
Sync Data Cursors	266
System Files	266

Tab Delimited Table Driver	266
TCode Field.....	267
Tesla Driver	267
TCP/IP Client.....	267
Test Ports	268
Time Based Display.....	268
TIS Driver	268
Total Harmonics Distortion.....	268
TotFiles.....	269
TotMarks	269
TotRecs.....	269
TotTabs	269
TPRO Driver.....	269
TPU/DPU/GPU Driver.....	270
Trace Scale Multiplier (ASM)	270
Transcan Driver	270
Trigger-Time.....	271
TrueRMS	271
Truncate Cycles.....	271
Type Column	271
Un/Mark Rows.....	271
Unmark Marks	272
View Mark(s)	272
View Raw Data File	272
Waveform Data.....	273
Waveform Summary.....	273
Window Properties	274
Zip Files.....	275
Zooming	275
Zoom In	275
Zoom Out	275
Zoom X, Y Resolution Properties.....	276

APPENDIX A.....1

DEVICE DRIVERS.....	1
CHANGE POLLING DRIVERS.....	1
Polling Times.....	1
File Locations	1
SCRIPT COMMAND DEFINITIONS	2
ESCAPE CODE COMMANDS	2
DRIVER DEFINITION COMMANDS	3
SYSTEM COMMANDS.....	4
LOG COMMANDS.....	5
FILE COMMANDS.....	7
MESSAGE COMMANDS	7
TRANSMIT (TX) COMMANDS	8
RECEIVE (RX) COMMANDS	18
NOTES:	21
EXAMPLES:.....	22

APPENDIX B	1
SYSTEM KEYS.....	1
Device Manager.....	1
Query Fields.....	2
DXF Display	2
File Manager.....	3
Analysis	4

LIST OF FIGURES

FIGURE 1.1 DESTINATION FOLDER.....	2
FIGURE 1.2 FINISH INSTALL.....	3
FIGURE 2.1 EXAMPLE DIGITAL DEVICES.....	5
FIGURE 2.2 EXAMPLE DEVICE MANAGER TABLE	6
FIGURE 2.3 SEL 351 RELAY	7
FIGURE 2.4 MDAR RELAY	9
FIGURE 2.5 SEL 311RELAY.....	11
FIGURE 2.6 ALPSRELAY	13
FIGURE 2.7 TRANSCAN DFR	15
FIGURE 2.8 DLP RELAY.....	17
FIGURE 2.9 SEL 387 RELAY	19
FIGURE 2.10 SEL 587 RELAY	21
FIGURE 2.11 SEL 2030 COMMUNICATION PROCESSOR.....	23
FIGURE 2.12 SEL PROTECTIVE RELAY TERMINAL UNIT (PRTU).....	25
FIGURE 2.13 SEL 501 RELAY	27
FIGURE 2.14 SEL 287 RELAY	29
FIGURE 2.15 GE D60 RELAY	31
FIGURE 2.16 SEL PRTU QUIT	33
FIGURE 2.17 SEL 551 RELAY	35
FIGURE 2.18 OPTIMHO RELAY	37
FIGURE 2.19 SEL 352 RELAY	39
FIGURE 2.20 SEL 2030-X QUIT	41
FIGURE 2.21 TESLA DFR.....	43
FIGURE 2.22 FTP DIALOG.....	45
FIGURE 2.23 SEL 421	46
FIGURE 2.24 SEL 421 IP DIALOG	47
FIGURE 2.25 ORION5.....	48
FIGURE 2.26 ORION IP DIALOG	49
FIGURE 2.27 SEL 321 RELAY	50
FIGURE 2.28 SEL 187 RELAY	52
FIGURE 2.29 HATHAWAY DFR	54
FIGURE 2.30 DPU2000R RELAY	56
FIGURE 2.31 ORION-5 QUIT	58
FIGURE 2.32 BPRO RELAY	60
FIGURE 2.33 BPRO FTP DIALOG	62

FIGURE 2.34 TPRO RELAY.....	63
FIGURE 2.35 TPRO FTP DIALOG.....	65
FIGURE 2.36 LPRO RELAY.....	66
FIGURE 2.37 LPRO FTP DIALOG.....	68
FIGURE 2.38 INITIALIZE DEVICE PORTS.....	72
FIGURE 2.39 SAVE & ARCHIVE DIALOG	74
FIGURE 2.40 EXPORT DIALOG.....	75
FIGURE 2.41 IMPORT DIALOG.....	75
FIGURE 2.42 DEVICE DISPLAY DIALOG	77
FIGURE 2.43 QUERY FIELDS.....	77
FIGURE 2.44 TERMINAL FUNCTION KEYS	79
FIGURE 2.45 ASCII TERMINAL MODE.....	80
FIGURE 2.46 BINARY TERMINAL MODE.....	81
FIGURE 2.47 VIEW DEVICE EVENT DATA.....	82
FIGURE 2.48 MULTIPOINT INTERROGATION DISPLAY (MID)	83
FIGURE 2.49 ANIMATED CAD-DXF DISPLAY	84
FIGURE 2.50 DXF DAWING PROPERTIES	84
FIGURE 2.51 EXPORT FOR DISPATCH TABLE.....	85
FIGURE 3.1 DISPATCH TABLE AND DEVICE MANAGER	87
FIGURE 3.2 DISPATCH TABLE.....	88
FIGURE 3.3 DISPATCH PROPERTIES DIALOG	90
FIGURE 3.4 DISPATCH TABLE – COMMAND LINE PARAMETER.....	91
FIGURE 3.5 POLL STATUS MESSAGE.....	92
FIGURE 3.6 EVENT LIST	93
FIGURE 3.7 METER INFORMATION.....	94
FIGURE 3.8 AUTOMATIC REFRESH.....	94
FIGURE 3.9 DEVICE DISPLAY DIALOG	95
FIGURE 3.10 QUERY FIELDS.....	96
FIGURE 4.1 FILE MANAGER.....	97
FIGURE 4.2 COMNAMES RENAME: SELECT AND MARK ALL THE WAVEFORM FILES TO RENAME.....	99
FIGURE 4.3 COMNAMES RENAME: RESULT.....	99
FIGURE 4.4 COMNAME PROPERTIES DIALOG	100
FIGURE 4.5 FOLDER TREE FIGURE 4.6 DRIVE/DIRECTORY NAVIGATION MENU	102
FIGURE 4.7 FOLDER TREE POPUP MENU	102
FIGURE 4.8 COPY DIALOG.....	104
FIGURE 4.9 EMAIL DIALOG.....	105
FIGURE 4.10 ZIP DIALOG	106
FIGURE 4.11 CUSTOMIZE TABLE COLUMNS	106
FIGURE 4.12 COMTRADE VERSION	107
FIGURE 4.13 SAVE AS COMTRADE	108
FIGURE 4.14 RUN DIALOG.....	108
FIGURE 4.15 DEVICE CONFIGURATION DIALOG	112
FIGURE 4.16 HATHAWAY DAU-DEF EDITOR	113
FIGURE 4.17 TESLA CONFIGURATION	114

FIGURE 4.18 LOAD RATING DIALOG	115
FIGURE 4.19 EXPERT SYSTEM MODEL.....	116
FIGURE 4.20 ADAPTIVE LEARNING MODEL.....	117
FIGURE 4.21 LOAD ANALYSIS TRIGGERS DIALOG	117
FIGURE 4.22 LOAD MENU BUTTON.....	118
FIGURE 4.23 SUMMARY DESTINATION DIALOG.....	119
FIGURE 4.24 LOAD DEVICE SUMMARY.....	119
FIGURE 4.25 LOAD STATION SUMMARY	120
FIGURE 4.26 LOAD SYSTEM SUMMARY.....	120
FIGURE 4.27 ASCII EDITOR	121
FIGURE 4.28 HEXADECIMAL EDITOR.....	122
FIGURE 4.29 HEXADECIMAL SEARCH.....	122
FIGURE 4.30 WAVEFORM SUMMARY.....	124
FIGURE 4.31 APPEND WAVEFORM FILES: DISCARD COMMON TIMES	125
FIGURE 4.32 APPEND WAVEFORM FILES: BACK TO BACK.....	125
FIGURE 4.33 MERGE WAVEFORM FILES: SELECT FREQUENCY	126
FIGURE 4.34 APPEND/MERGE PROPERTIES	127
FIGURE 4.35 MERGE WAVEFORM FILES BY TIME	128
FIGURE 4.36 MERGE WAVEFORM FILES BY SAMPLE.....	128
FIGURE 4.37 SOE LIST.....	130
FIGURE 4.38 SOE SUMMARY	131
FIGURE 4.39 DXF VIEWER	132
FIGURE 4.40 DXF DRAWING CONSTANTS	133
FIGURE 4.41 DATABASE VIEWER.....	134
FIGURE 4.42 SHOW/HIDE CHANNEL TITLES DIALOG.....	135
FIGURE 4.43 QUERY FIELDS.....	135
FIGURE 4.44 DISTURBANCE REPORT MENU.....	137
FIGURE 4.45 DISTURBANCE REPORT DIALOG	137
FIGURE 4.46 DISTURBANCE REPORT: DESTINATION FOLDER & FILE.....	138
FIGURE 4.47 DISTURBANCE REPORT: SOURCE FOLDER(S)	138
FIGURE 4.48 DISTURBANCE REPORT: FILTERS	139
FIGURE 4.49 DISTURBANCE REPORT	140
FIGURE 4.50 DISTURBANCE DISPLAY FILE.....	141
FIGURE 5.1 ANALYSIS DISPLAY	143
FIGURE 5.2 (A) NON-REFERENCED PHASORS (B) REFERENCED PHASORS.....	144
FIGURE 5.3 HISTOGRAM DROP DOWN MENU.....	145
FIGURE 5.4 HARMONICS TABLE VIEW	146
FIGURE 5.5 HARMONICS HISTOGRAM VIEW.....	147
FIGURE 5.6 PERIODIC LOG FILE	148
FIGURE 5.7 CIRCULAR CHARTS.....	149
FIGURE 5.8 ANALOG DATA TYPE SETTING.....	150
FIGURE 5.9 REOPEN DATA FILE.....	151
FIGURE 5.10 RESIZE SLIDING WINDOWS DROP DOWN MENUS	153
FIGURE 5.11 RESIZE SLIDING DIALOG FOR WAVEFORMS.....	153

FIGURE 5.12 RESIZE SLIDING WINDOWS DIALOG FOR LOG FILES	153
FIGURE 5.13 VALUES FILE	155
FIGURE 5.14 PREDEFINED LINES FIGURE 5.15 PREDEFINED GRAPHS	158
FIGURE 5.16 SAVE AS COMTRADE	159
FIGURE 5.17 CURSOR SYNCHRONIZATION	164
FIGURE 5.18 MERGE OPEN FILES: SELECT FREQUENCY	165
FIGURE 5.19 APPEND/MERGE PROPERTIES	166
FIGURE 5.20 MERGE OPEN FILES – BY TIME: OPEN FILES AND SELECT CHANNELS TO MERGE	167
FIGURE 5.21 MERGE OPEN FILES – BY TIME: RESULT: BY TIME	167
FIGURE 5.22 MERGE OPEN FILES – MANUALLY: SELECT CHANNELS & POSITION DATA BARS	168
FIGURE 5.23 MERGE OPEN FILES – RESULT: MANUALLY	168
FIGURE 5.24 MERGE OPEN FILES – RESULT: BY SAMPLE (AS APPLIED TO FIGURE 1.70)	169
FIGURE 5.25 CHANGE FREQUENCY DIALOG	170
FIGURE 5.26 CHANGE FREQUENCY: CHANGE A MUTIPLE FREQUENCY FILE	170
FIGURE 5.27 CHANGE FREQUENCY: RESULTS	171
FIGURE 5.28 TRUNCATE CYCLES: APPEND NON TIME MATCHING WAVEFORMS	172
FIGURE 5.29 TRUNCATE CYCLES: RESULTS	172
FIGURE 5.30 DUPLICATE CYCLES DIALOG	173
FIGURE 5.31 DUPLICATE CYCLES: INITIAL FILE	173
FIGURE 5.32 DUPLICATE CYCLES: RESULTS	174
FIGURE 5.33 MARK RAW VALUES	175
FIGURE 5.34 MARK PEAK VALUES	176
FIGURE 5.35 MARK CHANGE IN SIGN	177
FIGURE 5.36 TYPE OF ANALOG VALUES DISPLAYED	177
FIGURE 5.37 CHANGE ANALOG VALUES (PRIMARY ↔ SECONDARY)	178
FIGURE 5.38 RATIO VALUES	179
FIGURE 5.39 ADJUST FILES TIME	179
FIGURE 5.40 SAC DIALOG	183
FIGURE 5.41 SAC RESULTS	184
FIGURE 5.42 OPEN SAC FILE	185
FIGURE 5.43 FAULT LOCATION CHANGE SAMPLING FREQUENCY MESSAGE	185
FIGURE 5.44 FAULT LOCATION CHANGE SAMPLING FREQUENCY DIALOG	186
FIGURE 5.45 FAULT LOCATION SECONDARY QUANTITIES MESSAGE	186
FIGURE 5.46 FAULT LOCATION DIALOG	187
FIGURE 5.47 FAULT LOCATION ADVANCED DIALOG	188
FIGURE 5.48 PLAY AUDIO DIALOG	190
FIGURE 5.49 ALIGN CHANNEL MESSAGE	190
FIGURE 5.50 ALIGN CHANNEL DATA DIALOG	191
FIGURE 5.51 SAVE VIEW DIALOG	192
FIGURE 5.52 SELECT VIEW DROP DOWN MENU	193
FIGURE 5.53 SELECT VIEW FILE DIALOG	193
FIGURE 5.54 SELECT VIEW DETAILS DIALOG	194

C H A P T E R 1

System Requirements & Installation

This chapter lists the system requirements needed for installing and running the Wavewin software. It also describes the installation procedures and provides technical support information.

System Requirements

The system requirements are listed below.

- An IBM or compatible PC with an 80486 microprocessor or higher.
- 500 Megabytes of memory.
- 2 gigabytes of available hard disk space.
- A VGA, 8514/A, or compatible graphics adapter.
- Microsoft Windows version 98 or higher.

Installation

The system files are distributed in a compressed format. To install the software follow the instruction for the type of storage media distributed with this manual.

Web: To install the software from the Web access the www.wavewin.net web site. Under the “Wavewin Upgrades” link click on the Wavewin application to download. Enter your username and password. The username and password are case sensitive. Click on the software link to download the latest system’s executable files. Open the zip file and run the install.

CD: To install the software using a CD place the CD into the CD drive. The installation program will run automatically. If the installation program is not displayed, navigate to the CD’s root drive and double click on the install.exe application.

Follow the instructions to fully install the software.



Figure 1.1 Destination Folder

Define the destination folder for the system files then click Next to start the installation.

The destination folder is the location where all files are to be copied. Use the browse button to select an existing folder.



Figure 1.2 Finish Install

The install is now complete click Finish to end the installation.

Starting the Software

After you have installed the software on your computer, you are ready to begin. How you begin depends on your own style. If you like to dive right in and learn by doing the system provides on-line help to assist you. If you prefer a structured learning approach, read the quick start chapters to get familiar with the software.

To run the software, click on the installed desktop icon or open the Start menu, navigate to the installed Program folder and click on the Wavewin32 shortcut.



Technical Support

Although this system is easy to use and understand, at some point you may encounter a technical question, feel that the system has improperly operated, or have suggestions for future improvements. In either case, contact Softstuf using one of the following methods:

Phone: 215-922-6880, hours are from 9:00 a.m. to 8:00 p.m. Mon- Fri, (EST).
 Fax: 215-625-2497, response time is 24 hours.
 E-mail: support@softstuf.com, response time 24 hours.

C H A P T E R 2

Device Manager Quick Start

This chapter shows an example of a typical utility’s digital devices and how they are configured in the Wavewin Device Manager. The example uses the different network and device topologies available in the device manager.

Configuration Example

The digital devices are outlined below:

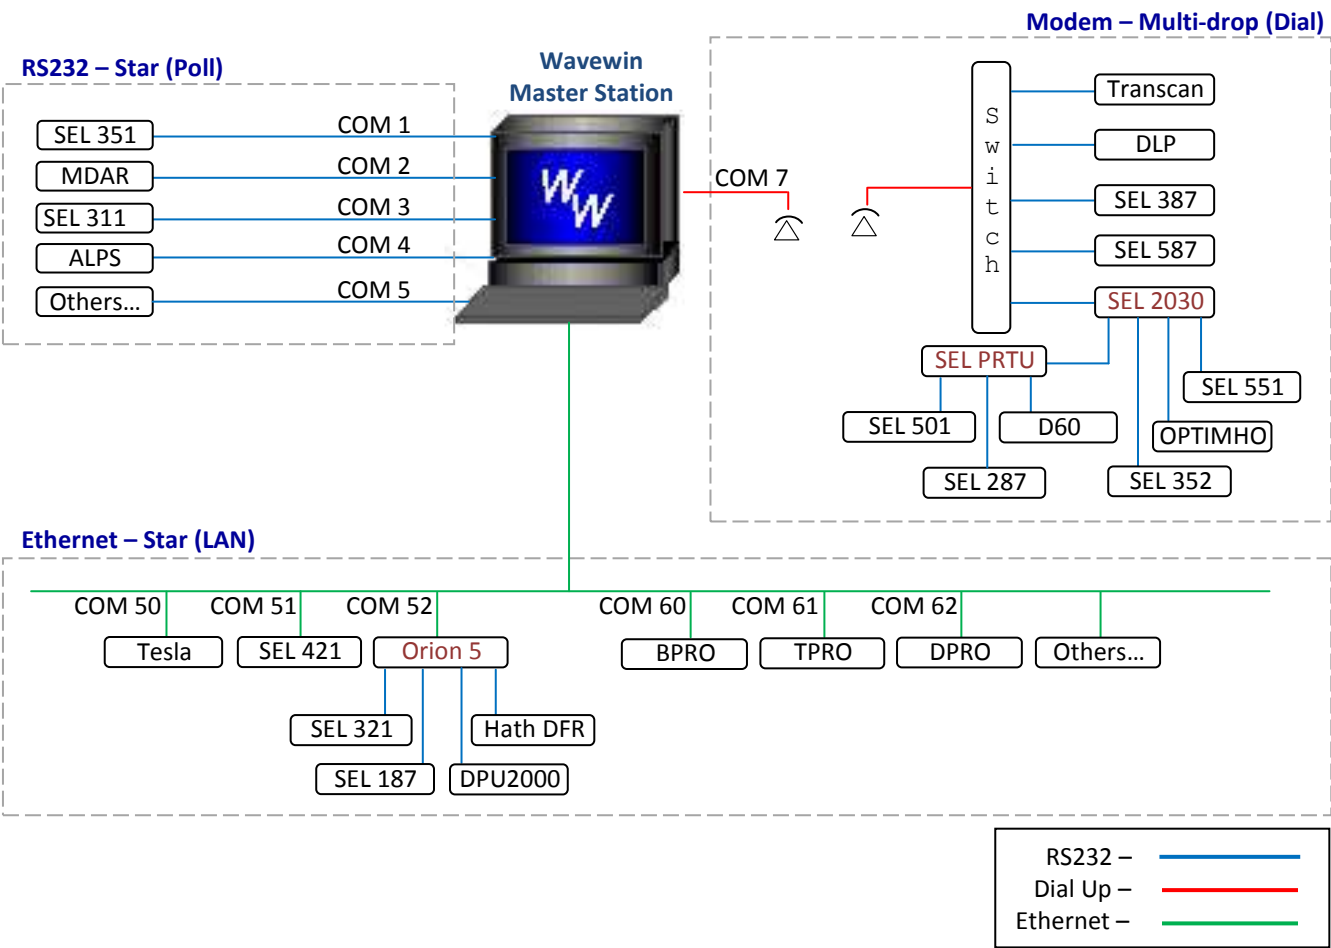


Figure 2.1 Example Digital Devices

DEVICE MANAGER TABLE

The device manager table lists all the devices configured in the software. Refer to Figure 2.2. The following sections describe how each device defined in the example is configured.

Dev#	Port#	Type	Addr...	Title	Driver	Group Name	Grou...	Command	TCode
1	COM1	ASCII	xxx	START POLLING	SYSTEM TIMER (START)	MASTER	1	0 0 0 0 0	-5
2	COM7	ASCII	xxx	RESET MODEM 1	MODEM INIT	MASTER	1	0 0 0 0 0	-5
10	COM1	ASCII	xxx	LINE A (351)	POLL SEL-351/311	RIVER-SOUTH ARKEY	10	0 0 TTER 0 0 1 L	-5
11	COM2	BINARY	xxx	LINE B (MDAR)	POLL REL-30X	RIVER-SOUTH ARKEY	10	0 0 0 0 1	-5
12	COM3	ASCII	xxx	LINE C (311)	POLL SEL-351/311	RIVER-SOUTH ARKEY	10	0 0 TTER 0 0 1 L	-5
13	COM4	ASCII	xxx	LINE D (ALPS)	POLL GE-ALPS	RIVER-SOUTH ARKEY	10	0 0 TTER 0 0 1	-5
20	COM7	ASCII	1	DFR-A (TRANSCAN)	DIAL MEHTA-DFR	QUINCY-BREAK STREET	20	9,1.899-765-2452...11 0 0 0 1	-5
21	COM7	BINARY	xxx	LINE F (DLP)	DIAL GE-DLP	QUINCY-BREAK STREET	20	9,1.899-765-2452...22 ^[%VIEW-16] 0 0 1	-5
22	COM7	ASCII	xxx	LINE G (387)	DIAL SEL-387	QUINCY-BREAK STREET	20	9,1.899-765-2452...33 0 TTER 0 0 1	-5
23	COM7	ASCII	xxx	LINE H (587)	DIAL SEL-551/311L/587Z	QUINCY-BREAK STREET	20	9,1.899-765-2452...44 0 TTER 0 0 1	-5
24	COM7	ASCII	xxx	SEL 2030-X LOGON	DIAL SEL-SW LOGON	QUINCY-BREAK STREET	30	9,1.8990765-2352...55 BRKY 0 0 1	-5
25	COM7	ASCII	1	SEL PRU LOGON	SW-SEL SEL-SW LOGON	QUINCY-BREAK STREET	30	1 BSWER 0 0 1	-5
26	COM7	ASCII	6	LINE I (501)	SW-SEL SEL-501	QUINCY-BREAK STREET	30	1 0 TTER 0 0 1	-5
27	COM7	ASCII	7	LINE J (287)	SW-SEL SEL-187/287/352	QUINCY-BREAK STREET	30	1 0 TTER 0 0 1	-5
28	COM7	ASCII	8	T-3 (D60)	SW-SEL GE-D60	QUINCY-BREAK STREET	30	1 LFF123 0 0 1	-5
34	COM7	ASCII	xxx	SEL PRU QUIT	SW-SEL SEL-SW QUIT	QUINCY-BREAK STREET	30	0 0 0 0 0	-5
35	COM7	ASCII	2	LINE M (551)	SW-SEL S-551/311L/587Z	QUINCY-BREAK STREET	30	1 0 TTER 0 0 1	-5
36	COM7	ASCII	3	LINE S1 (LFZP)	SW-SEL OPTIMHO LFZP111	QUINCY-BREAK STREET	30	1 S-643^32SYSTEM^32]1 0 0 1	-5
37	COM7	ASCII	4	LINE P (352)	SW-SEL SEL-187/287/352	QUINCY-BREAK STREET	30	1 0 TTER 0 0 1	-5
49	COM7	ASCII	xxx	SEL 2030-X QUIT	DIAL SEL-SW HANGUP	QUINCY-BREAK STREET	30	0 0 0 0 0	-5
50	COM50	ASCII	xxx	DFR B (TESLA)	LAN, FTP-EVENTS	OCEAN-LINPOINT	40	0 0 0 0 0 FTP=192.168.200.211.21.ftp.aptf...	-5
52	COM51	ASCII	xxx	LINE Q (421)	LAN, SEL-321/421	OCEAN-SOMERS HARBOR	50	0 0 0 0 0 IP=192.168.200.198.8003	-5
53	COM53	ASCII	xxx	ORION-5 LOGON	LAN, OR5-SW LOGON	BERGER-NORTHVILLE	60	1 SDQ-1 0 0 1 IP=192.168.200.110.2001	-5
54	COM53	ASCII	1	LINE R (321)	SW-OR5, SEL-321/421	BERGER-NORTHVILLE	60	1 0 TTER 0 0 1	-5
55	COM53	ASCII	2	M3 BANK (187)	SW-OR5, SEL-187/287/352	BERGER-NORTHVILLE	60	1 0 TTER 0 0 1	-5
56	COM53	BINARY	3	DRF-C (HATHAWAY)	SW-OR5, HATH	BERGER-NORTHVILLE	60	0 0 0 0 0	-5
57	COM53	ASCII	4	LINE T (DPU2000R)	SW-OR5, ABB-DPU2000R	BERGER-NORTHVILLE	60	0 0 0 0 0	-5
66	COM53	ASCII	xxx	ORION-5 QUIT	LAN, OR5-SW QUIT	BERGER-NORTHVILLE	60	0 0 0 0 0	-5
67	COM60	ASCII	xxx	LINE S2 (BPRO)	LAN, FTP-EVENTS	PLEASANTON-HAMILTON	70	0 0 0 0 0 FTP=192.168.200.250.21.ftp.aptf...	-5
68	COM61	ASCII	xxx	LINE R1 (TPRO)	LAN, FTP-EVENTS	PLEASANTON-HAMILTON	80	0 0 0 0 0 FTP=192.168.200.251.21.ftp.aptf...	-5
69	COM62	ASCII	xxx	LINE X1 (LPRO)	LAN, FTP-EVENTS	PLEASANTON-HAMILTON	90	0 0 0 0 0 FTP=192.168.200.252.21.ftp.aptf...	-5
939	COM7	ASCII	xxx	STOP MODEM 1	MODEM INIT	MASTER	1	0 0 0 0 0	-5
999	COM5	ASCII	xxx	SYSTEM SERVICES	NONE	MASTER	1	0 0 0 0 0	-5

Figure 2.2 Example Device Manager Table

POLLING TIMERS

The first device defined in the table starts the polling sequence. The polling sequence is always performed in a sequential manner according to the device numbers. The start polling entry can either poll the device periodically, or upon demand or at a given time during the day.

The following sections explain how to configure the devices defined in the example device configuration displayed in Figure 2.2. DFRs and Relays can be polled directly or through a communication processor, phone switch, Statmux or port switch.

A Communication Processor requires 2 main device entries in the table, one to dial and logon and one to logoff and hang up after polling is complete. Also, there must be an entry for each device connected. The dial and logon entry is the first entry defined, then a device entry for each device connected to the communication processor and the last device entry is the hang up, refer to Figure 2.2. The device numbers for each entry must be defined in a sequential manner. The hang up driver's device number can be X times greater than the last device defined so future expansion is allowed.

INITIALIZE MODEMS

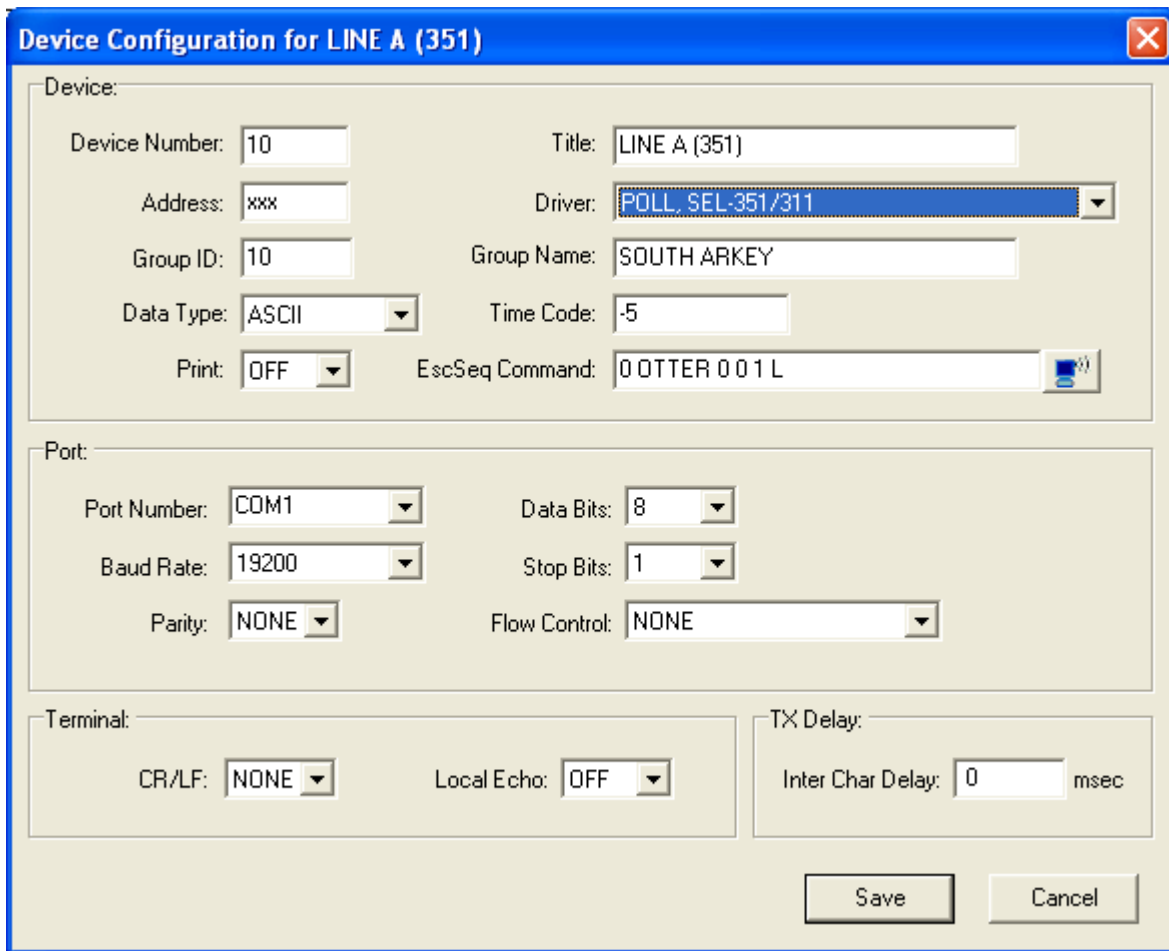
The second device defined in the table resets the modem used to call the devices configured for modem communications. The MODEM INIT driver sends a number of initialization commands to the modem. In this example only one modem is used. If multiple modems are configured then there must be an initialize modem entry for each modem.

RS232 DEVICES (POLL DRIVERS)

The RS232 example is a star topology with each device directly connected to the Wavewin computer. In a star topology all devices are polled simultaneously. Device numbers 10, 11, 12 and 13 are the configurations for the RS232 devices. Each device's configuration is defined in the following sections.

DEVICE 10 (SEL 351)

The SEL 351 relay is directly connected to the computers COM1 serial port. Below is the configuration dialog along with a description for each field.



The image shows a Windows-style dialog box titled "Device Configuration for LINE A (351)". It is divided into three main sections: Device, Port, and Terminal. The Device section contains fields for Device Number (10), Title (LINE A (351)), Address (xxx), Driver (POLL, SEL-351/311), Group ID (10), Group Name (SOUTH ARKEY), Data Type (ASCII), Time Code (-5), Print (OFF), and EscSeq Command (0 0 T T E R 0 0 1 L). The Port section contains fields for Port Number (COM1), Data Bits (8), Baud Rate (19200), Stop Bits (1), Parity (NONE), and Flow Control (NONE). The Terminal section contains fields for CR/LF (NONE), Local Echo (OFF), and TX Delay (Inter Char Delay: 0 msec). At the bottom right are Save and Cancel buttons.

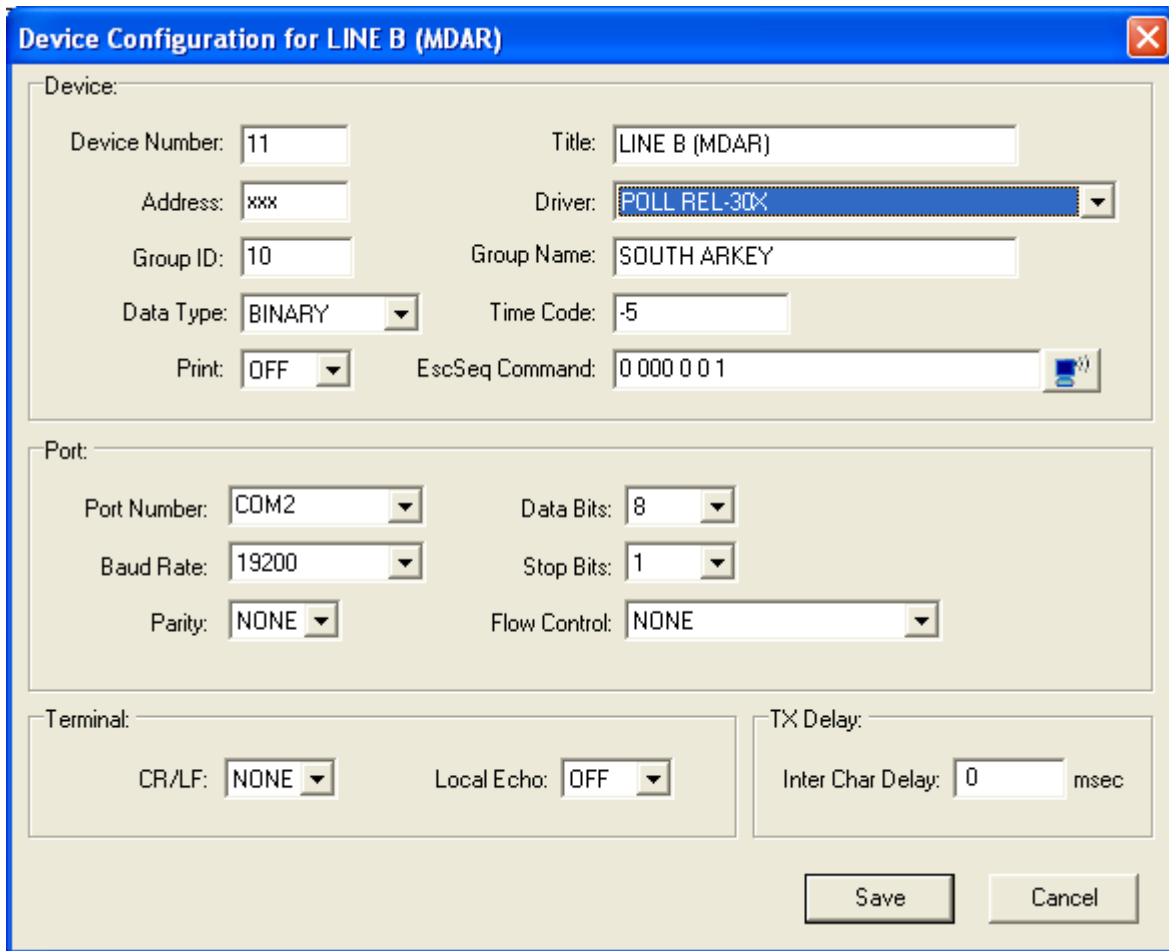
Figure 2.3 SEL 351 Relay

Field	Description
Device Settings	
Device Number	The SEL 351 relay is device number 10.
Address	Since the relay is directly connected to the computer the address field does not apply, it is defaulted to xxx.
Group ID	The relay is in group 10.
Data Type	The 351 relay communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is Line A (351). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	<p>The POLL, SEL-351/311 driver is selected. The POLL drivers are used for direct communications with a device. This driver issues the following commands:</p> <ul style="list-style-type: none"> Send a logon command to the relay. The password is defined in the second parameter in the EscSeq field. Poll for new events. Send a meter command to the relay.
Group Name	The relay is in the South Arkey group.

Field	Description
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 0 OTTER 0 0 1 L</p> <p>There is no phone number associated with the relay, the password is set to OTTER, a second level password is not required, also a back out command does not apply, the header is set to ON and the raw 16 samples/cycle files are downloaded.</p>
Port Settings	
Port Number	Communications with the relay is through the computers COM1 serial port.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 11 (MDAR)

The MDAR relay is directly connected to the computers COM2 serial port. Wavewin uses the ABB Incom protocol to communicate with the MDAR relays. Below is the configuration dialog along with a description for each field.



The image shows a 'Device Configuration for LINE B (MDAR)' dialog box. It is divided into three main sections: Device, Port, and Terminal. The Device section contains fields for Device Number (11), Title (LINE B (MDAR)), Address (xxx), Driver (POLL REL-30X), Group ID (10), Group Name (SOUTH ARKEY), Data Type (BINARY), Time Code (-5), Print (OFF), and EscSeq Command (0 000 0 0 1). The Port section contains fields for Port Number (COM2), Data Bits (8), Baud Rate (19200), Stop Bits (1), Parity (NONE), and Flow Control (NONE). The Terminal section contains fields for CR/LF (NONE), Local Echo (OFF), and TX Delay (Inter Char Delay: 0 msec). There are Save and Cancel buttons at the bottom right.

Device Configuration for LINE B (MDAR)

Device:

Device Number: 11 Title: LINE B (MDAR)

Address: xxx Driver: POLL REL-30X

Group ID: 10 Group Name: SOUTH ARKEY

Data Type: BINARY Time Code: -5

Print: OFF EscSeq Command: 0 000 0 0 1

Port:

Port Number: COM2 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay:

Inter Char Delay: 0 msec

Save Cancel

Figure 2.4 MDAR Relay

Field	Description
Device Settings	
Device Number	The MDAR relay is device number 11.
Address	Since the relay is directly connected to the computer the address field does not apply, it is defaulted to xxx.
Group ID	The relay is in group 10.
Data Type	The MDAR relay communicates using a Binary protocol.
Print	OFF.
Title	The title of the relay is Line B (MDAR). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	<p>The POLL, REL-30X driver is selected. The POLL drivers are used for direct communications with a device. This driver issues the following commands:</p> <ul style="list-style-type: none"> Request fault status. Request and save the latest targets 0 - 7. Request and save the latest targets 8 - 15. Save the latest target summary files. Save the target history file. Request and save the latest oscillography events 0 – 7.

Field	Description
	<ul style="list-style-type: none"> Request and save the latest oscillography events 8 – 15.
Group Name	The relay is in the South Arkey group.
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 0 000 0 0 1</p> <p>There is no phone number associated with the relay, the password is set to 000, a second level password is not required, also a back out command does not apply, the header is set to ON and the event type only applies to SEL relays.</p> <p>The MDAR password is part of the INCOM communication protocol.</p>
Port Settings	
Port Number	Communications with the relay is through the computers COM2 serial port.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 12 (SEL 311)

The SEL 311 relay is directly connected to the computers COM3 serial port. Below is the configuration dialog along with a description for each field.

Device Configuration for LINE C (311)

Device:

Device Number: 12 Title: LINE C (311)

Address: xxx Driver: POLL_SEL-351/311

Group ID: 10 Group Name: SOUTH ARKEY

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: 0 0 T T E R 0 0 1 L

Port:

Port Number: COM3 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay:

Inter Char Delay: 0 msec

Save Cancel

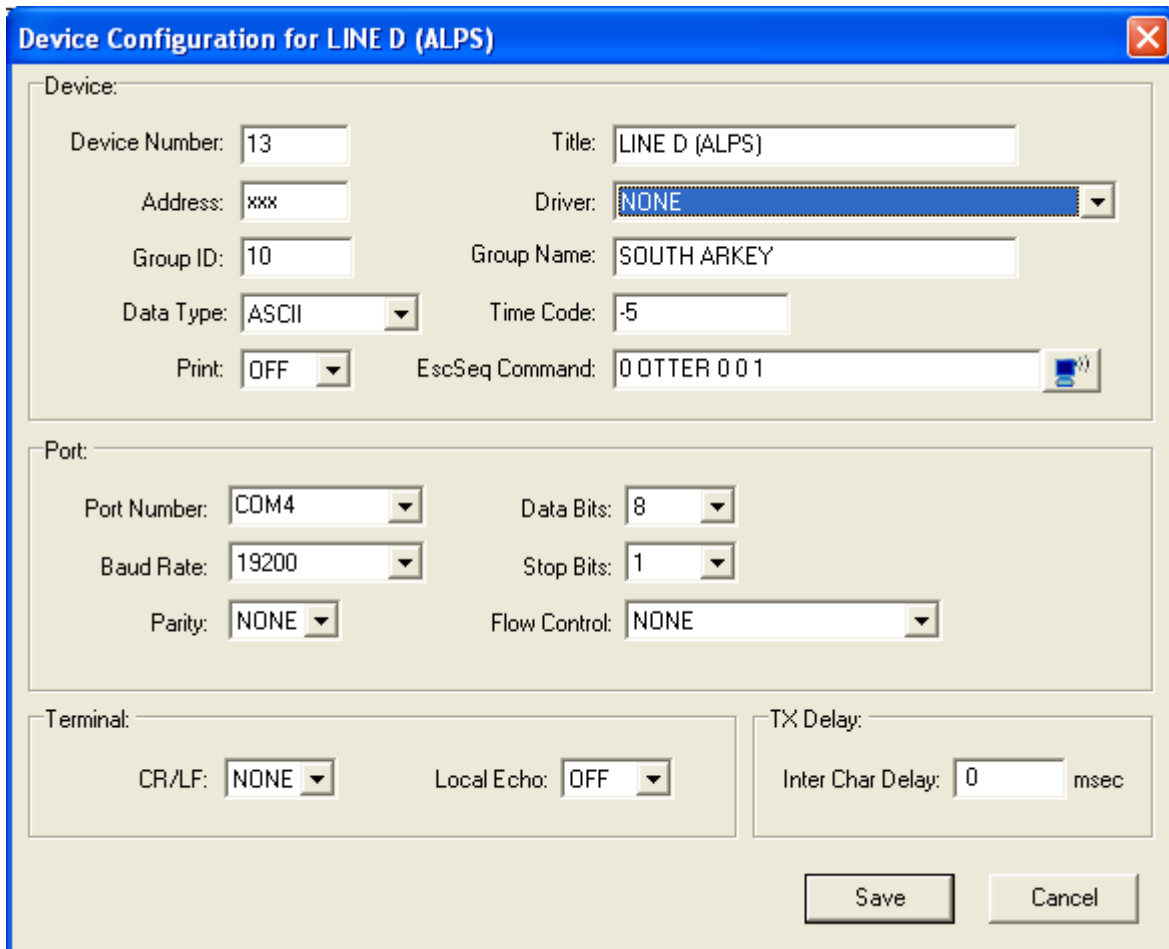
Figure 2.5 SEL 311Relay

Field	Description
Device Settings	
Device Number	The SEL 311 relay is device number 12.
Address	Since the relay is directly connected to the computer the address field does not apply, it is defaulted to xxx.
Group ID	The relay is in group 10.
Data Type	The SEL 311 relay communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is Line C (311). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	The POLL, SEL-351/311 driver is selected. The POLL drivers are used for direct communications with a device. This driver issues the following commands: <ul style="list-style-type: none"> Send a logon command to the relay. The password is defined in the second parameter in the EscSeq field. Poll for new events. Send a meter command to the relay.
Group Name	The relay is in the South Arkey group.
Time Code	The Time Code is -5 for eastern US.

Field	Description
EscSeq Command	<p>The 6 parameters are: 0 OTTER 0 0 1 L</p> <p>There is no phone number associated with the relay, the password is set to OTTER, a second level password is not required, also a back out command does not apply, the header is set to ON and the raw 16 samples/cycle files are downloaded.</p>
Port Settings	
Port Number	Communications with the relay is through the computers COM3 serial port.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 13 (ALPS)

The ALPS relay is directly connected to the computers COM4 serial port. Below is the configuration dialog along with a description for each field.



The image shows a Windows-style dialog box titled "Device Configuration for LINE D (ALPS)". It is divided into three main sections: "Device:", "Port:", and "Terminal:". The "Device:" section contains fields for Device Number (13), Title (LINE D (ALPS)), Address (xxx), Driver (NONE), Group ID (10), Group Name (SOUTH ARKEY), Data Type (ASCII), Time Code (-5), Print (OFF), and EscSeq Command (0 OTTER 0 0 1). The "Port:" section contains fields for Port Number (COM4), Data Bits (8), Baud Rate (19200), Stop Bits (1), Parity (NONE), and Flow Control (NONE). The "Terminal:" section contains fields for CR/LF (NONE), Local Echo (OFF), and TX Delay (Inter Char Delay: 0 msec). At the bottom right are "Save" and "Cancel" buttons.

Figure 2.6 ALPSRelay

Field	Description
Device Settings	
Device Number	The ALPS relay is device number 13.
Address	Since the relay is directly connected to the computer the address field does not apply, it is defaulted to xxx.
Group ID	The relay is in group 10.
Data Type	The ALPS relay communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is Line D (ALPS).
Device Driver	The POLL ALPS driver is selected. The POLL drivers are used for direct communications with a device. This driver issues the following commands: <ul style="list-style-type: none"> Send a logon command to the relay. The password is defined in the second parameter in the EscSeq field. Poll for new events. Send a meter command to the relay.
Group Name	The relay is in the South Arkey group.
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	The 6 parameters are: 0 OTTER 0 0 1

Field	Description
	There is no phone number associated with the relay, the password is set to OTTER, a second level password is not required, also a back out command does not apply, the header is set to ON and the event type only applies to SEL relays.
Port Settings	
Port Number	Communications with the relay is through the computers COM4 serial port.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DIALUP DEVICES (DIAL DRIVERS)

The Modem example is a multi-drop topology with each device connected a phone switch and some also connected to a communication processor. In a multi-drop topology all devices are polled one at a time. The devices are polled in sequence according to the device numbers. The modem devices are device numbers 20 thru 49. Each devices configuration is defined in the following sections.

DEVICE 20 (TRANSCAN)

The Transcan DFR is connected to a phone switch. The Wavewin computer first calls the phone switch then switches to the port where the DFR is connected. Below is the configuration dialog along with a description for each field.

Device Configuration for DFR-A (TRANSCAN)

Device:

Device Number: 20 Title: DFR-A (TRANSCAN)

Address: 1 Driver: DIAL, MEHTA-DFR

Group ID: 20 Group Name: BREAK STREET

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: 9,1,899-765-2452,,,11 0 0 1

Port:

Port Number: COM7 Data Bits: 8

Baud Rate: 38400 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay:

Inter Char Delay: 0 msec

Save Cancel

Figure 2.7 Transcan DFR

Field	Description
Device Settings	
Device Number	The Mehta Transcan DFR is device number 20.
Address	The address field defines what master number to use when polling the DFR. In this example master 1 is being used.
Group ID	The DFR is in group 20.
Data Type	The Transcan DFR communicates using a Binary protocol.
Print	OFF.
Title	The title of the DFR is DFR-A (Transcan). All devices that are polled for event files must have the device type included in the title surrounded by ().
Device Driver	The DIAL, MEHTA-DFR driver is selected. The DIAL drivers are used to communicate with a device that is connected to a modem. This driver issues the following commands: <ul style="list-style-type: none"> ▪ Dial the DFR and wait for a Connect signal from the modem. ▪ Logon as defined Master. The Master number is defined in the Address field. ▪ Request the Mehta DIR. ▪ Retrieve the latest event files.
Group Name	The DFR is in the Break Street group.

Field	Description
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 9,1-899-765-2452,,,11 0 0 0 1</p> <p>The first parameter is the phone number followed by 3 commas and the port switch number, the DFR does not require a password, a second level password is not required, also a back out command does not apply, the header is set to ON.</p>
Port Settings	
Port Number	Communications with the DFR is through the computers COM7 serial port.
Baud Rate	The baud rate is 38400.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 21 (DLP)

The DLP relay is connected to a phone switch. The Wavewin computer first calls the phone switch then switches to the port where the DLP relay is connected. Below is the configuration dialog along with a description for each field.

Device Configuration for LINE F (DLP)

Device:

Device Number: 21 Title: LINE F (DLP)

Address: 6543 Driver: DIAL, GE-DLP

Group ID: 20 Group Name: BREAK STREET

Data Type: BINARY Time Code: -5

Print: OFF EscSeq Command: 9,1,899-765-2452,,,22 ^[%VIEW:16] 0 0 1

Port:

Port Number: COM7 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay:

Inter Char Delay: 0 msec

Save Cancel

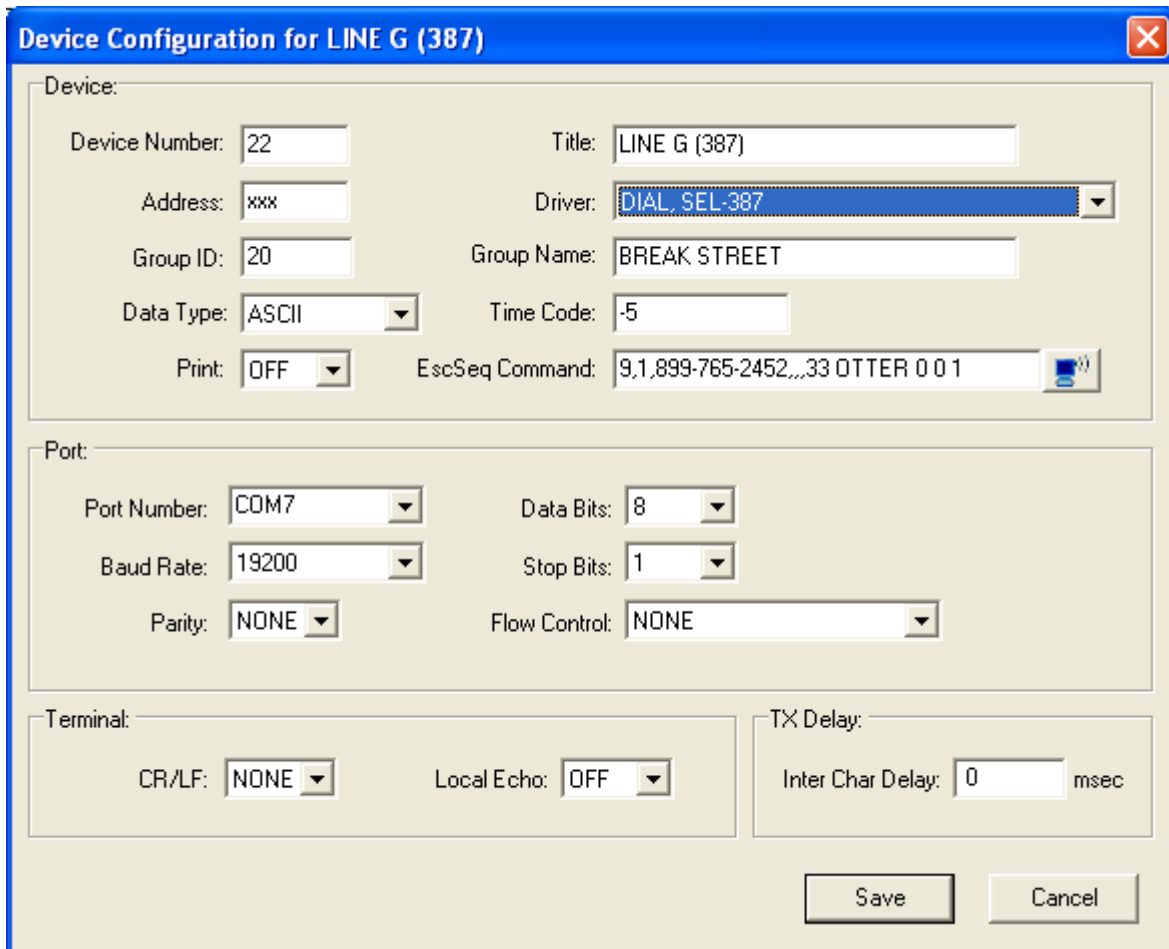
Figure 2.8 DLP Relay

Field	Description
Device Settings	
Device Number	The DLP relay is device number 21.
Address	The address field defines the DLP's communication relay number. The relay number is included in the commands sent to the relay.
Group ID	The relay is in group 20.
Data Type	The DLP relay communicates using a Binary protocol.
Print	OFF.
Title	The title of the relay is Line-F (DLP). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	<p>The DIAL, GE-DLP driver is selected. The DIAL drivers are used to communicate with a device that is connected to a modem. This driver issues the following commands:</p> <ul style="list-style-type: none"> ▪ Dial the relay and wait for a Connect signal from the modem. ▪ Send a login command to the relay. ▪ Request the fault list. ▪ Request latest fault files, save fault files and produce summary files. ▪ Request meter values.

Field	Description
Group Name	The relay is in the Break Street group.
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 9,1-899-765-2452,,22 ^[%VIEW:16] 0 0 1</p> <p>The first parameter is the phone number followed by 3 commas and the port switch number, the DLP password is set to VIEW, the DLP relays requires 16 character for the password the “:16” pads blanks at the end of the password, a second level password is not required, also a back out command does not apply, the header is set to ON.</p>
Port Settings	
Port Number	Communications with the relay is through the computers COM7 serial port.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 22 (SEL 387)

The SEL 387 relay is connected to a phone switch. The Wavewin computer first calls the phone switch then switches to the port where the relay is connected. Below is the configuration dialog along with a description for each field.



The image shows a 'Device Configuration for LINE G (387)' dialog box. It is divided into three main sections: Device, Port, and Terminal. The Device section contains fields for Device Number (22), Title (LINE G (387)), Address (xxx), Driver (DIAL, SEL-387), Group ID (20), Group Name (BREAK STREET), Data Type (ASCII), Time Code (-5), Print (OFF), and EscSeq Command (9,1,899-765-2452,,,33 OTTER 0 0 1). The Port section contains fields for Port Number (COM7), Data Bits (8), Baud Rate (19200), Stop Bits (1), Parity (NONE), and Flow Control (NONE). The Terminal section contains fields for CR/LF (NONE), Local Echo (OFF), and TX Delay (Inter Char Delay: 0 msec). There are Save and Cancel buttons at the bottom right.

Figure 2.9 SEL 387 Relay

Field	Description
Device Settings	
Device Number	The SEL 387 relay is device number 22.
Address	The address field does not apply for direct communications through a modem. The address field is defaulted to xxx.
Group ID	The relay is in group 20.
Data Type	The SEL 387 relay communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is Line-G (387). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	<p>The DIAL, SEL-387 driver is selected. The DIAL drivers are used to communicate with a device that is connected to a modem. This driver issues the following commands:</p> <ul style="list-style-type: none"> ▪ Dial the relay and wait for a Connect signal from the modem. ▪ Send a logon command to the relay. The password is defined in the second parameter in the EscSeq field. ▪ Poll for new events. ▪ Send a meter command to the relay.
Group Name	The relay is in the Break Street group.

Field	Description
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 9,1-899-765-2452,,33 OTTER 0 0 1</p> <p>The first parameter is the phone number followed by 3 commas and the port switch number, the password is set to OTTER, a second level password is not required, also a back out command does not apply, the header is set to ON.</p>
Port Settings	
Port Number	Communications with the relay is through the computers COM7 serial port.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 23 (SEL 587)

The SEL 587 relay is connected to a phone switch. The Wavewin computer first calls the phone switch then switches to the port where the relay is connected. Below is the configuration dialog along with a description for each field.

Device Configuration for LINE H (587)

Device:

Device Number: 23 Title: LINE H (587)

Address: xxx Driver: DIAL, SEL-551/311L/587Z

Group ID: 20 Group Name: BREAK STREET

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: 9,1,899-765-2452,,,44 OTTER 0 0 1

Port:

Port Number: COM7 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay: Inter Char Delay: 0 msec

Save Cancel

Figure 2.10 SEL 587 Relay

Field	Description
Device Settings	
Device Number	The SEL 387 relay is device number 23.
Address	The address field does not apply for direct communications through a modem. The address field is defaulted to xxx.
Group ID	The relay is in group 20.
Data Type	The SEL 387 relay communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is Line-G (387). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	<p>The DIAL, SEL-387 driver is selected. The DIAL drivers are used to communicate with a device that is connected to a modem. This driver issues the following commands:</p> <ul style="list-style-type: none"> ▪ Dial the relay and wait for a Connect signal from the modem. ▪ Send a logon command to the relay. The password is defined in the second parameter in the EscSeq field. ▪ Poll for new events. ▪ Send a meter command to the relay.
Group Name	The relay is in the Break Street group.

Field	Description
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 9,1-899-765-2452,,44 OTTER 0 0 1</p> <p>The first parameter is the phone number followed by 3 commas and the port switch number, the password is set to OTTER, a second level password is not required, also a back out command does not apply, the header is set to ON.</p>
Port Settings	
Port Number	Communications with the relay is through the computers COM7 serial port.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 23 (SEL 2030)

The SEL 2030 communication processor is connected to a phone switch. The Wavewin computer first calls the phone switch then switches to the port where the 2030 is connected. Below is the configuration dialog along with a description for each field.

Device Configuration for SEL 2030-X LOGON

Device:

Device Number: 24 Title: SEL 2030-X LOGON

Address: xxx Driver: DIAL, SEL-SW LOGON

Group ID: 30 Group Name: BREAK STREET

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: 9,1,8990765-2352,,,55 BRKY 0 0 1

Port:

Port Number: COM7 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay:

Inter Char Delay: 0 msec

Save Cancel

Figure 2.11 SEL 2030 Communication Processor

Field	Description
Device Settings	
Device Number	The SEL 2030 communication processor is device number 24.
Address	The address field does not apply. It is defaulted to xxx.
Group ID	The 2030 is in group 30.
Data Type	The SEL 2030 communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is SEL 2030-X Logon.
Device Driver	The DIAL, SEL-SW LOGON driver is selected. The DIAL drivers are used to communicate with a device that is connected to a modem. This driver issues the following commands: <ul style="list-style-type: none"> Dial the 2030 and wait for a Connect signal from the modem. Send the SEL ACC command to the 2030 along with the password defined in the EscSeq Command field.
Group Name	The 2030 is in the Break Street group.
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	The 6 parameters are: 9,1-899-765-2452,,,55 BRKY 0 0 1 The first parameter is the phone number followed by 3 commas and the

Field	Description
	port switch number, the password is set to BRKY, a second level password is not required, also a back out command does not apply, the header is set to ON.
Port Settings	
Port Number	Communications with the 2030 is through the computers COM7 serial port.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 25 (PRTU)

The SEL PRTU is connected to the 2030 communication processor through a modem. The Wavewin computer first calls the phone switch then switches to the port where the 2030 is connected then switches to the PRTU. Below is the configuration dialog along with a description for each field.

Device Configuration for SEL PRTU LOGON

Device:

Device Number: 25 Title: SEL PRTU LOGON

Address: 1 Driver: SW-SEL, SEL-SW LOGON

Group ID: 30 Group Name: BREAK STREET

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: 0 BSWER 0 0 1

Port:

Port Number: COM7 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay: Inter Char Delay: 0 msec

Save Cancel

Figure 2.12 SEL Protective Relay Terminal Unit (PRTU)

Field	Description
Device Settings	
Device Number	The SEL PRTU is device number 25.
Address	The address field is 1. The PRTU is connected to the 2030's port 1.
Group ID	The PRTU is in group 30.
Data Type	The SEL PRTU communicates using an ASCII protocol.
Print	OFF.
Title	The title of the PRTU is SEL PRTU Logon.
Device Driver	The SW-SEL, SEL-SW LOGON driver is selected. The SW drivers are used to communicate with a device that is connected to a communication processor. This driver issues the following commands: <ul style="list-style-type: none"> Send a Clear command to the PRTU. Switch to the port number listed in the address field. Send the ACC command and the password defined in the EscSeq Command field.
Group Name	The PRTU is in the Break Street group.
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	The 6 parameters are: 0 BSWER 0 0 1

Field	Description
	A phone number is not required, the password is set to BSWER, a second level password is not required, also a back out command does not apply, the header is set to ON.
Port Settings	
Port Number	Communications with the PRTU is through the computers COM7 serial port.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 26 (SEL 501)

The SEL 501 Relay is connected to a PRTU which is connected to a 2030 communication processor through a modem. The Wavewin computer first calls the phone switch then switches to the port where the 2030 is connected then switches to the PRTU then switches to the 501 Relay. Below is the configuration dialog along with a description for each field.

Device Configuration for LINE I (501)

Device:

Device Number: 26 Title: LINE I (501)

Address: 6 Driver: SW-SEL, SEL-501

Group ID: 30 Group Name: BREAK STREET

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: 0 0 T T E R 0 0 1

Port:

Port Number: COM7 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay: Inter Char Delay: 0 msec

Save Cancel

Figure 2.13 SEL 501 Relay

Field	Description
Device Settings	
Device Number	The SEL 501 is device number 26.
Address	The address field is 6. The 501 relay is connected to the PRTU's port number 6.
Group ID	The relay is in group 30.
Data Type	The SEL 501 relay communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is Line I (501). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	The SW-SEL, SEL-501 driver is selected. The SW drivers are used to communicate with a device that is connected to a communication processor. This driver issues the following commands: <ul style="list-style-type: none"> Switch to the port number listed in the address field. Send the SEL ACC command to along with the password defined in the EscSeq Command field. Download all new events. Send a Meter command.
Group Name	The 501 relay is in the Break Street group.

Field	Description
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 0 OTTER 0 0 1</p> <p>A phone number is not required, the password is set to OTTER, a second level password is not required, also a back out command does not apply, the header is set to ON.</p>
Port Settings	
Port Number	Communications with the relay is through the computers COM7 serial port.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 27 (SEL 287)

The SEL 287 Relay is connected to a PRTU which is connected to a 2030 communication processor through a modem. The Wavewin computer first calls the phone switch then switches to the port where the 2030 is connected then switches to the PRTU then switches to the 287 Relay. Below is the configuration dialog along with a description for each field.

Device Configuration for LINE J (287)

Device:

Device Number: 27 Title: LINE J (287)

Address: 7 Driver: SW-SEL, SEL-187/287/352

Group ID: 30 Group Name: BREAK STREET

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: 0 OTTER 0 0 1

Port:

Port Number: COM7 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay: Inter Char Delay: 0 msec

Save Cancel

Figure 2.14 SEL 287 Relay

Field	Description
Device Settings	
Device Number	The SEL 287 Relay is device number 27.
Address	The address field is 7. The 287 relay is connected to the PRTU's port number 7.
Group ID	The relay is in group 30.
Data Type	The SEL 287 relay communicates using an ASCII protocol.
Print	OFF.
Title	The title of the 287 relay is Line J (287). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	The SW-SEL, SEL-187/287/352 driver is selected. The SW drivers are used to communicate with a device that is connected to a communication processor. This driver issues the following commands: <ul style="list-style-type: none"> Switch to the port number listed in the address field. Send the SEL ACC command to along with the password defined in the EscSeq Command field. Download all new events. Send a Meter command.
Group Name	The relay is in the Break Street group.

Field	Description
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 0 OTTER 0 0 1</p> <p>A phone number is not required, the password is set to OTTER, a second level password is not required, also a back out command does not apply, the header is set to ON.</p>
Port Settings	
Port Number	Communications with the relay is through the computers COM7 serial port.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 28 (D60)

The GE D60 Relay is connected to a PRTU which is connected to a 2030 communication processor through a modem. The Wavewin computer first calls the phone switch then switches to the port where the 2030 is connected then switches to the PRTU then switches to the D60 Relay. Below is the configuration dialog along with a description for each field.

Device Configuration for T-3 (D60)

Device:

Device Number: 28 Title: T-3 (D60)

Address: 8 Driver: SW-SEL, GE-D60

Group ID: 30 Group Name: QUINCY-BREAK STREET

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: 1 LPF123 0 0 1

Port:

Port Number: COM7 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay:

Inter Char Delay: 0 msec

Save Cancel

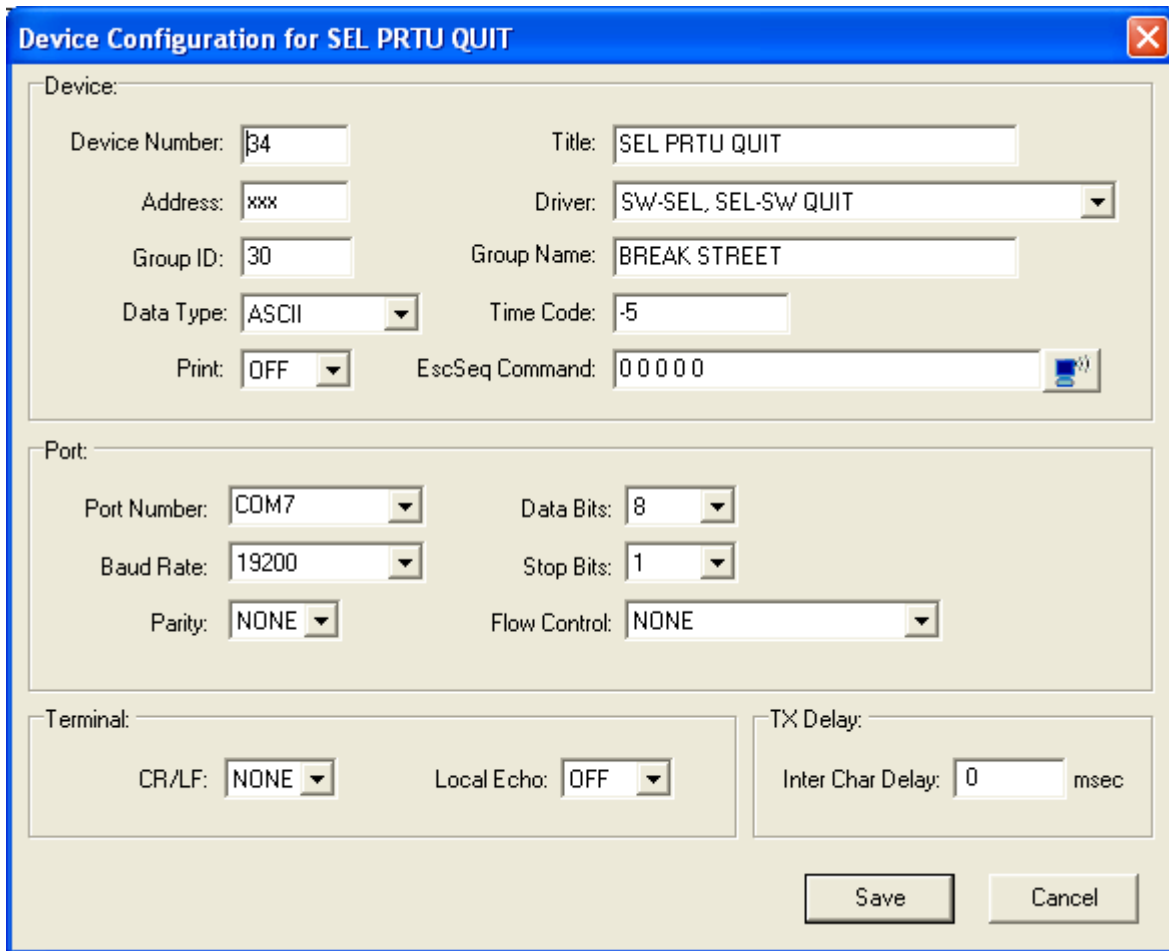
Figure 2.15 GE D60 Relay

Field	Description
Device Settings	
Device Number	The GE D60 Relay is device number 28.
Address	The address field is 8. The D60 relay is connected to the PRTU's port number 8.
Group ID	The relay is in group 30.
Data Type	The GE D60 relay communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is T-3 (D60). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	<p>The SW-SEL, GE-D60 driver is selected. The SW drivers are used to communicate with a device that is connected to a communication processor. This driver issues the following commands:</p> <ul style="list-style-type: none"> Switch to the port number listed in the address field. Logon using the password defined in the EscSeq field if there is a password set on the machine. Request and save all new html fault report files. Request and save all new event files. Request and save all new oscillography Comtrade files.

Field	Description
	<ul style="list-style-type: none"> Request and save all new data logger Comtrade files. Log off.
Group Name	The relay is in the Break Street group.
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 0 LPF123 0 0 1</p> <p>A phone number is not required, the password is set to LPF123, a second level password is not required, also a back out command does not apply, the header is set to ON.</p>
Port Settings	
Port Number	Communications with the relay is through the computers COM7 serial port.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 34 (PRTU QUIT)

The SEL PRTU QUIT will back out of the last connected port on the PRTU then issue a QUIT command to the PRTU. Below is the configuration dialog along with a description for each field.



The dialog box is titled "Device Configuration for SEL PRTU QUIT". It is divided into three main sections: Device, Port, and Terminal. The Device section contains fields for Device Number (34), Title (SEL PRTU QUIT), Address (xxx), Driver (SW-SEL, SEL-SW QUIT), Group ID (30), Group Name (BREAK STREET), Data Type (ASCII), Time Code (-5), Print (OFF), and EscSeq Command (00000). The Port section contains fields for Port Number (COM7), Data Bits (8), Baud Rate (19200), Stop Bits (1), Parity (NONE), and Flow Control (NONE). The Terminal section contains fields for CR/LF (NONE), Local Echo (OFF), and TX Delay (Inter Char Delay: 0 msec). There are Save and Cancel buttons at the bottom right.

Figure 2.16 SEL PRTU Quit

Field	Description
Device Settings	
Device Number	The PRTU Quit is at device number 34. Five device numbers were skipped between the D60 relay and the PRTU Quit. This is done to handle new devices that may be added to the SEL PRTU in the future. Always leave a difference of at least 5 device numbers between the last device on a communication processor and the PRTU quit.
Address	The address field is not needed, it is defaulted to xxx.
Group ID	The PRTU Quit is in group 30.
Data Type	The PRTU communicates using an ASCII protocol.
Print	OFF.
Title	The title of the PRTU Quit is SEL PRTU QUIT.
Device Driver	The SW-SEL, SEL-SW QUIT driver is selected. The SW drivers are used to communicate with a communication processor. This driver issues the following commands: <ul style="list-style-type: none"> Switch back out to the PRTU. Send a QUIT command to the PRTU.
Group Name	The PRTU quit is in the Break Street group.
Time Code	The Time Code is -5 for eastern US.

Field	Description
EscSeq Command	The 6 parameters are: 0 0 0 0 0 A phone number is not required, a password does not apply, a second level password is not required, also a back out command does not apply, the header is set to ON.
Port Settings	
Port Number	Communications with the PRTU is through the computers COM7 serial port.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 35 (SEL 551)

The SEL 551 Relay is connected to the 2030 communication processor through a modem. The Wavewin computer first calls the phone switch then switches to the port where the 2030 is connected then switches to the SEL 551 Relay. Below is the configuration dialog along with a description for each field.

Device Configuration for LINE M (551)

Device:

Device Number: 35 Title: LINE M (551)

Address: 2 Driver: POLL_SEL-551/311L/587Z

Group ID: 30 Group Name: BREAK STREET

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: 0 0 T T E R 0 0 1

Port:

Port Number: COM7 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay:

Inter Char Delay: 0 msec

Save Cancel

Figure 2.17 SEL 551 Relay

Field	Description
Device Settings	
Device Number	The SEL 551 Relay is device number 35.
Address	The address field is 2. The 551 relay is connected to the 2030's port number 2.
Group ID	The relay is in group 30.
Data Type	The 551 relay communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is Line M (551). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	The SW-SEL, SEL-551/311/587Z driver is selected. The SW drivers are used to communicate with a device connected to a communication processor. This driver issues the following commands: <ul style="list-style-type: none"> Switch to the port number listed in the address field. Send the SEL ACC command along with the password defined in the EscSeq Command field. Download all new events. Send a Meter command.
Group Name	The relay is in the Break Street group.

Field	Description
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 0 OTTER 0 0 0</p> <p>A phone number is not required, the password is set to OTTER, a second level password is not required, also a back out command does not apply, the header is set to ON.</p>
Port Settings	
Port Number	Communications with the relay is through the computers COM7 serial port.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 36 (OPTIMHO)

The Optimho Relay is connected to the 2030 communication processor through a modem. The Wavewin computer first calls the phone switch then switches to the port where the 2030 is connected then switches to the Optimho Relay. Below is the configuration dialog along with a description for each field.

Device Configuration for LINE S1 (LFZP)

Device:

Device Number: 36 Title: LINE S1 (LFZP)

Address: 3 Driver: SW-SEL, OPTIMHO LFZP111

Group ID: 30 Group Name: BREAK STREET

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: 0 5-643^[32]SYSTEM^[32]1 0 0 1

Port:

Port Number: COM7 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay: Inter Char Delay: 250 msec

Save Cancel

Figure 2.18 Optimho Relay

Field	Description
Device Settings	
Device Number	The Optimho relay is device number 36.
Address	The address field is 3. The Optimho relay is connected to the 2030's port number 3.
Group ID	The relay is in group 30.
Data Type	The Optimho communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is Line S1 (LFZP). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	The SW-SEL, OPTIMHO LFZP111 driver is selected. The SW drivers are used to communicate with a communication processor. This driver issues the following commands: <ul style="list-style-type: none"> Switch to the port number listed in the address field. Logon to the relay using the password defined in the EscSeq Command field. Download all new events. Logoff the relay.
Group Name	The relay is in the Break Street group.

Field	Description
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 1 S-643^[32]SYSTEM^[32]1 0 0 1</p> <p>A phone number is not required, a password is set to S-643^[32]SYSTEM^[32]1, a second level password is not required, also a back out command does not apply, the header is set to ON.</p>
Port Settings	
Port Number	Communications with the relay is through the computers COM7 serial port.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 37 (SEL 352)

The SEL 352 Relay is connected to the 2030 communication processor through a modem. The Wavewin computer first calls the phone switch then switches to the port where the 2030 is connected then switches to the SEL 352 Relay. Below is the configuration dialog along with a description for each field.

Device Configuration for LINE P (352)

Device:

Device Number: 37 Title: LINE P (352)

Address: 4 Driver: SW-SEL, SEL-187/287/352

Group ID: 30 Group Name: BREAK STREET

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: 0 0 T T E R 0 0 1

Port:

Port Number: COM7 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay:

Inter Char Delay: 0 msec

Save Cancel

Figure 2.19 SEL 352 Relay

Field	Description
Device Settings	
Device Number	The SEL 352 Relay is device number 37.
Address	The address field is 4. The 352 relay is connected to the 2030's port number 4.
Group ID	The relay is in group 30.
Data Type	The 352 relay communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is Line P (352). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	The SW-SEL, SEL-187/287/352 driver is selected. The SW drivers are used to communicate with a device connected to a communication processor. This driver issues the following commands: <ul style="list-style-type: none"> Switch to the port number listed in the address field. Send the SEL ACC command along with the password defined in the EscSeq Command field. Download all new events. Send a Meter command.
Group Name	The relay is in the Break Street group.

Field	Description
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 0 OTTER 0 0 0</p> <p>A phone number is not required, the password is set to OTTER, a second level password is not required, also a back out command does not apply, the header is set to ON.</p>
Port Settings	
Port Number	Communications with the relay is through the computers COM7 serial port.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 49 (SEL 2030)

The SEL 2030-X QUIT will back out of the last connected port on the 2030 then issue a QUIT command to the 2030 then hang up the modem. Below is the configuration dialog along with a description for each field.

Device Configuration for SEL 2030-X QUIT

Device:

Device Number: 49 Title: SEL 2030-X QUIT

Address: xxx Driver: DIAL, SEL-SW HANGUP

Group ID: 30 Group Name: BREAK STREET

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: 00000

Port:

Port Number: COM7 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay: Inter Char Delay: 0 msec

Save Cancel

Figure 2.20 SEL 2030-X Quit

Field	Description
Device Settings	
Device Number	The 2030-X Quit is at device number 49. Twelve device numbers were skipped between the SEL 352 relay and the 2030-X Quit. This is done to handle new devices that may be added to the SEL 2030 in the future. Always leave a difference of at least 5 device numbers between the last device on a communication processor and the PRTU quit.
Address	The address field is not needed, it is defaulted to xxx.
Group ID	The 2030-X Quit is in group 30.
Data Type	The 2030 communicates using an ASCII protocol.
Print	OFF.
Title	The title of the 2030-X Quit is SEL 2030-X QUIT.
Device Driver	The DIAL, SEL-SW HANGUP driver is selected. The DIAL drivers are used to communicate with a device connected to a modem. This driver issues the following commands: <ul style="list-style-type: none"> Switch back out to the 2030. Send a QUIT command to the 2030. Hang up the modem.
Group Name	The 2030 quit is in the Break Street group.
Time Code	The Time Code is -5 for eastern US.

Field	Description
EscSeq Command	The 6 parameters are: 0 0 0 0 0 A phone number is not required, a password does not apply, a second level password is not required, also a back out command does not apply, the header is set to ON.
Port Settings	
Port Number	Communications with the 2030 is through the computers COM7 serial port.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

ETHERNET STAR (NETWORK DRIVERS)

The Ethernet example is a star topology with each device having an IP address and port number. In a star topology all devices are polled simultaneously. The Ethernet devices are device numbers 50 thru 69. Each device's configuration is defined in the following sections.

DEVICE 50 (TESLA)

The Tesla DFR is connected to the computer using an Ethernet connection. Below is the configuration dialog along with a description for each field.

Device Configuration for DFR B (TESLA)

Device:

Device Number: 50 Title: DFR B (TESLA)

Address: xxx Driver: LAN, FTP-EVENTS

Group ID: 40 Group Name: LINPOINT

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: 0 0 0 0 FTP=192.168.200.211;21;ftp;aptft

Port:

Port Number: COM50 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay:


Inter Char Delay: 0 msec

Save Cancel

Figure 2.21 Tesla DFR

Field	Description
Device Settings	
Device Number	The Tesla DFR is at device number 50.
Address	The address field is not needed, it is defaulted to xxx.
Group ID	The DFR is in group 40.
Data Type	The Tesla communicates using an ASCII protocol.
Print	OFF.
Title	The title of the DFR is DFR B (Tesla). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	The LAN, FTP-EVENTS driver is selected. The LAN drivers are used to communicate with a device connected using Ethernet. This driver issues the following commands: <ul style="list-style-type: none"> Connect to the FTP server. Request a directory listing on the FTP server's remote path. Download all new event files. Disconnect the from the FTP server.
Group Name	The Tesla is in the Linpoint group.
Time Code	The Time Code is -5 for eastern US.

Field	Description
EscSeq Command	<p>The 6 parameters are: 0 0 0 0 FTP=192.168.200.211;21;ftp;aptftp;/usr/apt/tesla/record;;2;C:\SDCS AVE;1;1</p> <p>A phone number is not required, a password does not apply, a second level password is not required, also a back out command does not apply, the header is set to OFF and the FTP information is defined, Refer to Figure 2.22.</p>
Port Settings	
Port Number	The COM port number is set to COM50. Communications with the Tesla DFR is through an Ethernet connection. All Ethernet connections require a unique COM port number. The COM port number for Ethernet connections cannot be a physical COM port on the computer. Start all Ethernet COM port numbers at COM50.
Baud Rate	The baud rate field does not apply to Ethernet connections.
Parity	The parity field does not apply to Ethernet connections.
Data Bits	The data bits field does not apply to Ethernet connections.
Stop Bits	The stop bits field does not apply to Ethernet connections.
Flow Control	The flow control field does not apply to Ethernet connections..
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

The Tesla DFR uses FTP to download the events from the DFR. FTP communications requires a number of parameters to successfully connect to the DFR. To enter the FTP required fields click on the Ethernet button  displayed next to the “EscSeq Command” field, Refer to Figure 2.22. Enter the DFR information for all the fields displayed in the FTP dialog. The enter fields are listed in the EscSeq Command field labeled FTP= and separated by a semicolon “;”.

Define Ethernet Connection

Select the Ethernet Connection ---> None
TCP/IP Server
TCP/IP Client
FTP Client
Telnet Client

Then fill in the fields below.

Connection Properties

Enter the FTP Server IP Address (or Host Name), Port Number, User Name, Password and other fields for the FTP connection.

Port Number:

IP Address:

Username:

Password:

Remote Path:

Local Path:

File Types:

File Names: ▼

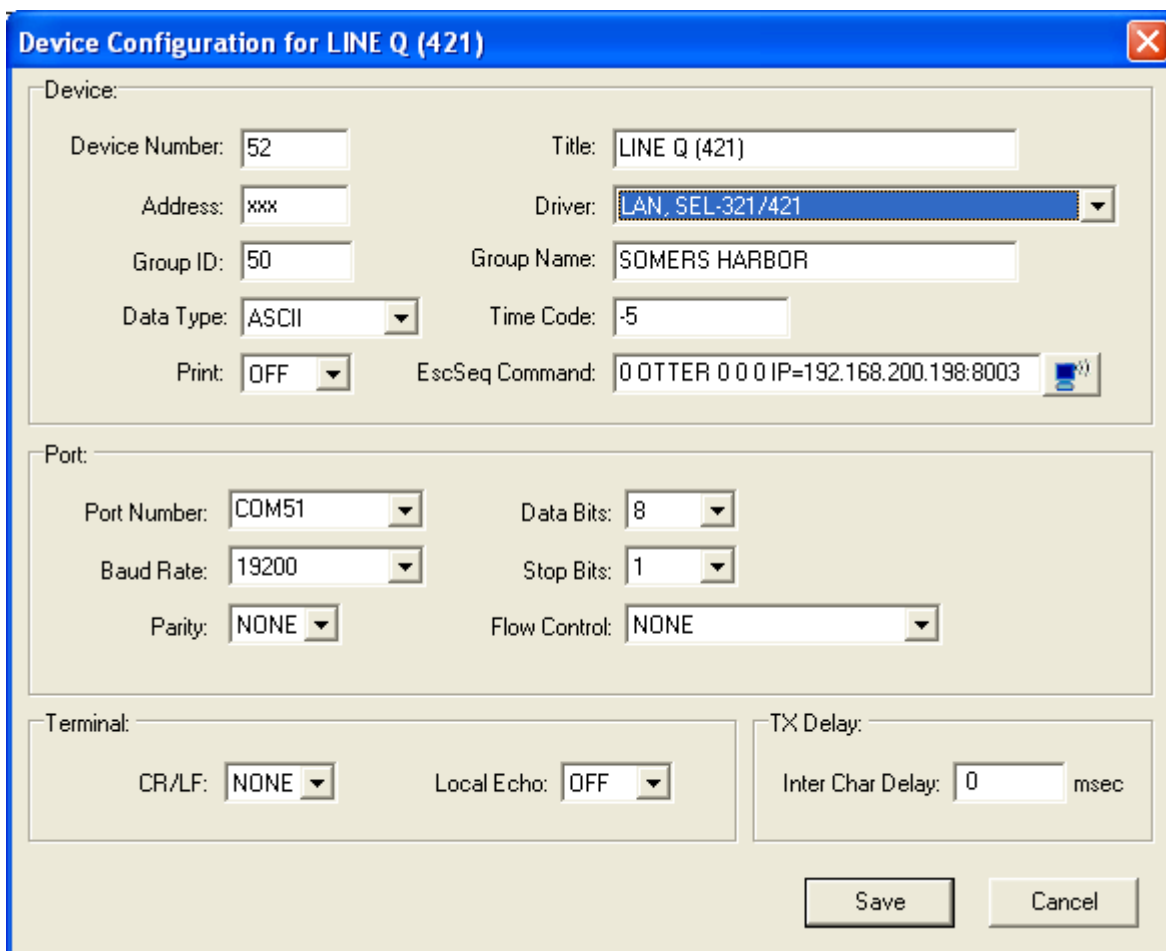
Delete Source: ▼

Convert Time: ▼

Figure 2.22 FTP Dialog

DEVICE 51 (SEL 421)

The SEL 421 Relay is connected to the computer using an Ethernet connection. Below is the configuration dialog along with a description for each field.



Device Configuration for LINE Q (421)

Device:

Device Number: 52 Title: LINE Q (421)

Address: xxx Driver: LAN, SEL-321/421

Group ID: 50 Group Name: SOMERS HARBOR

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: 0 0 T T E R 0 0 0 IP=192.168.200.198:8003

Port:

Port Number: COM51 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay:


Inter Char Delay: 0 msec

Save Cancel

Figure 2.23 SEL 421

Field	Description
Device Settings	
Device Number	The SEL 421 is at device number 51.
Address	The address field is not needed, it is defaulted to xxx.
Group ID	The relay is in group 50.
Data Type	The SEL 421 communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is Line Q (421). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	<p>The LAN, SEL-321/421 driver is selected. The LAN drivers are used to communicate with a device connected using Ethernet. This driver issues the following commands:</p> <ul style="list-style-type: none"> Connect to the IP server. Switch to the port number listed in the address field. Send the SEL ACC command along with the password defined in the EscSeq Command field. Download all new events. Send a Meter command. Disconnect the from the IP server.

Field	Description
Group Name	The relay is in the Somers Harbor group.
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 0 OTTER 0 0 0 IP=192.168.200.198:8003</p> <p>A phone number is not required, the password is set to OTTER, a second level password is not required, also a back out command does not apply, the header is set to OFF and the IP information is defined, Refer to Figure 2.24.</p>
Port Settings	
Port Number	The COM port number is set to COM51. Communications with the relay is through an Ethernet connection. All Ethernet connections require a unique COM port number. The COM port number for Ethernet connections cannot be a physical COM port on the computer.
Baud Rate	The baud rate field does not apply to Ethernet connections.
Parity	The parity field does not apply to Ethernet connections.
Data Bits	The data bits field does not apply to Ethernet connections.
Stop Bits	The stop bits field does not apply to Ethernet connections.
Flow Control	The flow control field does not apply to Ethernet connections..
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

The 421 relay uses IP to download the events from the relay. IP communications requires a port number and IP address to successfully connect to the relay. To enter the IP required fields click on the Ethernet button  displayed next to the “EscSeq Command” field, Refer to Figure 2.24. Enter the relay’s port number and IP address. The enter fields are listed in the EscSeq Command field labeled IP= and separated by a colon “:”.

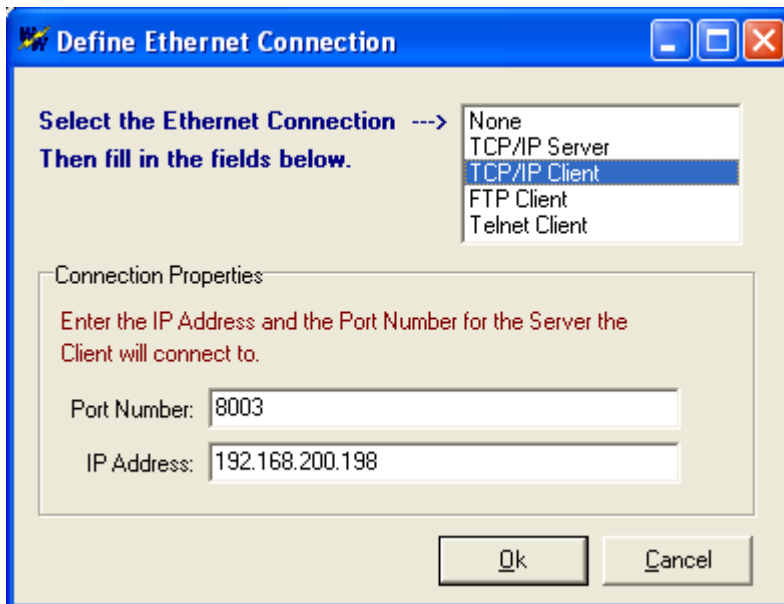
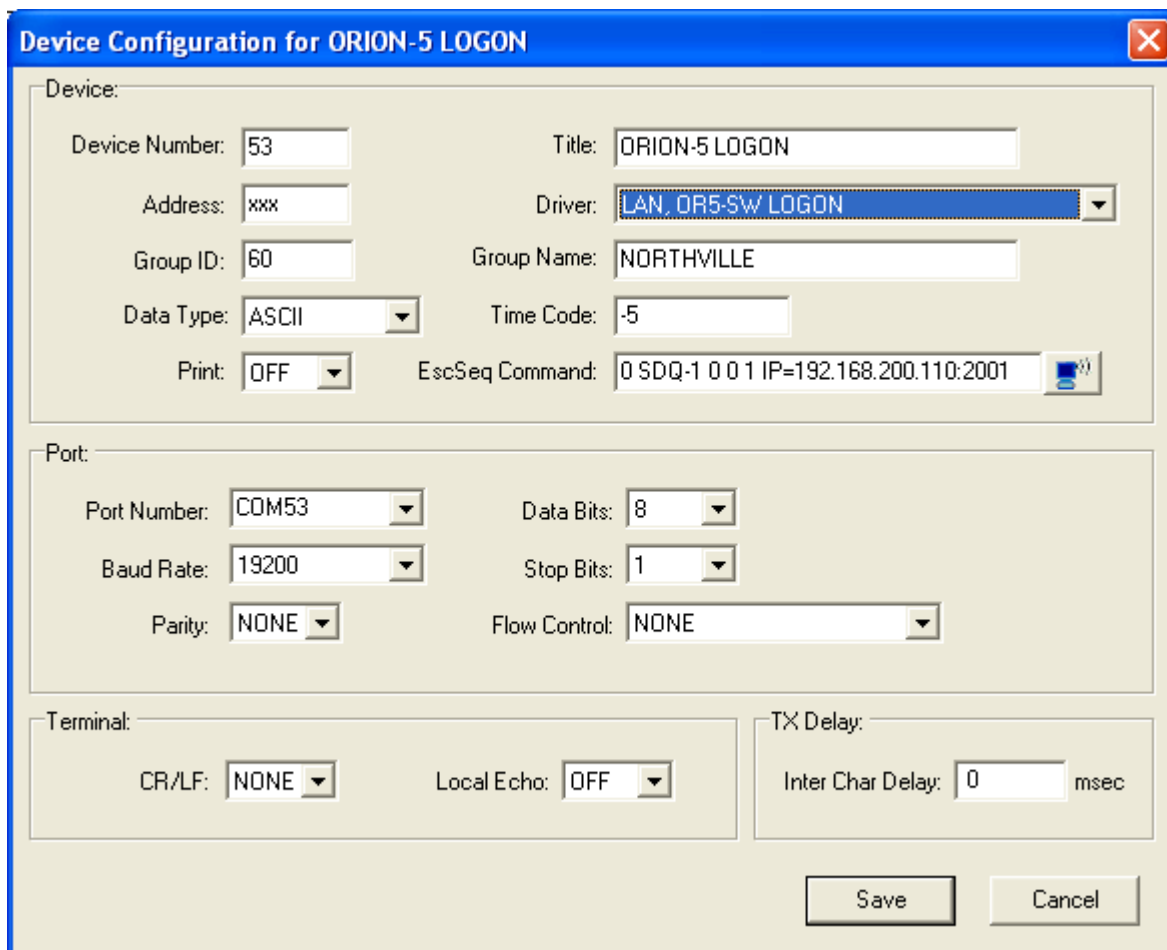


Figure 2.24 SEL 421 IP Dialog

DEVICE 52 (ORION 5)

The Orion5 communication processor is connected to the computer using an Ethernet connection. Below is the configuration dialog along with a description for each field.



The dialog box is titled "Device Configuration for ORION-5 LOGON". It is divided into three main sections: Device, Port, and Terminal.

Device Section:

- Device Number: 53
- Title: ORION-5 LOGON
- Address: xxx
- Driver: LAN, OR5-SW LOGON (selected from a dropdown)
- Group ID: 60
- Group Name: NORTHVILLE
- Data Type: ASCII (selected from a dropdown)
- Time Code: -5
- Print: OFF (selected from a dropdown)
- EscSeq Command: 0 SDQ-1 0 0 1 IP=192.168.200.110:2001

Port Section:

- Port Number: COM53 (selected from a dropdown)
- Data Bits: 8 (selected from a dropdown)
- Baud Rate: 19200 (selected from a dropdown)
- Stop Bits: 1 (selected from a dropdown)
- Parity: NONE (selected from a dropdown)
- Flow Control: NONE (selected from a dropdown)

Terminal Section:


- CR/LF: NONE (selected from a dropdown)
- Local Echo: OFF (selected from a dropdown)
- TX Delay: Inter Char Delay: 0 msec

Buttons: Save, Cancel

Figure 2.25 Orion5

Field	Description
Device Settings	
Device Number	The Orion5 is at device number 52.
Address	The address field is not needed, it is defaulted to xxx.
Group ID	The Orion5 is in group 60.
Data Type	The Orion5 communicates using an ASCII protocol.
Print	OFF.
Title	The title of the Orion is Orion-5 LOGON.
Device Driver	The LAN, OR5-SW LOGON driver is selected. The LAN drivers are used to communicate with a device connected using Ethernet. This driver issues the following commands: <ul style="list-style-type: none"> Connect to the IP server. Logon with the password defined in the EscSeq Command field.
Group Name	The Orion is in the Northville group.
Time Code	The Time Code is -5 for eastern US.

Field	Description
EscSeq Command	<p>The 6 parameters are: 0 SDQ-1 0 0 1 IP=192.168.200.110:2001</p> <p>A phone number is not required, the password is set to SDQ-1, a second level password is not required, also a back out command does not apply, the header is set to ON and the IP information is defined, Refer to Figure 2.26.</p>
Port Settings	
Port Number	The COM port number is set to COM53. Communications with the relay is through an Ethernet connection. All Ethernet connections require a unique COM port number. The COM port number for Ethernet connections cannot be a physical COM port on the computer.
Baud Rate	The baud rate field does not apply to Ethernet connections.
Parity	The parity field does not apply to Ethernet connections.
Data Bits	The data bits field does not apply to Ethernet connections.
Stop Bits	The stop bits field does not apply to Ethernet connections.
Flow Control	The flow control field does not apply to Ethernet connections..
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

The Orion5 uses IP to communicate. IP communications requires a port number and IP address to successfully connect. To enter the IP required fields click on the Ethernet button  displayed next to the “EscSeq Command” field, Refer to Figure 2.26. Enter the Orion’s port number and IP address. The enter fields are listed in the EscSeq Command field labeled IP= and separated by a colon “:”.

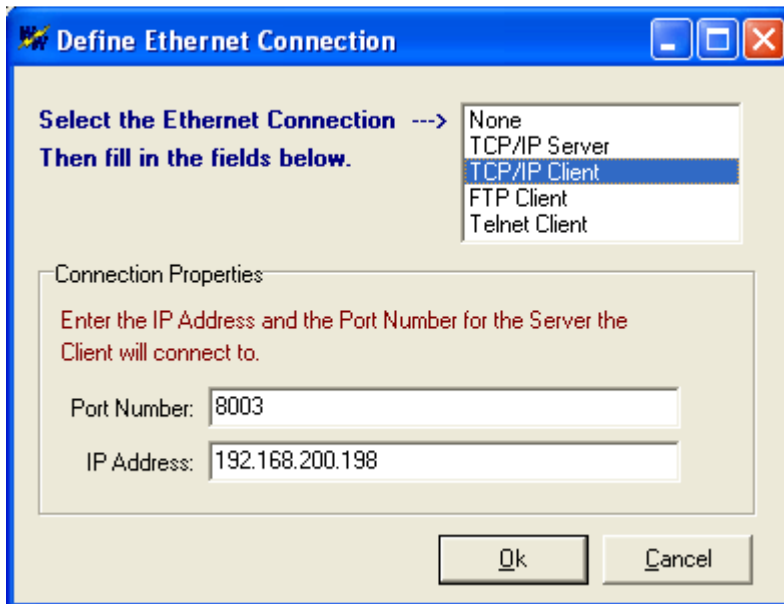
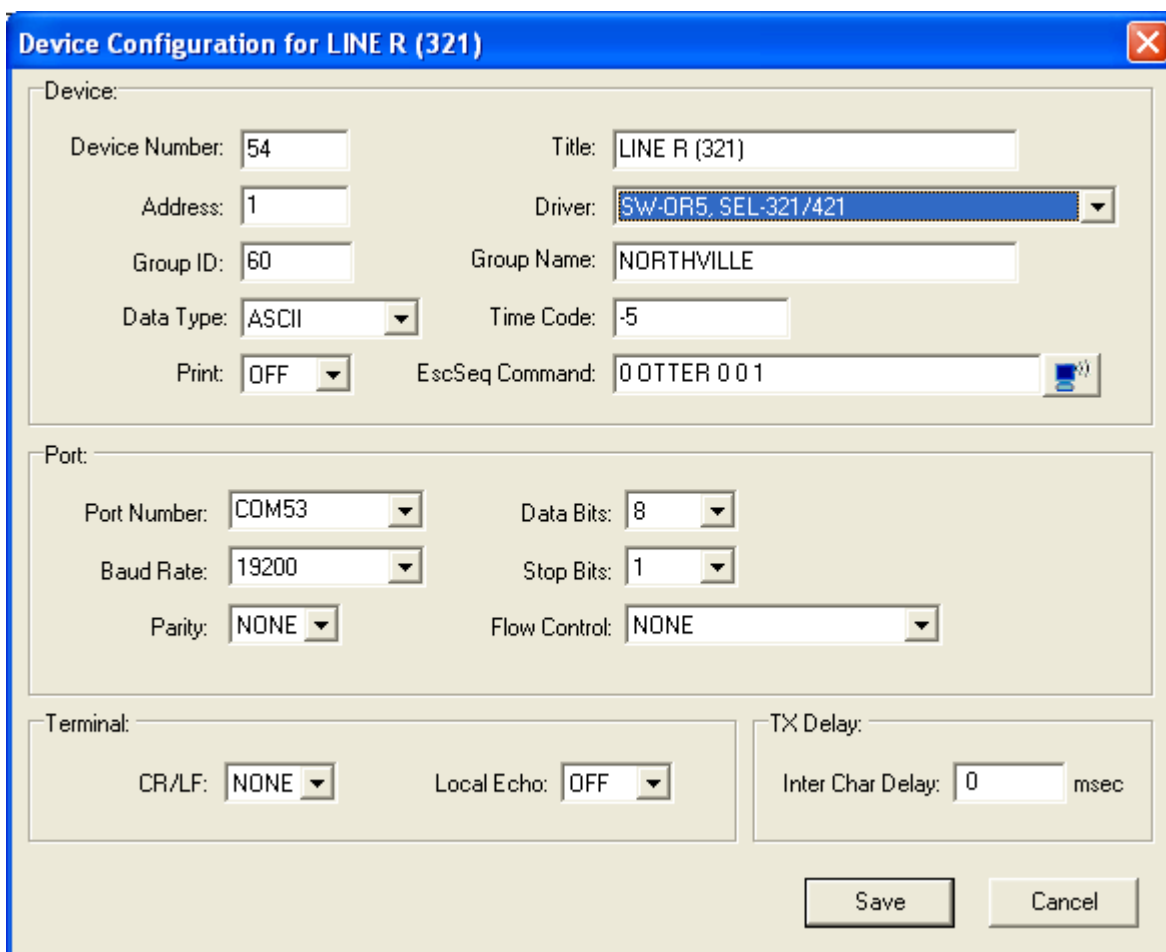


Figure 2.26 Orion IP Dialog

DEVICE 53 (SEL 321)

The SEL 321 Relay is connected to the Orion5 communication processor. The Wavewin computer first connects to the Orion5 using Ethernet then switches to the SEL 321 Relay. Below is the configuration dialog along with a description for each field.



The image shows a Windows-style dialog box titled "Device Configuration for LINE R (321)". It is divided into three main sections: "Device:", "Port:", and "Terminal:". The "Device:" section contains fields for Device Number (54), Title (LINE R (321)), Address (1), Driver (SW-OR5, SEL-321/421), Group ID (60), Group Name (NORTHVILLE), Data Type (ASCII), Time Code (-5), Print (OFF), and EscSeq Command (0 0 T T E R 0 0 1). The "Port:" section contains fields for Port Number (COM53), Data Bits (8), Baud Rate (19200), Stop Bits (1), Parity (NONE), and Flow Control (NONE). The "Terminal:" section contains fields for CR/LF (NONE), Local Echo (OFF), and TX Delay (Inter Char Delay: 0 msec). At the bottom right are "Save" and "Cancel" buttons.

Figure 2.27 SEL 321 Relay

Field	Description
Device Settings	
Device Number	The SEL 321 Relay is device number 53.
Address	The address field is 1. The 321 relay is connected to the Orion's port number 1.
Group ID	The relay is in group 60.
Data Type	The 321 relay communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is Line R (321). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	<p>The SW-OR5, SEL-321/421 driver is selected. The SW drivers are used to communicate with a device connected to a communication processor. This driver issues the following commands:</p> <ul style="list-style-type: none"> Switch to the port number listed in the address field using the Orion pass thru command.

Field	Description
	<ul style="list-style-type: none"> ▪ Send the SEL ACC command along with the password defined in the EscSeq Command field. ▪ Download all new events. ▪ Send a Meter command.
Group Name	The relay is in the Northville group.
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 0 OTTER 0 0 1</p> <p>A phone number is not required, the password is set to OTTER, a second level password is not required, also a back out command does not apply, the header is set to ON.</p>
Port Settings	
Port Number	The COM port number is set to COM53. Communications with the relay is through the Orion5. All devices connected to a communication processor must have the same COM port number as the communication processor.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 54 (SEL 187)

The SEL 187 Relay is connected to the Orion5 communication processor. The Wavewin computer first connects to the Orion5 using Ethernet then switches to the SEL 187 Relay. Below is the configuration dialog along with a description for each field.

Device Configuration for M3 BANK (187)

Device:

Device Number: 55 Title: M3 BANK (187)

Address: 2 Driver: SW-OR5, SEL-187/287/352

Group ID: 60 Group Name: NORTHVILLE

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: 0 0 T T E R 0 0 1

Port:

Port Number: COM53 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay:

Inter Char Delay: 0 msec

Save Cancel

Figure 2.28 SEL 187 Relay

Field	Description
Device Settings	
Device Number	The SEL 187 Relay is device number 54.
Address	The address field is 2. The 187 relay is connected to the Orion's port number 2.
Group ID	The relay is in group 60.
Data Type	The 187 relay communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is M3 Bank (187). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	<p>The SW-OR5, SEL-187/287/352 driver is selected. The SW drivers are used to communicate with a device connected to a communication processor. This driver issues the following commands:</p> <ul style="list-style-type: none"> Switch to the port number listed in the address field using the Orion pass thru command. Send the SEL ACC command along with the password defined in the EscSeq Command field. Download all new events. Send a Meter command.

Field	Description
Group Name	The relay is in the Northville group.
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 0 OTTER 0 0 1</p> <p>A phone number is not required, the password is set to OTTER, a second level password is not required, also a back out command does not apply, the header is set to ON.</p>
Port Settings	
Port Number	The COM port number is set to COM53. Communications with the relay is through the Orion5. All devices connected to a communication processor must have the same COM port number as the communication processor.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 55 (HATHAWAY)

The Hathaway DFR is connected to the Orion5 communication processor. The Wavewin computer first connects to the Orion5 using Ethernet then switches to the Hathaway DFR. Below is the configuration dialog along with a description for each field.

Device Configuration for DRF-C (HATHAWAY)

Device:

Device Number: 56 Title: DRF-C (HATHAWAY)

Address: 3 Driver: SW-OR5, HATH

Group ID: 60 Group Name: BERGER-NORTHVILLE

Data Type: BINARY Time Code: -5

Print: OFF EscSeq Command: 00000

Port:

Port Number: COM53 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay:

Inter Char Delay: 0 msec

Save Cancel

Figure 2.29 Hathaway DFR

Field	Description
Device Settings	
Device Number	The Hathaway DFR is device number 55.
Address	The address field is 3. The DFR is connected to the Orion's port number 2.
Group ID	The relay is in group 60.
Data Type	The Hathaway DFR communicates using a Binary protocol.
Print	OFF.
Title	The title of the DFR is DFR-C (Hathaway). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	The SW-OR5, HATH driver is selected. The SW drivers are used to communicate with a device connected to a communication processor. This driver issues the following commands: <ul style="list-style-type: none"> Switch to the port number listed in the address field using the Orion pass thru command. Request the latest event file. If event is a new file download the event.
Group Name	The DFR is in the Northville group.
Time Code	The Time Code is -5 for eastern US.

Field	Description
EscSeq Command	<p>The 6 parameters are: 0 0 0 0 0</p> <p>A phone number is not required, the password is not applicable, a second level password is not required, also a back out command does not apply and the header is set to OFF.</p>
Port Settings	
Port Number	The COM port number is set to COM53. Communications with the DFR is through the Orion5. All devices connected to a communication processor must have the same COM port number as the communication processor.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 56 (DPU2000R)

The DPU2000R Relay is connected to the Orion5 communication processor. The Wavewin computer first connects to the Orion5 using Ethernet then switches to the DPU2000R relay. Below is the configuration dialog along with a description for each field.

Device Configuration for LINE T (DPU2000R)

Device:

Device Number: 57 Title: LINE T (DPU2000R)

Address: 4 Driver: SW-OR5, ABB-DPU2000R

Group ID: 60 Group Name: BERGER-NORTHVILLE

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: 00000

Port:

Port Number: COM53 Data Bits: 8

Baud Rate: 38400 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay:

Inter Char Delay: 0 msec

Save Cancel

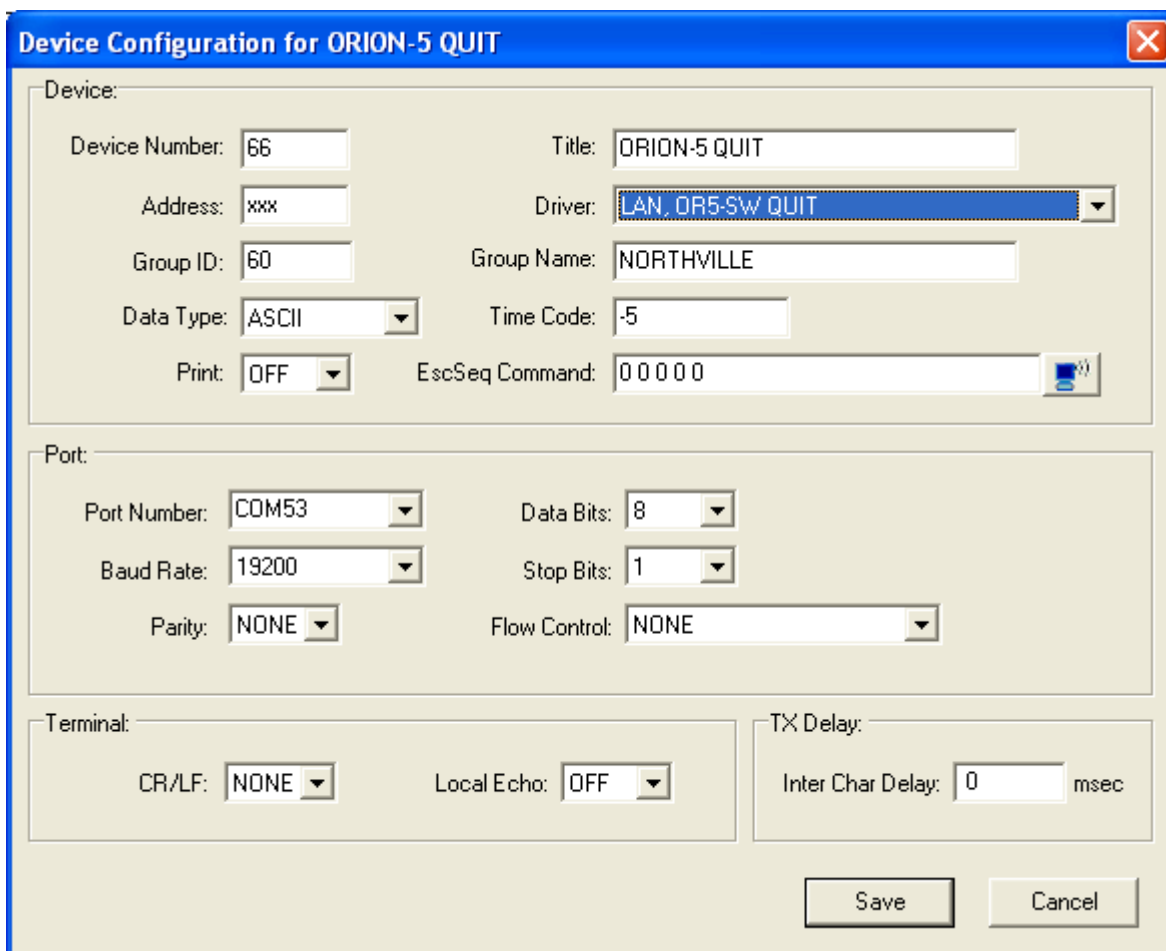
Figure 2.30 DPU2000R Relay

Field	Description
Device Settings	
Device Number	The DPU2000R relay is device number 56.
Address	The address field is 4. The relay is connected to the Orion's port number 4.
Group ID	The relay is in group 60.
Data Type	The DPU2000R relay communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is LINE T (DPU2000R). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	<p>The SW-OR5, ABB-DPU2000R driver is selected. The SW drivers are used to communicate with a device connected to a communication processor. This driver issues the following commands:</p> <ul style="list-style-type: none"> Switch to the port number listed in the address field using the Orion pass thru command. Request total number of records. Request 1st new records configuration. Request Quarter Cycle data until done. Save Configuration & Data to a long filename with a ".DPU"

Field	Description
	extension.
Group Name	The relay is in the Northville group.
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	The 6 parameters are: 0 0 0 0 0 A phone number is not required, the password is not applicable, a second level password is not required, also a back out command does not apply and the header is set to OFF.
Port Settings	
Port Number	The COM port number is set to COM53. Communications with the relay is through the Orion5. All devices connected to a communication processor must have the same COM port number as the communication processor.
Baud Rate	The baud rate is 19200.
Parity	No parity.
Data Bits	The Data Bits = 8.
Stop Bits	The Stop Bits = 1.
Flow Control	The Flow Control = None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 66 (ORION5)

The Orion-5 QUIT will back out of the last connected port on the Orion then issue a QUIT command to the Orion then hang up the modem. Below is the configuration dialog along with a description for each field.



The image shows a Windows-style dialog box titled "Device Configuration for ORION-5 QUIT". It is divided into three main sections: "Device:", "Port:", and "Terminal:". The "Device:" section contains fields for Device Number (66), Title (ORION-5 QUIT), Address (xxx), Driver (LAN, OR5-SW QUIT), Group ID (60), Group Name (NORTHVILLE), Data Type (ASCII), Time Code (-5), Print (OFF), and EscSeq Command (00000). The "Port:" section contains fields for Port Number (COM53), Data Bits (8), Baud Rate (19200), Stop Bits (1), Parity (NONE), and Flow Control (NONE). The "Terminal:" section contains fields for CR/LF (NONE), Local Echo (OFF), and TX Delay (Inter Char Delay: 0 msec). At the bottom right are "Save" and "Cancel" buttons.

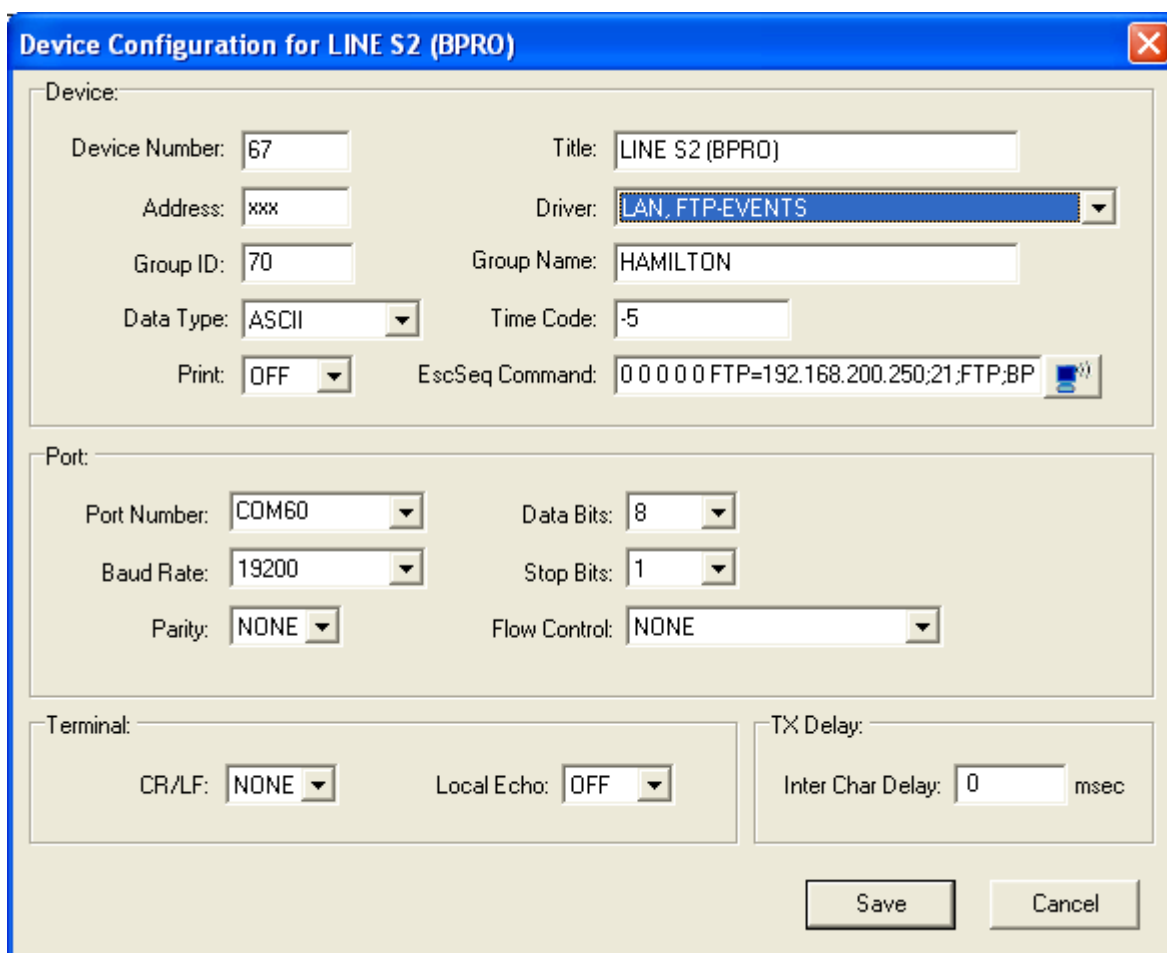
Figure 2.31 Orion-5 Quit

Field	Description
Device Settings	
Device Number	The Orion-5 Quit is at device number 66. Nine device numbers were skipped between the DPU2000R relay and the Orion-5 Quit. This is done to handle new devices that may be added to the Orion in the future. Always leave a difference of at least 5 device numbers between the last device on a communication processor and the quit.
Address	The address field is not needed, it is defaulted to xxx.
Group ID	The Orion Quit is in group 60.
Data Type	The Orion communicates using an ASCII protocol.
Print	OFF.
Title	The title of the Orion Quit is Orion-5 QUIT.
Device Driver	The LAN, OR5-SW QUIT driver is selected. The LAN drivers are used to communicate with a device connected via Ethernet. This driver issues the following commands: <ul style="list-style-type: none"> Switch back out to the Orion. Send a QUIT command to the Orion. Disconnect the from the IP server.
Group Name	The Orion quit is in the Northville group.
Time Code	The Time Code is -5 for eastern US.

Field	Description
EscSeq Command	The 6 parameters are: 0 0 0 0 0 A phone number is not required, a password does not apply, a second level password is not required, also a back out command does not apply, the header is set to ON.
Port Settings	
Port Number	The COM port number is set to COM53. The quit command for a communications processor must have the same COM port number as the communication processors LOGON.
Baud Rate	The baud rate field does not apply to Ethernet connections.
Parity	The parity field does not apply to Ethernet connections.
Data Bits	The data bits field does not apply to Ethernet connections.
Stop Bits	The stop bits field does not apply to Ethernet connections.
Flow Control	The flow control field does not apply to Ethernet connections.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

DEVICE 67 (BPRO)

The BPRO relay is connected to the computer using an Ethernet connection. Below is the configuration dialog along with a description for each field.




The image shows a Windows-style dialog box titled "Device Configuration for LINE S2 (BPRO)". It is divided into three main sections: Device, Port, and Terminal. The Device section contains fields for Device Number (67), Title (LINE S2 (BPRO)), Address (xxx), Driver (LAN, FTP-EVENTS), Group ID (70), Group Name (HAMILTON), Data Type (ASCII), Time Code (-5), Print (OFF), and EscSeq Command (0 0 0 0 FTP=192.168.200.250;21;FTP;BP). The Port section contains fields for Port Number (COM60), Data Bits (8), Baud Rate (19200), Stop Bits (1), Parity (NONE), and Flow Control (NONE). The Terminal section contains fields for CR/LF (NONE), Local Echo (OFF), and TX Delay (Inter Char Delay: 0 msec). At the bottom right are Save and Cancel buttons.

Figure 2.32 BPRO Relay

Field	Description
Device Settings	
Device Number	The BPRO relay is device number 67.
Address	Since the relay is directly connected to the computer through an Ethernet connection the address field does not apply, it is defaulted to xxx.
Group ID	The relay is in group 70.
Data Type	The BPRO relay communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is LINE S2 (BPRO). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	The LAN, FTP-EVENTS driver is selected. The LAN drivers are used to communicate with a device connected using Ethernet. This driver issues the following commands: <ul style="list-style-type: none"> Connect to the FTP server. Request a directory listing on the FTP server's remote path. Download all new event files. Disconnect the from the FTP server.
Group Name	The relay is in the Hamilton group.

Field	Description
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 0 0 0 0 0 FTP=192.168.200.250;21;ftp;apftp;/usr/apt/bpro/record;;2;C:\SDCS AVE;1;1</p> <p>A phone number is not required, a password does not apply, a second level password is not required, also a back out command does not apply, the header is set to OFF and the FTP information is defined, Refer to Figure 2.33.</p>
Port Settings	
Port Number	The COM port number is set to COM60. Communications with the relay is through an Ethernet connection. All Ethernet connections require a unique COM port number. The COM port number for Ethernet connections cannot be a physical COM port on the computer. Start all Ethernet COM port numbers at COM50.
Baud Rate	The baud rate field does not apply to Ethernet connections.
Parity	The parity field does not apply to Ethernet connections.
Data Bits	The data bits field does not apply to Ethernet connections.
Stop Bits	The stop bits field does not apply to Ethernet connections.
Flow Control	The flow control field does not apply to Ethernet connections.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

The BPRO relay uses FTP to download the events from the relay. FTP communications requires a number of parameters to successfully connect to the relay. To enter the FTP required fields click on the Ethernet button  displayed next to the “EscSeq Command” field, Refer to Figure 2.33. Enter the relay information for all the fields displayed in the FTP dialog. The enter fields are listed in the EscSeq Command field labeled FTP= and separated by a semicolon “;”.

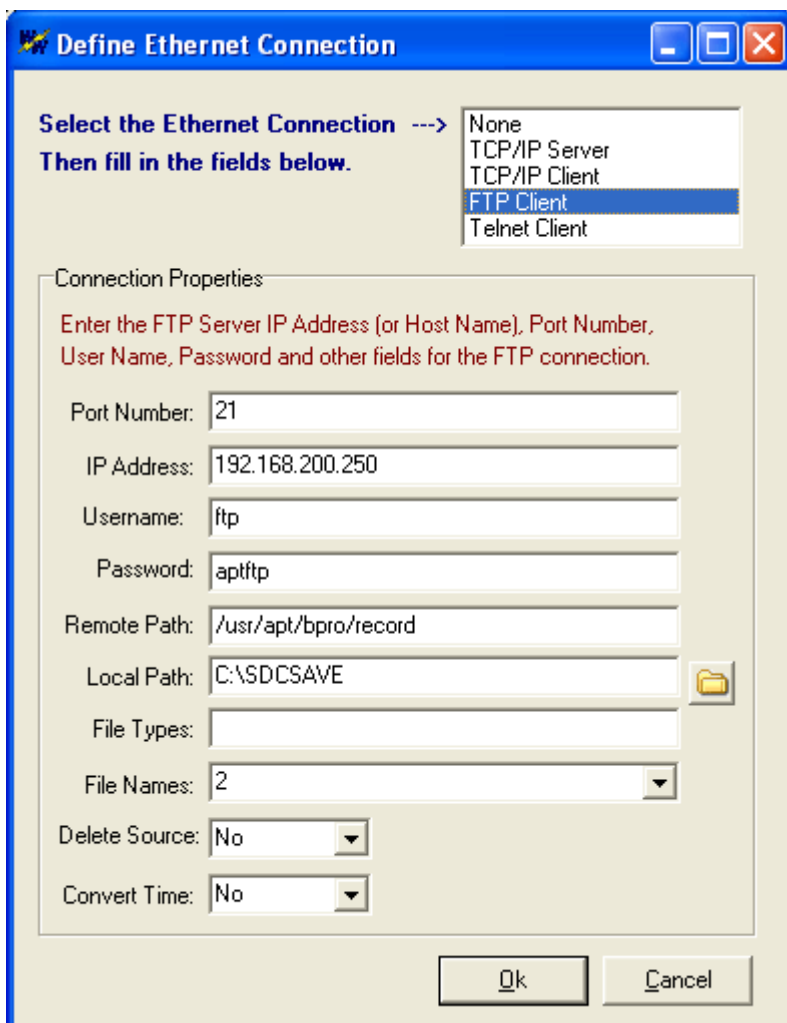


Figure 2.33 BPRO FTP Dialog

DEVICE 68 (TPRO)

The TPRO relay is connected to the computer using an Ethernet connection. Below is the configuration dialog along with a description for each field.

Device Configuration for LINE R1 (TPRO)

Device:

Device Number: 68 Title: LINE R1 (TPRO)

Address: xxx Driver: LAN, FTP-EVENTS

Group ID: 80 Group Name: HAMILTON

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: 0 0 0 0 FTP=192.168.200.251;21;ftp;aptft

Port:

Port Number: COM61 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay:


Inter Char Delay: 0 msec

Save Cancel

Figure 2.34 TPRO Relay

Field	Description
Device Settings	
Device Number	The TPRO relay is device number 68.
Address	Since the relay is directly connected to the computer through an Ethernet connection the address field does not apply, it is defaulted to xxx.
Group ID	The relay is in group 80.
Data Type	The TPRO relay communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is LINE R1 (TPRO). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	The LAN, FTP-EVENTS driver is selected. The LAN drivers are used to communicate with a device connected using Ethernet. This driver issues the following commands: <ul style="list-style-type: none"> Connect to the FTP server. Request a directory listing on the FTP server's remote path. Download all new event files. Disconnect the from the FTP server.
Group Name	The relay is in the Hamilton group.

Field	Description
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 0 0 0 0 0 FTP=192.168.200.251;21;ftp;apftp;/usr/apt/tpro/record;;2;C:\SDCSA VE;1;1</p> <p>A phone number is not required, a password does not apply, a second level password is not required, also a back out command does not apply, the header is set to OFF and the FTP information is defined, Refer to Figure 2.35.</p>
Port Settings	
Port Number	The COM port number is set to COM61. Communications with the relay is through an Ethernet connection. All Ethernet connections require a unique COM port number. The COM port number for Ethernet connections cannot be a physical COM port on the computer. Start all Ethernet COM port numbers at COM50.
Baud Rate	The baud rate field does not apply to Ethernet connections.
Parity	The parity field does not apply to Ethernet connections.
Data Bits	The data bits field does not apply to Ethernet connections.
Stop Bits	The stop bits field does not apply to Ethernet connections.
Flow Control	The flow control field does not apply to Ethernet connections.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

The TPRO relay uses FTP to download the events from the relay. FTP communications requires a number of parameters to successfully connect to the relay. To enter the FTP required fields click on the Ethernet button  displayed next to the “EscSeq Command” field, Refer to Figure 2.35. Enter the relay information for all the fields displayed in the FTP dialog. The enter fields are listed in the EscSeq Command field labeled FTP= and separated by a semicolon “;”.

Define Ethernet Connection

Select the Ethernet Connection --->

- None
- TCP/IP Server
- TCP/IP Client
- FTP Client**
- Telnet Client

Then fill in the fields below.

Connection Properties

Enter the FTP Server IP Address (or Host Name), Port Number, User Name, Password and other fields for the FTP connection.

Port Number: 21

IP Address: 192.168.200.251

Username: ftp

Password: aptftp

Remote Path: /usr/apt/tpro/record

Local Path: C:\SDCSAVE

File Types:

File Names: 2

Delete Source: No

Convert Time: No

Ok Cancel

Figure 2.35 TPRO FTP Dialog

DEVICE 69 (LPRO)

The LPRO relay is connected to the computer using an Ethernet connection. Below is the configuration dialog along with a description for each field.

Device Configuration for LINE X1 (LPRO)

Device:

Device Number: 69 Title: LINE X1 (LPRO)

Address: xxx Driver: LAN, FTP-EVENTS

Group ID: 90 Group Name: HAMILTON

Data Type: ASCII Time Code: -5

Print: OFF EscSeq Command: p:/usr/apt/lpro/record;;2;C:\SDCSAVE;1;1

Port:

Port Number: COM62 Data Bits: 8

Baud Rate: 19200 Stop Bits: 1

Parity: NONE Flow Control: NONE

Terminal:

CR/LF: NONE Local Echo: OFF

TX Delay:


Inter Char Delay: 0 msec

Save Cancel

Figure 2.36 LPRO Relay

Field	Description
Device Settings	
Device Number	The LPRO relay is device number 69.
Address	Since the relay is directly connected to the computer through an Ethernet connection the address field does not apply, it is defaulted to xxx.
Group ID	The relay is in group 90.
Data Type	The LPRO relay communicates using an ASCII protocol.
Print	OFF.
Title	The title of the relay is LINE X1 (LPRO). All devices that are polled for event files and/or meter values must have the device type included in the title surrounded by ().
Device Driver	The LAN, FTP-EVENTS driver is selected. The LAN drivers are used to communicate with a device connected using Ethernet. This driver issues the following commands: <ul style="list-style-type: none"> Connect to the FTP server. Request a directory listing on the FTP server's remote path. Download all new event files. Disconnect the from the FTP server.
Group Name	The relay is in the Hamilton group.

Field	Description
Time Code	The Time Code is -5 for eastern US.
EscSeq Command	<p>The 6 parameters are: 0 0 0 0 0 FTP=192.168.200.251;21;ftp;apftp;/usr/apt/lpro/record;;2;C:\SDCSA VE;1;1</p> <p>A phone number is not required, a password does not apply, a second level password is not required, also a back out command does not apply, the header is set to OFF and the FTP information is defined, Refer to Figure 2.37.</p>
Port Settings	
Port Number	The COM port number is set to COM62. Communications with the relay is through an Ethernet connection. All Ethernet connections require a unique COM port number. The COM port number for Ethernet connections cannot be a physical COM port on the computer. Start all Ethernet COM port numbers at COM50.
Baud Rate	The baud rate field does not apply to Ethernet connections.
Parity	The parity field does not apply to Ethernet connections.
Data Bits	The data bits field does not apply to Ethernet connections.
Stop Bits	The stop bits field does not apply to Ethernet connections.
Flow Control	The flow control field does not apply to Ethernet connections.
Terminal Settings	
CR/LF	Carriage Return and Line Feed are not needed.
Local Echo	Local Echo = OFF.
Inter Char Delay	No Inter Char Delay is needed.

The LPRO relay uses FTP to download the events from the relay. FTP communications requires a number of parameters to successfully connect to the relay. To enter the FTP required fields click on the Ethernet button  displayed next to the “EscSeq Command” field, Refer to Figure 2.37. Enter the relay information for all the fields displayed in the FTP dialog. The enter fields are listed in the EscSeq Command field labeled FTP= and separated by a semicolon “;”.

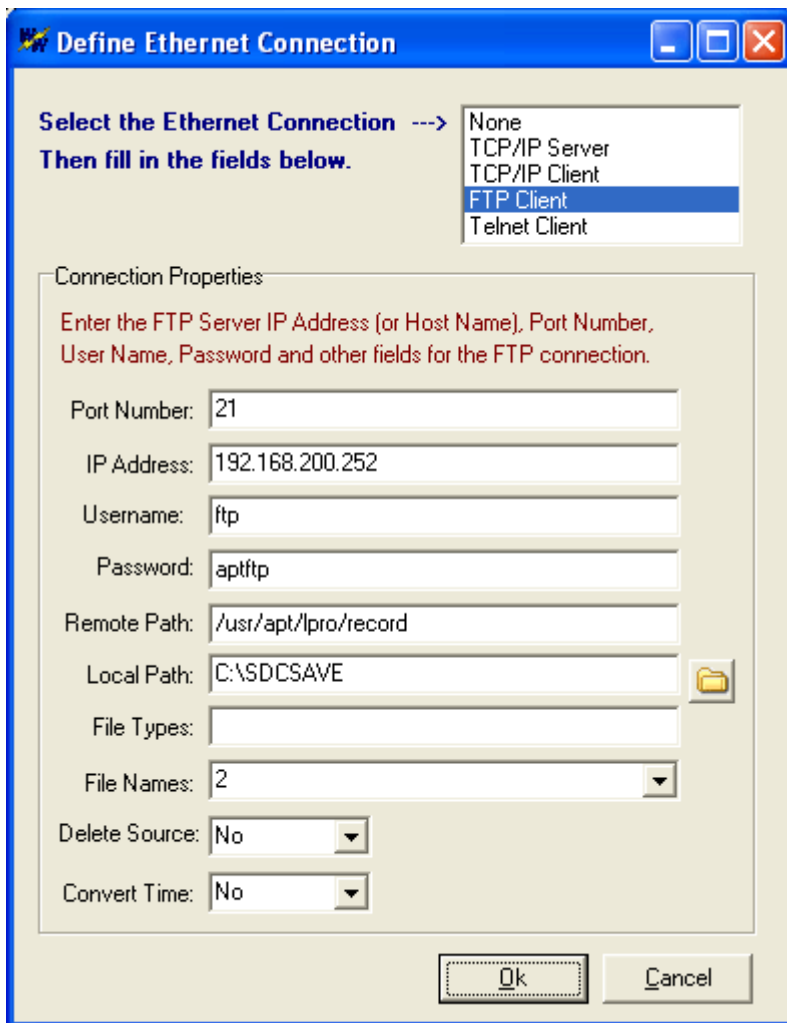


Figure 2.37 LPRO FTP Dialog

STOP MODEMS


The second to last device defined in the table resets the modem used to call the devices configured for modem communications. The MODEM INIT driver sends a number of initialization commands to the modem. In this example only one modem is used. If multiple modems are configured then there must be reset modem entry in the table for each modem.


SYSTEM SERVICES

The last device defined in the table performs any system service needed. The system services can include monitoring the message folder for poll requests, archiving files and so on.

Device Manager Features

DEVICE CONFIGURATION FIELDS

The device manager table lists the configuration fields for each device. To configure a new device select the “New” menu option under the “Device” menu or click the “New”  menu button in the Device Manager’s menu toolbar. To edit an existing device select the “Edit” menu option under the

“Device” menu or click the “**Edit**”  menu button in the Device Manager’s menu toolbar or right click on the device.

The configuration fields are described in the following table. Not all fields may be applicable for all devices. Use the fields that are associated with the device being configured.

Field	Description	Range
Device Settings		
Device Number	Each device must have a unique device number.	1..999
Address	The address field can define the port number the device is connected to off a communication processor or the relay’s communication number for DLP relays or the master number for Mehta Transcan DFRs.	4 Characters
Group ID	The group ID defines what group the relay is associated with.	4 Byte Number 1..214748364
Data Type	The data type field defines the type of communication protocol.	ASCII / Binary
Print	The print field defines to print all data from the device (ON/OFF).	ON / OFF
Title	The Title field is the device name followed by the type of device surrounded by (). This field is used when composing the IEEE long file name for event, history and summary files. Microsoft does not allow a number of characters in a file name. Do not use the comma and the list of illegal characters displayed in the IEEE long file name section.	24 Characters
Device Driver	The device driver is selected from a drop down list. There are 3 types of drivers: <ul style="list-style-type: none"> POLL: The Poll drivers are used for direct communications with a device. SW: The SW drivers are used for devices connected to a communication processor. LAN: The LAN drivers are used for devices connected on a LAN network. 	Selectable
Group Name	The Group Name field is the name of the group the device is associated with. This field is used when composing the IEEE long file name for the event, history and summary files. Microsoft does not allow a number of characters in a file name. Do not use the comma and the list of illegal characters displayed in the IEEE long file name section.	24 Characters
Time Code	The Time Code defines the time offset from GMT time.	4 Characters
EscSeq Command	This field has 6 parameters. Each parameter is separated by a space. Do not use spaces in the individual parameters. If the parameter does not apply to the device default the parameter to 0. The first parameter (CMND) is the phone	255 Characters

Field	Description	Range
	<p>number for the device. If a phone number does not apply default this parameter to 0.</p> <p>The second parameter (CMND1) is the device's first level password. If a password is not needed default this parameter to 0.</p> <p>The third parameter (CMND2) is the device's second level password. If a second level password is not needed then default this parameter to 0.</p> <p>The fourth parameter (CMND3) is the back out command from a nested communication processor. If not applicable then default this parameter to 0.</p> <p>The fifth parameter (CMND4) is Header ON or OFF for the DXF Display (Header ON = 1, OFF = 0).</p> <p>The sixth parameter (CMND5) defines the type of SEL events to download. The L parameter will download the raw 16 samples/cycle files and a blank will download the short 4 samples/cycle files.</p>	
Port Settings		
Port Number	The Port Number field defines the physical or virtual COM port used for connecting to the device. For a physical connection select the COM port number from the drop down list. For a virtual connection type the COM port number.	Selectable
Baud Rate	Select the Baud Rate. The baud rate must be an exact match of the baud rate set on the device.	Selectable
Parity	Select the Parity. The parity must be an exact match of the parity set on the device. Default = None.	None, Odd, Even
Data Bits	Select the Data Bits. The data bits must be an exact match of the data bits set on the device. Default = 8.	7, 8
Stop Bits	Select the Stop Bits. The stop bits must be an exact match of the stop bits set on the device. Default = 1.	1, 2
Flow Control	Select the Flow Control. The flow control must be an exact match of the flow control set on the device. Default = None.	None, Software, Hardware
Terminal Settings		
CR/LF	Select when a Carriage Return and Line Feed are needed when information is sent and/or received from the device in terminal mode. Default = None.	None, Both, RX, TX
Local Echo	Select ON if you would like the commands sent to	On / Off

Field	Description	Range
	the device echoed back in terminal mode. Default = OFF.	
Inter Char Delay	Enter the duration in milliseconds to wait between sending characters to the device. 0 indicates no Inter Char Delay needed for the device. Default = 0.	2 Byte Number 0..65535

LONG FILE NAMING FORMAT


All the data downloaded from the connected devices are saved to a file using the IEEE long file naming format. The IEEE long file naming format is a PSRC format used to name time sequenced data files. The file name contains the following ten fields stored in a comma-delimited fashion:

Example: 000112,123433234,-5S,South Arkey,DLP1,Sun Power,T,123.22,+34.60,AG T.OCS

Field Definitions:

Field	Example	Displayed	Definition
Date	040112	01/12/2004	The Date field defines the start date of the file. The date fields are stored as: year (2 characters), month and day.
Time	123433234	12:34:33.234	The time field defines the start time of the file. The Time fields are defined as: hour, minutes, seconds and milliseconds.
Tcode	-5S	-5S	The Time Code defines the time offset from GMT time. -5s would be specified for US Eastern Standard Time. If the start time is expressed in UT, this field is coded 0z. Note: GMT is the international abbreviation for Greenwich Mean Time.
Substation	South Arkey	South Arkey	The substation name or code where the originating device is located.
Device	DLP1	DLP1	The device name or code that generated the file.
Company	Sun Power	Sun Power	The company of the specified substation.
File Tag	T	T	The fault type or contents type of the file.
Line Length	123.22	123.22	The line length extracted from the event file. This field applies to certain relays.
Fault Location	+34.60	+34.60	The fault location extracted from the event file. This field applies to certain relays.
Fault Type	AG T	AG T	The fault type extracted from the event file. This field applies to certain relays.

OPENING DEVICE TABLE

To open the Device Manager table select “Device Manager” from the File Table’s Options menu or click on the Devices menu button  Devices. When the Device Manager is activated all the devices defined in the table are automatically opened. A message dialog reports on the state of each connection. Refer to Figure 2.38. If an error occurs while initializing a port all device I/O is disabled. The device manager consists of a table and a query bar. Refer to Figure 2.1.

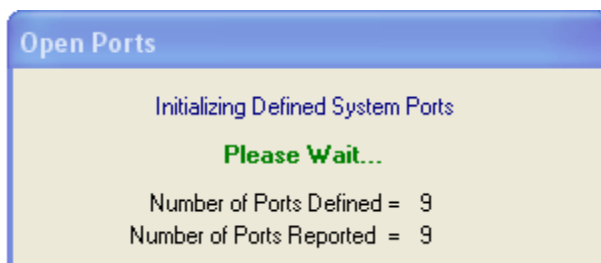



Figure 2.38 Initialize Device Ports

CREATING/EDITING DEVICE RECORDS

To create a new device, press F4 or click the **New**  menu button. To edit an existing device, select the device and press F2 or click the **Edit**  menu button or right click on the device. Use the tab key to navigate between fields. Fields that are followed by a down arrow button are selectable fields. Use the up and down arrow keys to view the selectable options or click the down arrow button.

Each field is described below:

Field	Description
Device Settings	
Device Number	The unique device number for the configured device. Range = 1..999.
Address	The address number for the device. Range = 4 ASCII characters. The device number can be the port address of the device off a multidrop or communication processor or the device number registered in the device for communications.
Group ID	The ID number for the station where the device is installed.
Data Type	Device communication format, ASCII or Binary.
Print	Sends all the data received at the port to the printer every 60 seconds. Select ON or OFF.
Title	Device title. Enter up to 24 characters or digits. The following characters are not permitted: : ? " / \ < > * @ #.
Device Driver	Driver used to periodically poll information from the device. See Appendix A for script command definitions.
Group Name	The name of the station where the device is installed. Enter up to 24 characters or digits. The following characters are not permitted: : ? " / \ < > * @ #
Time Code	The time code where the device is installed (Greenwich Time).
EscSeq Command	Six fields allocated for general driver information such as: phone numbers, passwords, back out commands and so on... The fields must be separated by a blank. For Ethernet connections enter "IP=IP address:port number" in one of the available 6 fields. If an IP address is used the "Port Number" field must be unique. It is advisable to start the ethernet ports at COM50.
Port Settings	
Port Number	Port number. Enter Com1 to Com999. Up to 999 external ports can be defined. For Ethernet connections the port number must be unique. It is advisable to start the Ethernet ports at the COM50.
Baud Rate	Data transfer rate. Selectable range is 300 to 256,000bps.
Parity	Parity bit. Select Odd, Even, or None.
Data Bits	Number of bits per data packet. Select 7 or 8.
Stop Bits	Number of stop bits used to frame each data packet. Select 1 or 2.
Flow Control	Flow control method used by the device. Select Software Xon/Xoff,

Field	Description
	Hardware RTS/CTS, or None.
Terminal Settings	
CR/LF	Carriage Return and Line Feed setting for the terminal display. Select RX (for received data), TX (for transmitted data), both, or none.
Local Echo	Local Echo setting for the terminal display. Select ON or OFF. When local echo is on the characters/digits entered from the keyboard are duplicated on the terminal screen.
TX Delay	
Inter Char Delay	Millisecond delay inserted between the transmitted characters. Maximum delay is 99 milliseconds. Enter 0 to turn this feature off.

Click **Save** to save the record or **Cancel** to close the dialog without saving. If an error occurs when opening a COM port a message is displayed and all device I/O is aborted. If an error occurs connecting to an Ethernet port then the last device that reported an error is displayed in the device table's status bar. All communication is left open when an Ethernet connection reports an error. The polling drivers will try to reopen the Ethernet connection on each poll. To edit an existing record select the device in the table and press F2 or click the **Edit** menu button.

The title and station fields are used to compose the IEEE long file name. Refer to "IEEE Long File Naming Format" section above for more information. Below are the characters not permitted in the filename.

: ? " / \ < > * | @ #

An error message will be displayed if these characters are entered into the title or station fields.

DUPLICATING DEVICES RECORDS

To duplicate an existing device record, place the cursor on the desired device and select "Duplicate" from the "Device" menu or press Alt+D,U. When duplicating an existing device the device number must be changed. If the device number is duplicated or out of range all device I/O is aborted until the error is corrected. Up to 999 devices can be defined.

SAVE & ARCHIVE DIALOG

To setup the system and file properties open the "Save & Archive" dialog under the "Options" menu. This dialog is used to set up the basic system parameters such as: Station ID, Station name, Company name and system password and to define the system files settings. Refer to Figure 2.39.

The file settings maintain the device DTB files. The device DTB files can be periodically renamed to the IEEE PSRC long naming format (Refer to the "IEEE Long File Naming Format" section) and/or deleted when the device file size exceeds the defined buffer size.

Refer to the table below for information on each field.

Field	Description
System Settings	
Station ID	The Station number where the system is running.
Station Name	The Station name where the system is running.
Company Name	The company name.

Field	Description
Password	The password to gain access to this platform from another station.
File Settings	
Save Path	Path where the event, summary and history files are saved. Enter up to 80 characters/digits.
Message Path	Path where the data DTB files, message files and meter values files are saved. Enter up to 80 characters/digits.
Save Rx Data	Save all data received from the polled devices to a separate DTB file. Select “Yes” to keep a record of all data received from the devices or “No” to discard all received data. This feature is used to troubleshooting communcations with devices.
Duration (min)	The duration when to rename or delete the received data stored in the database files (DTB). Enter up to 99999 minutes or 0 to turn this feature off.
End With	Action to take when the duration field is exceeded. Select rename to rename the DTB file to the IEEE long file naming format or delete to delete the files.

Use the tab key to navigate between fields, the **Save** button to save the data, and the **Cancel** button to terminate the command.

Save & Archive Dialog

System Settings:

Station ID: 1

Station Name: Master Station

Company Name: Sun Power

Password: RELAY

Log File Settings:

Save Path: C:\SDCSAVE

Message Path: C:\SDCARCH

Save Rx Data: Yes

Duration (min): 1440

End With: Delete

Save Close

Figure 2.39 Save & Archive Dialog

EXPORT

The export feature exports device records from the active configuration table to a comma delimited ASCII file. The “Export” menu option is under the “Device” menu. All devices or only the marked devices can be exported, Refer to Figure 2.40.

This feature is useful for changing common information for all devices quickly. For example if a COM port number has changed for a number of devices then those devices can be exported. The export file can be opened in “Excel” and all of the Com port fields can be changed easily. To import the changes back into the device configuration table use the “Import” menu option under the “Device” menu.

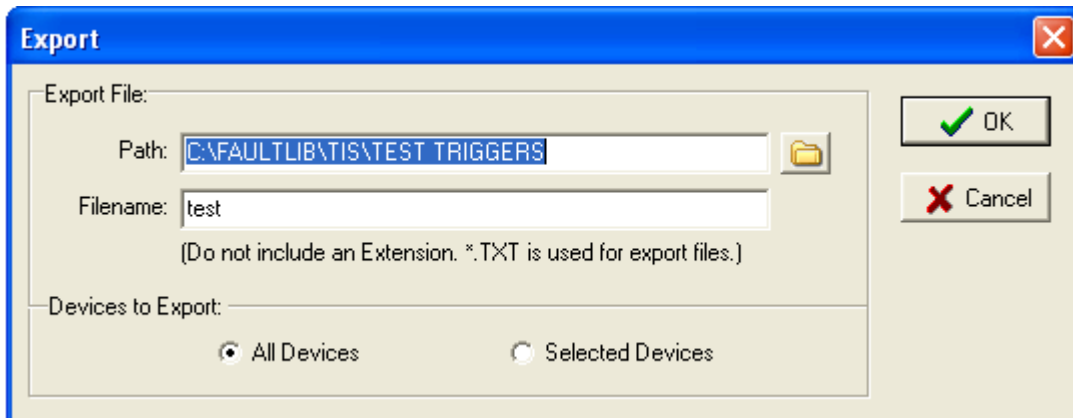


Figure 2.40 Export Dialog

IMPORT

The import feature imports all device information from the exported comma delimited ASCII file. It is advisable to always keep a backup of the existing Device Configuration files before using the import feature. This allows for a quick recovery if any of the changes made to the export file were incorrect. The 3 files to backup are the CFG_DEVS.DTB, CFG_SHOT.DTB & DRIVERS.INI files located in the Wavewin directory.

To import a previously exported file select the “Import” menu option under the “Device” menu. Enter the exported file’s folder and filename or use the “Browse” button to select the file. All device information contained in the imported file will be updated in the active device configuration table.

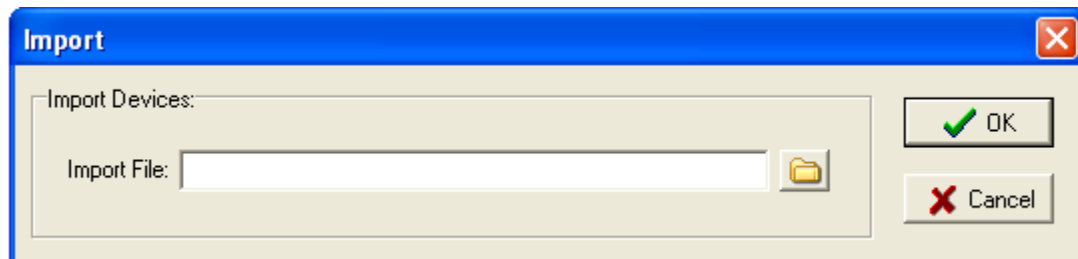


Figure 2.41 Import Dialog

NAVIGATING

To navigate the device records in the table use the up, down, page up, page down, ctrl+home, and ctrl+end keys, or the vertical scroll bar. To navigate the columns use the right, left, home, and end keys or the horizontal scroll bar. Use the tab key to move the cursor from the device table to the query fields and the up arrow to return to the table.


MARKING/UNMARKING DEVICES

Devices are marked and unmarked through the “Mark” menu option, the spacebar, or the mouse button. Use the shift+mouse click button to mark a group of devices or the ctrl+mouse click button to randomly mark devices. Marked devices are displayed in red and can be deleted (Del), copied (Alt-D,Y), grouped (Alt+M,G), sorted (Alt+S), printed (Alt+P,P) or polled in the multiport interrogation display (MID) window (F7) or the DXF display window (F8).

DELETING DEVICES

Devices must be marked in order to delete them from the table. To delete a device, mark the device and press the delete key or select “Delete” from the Device menu. The software prompts for confirmation, click **Yes** to continue or **No** to Cancel.

SORTING DEVICES

The column headers displayed at the top of the table are used to sort the device records in ascending or descending order. Use the Sort menu options to sort all or marked devices with respect to the selected sort field. To set the sort field, place the cursor in the desired column and select “Set Sort Field” from the Sort menu. Clicking on the column header also sets the active sort field. The active sort field is displayed in the status bar at the bottom of the window. The active sort column header displays the sort order .

CUSTOMIZING THE DEVICE TABLE

The columns displayed in the table can be repositioned through the “Display” menu option under the “Options” menu. Refer to Figure 2.42. Use the Move Up and Move Down buttons to change the position of a column. The table columns can also be resized. Position the mouse over the column separator in the table and drag the mouse to the desired location or double click on a column separator to resize the column to the largest display.

The size of the font displayed in the table can also be changed. Use the “Table Font Size” drop down list to select the desired font.



Figure 2.42 Device Display Dialog

QUERYING DEVICES

The query fields are used to search for specific information in the device table. Query fields are located below the table. Use the tab key to move the cursor from the device table to the query fields and up arrow to return to the table. Use the Ctrl-Left/Right arrow keys to move between the query fields. Each field contains a criteria and an operator. Refer to Figure 2.43. The criterion is directly entered from the keyboard, and may include the “*” and “?” wild cards. Operators are located above the criteria fields and can be changed by clicking the mouse button on the operator symbol or by pressing the F9 key. The selectable options include equal to (=), less than (<), and greater than (>).

[illegible]


Figure 2.43 Query Fields

When a query is launched, the engine numerically compares the specified criteria with the information in the table. If numerical comparison is not possible then it symbolically compares. When multiple fields are defined, the engine searches for a match on the first field “AND” on the second field “AND” on the third field and so on.

Three query options are available: Query All Devices, Query Marked Devices, or Query Unmarked Devices. Devices that meet the specified query requirements are marked, grouped, and displayed at the top of the table. Use the tab and Ctrl-Left/Right arrow keys to navigate through the query fields and the <enter> key to execute the query.

CREATING FUNCTION KEYS

Programmable function keys allow for a string of ASCII characters or hexadecimal values to be transmitted to the output device through a single keystroke. The function keys are active in ASCII and

Binary terminal emulators. Each device contains up to nine function keys. To create a function key, select the device and press F5 or click the **TermKeys** menu button .

Each function key is composed of two fields: name and transmit (Tx). Refer to Figure 2.44. The name fields are used as key descriptors and the transmit fields are used to assign a string of ASCII characters, hexadecimal values, escape sequences, or other transmit strings. When the associated key is pressed in the terminal emulator the assigned transmit string is sent to the output device one character at a time. For example:

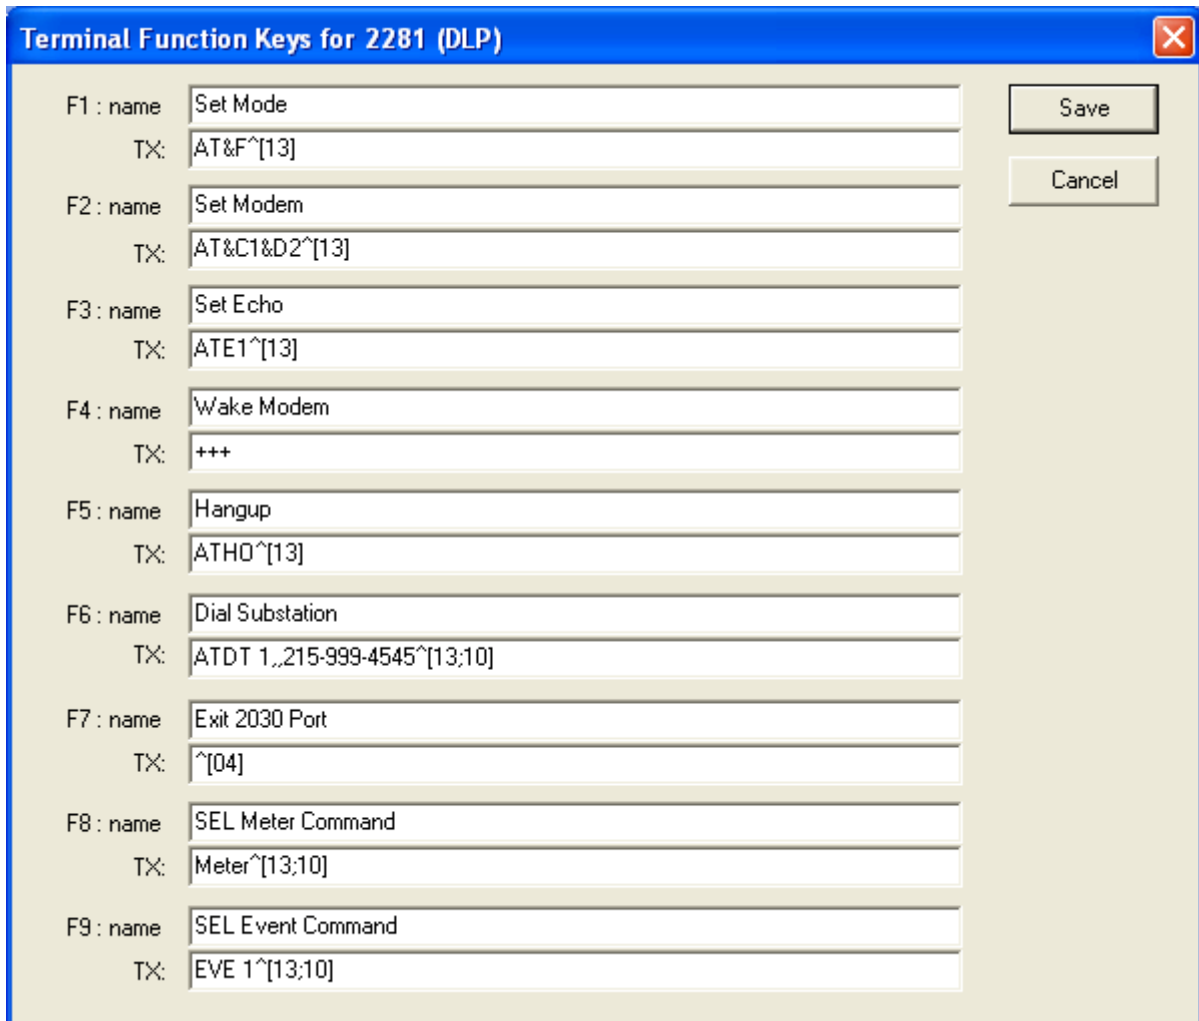
ASCII	F1:name	Request Meter Information
Tx:	meter	^[13;10]

Binary	F1:name	Request RTU SOE Points
Tx:	7E 01 01 03 A0 8A 20 C4 A6	

The term “meter” specifies an ASCII command and the instruction “^” initiates an escape sequence that represents a series of decimal codes separated by semicolons and terminated by a closed bracket, “]” or a space. In the Binary case only hex characters (0..9,A..F) are allowed. A transmit string may also include other transmit strings. For example:

F1:TX	acc^[13;10]password^[13;10]
F2:TX	%F1%meter^[13;10]

When F2 is pressed the transmit command defined in F1 is sent to the output device followed by the ASCII command “meter” and the escape sequence, defined in F2. Up to eight transmit strings can be included in a single string. To save the function keys click the **Save** button or click **Cancel** to terminate the command. The function keys names are displayed at the bottom of the terminal mode window.




Function Key	Name	TX Command
F1	Set Mode	AT&F^[13]
F2	Set Modem	AT&C1&D2^[13]
F3	Set Echo	ATE1^[13]
F4	Wake Modem	+++
F5	Hangup	ATH0^[13]
F6	Dial Substation	ATDT 1,,215-999-4545^[13;10]
F7	Exit 2030 Port	^[04]
F8	SEL Meter Command	Meter^[13;10]
F9	SEL Event Command	EVE 1^[13;10]

Figure 2.44 Terminal Function Keys

COMMUNICATING WITH AN ASCII DEVICE

The ASCII emulator is used to transmit ASCII characters and/or escape sequences to the output device. To communicate with an ASCII device place the cursor on the desired device and press

<enter> or click the **Terminal** menu button . Refer to Figure 2.45. Data is transmitted to the output device by pressing the predefined function keys or by manually pressing the numeric and/or letter keys. If the device does not respond, check the device's communication parameters (F2) and/or the device connection. Use the up arrow, down arrow, right arrow, left arrow, page up, and page down keys to browse the data and the <esc> key to exit.

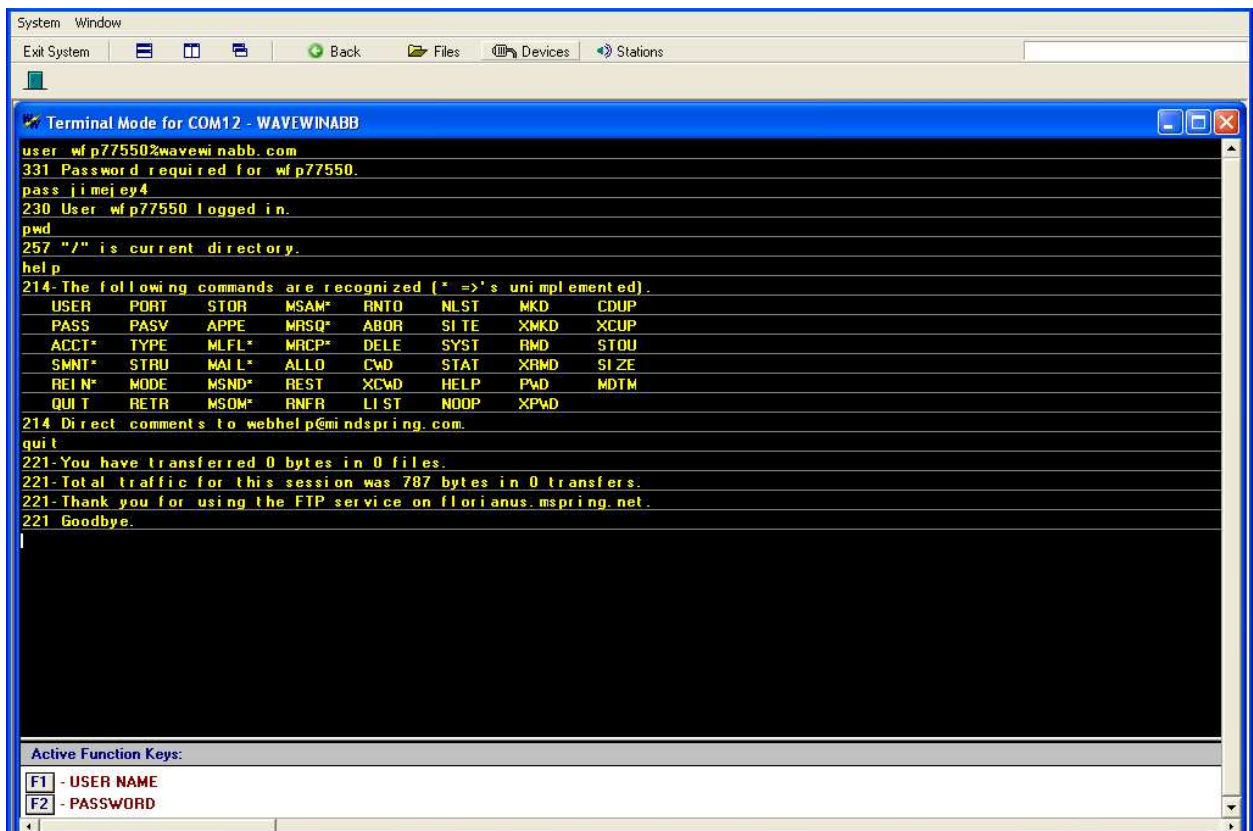



Figure 2.45 ASCII Terminal Mode

COMMUNICATING WITH A BINARY DEVICE

The Binary emulator is used to transmit hex characters to the output device. To communicate with a Binary device place the cursor on the desired device and press <enter> or click the **Terminal** menu

button . Refer to Figure 2.46. The Binary display consists of a hex editor and an ASCII display. When a hex value is entered, the ASCII equivalent appears in the window to the right of the editor. Hex values range from 00 to FF. Transmit data to the output port by pressing the predefined function keys or by manually pressing the numeric keys. If the device does not respond, check the device's communication parameters (F2), and/or the device connection.

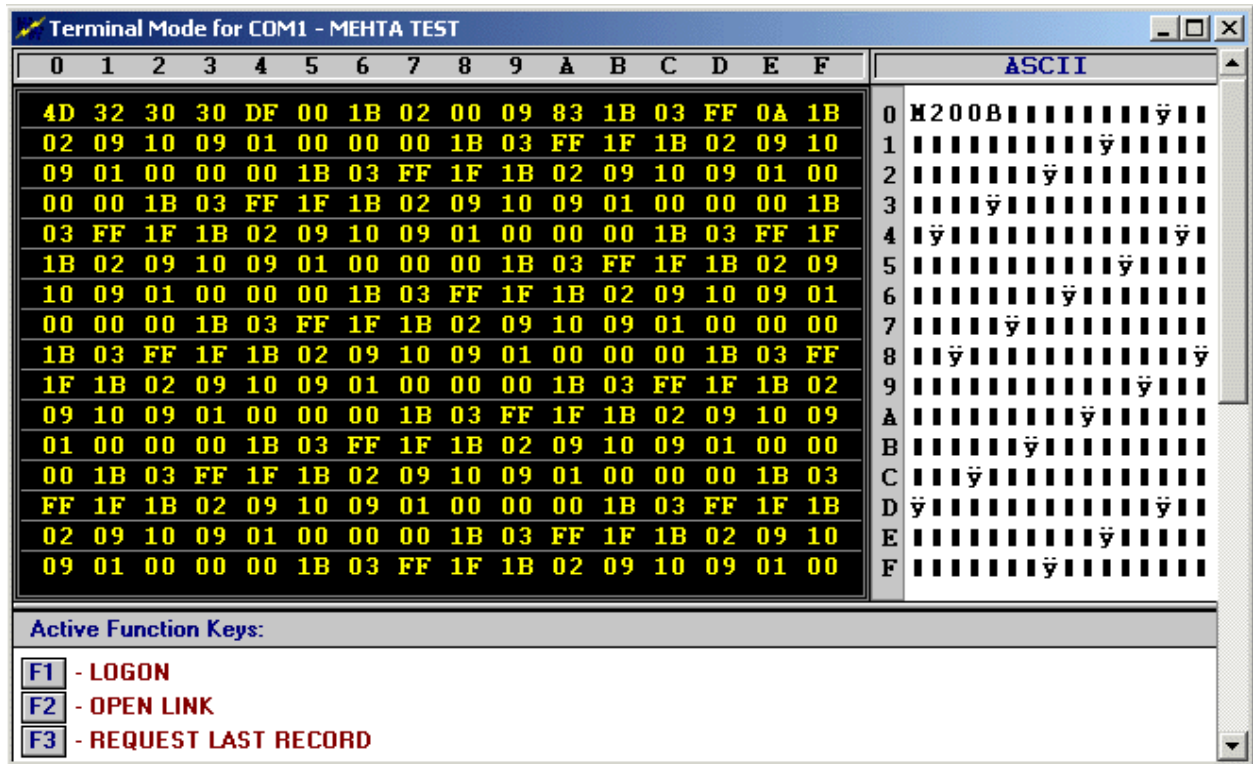



Figure 2.46 Binary Terminal Mode

VIEWING EVENT DATA

All data received from a device is archived in a Dev_###.DTB file (### is the device number in the device table) in the "Message" folder defined in the "Save & Archive" dialog. To view or modify the data saved in the device DTB file, select the device and press F6 or select the "View Event File" menu option under the "Options" menu or click on the "Event File" menu button . Refer to Figure 2.47. If a message folder is not defined in the "Save and Archive" dialog, then the DTB files are saved in the Wavewin directory. Use the up arrow, down arrow, page up, page down, ctrl+page up, ctrl+page down, left arrow, right arrow, home, and end keys to browse the data. The **Cut** (shift+del), **Copy** (ctrl+ins), and **Paste** (shift+ins) menu options are used to edit the file and the **Save As** command to save the file under a new name. Press <esc> or click the **Close** menu button to exit the window.

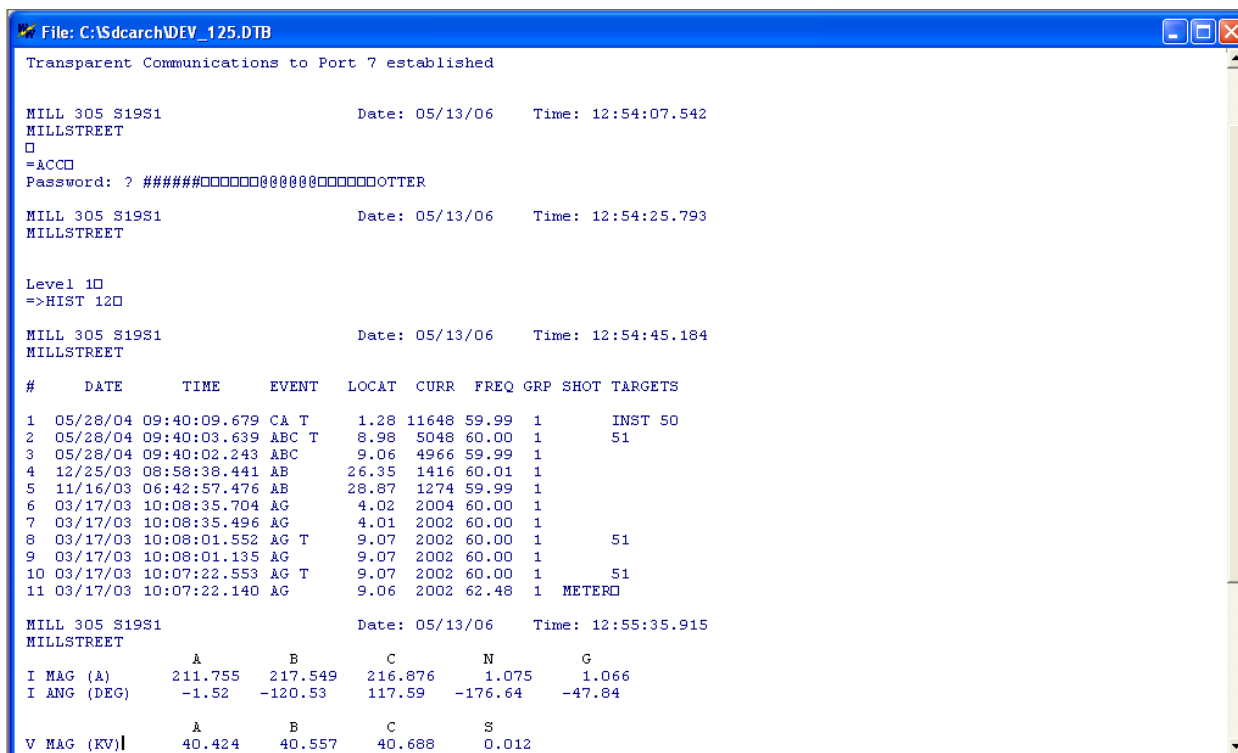


Figure 2.47 View Device Event Data

CAPTURING DATA

The Device Manager offers both unsolicited and solicited data captures. When the device table is open, the system captures any unsolicited data received from the devices. The captured data is buffered, processed, and saved to the device's database file in the Message folder specified in the "Save & Archive" dialog. The database filename indicates the device number in which the data was received. For example, DEV_129.DTB represents device 129. All data is saved in the original form it was received and can be viewed or modified in the ASCII or Binary editors.

Devices that do not speak on their own can be periodically polled for analog, digital, summary and history information. A number of pre-canned drivers are supplied for report by exception commands, building load profile files, and for populating one-line diagrams. For devices not supported, the scripting language can be used to create script routines (device drivers) that periodically interrogate a device, parse values from the response, and display the values in the Multiport Interrogation Display (MID) device panels or in a one-line diagram (DXF).

MULTIPOINT INTERROGATION DISPLAY

The Multiport Interrogation Display (MID) contains four device panels per page. A maximum of 999 device panels can be opened at one time. MID executes the device's assigned drivers and updates the parsed information into the device panel. To activate the MID window press F7. If no devices are marked all devices assigned a driver are displayed and polled and if there are marked devices then only the marked devices assigned a driver are displayed and polled. Use the up, down, page up, and page down keys to view the device panels. When F7 is pressed the device's TXCOMMAND assigned in the DRIVERS.INI file is periodically sent to the output device. The response data is parsed by the RXSTRIP commands and updated on screen. Refer to Figure 2.48. Each panel displays the device title (Hdr), the assigned active device drive (Drv), the device number (Dev#), and the number of times the driver executed (Cycle).

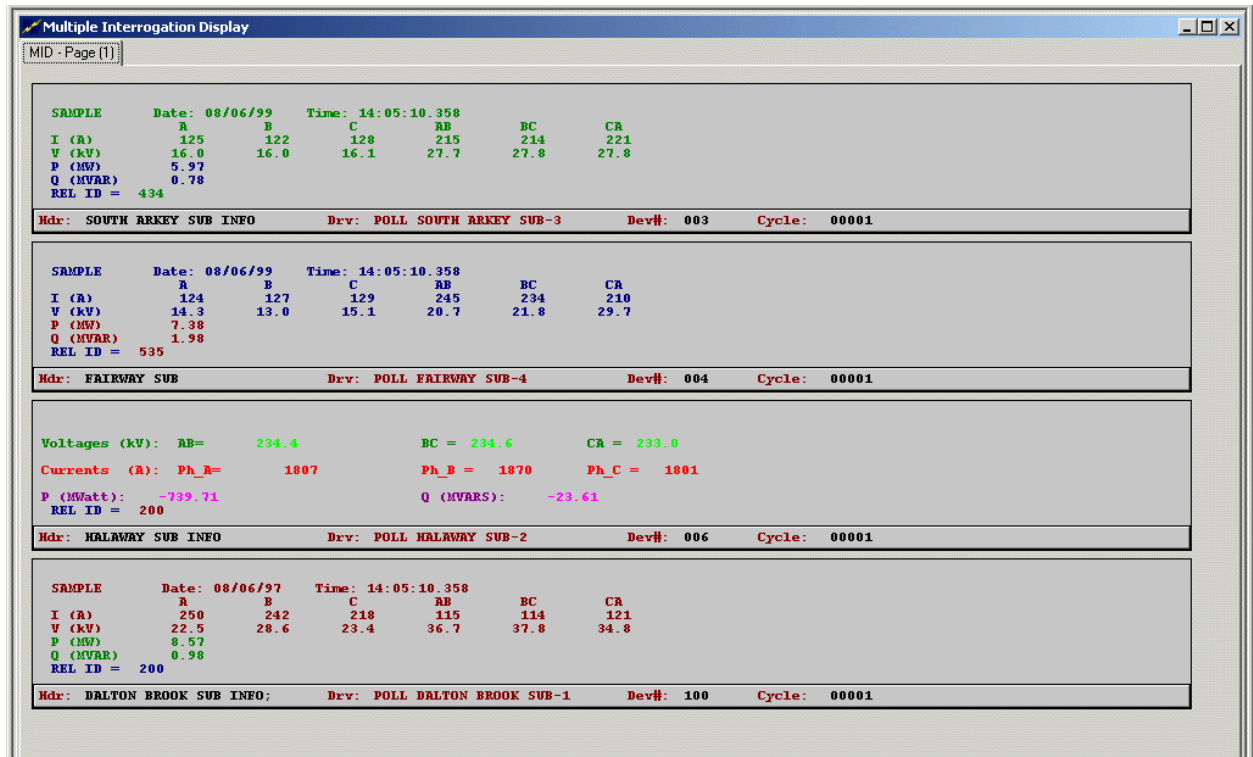



Figure 2.48 Multiport Interrogation Display (MID)

ANIMATED CAD-DXF

Information parsed by the device drivers can also be used to populate a CAD-DXF drawing. Refer to Figure 2.49. In order to populate the drawing, control points must be added to offset the parsed data. The word “Device”, the associated device number, and the device title (optional) defines a control point. For example, if the CAD-DXF reader encounters the text “Device 12 SEL-321” in the DXF file, the information parsed by the assigned driver is offset at the upper left corner of the letter “D” in the word “Device”.

DXF drawings can be created using an off the shelf program such as AutoCAD, Turbo CAD, Technical Visio, Drafix, or MEDUSA. The animated CAD-DXF reader also supports layered objects and multiple paging views. To activate the animated CAD-DXF display, click the **DXF** menu button  or press F8.

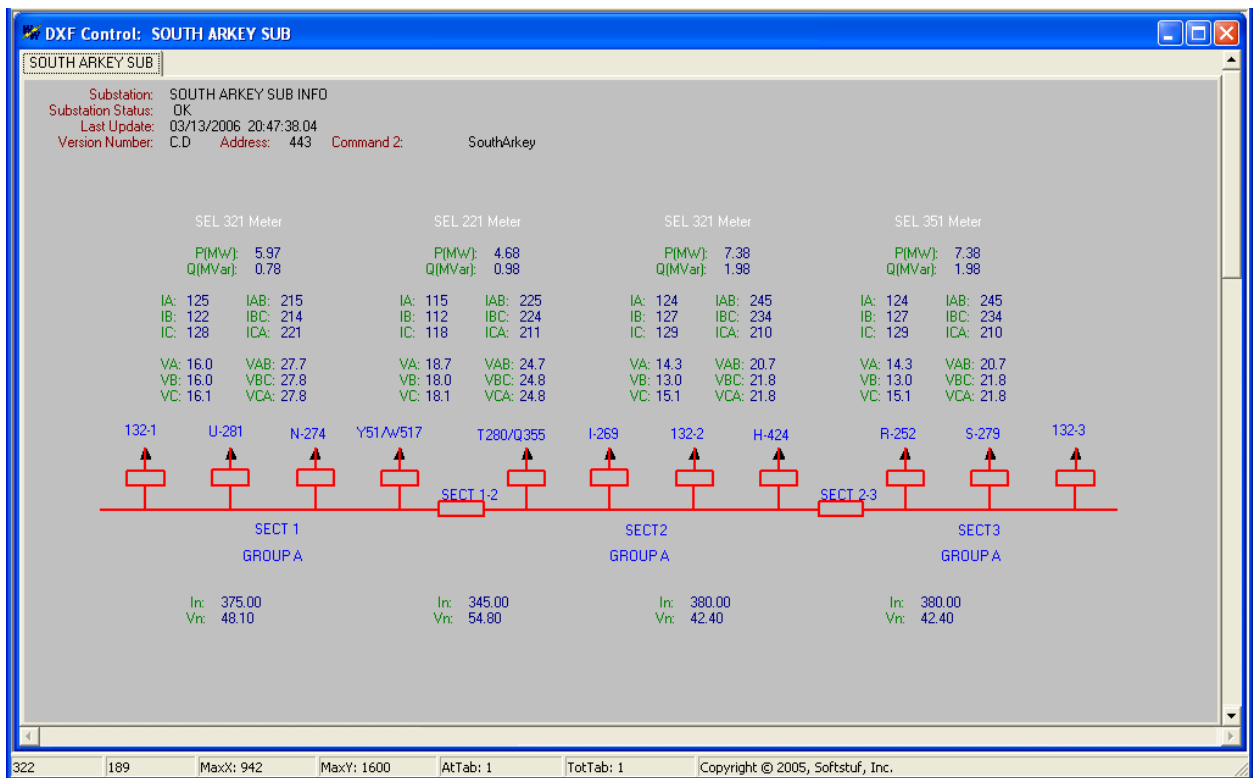




Figure 2.49 Animated CAD-DXF Display

The status bar at the bottom of the DXF screen displays the X and Y coordinates of the mouse position, the maximum X and Y coordinates the active tab number and the total number of tabs in the window.

To zoom in on the drawing press the “+” key, to zoom out press the “-” key or use the **ZoomIn**  and **ZoomOut**  menu buttons. Click the right mouse to resize the drawing to window size or to the windows original coordinates when the drawing was first opened.

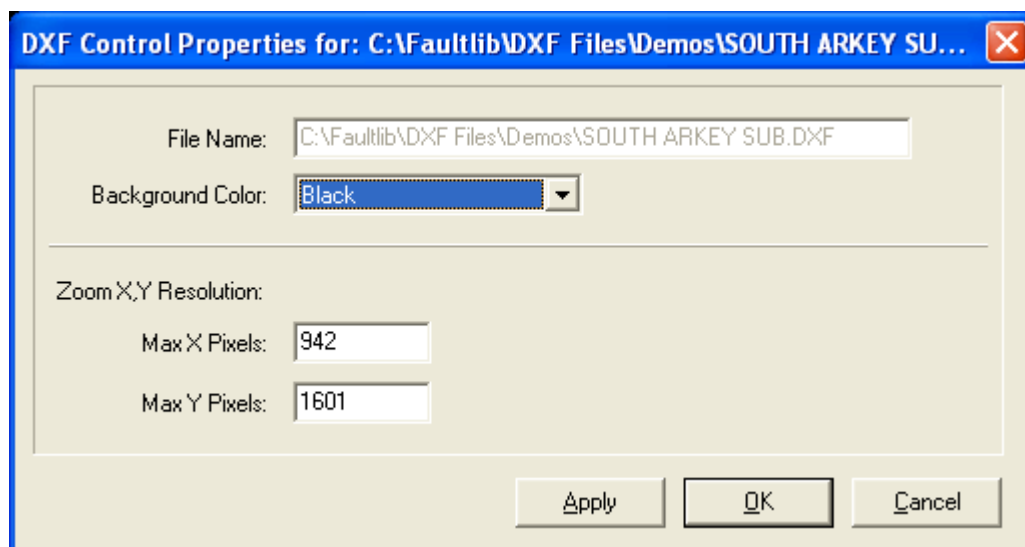


Figure 2.50 DXF Drawing Properties

EXPORTING DEVICES TO THE DISPATCH TABLE

The Dispatch Table is created from the devices configured in the device manager, also from the event files stored in the save folder and from the message files saved to the message folder. The Dispatch table and the Device Manager communicate using message files saved in the message folder.

The message folder is defined in the device manager's "Save & Archive" dialog. The "Message Path" field in the Save & Archive dialog must point to the same folder as the Dispatch Table's "Message Folder" in the Dispatch Table Properties dialog. This is also true for the "Save Path" in the Save & Archive dialog and the "Event Folder" in the Dispatch Table Properties dialog.

To make the device manager information available to the dispatch table export all devices to a text file named "Master Station.txt" and save it in the message folder. Before exporting make sure the device manager table is sorted by device numbers in ascending order **Device Number** . To export, use the "Export" menu option under the "Device" menu. Refer to Figure 2.51.

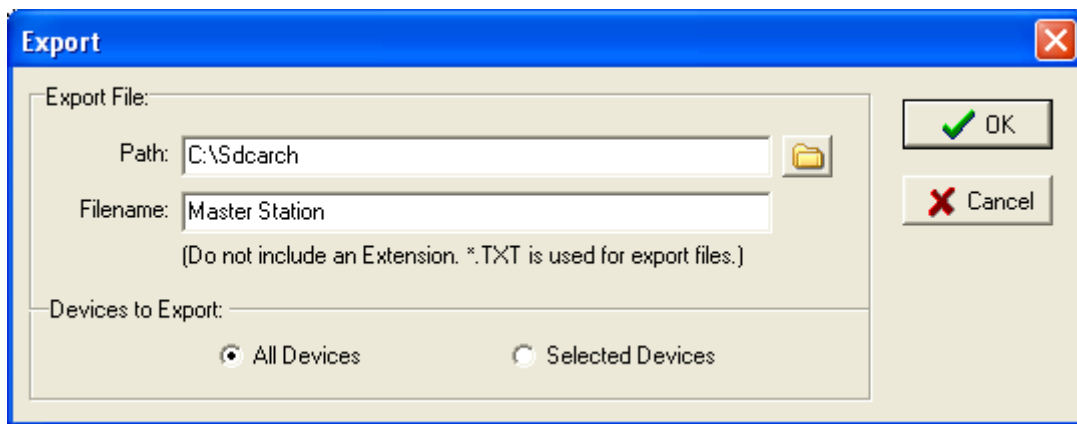



Figure 2.51 Export for Dispatch Table

Set the "Path" field to the message folder defined in the "Save & Archive" dialog. Enter Master Station in the "Filename" field. The extension is automatically assigned to ".txt". Click the "All Devices" radio button then click OK.

The dispatch table displays columns for the District and Substation. To have both columns populated in the dispatch table, enter the District-Substation in each device's group name field.

Devices that have a driver assigned and have the device type between open brackets () defined in the title are imported into the dispatch table.

PREPARING THE DEVICE MANAGER FOR DISPATCH REQUESTS

The device manager must be in poll mood to respond to the poll requests issued from the dispatch table. To put the device manager in poll mode first make sure there are no marked devices in the device manager table. Next, click on the MID interface button  in the button menu or select the "Run MID Interface..." menu option under the "Options" menu. The MID window will be displayed and the start polling device along with the initialize modem devices will be executed. Leave the device manager in this state. The MID window will respond to the poll requests sent from the dispatch table.

C H A P T E R 3

Dispatch Table Quick Start

The Dispatch Table is used to request event files and meter information upon demand from one or more devices.

The dispatch table communicates to the Wavewin device manager through message files saved in the message folder. The message folder is defined in both the dispatch table (Dispatch Properties dialog) and the device manager (Save & Archive dialog). These fields must point to the same folder. The device manager polls the device(s) specified by the message files and responds with either an “Unable to Connect” or “Poll Complete” status. Refer to Figure 3.1

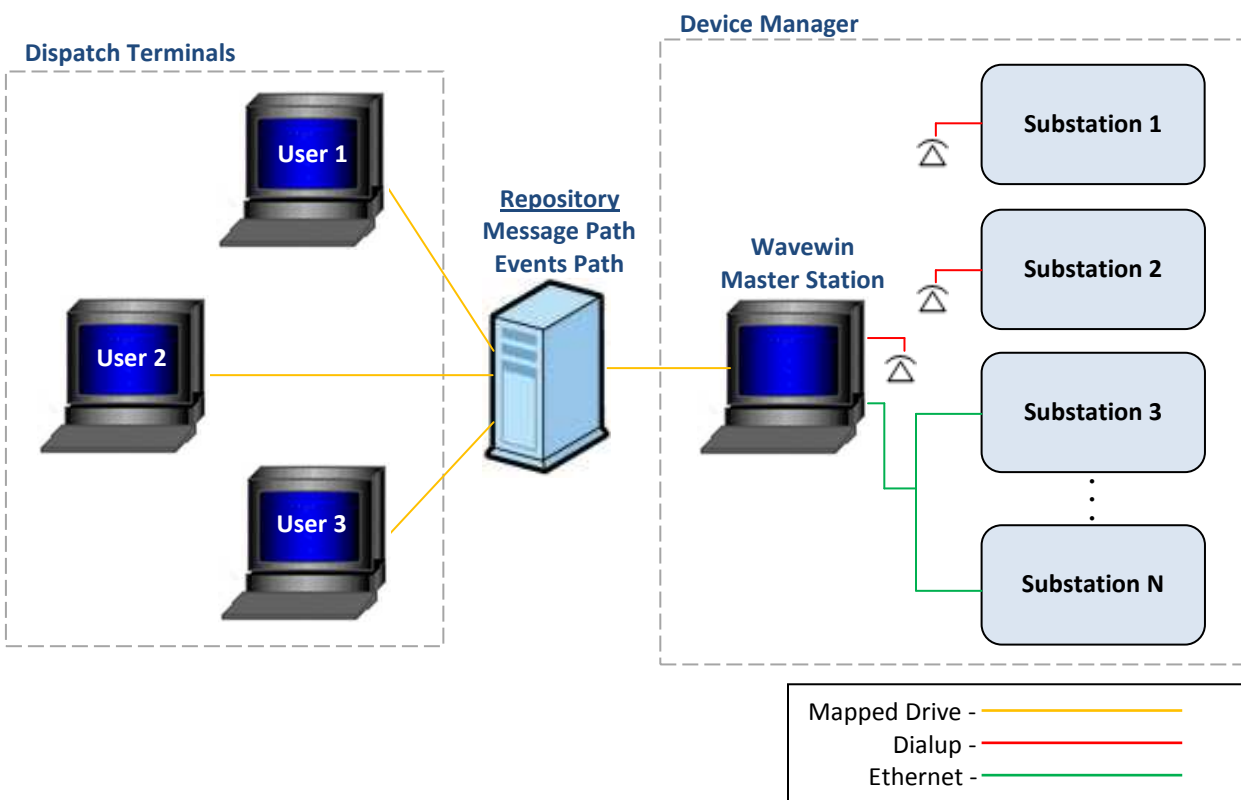


Figure 3.1 Dispatch Table and Device Manager

Dispatch Example

The Dispatch Table columns are created from the fields exported from the device manager, the fields in the event filenames and from the message files stored in the message folder. Refer to Figure 3.2.

The dispatch table will not open if the “Master Station.txt” does not exist in the message folder. Refer to “Exporting devices to the Dispatch Table” for more information on how to export the device manager fields.

D...	District	Station	Dev-Name	Line Len	Location	Type	Date of Fault	Time of Fault	DB ...	Status	Poll Requested At
10	RIVER	SOUTH ARKEY	LINE A (351)	28.41	-86.00	CG T	08/15/2009	23:19:00.838	2	Poll Complete	09/01/2009 22:2...
11	RIVER	SOUTH ARKEY	LINE B (MDAR)				09/02/2009	18:40:10.370	8		
12	RIVER	SOUTH ARKEY	LINE C (311)	198	+36.00	2AG T	08/15/2009	23:19:00.858	2		
13	RIVER	SOUTH ARKEY	LINE D (ALPS)				07/25/2009	13:19:00.328	3	Poll Complete	09/01/2009 22:2...
20	QUINCY	BREAK STREET	DFR-A (TRANSCAN)			BLMT	06/30/2009	14:16:02.278	3		
21	QUINCY	BREAK STREET	LINE F (DLP)		012.9	BCG	08/27/2009	14:33:55.890	3		
22	QUINCY	BREAK STREET	LINE G (387)			ER	03/11/2009	15:54:25.348	1		
23	QUINCY	BREAK STREET	LINE H (587)			MER	05/24/2009	11:30:15.656	6		
26	QUINCY	BREAK STREET	LINE I (501)			FAULT X	02/03/2009	12:35:01.292	1	Poll in Progress	09/01/2009 22:4...
27	QUINCY	BREAK STREET	LINE J (287)			TRIP	01/09/2009	12:44:04.495	1	Poll in Progress	09/01/2009 22:4...
28	QUINCY	BREAK STREET	T-3 (D60)							Poll in Progress	09/01/2009 22:4...
35	QUINCY	BREAK STREET	LINE M (551)			ER1	03/12/2009	05:56:05.548	1	Poll in Progress	09/01/2009 22:4...
36	QUINCY	BREAK STREET	LINE S1 (LFZP)				04/21/2009	06:23:38.000	2	Poll in Progress	09/01/2009 22:4...
37	QUINCY	BREAK STREET	LINE P (352)			TRIP3.1	03/18/2009	14:59:21.865	1	Poll in Progress	09/01/2009 22:4...
50	OCEAN	LINPOINT	DFR B (TESLA)			Converted_S1	02/13/2009	13:14:19.664	6		
52	OCEAN	SOMERS HARBOR	LINE Q (421)	48.77	32.29	CG T	09/01/2009	13:24:26.980	5		
54	BERGER	NORTHVILLE	LINE R (321)	123.81	78.04	ER	08/08/2009	15:05:01.641	3	Poll Complete	09/01/2009 22:2...
55	BERGER	NORTHVILLE	M3 BANK (187)			TRIP	07/02/2009	21:32:18.183	1		
56	BERGER	NORTHVILLE	DFR-C (HATHAWAY)				08/18/2009	14:15:00.675	5		
57	BERGER	NORTHVILLE	LINE T (DPU2000R)							Unable to Connect	09/01/2009 22:4...
67	PLEASANTON	HAMILTON	LINE S2 (BPRO)				06/09/2009	11:20:39.323	2		
68	PLEASANTON	HAMILTON	LINE R1 (TPRO)				06/09/2009	11:20:39.323	2		
69	PLEASANTON	HAMILTON	LINE X1 (LPRO)				10/15/2009	13:11:34.710	2		

Figure 3.2 Dispatch Table

The columns in the table are described in the following table. Not all columns are applicable for all devices.

Columns	Description	Source
Device Number	The device number assigned to the device in the device manager table.	Device Manager
District	The district name listed in the device manager's group name field. The district is separated from the station name with a dash (-). Example: RIVER-SOUTH ARKEY	Device Manager
Station	The station name listed in the device manager's group name field. The district is separated from the station name with a dash (-). Example: RIVER-SOUTH ARKEY	Device Manager
Dev-Name	The device name assigned in the device manager title field.	Device Manager
Line Len.	The length of the line associated with the device. The line length is added to the filename's eighth field (if available in the file) when the file is saved in the device manager. Refer to the Long File Naming Format section for more information on the structure of the file names.	Filename Fields
Location	The fault location of the event contained in the file. The fault location is added to the filename's ninth field (if available in the file) when the file is saved in the device manager. Refer to the Long File Naming Format section for more information on the structure of the filenames.	Filename Fields
Type	The type of fault for the event contained in the file. The fault type is added to the filename's tenth field (if available in the file) when the file is saved in the device manager. Refer to the Long File Naming Format section for more information on the structure of the filenames.	Filename Fields
Date of Fault	The date of the fault listed in the file. The date of the fault is added to the filename's first field when	Filename Fields

Columns	Description	Source
	the file is saved in the device manager. Refer to the Long File Naming Format section for more information on the structure of the filenames.	
Time of Fault	The time of the fault listed in the file. The time of the fault is added to the filename's second field when the file is saved in the device manager. Refer to the Long File Naming Format section for more information on the structure of the filenames.	Filename Fields
DB Recs	The total number of events files for the device in the event folder.	Event Folder
Status	The status of polling for the device. Refer to the Dispatch Polling section for more information on how devices are polled.	Message Folder
Poll Requested At	The date and time the last poll was requested for the device.	Message Folder
Poll Completed At	The date and time the last poll was completed for the device.	Message Folder
Poll Devices	The device number sequence to poll to download the latest events and meter information from the device.	Device Manager
Event Files	The path and filename of the latest event downloaded.	Event Folder

Open the Dispatch Table

The dispatch table can be opened 3 ways, from the file manager, from the device manager and through a command line parameter. To open the Dispatch Table from the file manager, select the "Dispatcher Table..." menu option under the "Options" menu. To open the Dispatch Table from the device manager, select the "Dispatcher Table..." menu option under the "Options" menu. The command line option is described in the next section.

The first time the dispatch table is opened the "Dispatch Properties" dialog is displayed. The "Message Folder" and the "Event Folder" must be specified prior to opening the dispatch table. These folders must be the same folders defined in the "Save & Archive" dialog in the device manager. Enter the folder where the polling messages are saved and enter the folder where the event files are saved.

The dispatch table also has an automatic refresh option that will automatically refresh the event and status information. To turn the automatic refresh option on, click on the "Turn ON Automatic Refresh" checkbox. Checked = ON. Also, enter the automatic refresh period. The period is specified in seconds. The default is 30 seconds.

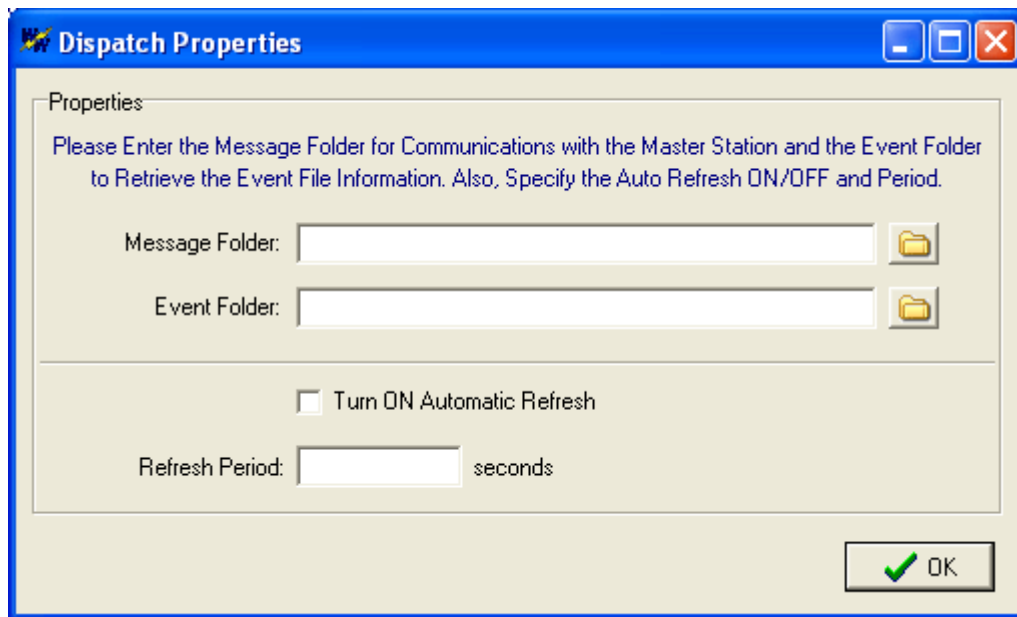


Figure 3.3 Dispatch Properties Dialog

COMMAND LINE PARAMETER

The Dispatch Table can be automatically opened when Wavewin runs using the command line parameters. To add the “dispatcher” command line parameter opposite click on the Wavewin icon or shortcut. Add “dispatcher” after the Wavewin folder and filename in the target field. Refer to Figure 3.4.

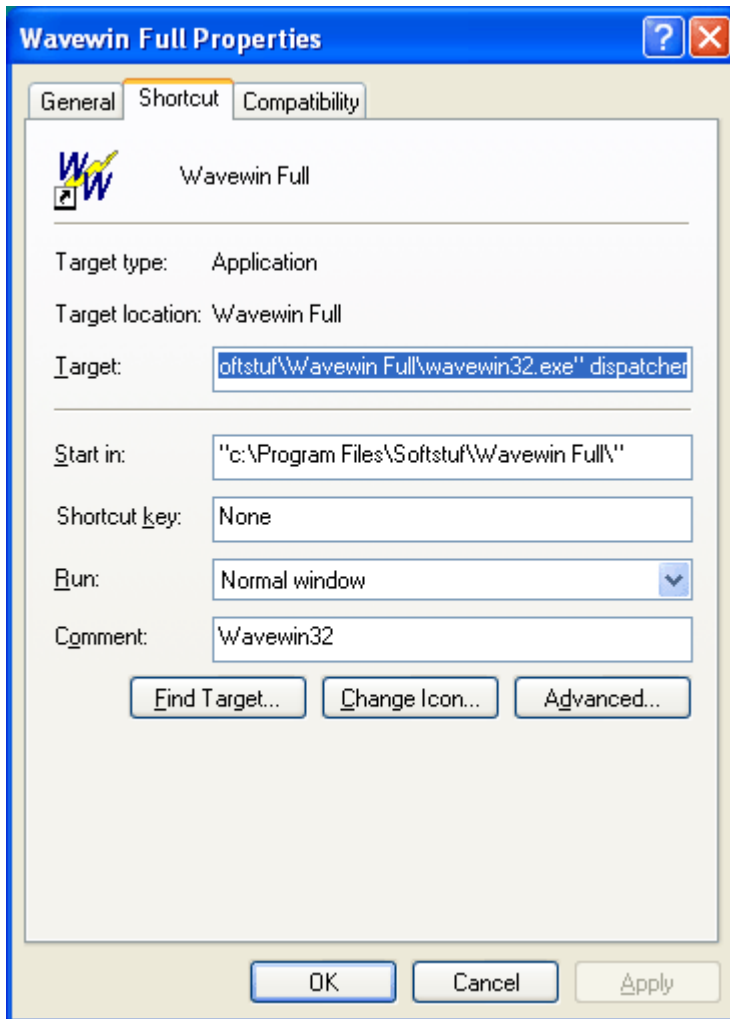



Figure 3.4 Dispatch Table – Command Line Parameter

Dispatch Polling

Polling of the devices is initiated from the Dispatch table. To request a poll first mark all the devices to poll. Marked devices are displayed in red. Next, click on the Poll Request button  in the button menu or select the "Request Poll" menu option under the "Options" menu. A message dialog is displayed listing the current status of each device requested. Refer to Figure 3.5.

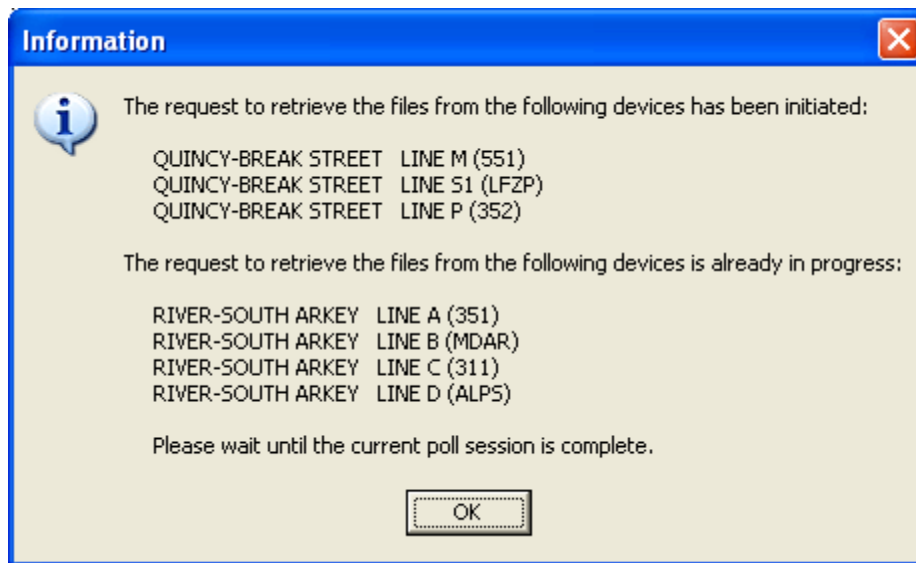


Figure 3.5 Poll Status Message


The devices that can be polled are listed under the “initiated” list and the devices that are already scheduled to be polled are listed under the “already in progress” list. The “Status”, “Poll Initiated At” and “Poll Complete At” columns display the status of the poll. The “Status” column has the following updates:

- **Poll Requested:** When a poll is requested the dispatch table saves a POL message in the message folder for each device marked. The Status column is updated with “Poll Requested” and the Poll Requested At column is updated with the date and time the poll was requested.
- **Poll in Progress:** The device manager monitors the message folder for POL files. Once it sees a POL file it starts the polling process and renames the POL file to a CAL file indicating the poll is in progress. The dispatch table also monitors the message folder. When it sees a CAL file it updates the Status column to “Poll in Progress”.
- **New Files:** During the polling process the dispatch table checks if new event files were downloaded. At each automatic refresh period the dispatch table will count the number of event files in the events folder. If the number of event files counted is greater than the device’s DB Recs column then the Status column is updated with “New Files”.
- **Poll Complete:** When a poll is successfully completed the device manager will rename the CAL file to a DON file. The dispatch table will update the Status column with “Poll Complete” and update the Poll Completed At column with the date and time the poll completed.
- **Unable to Connect:** When the device manager encounters a problem connecting to the device the CAL file is renamed to an NCR file. The dispatch table will update the Status column with “Unable to Connect” and update the Poll Completed At column with the date and time the poll completed.

Table Features

The following sections describe the main features in the dispatch table.

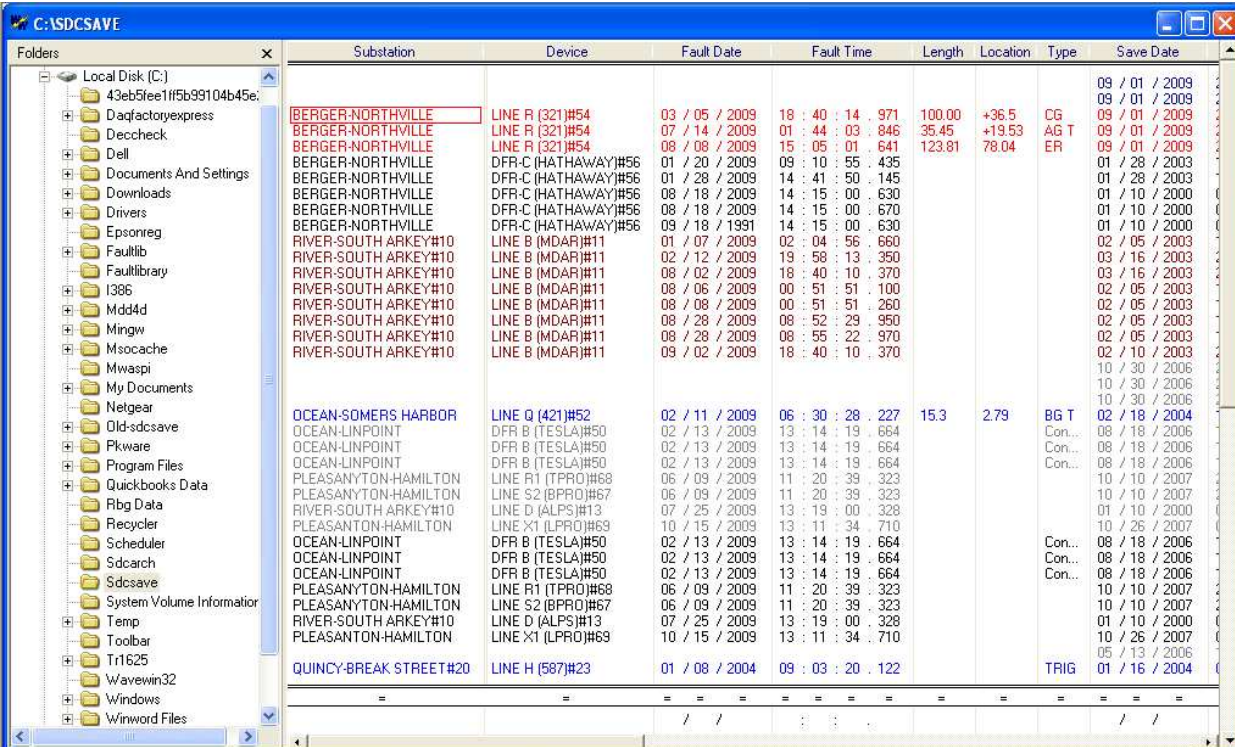
REQUESTING A POLL

To request a poll first mark the devices to poll. Next, either click the poll request button in the button menu  or select the “Request Poll” menu option under the “Option” menu.

The status of the poll is displayed in the “Status”, “Poll Requested At” and “Poll Completed At” columns. The “Status” column updates when the poll is started and when it is completed. It also indicates if new event files have been downloaded. The “Poll Requested At” displays the date and time the last poll was requested. The “Poll Completed At” is updated once the poll has been completed. The time difference between the Poll Requested At and the Poll Completed At shows how long it took to complete the poll.



DISPLAYING EVENT FILES


All the events downloaded from the devices are saved to the events folder. To list the events for a specific device double click on the device in the dispatch table. All event, history and summary files for the selected device are marked and group at the top of the file manager table. Refer to Figure 3.6.




Substation	Device	Fault Date	Fault Time	Length	Location	Type	Save Date
BERGER-NORTHVILLE	LINE R (321)#54	03 / 05 / 2009	18 : 40 : 14	971	100.00	CG	09 / 01 / 2009
BERGER-NORTHVILLE	LINE R (321)#54	07 / 14 / 2009	01 : 44 : 03	846	35.45	AG T	09 / 01 / 2009
BERGER-NORTHVILLE	LINE R (321)#54	08 / 08 / 2009	15 : 05 : 01	641	123.81	ER	09 / 01 / 2009
BERGER-NORTHVILLE	DFR-C (HATHAWAY)#56	01 / 20 / 2009	09 : 10 : 55	435			01 / 28 / 2003
BERGER-NORTHVILLE	DFR-C (HATHAWAY)#56	01 / 28 / 2009	14 : 41 : 50	145			01 / 28 / 2003
BERGER-NORTHVILLE	DFR-C (HATHAWAY)#56	08 / 18 / 2009	14 : 15 : 00	630			01 / 10 / 2000
BERGER-NORTHVILLE	DFR-C (HATHAWAY)#56	08 / 18 / 2009	14 : 15 : 00	670			01 / 10 / 2000
BERGER-NORTHVILLE	DFR-C (HATHAWAY)#56	09 / 18 / 1991	14 : 15 : 00	630			01 / 10 / 2000
RIVER-SOUTH ARKEY#10	LINE B (MDAR)#11	01 / 07 / 2009	02 : 04 : 56	660			02 / 05 / 2003
RIVER-SOUTH ARKEY#10	LINE B (MDAR)#11	02 / 12 / 2009	19 : 58 : 13	350			03 / 16 / 2003
RIVER-SOUTH ARKEY#10	LINE B (MDAR)#11	08 / 02 / 2009	18 : 40 : 10	370			03 / 16 / 2003
RIVER-SOUTH ARKEY#10	LINE B (MDAR)#11	08 / 06 / 2009	00 : 51 : 51	100			02 / 05 / 2003
RIVER-SOUTH ARKEY#10	LINE B (MDAR)#11	08 / 08 / 2009	00 : 51 : 51	260			02 / 05 / 2003
RIVER-SOUTH ARKEY#10	LINE B (MDAR)#11	08 / 28 / 2009	08 : 52 : 29	950			02 / 05 / 2003
RIVER-SOUTH ARKEY#10	LINE B (MDAR)#11	08 / 28 / 2009	08 : 55 : 22	970			02 / 05 / 2003
RIVER-SOUTH ARKEY#10	LINE B (MDAR)#11	09 / 02 / 2009	18 : 40 : 10	370			02 / 10 / 2003
							10 / 30 / 2006
							10 / 30 / 2006
							10 / 30 / 2006
OCEAN-SOMERS HARBOR	LINE Q (421)#52	02 / 11 / 2009	06 : 30 : 28	227	15.3	BG T	02 / 18 / 2004
OCEAN-LINPOINT	DFR B (TESLA)#50	02 / 13 / 2009	13 : 14 : 19	664		Con...	08 / 18 / 2006
OCEAN-LINPOINT	DFR B (TESLA)#50	02 / 13 / 2009	13 : 14 : 19	664		Con...	08 / 18 / 2006
OCEAN-LINPOINT	DFR B (TESLA)#50	02 / 13 / 2009	13 : 14 : 19	664		Con...	08 / 18 / 2006
PLEASANTON-HAMILTON	LINE R1 (TPRO)#68	06 / 09 / 2009	11 : 20 : 39	323			10 / 10 / 2007
PLEASANTON-HAMILTON	LINE S2 (BPRO)#67	06 / 09 / 2009	11 : 20 : 39	323			10 / 10 / 2007
RIVER-SOUTH ARKEY#10	LINE D (ALPS)#13	07 / 25 / 2009	13 : 19 : 00	328			01 / 10 / 2000
PLEASANTON-HAMILTON	LINE X1 (LPRO)#69	10 / 15 / 2009	13 : 11 : 34	710			10 / 26 / 2007
OCEAN-LINPOINT	DFR B (TESLA)#50	02 / 13 / 2009	13 : 14 : 19	664		Con...	08 / 18 / 2006
OCEAN-LINPOINT	DFR B (TESLA)#50	02 / 13 / 2009	13 : 14 : 19	664		Con...	08 / 18 / 2006
OCEAN-LINPOINT	DFR B (TESLA)#50	02 / 13 / 2009	13 : 14 : 19	664		Con...	08 / 18 / 2006
PLEASANTON-HAMILTON	LINE R1 (TPRO)#68	06 / 09 / 2009	11 : 20 : 39	323			10 / 10 / 2007
PLEASANTON-HAMILTON	LINE S2 (BPRO)#67	06 / 09 / 2009	11 : 20 : 39	323			10 / 10 / 2007
RIVER-SOUTH ARKEY#10	LINE D (ALPS)#13	07 / 25 / 2009	13 : 19 : 00	328			01 / 10 / 2000
PLEASANTON-HAMILTON	LINE X1 (LPRO)#69	10 / 15 / 2009	13 : 11 : 34	710			10 / 26 / 2007
							05 / 13 / 2006
QUINCY-BREAK STREET#20	LINE H (587)#23	01 / 08 / 2004	09 : 03 : 20	122		TRIG	01 / 16 / 2004


Figure 3.6 Event List

To view only the event files first select the device then click on the “View Events” button  in the button menu or select the “View Events...” menu option under the “Options” menu. To view only the history files click on the “View History” button  or select the “View History...” menu option under the “Options” menu.

To return to the dispatch table press the ESC key in the file manager or click the “Back” button  Back in the system toolbar.

VIEWING METER INFORMATION

Each time a device is polled the meter information is also downloaded (VA, VB, VC, & IA, IB IC). To view the meter values select the desired device then click on the “Meter Information” button  in the

button menu or select the “View Meter Values...” menu option under the “Options” menu. The meter information is displayed in an ASCII text editor. Refer to Figure 3.7. To return to the dispatch table press the ESC key in the ASCII editor or click the “Back” button  Back in the system toolbar.

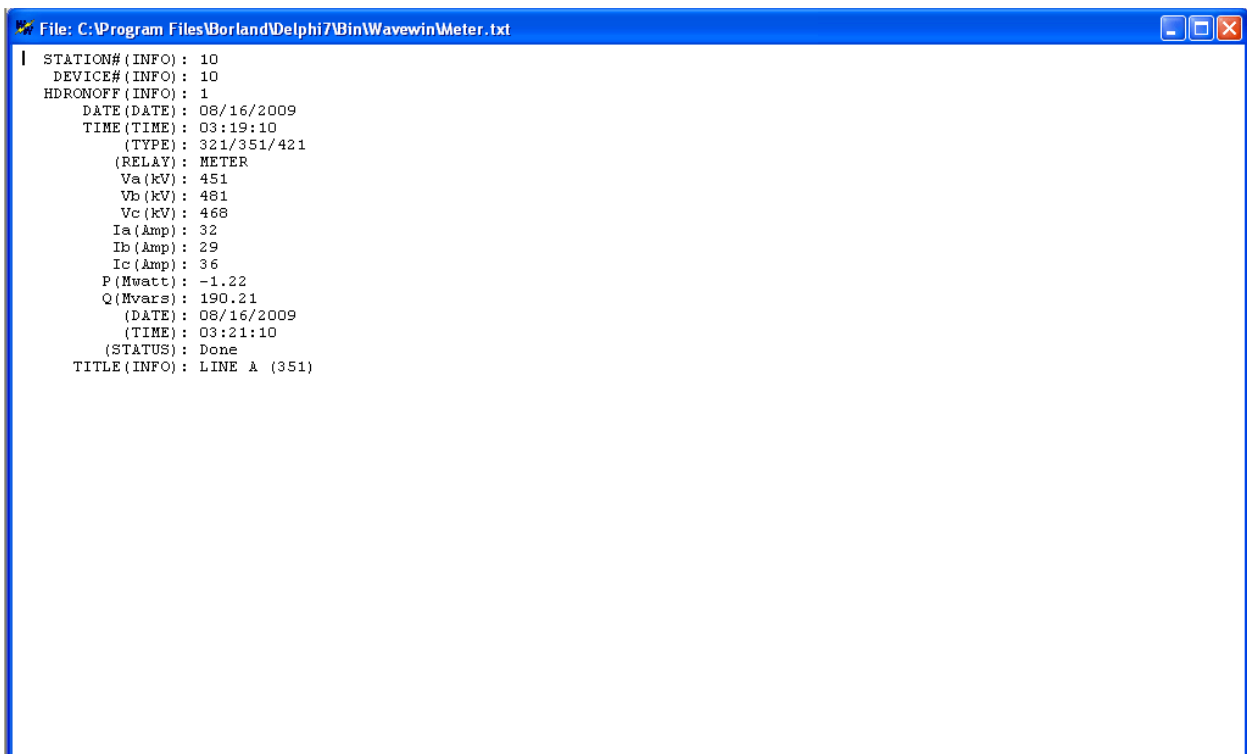


Figure 3.7 Meter Information

REFRESH THE TABLE

The Dispatch Table columns can be manually or automatically refreshed. To have the table automatically refreshed open the “Dispatch Properties” dialog from the “Options” menu. Refer to Figure 3.8.

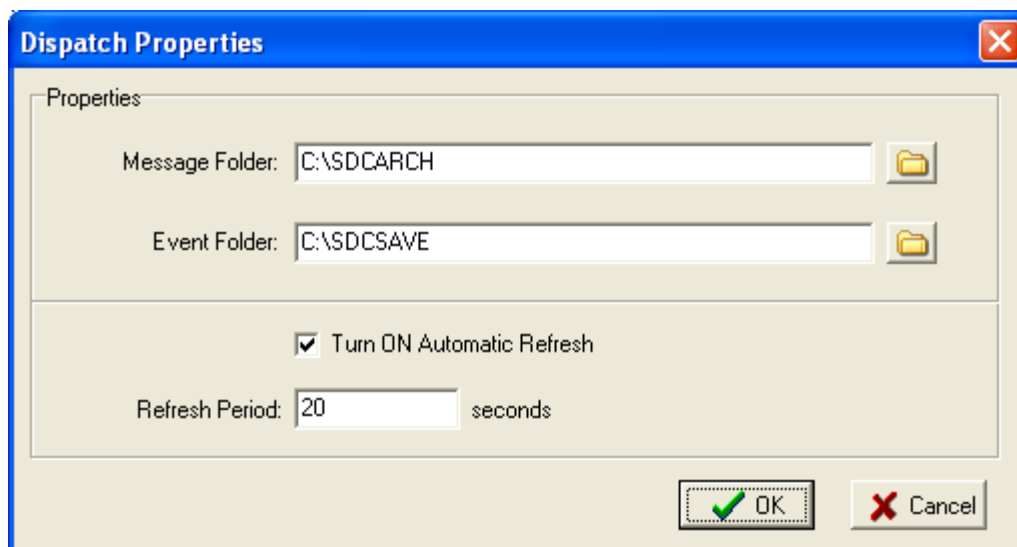



Figure 3.8 Automatic Refresh

Click on the “Turn ON Automatic Refresh” checkbox. If the box is checked the automatic refresh is ON. Also, enter the refresh period. The period is measured in seconds. The default is 30 seconds. The automatic refresh will update the event and status columns only.

To manually refresh the table click on the Refresh button  in the button menu. All of the columns in the table are updated.

CUSTOMIZING THE DISPATCH TABLE

The columns displayed in the table can be repositioned through the “Table Properties” menu option under the “Options” menu. Refer to Figure 3.9. Use the Move Up and Move Down buttons to change the position of a column. The table columns can also be resized. Position the mouse over the column separator in the table and drag the mouse to the desired location or double click on a column separator to resize the column to the largest display.

The size of the font displayed in the table can also be changed. Use the “Table Font Size” drop down list to select the desired font.

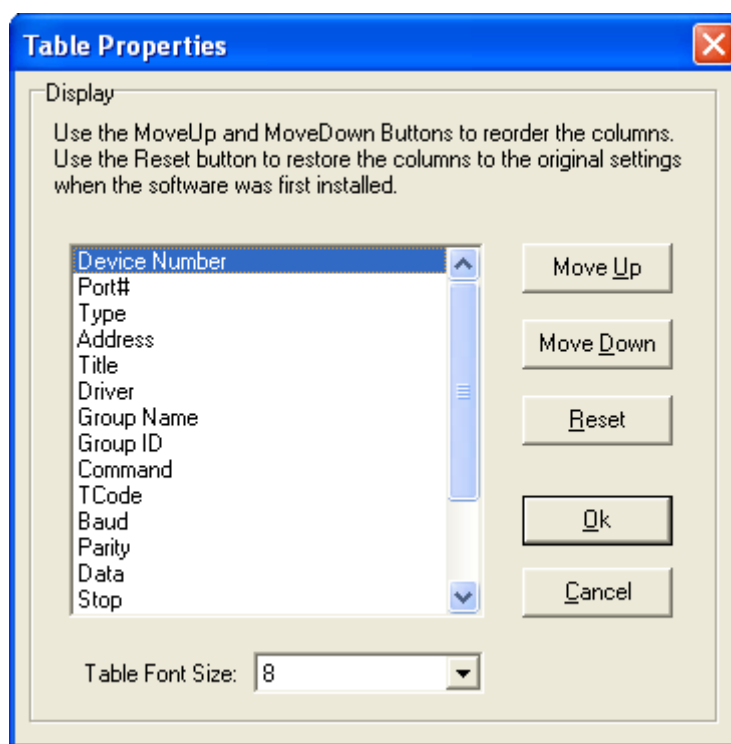


Figure 3.9 Device Display Dialog

QUERYING DEVICES

The query fields are used to search for specific information in the dispatch table. Query fields are located below the table. Use the tab key to move the cursor from the device table to the query fields and the up arrow to return to the table. Use the Ctrl-Left/Right arrow keys to move between the query fields. Each field contains a criteria and an operator. Refer to Figure 3.10.

The criterion is directly entered from the keyboard, and may include the “*” and “?” wild cards. Operators are located above the criteria fields and can be changed by clicking the mouse button on the operator symbol or by pressing the F9 key. The selectable options include equal to (=), less than (<), and greater than (>).

C H A P T E R 4

File Manager Quick Start

This chapter describes the main features of the File Manager.

File Manager Features

The File Manager is used to manage files on disk, search the contents of a drive or directory, and edit, plot, or draw the contents of a file. This feature is similar to Windows Explorer with application specific functions tailored for the Power Utility Industry. The functions include automatic event file association, specialized copy/move engines, intelligent queries, specialized report files, COMTRADE conversion and compression routines, merge and append waveform and load files, event summaries, and calibration reports.

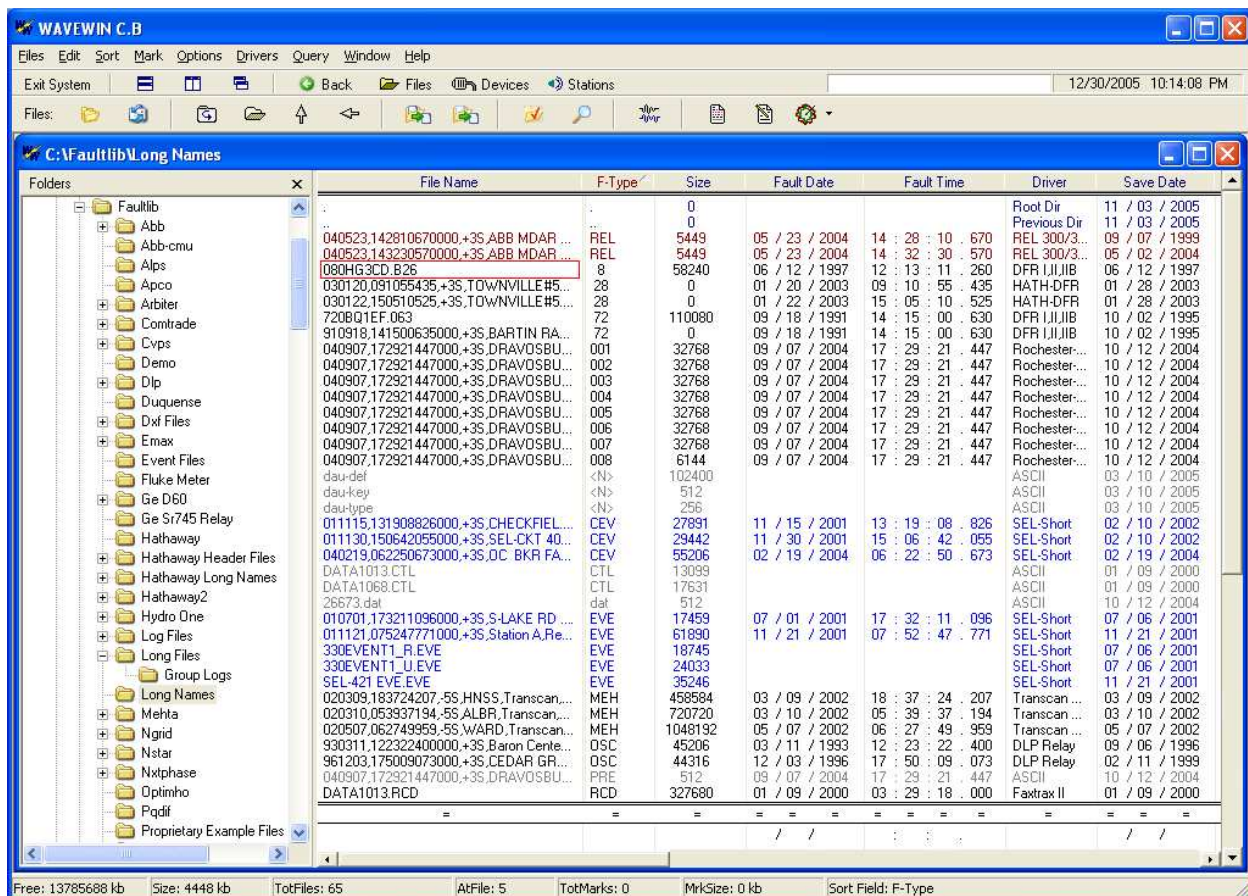


Figure 4.1 File Manager

When the software is activated, the File Manager displays the subdirectories and files of the last active drive and directory. This window consists of a folder tree, file table and a query bar. The query bar is located below the table. Refer to Figure 4.1. The main features are described in the following sections.

LONG FILE NAMING FORMAT

The File Manager supports the IEEE long file naming format. The IEEE long file naming format is a PSRC format used to name time sequenced data files. The file table columns are used to display the contents of the long file name. The file name contains the first ten fields stored in a comma-delimited fashion. The remaining fields are optional. The file table lists four optional columns at the end of the table to support user defined fields. The ComNames properties dialog allows for user input for the first two optional fields.

Example: 000112,123433234,-5S, South Arkey,DLP1,Sun Power,T,123.22,+34.6,AG T.OCS

Field Definitions:

Field	Example	Displayed	Definition
Date	000112	01/12/2000	The Date field defines the start date of the file. The date fields are defined as: the first two characters are the year, the next two are the month and the last two are the day. (required)
Time	123433234	12:34:33.234	The time field defines the start time of the file. The Time fields are defined as: the first two characters are the hour, the next two are the minutes, the next two are the seconds and the last two or three are the milliseconds. (required)
Tcode	-5S	-5S	The TCode field is the time offset from GMT time. If the start time is expressed in UT, this field is coded 0z, Note: GMT is the international abbreviation Greenwich Mean Time. (required)
Substation	South Arkey	South Arkey	The substation name or code where the originating device is located. (required)
Device	DLP1	DLP1	The device name or code that generated the file. (required)
Company	Sun Power	Sun Power	The company of the specified substation. (required)
File Tag	T	T	The fault type or contents type of the file. (optional)
Line Length	123.22	123.22	The line length extracted from the event file. This field applies to certain relays. (optional)
Fault Location	+34.60	+34.60	The fault location extracted from the event file. This field applies to certain relays. (optional)
Fault Type	AG T	AG T	The fault type extracted from the event file. This field applies to certain relays. (optional)

COMNAME(S) RENAME

To rename time sequenced data files using the IEEE long file naming format select the “ComName(s) Rename” menu option under the “File” menu. ComName(s) Rename will rename all the marked waveform files to the IEEE PSRC long file naming format. A message box will be prompted before renaming the file to insure the execution of the rename feature. This feature will permanently rename the files. It is advisable to back up the files before renaming. Some proprietary applications may not be able to read the files once they are renamed. Refer to Figures 4.2 and 4.3. For a full description of the format refer to the Long file Naming Format above.

For specific display driver's information from the file is placed in the long file names.

- SEL Files: The Type field has the Event Type and Fault Location (example type field: ",CG T - 86.0,").

- DLP Files: The Type field has the Fault Type, Distance and Trip Type in the type field (example type field: ",AG 001.8 PLT,").
- Transcan Files: The 1st User Field has the 4 character station ID (example user field: ",BEDG,").
- Rochester Files: The 1st User Field has the 5 character header name (example user field: ",20626,").
- Hathaway Files: The #DAU ID data is added next to the device name (example device field: ",DAU 8#8,")

All files associated with the marked files will also be renamed.

- Comtrade files: the ".CFG", ".INF", ".HDR", ".DAT" and "*.D##" files will be renamed.
- Faxtrax files: the ".CTL", ".RCD", ".RCL", ".RCU" and ".RCS" files will be renamed.
- Rochester files: the ".PRE" file and all files with the same name and a "####" extension will be renamed.

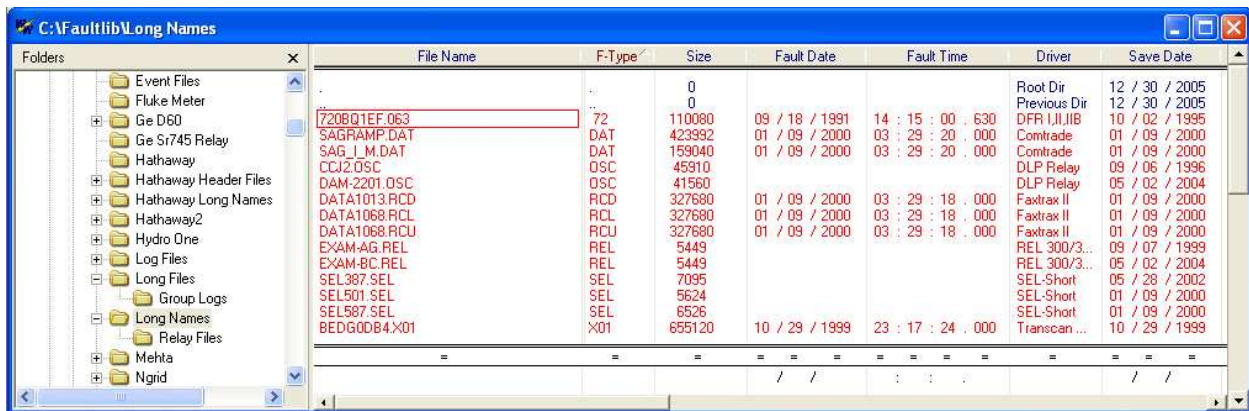


Figure 4.2 ComNames Rename: Select and Mark all the Waveform Files to Rename

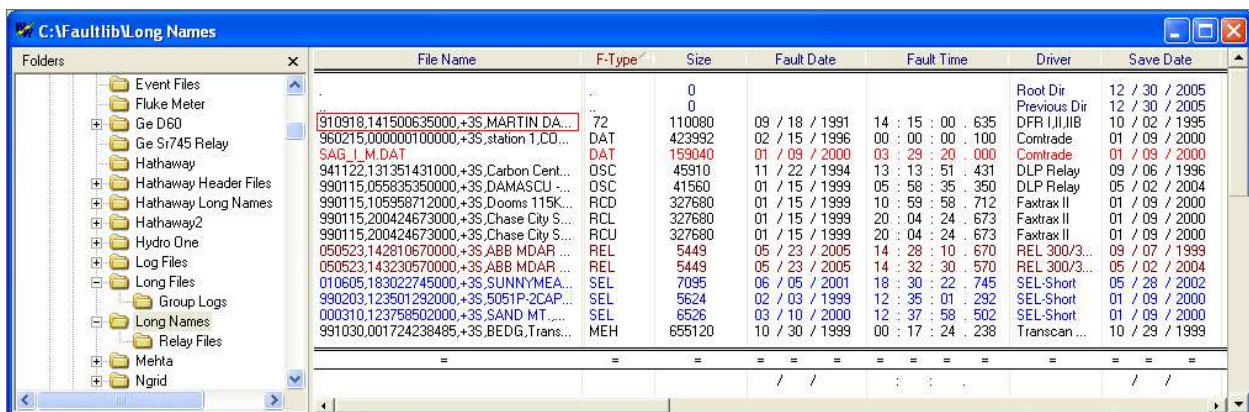


Figure 4.3 ComNames Rename: Result

COMNAME PROPERTIES

The fields defined in the IEEE long file naming format are not always available from the time sequenced files. The "ComName Properties" dialog allows for setting the most common fields not available in the time sequenced files. User fields allow for setting specific information into the file name. Refer to Figure 4.4.

- Company Name
- Time Code
- User Field 1

- User Field 2

The fields entered are used for all files renamed.

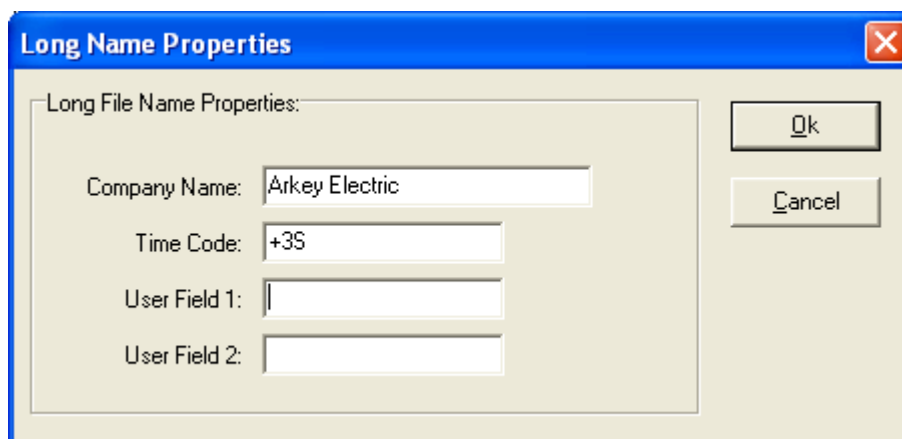


Figure 4.4 ComName Properties Dialog

COMMAND LINE PARAMETERS

Command line parameters are supported in the Wavewin software. The listed command line parameters are specific for the file manager and data plotting. Below is a list of all supported command line parameters and their descriptions:

Command Line	Description
Path and Filename	If a path and filename is passed as a command line parameter the path and filename must be surrounded by quotes, such as "c:\faultlibrary\event1.dat". Wavewin will automatically open and display the file.
/View	The "/View" command line parameter is used along with a path and filename command line. It automatically opens and displays the file when Wavewin is executed.
/Print	The "/Print" command line parameter is used along with a path and filename command line. It automatically opens, displays and prints the file when Wavewin is executed.
/Batch	The "Batch" command line parameter is used along with a path and batch filename command line. It automatically opens the defined batch file and executes each command line parameter defined in the file. This feature is used mainly to print a number of files through one command line parameter.
/Merge	The /Merge command line parameter is used along with a path and filename command line. It will merge the file with all files that have a /merge command line parameter associated with them. The /merge command line parameter is defined in a Merged File.lst ASCII file. The Merged File.lst is passed to Wavewin through the command line parameters. All files listed in the Merged File.lst are automatically merged by time. If the files have different sampling frequencies the highest frequency is used. The merged file is saved as an ASCII 1999 Comtrade file and placed in the same directory where the Merge File.lst is located. The Comtrade files are named Merged File.cfg and Merged File.dat. If an error occurs a Merged File.log file is created listing all errors encountered. Example contents of a Merged File.lst:


	C:\faultlibrary\event10.dat /merge /exit C:\faultlibrary\event12.dat /merge /exit C:\faultlibrary\event14.dat /merge /exit
/X	The “/X” command line parameter tells where to display Wavewin’s left corner when executed.
/Y	The “/Y” command line parameter tells where to display Wavewin’s upper corner when executed.
/W	The “/W” command line parameter tells the width of the Wavewin application when executed.
/H	The “/H” command line parameter tells the height of the Wavewin application when executed.
/Exit	The “/Exit” command line will automatically exit Wavewin after all other command line parameters are fully complete.
Dispatcher	The dispatcher command line will automatically open the Dispatch table at runtime.


NAVIGATING


Files:

To browse the files in the active directory use the up, down, right, left, page up, page down, home, end, ctrl+home, and ctrl+end keys, or use the scroll bars.

Drives/Directories:

To view the contents of a folder, navigate through the folder tree or place the cursor on the folder name in the file table and press <enter> or double click on the desired folder. Refer to Figure 4.5. The “.” and “..” displayed at the top of the file table provide shortcuts to the previous folder and the root directory. To return to the previous folder, place the cursor on the “..” shortcut and press <enter> or click the **Up**  menu button or press the backspace key. To return to the root folder, place the cursor on the “.” shortcut and press <enter>.

To change the active drive letter, click the **ChDir**  menu button or press F7. Enter the drive letter/path and click **OK**. To return to the last active folder, enter only the drive letter. To display the contents of the root folder, enter the drive letter, a colon, and a backslash, for example type “C:\”. An error message is displayed if the software cannot find or open the specified folder.

To navigate through the last active folders click the **Back**  menu button or click the right mouse button to display a list of the connected drives and the last 12 navigated folders. Refer to Figure 4.6.

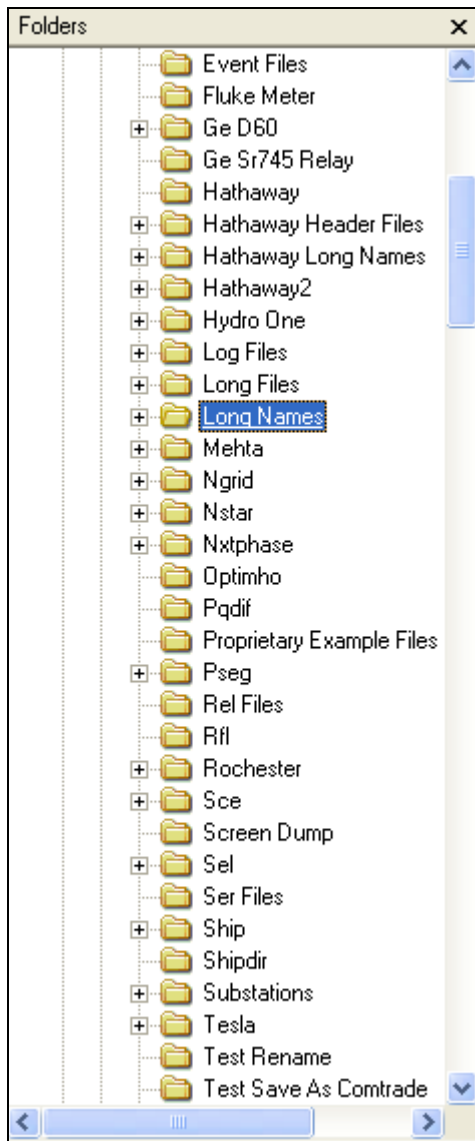


Figure 4.5 Folder Tree

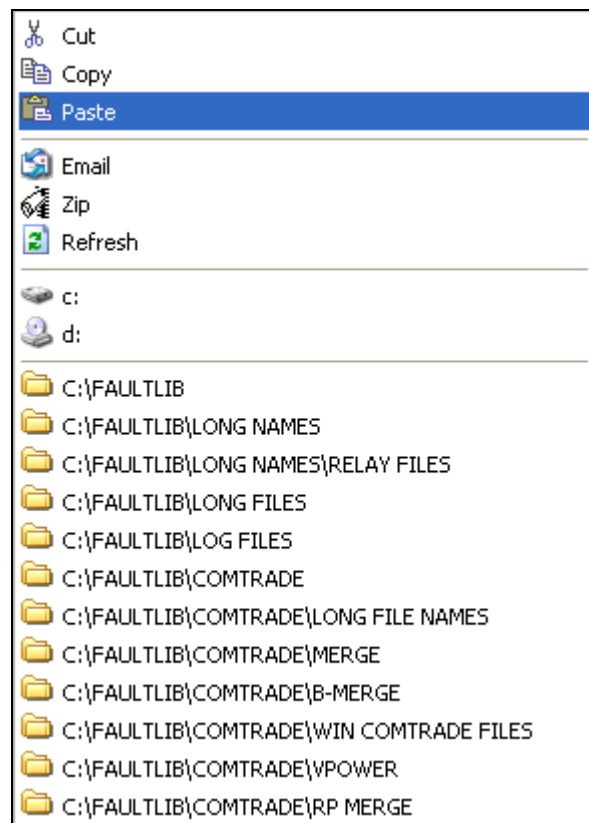




Figure 4.6 Drive/Directory Navigation Menu

UPDATING THE ACTIVE DIRECTORY

Click the **Refresh**  menu button to update the contents of the folder tree and the file table or press F12. To refresh only the folder tree right click on the folder tree and select the **Refresh** option. Refer to Figure 4.7. To refresh only the file table right click on the file table and select the **Refresh**  Refresh menu option.

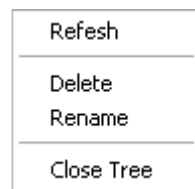
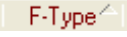
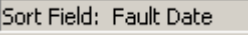


Figure 4.7 Folder Tree Popup Menu



MARKING FILES

Files are marked and unmarked through the mark menu option, the space bar, or the mouse button. Use the shift+left mouse button to mark a group of files or the ctrl+left mouse button to randomly mark files. Marked files are displayed in red and can be copied (F8), moved (F9), deleted (Delete), grouped, sorted or plotted.

SORTING FILES

The column headers displayed at the top of the table are used to sort all the files in the table. Click the header buttons to toggle between ascending and descending order  or use the Sort menu option to sort all or marked files with respect to the selected sort field. To change the sort field, place the cursor in the desired column and select “Set Sort Field” from the Sort menu. The active sort field is displayed in the status bar at the bottom of the window .

COPYING OR MOVING FILES

Files must be marked in order to copy or move them from the active folder. To copy/move files using the Window’s **Select Directory** dialog click the **Copy**  / **Move**  menu buttons or press F8 for copy and F9 for move. Select the folder from the Directories tree or enter a new directory in the **Directory Name** field then press <enter> or click the **OK** button. The system prompts the user prior to automatic creation of the directory. Refer to Figure 4.8. A message is displayed if an error occurs while copying or moving the files. The **Cancel** button or the <esc> key terminates the command.

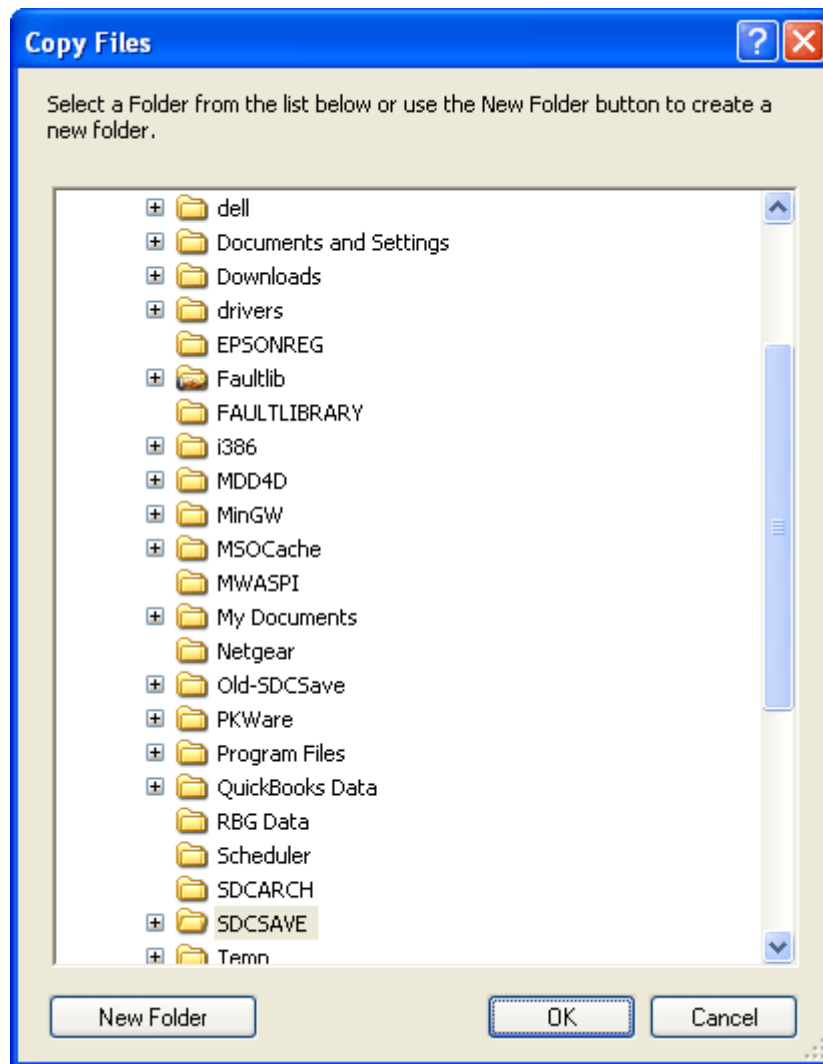







Figure 4.8 Copy Dialog

To copy or move files to the clipboard select the **Copy/Cut** menu options under the Edit menu or right click in the file table and select the **Copy**  **Copy** or **Cut**  **Cut** option from the popup menu. Navigate to the destination folder and select the **Paste** option under the edit menu or the **Paste**  **Paste** option from the file table's popup menu.

Once the copy/move or paste command is executed and a file is successfully transferred to the destination directory, the system's task bar in the upper right hand corner of the screen is updated. All files that were unsuccessfully copied/moved using the **Copy/Move** menu buttons are marked and grouped at the top of the table.

The specialized copy/move/paste engine copies the COMTRADE and DFR header and configuration information along with the selected DFR data file. For example, when a DFR data file is copied or moved the corresponding DFR header information (CFG, HDR, INF, DAU-DEF, SCF File, CTL File and *.PRE files...) are automatically copied from the source folder to the destination folder.

EMAIL FILES

Files must be marked first (displayed in red) to email. Mark all of the files to email then click the **Email** menu button  or right click in the file table to display the popup menu and select the **Email**  option. The users default email program is displayed with all marked files in the attachment section. Also, any support files needed to display the selected files will be automatically attached. Support files include Comtrade .CFG, .HDR and .INF files, Hathaway DAU files, Transcan .SCF and .TCF Files, Faxtrax or Director .CTL files and Rochester .PRE, Machine.DAT and Data files. Refer to Figure 4.9.

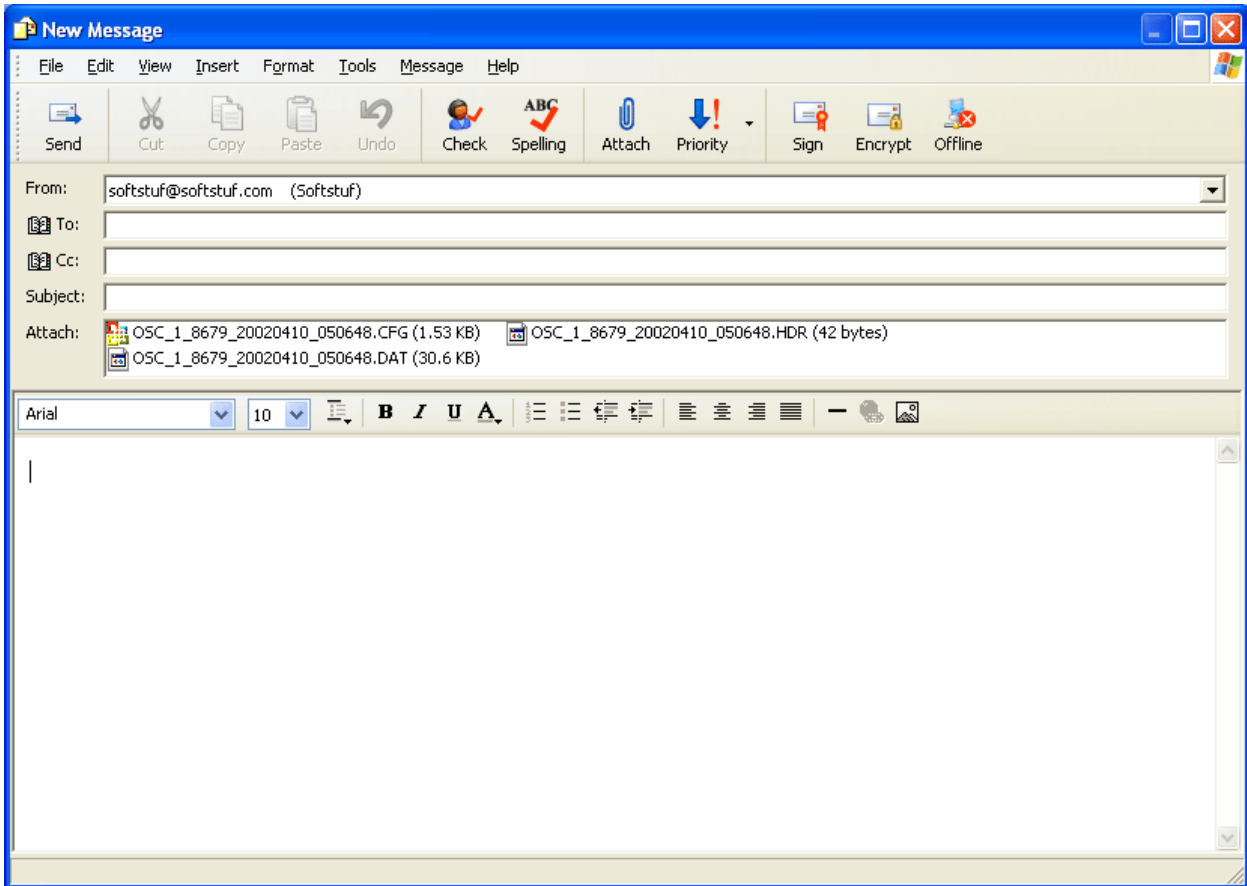




Figure 4.9 Email Dialog

ZIP FILES

Files must be marked first (displayed in red) to zip them. Mark all of the files to zip than click the **Zip Marked Files** menu option under the **File** menu or right click in the file table to display the popup menu and select the **Zip**  option. The zip dialog is displayed. Enter the filename and folder. Click the **Folder**  button to browse and select a destination folder. If no destination folder is defined, the zip file is saved to the file table's active folder. Also, any support files needed to display the selected files will be automatically included in the zip file. Support files include Comtrade .CFG, .HDR and .INF files. The zip files created are compatible with the WinZip and PKZip applications. Refer to Figure 4.10.

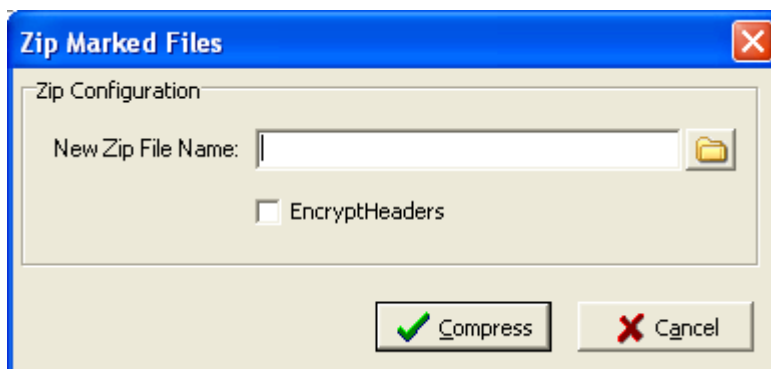


Figure 4.10 Zip Dialog

CUSTOMIZING THE TABLE DISPLAY

The columns displayed in the table can be repositioned through the “Display” feature in the “Options” menu. Refer to Figure 4.11. Use the Move Up and Move Down buttons to change the position of a column. The table columns can also be resized. Position the mouse over the column separator and drag the mouse to the desired location or double click on the table separator to resize the column to the largest display.

The size of the font displayed in the table can also be changed. Use the “Table Font Size” drop down list to select the desired font.

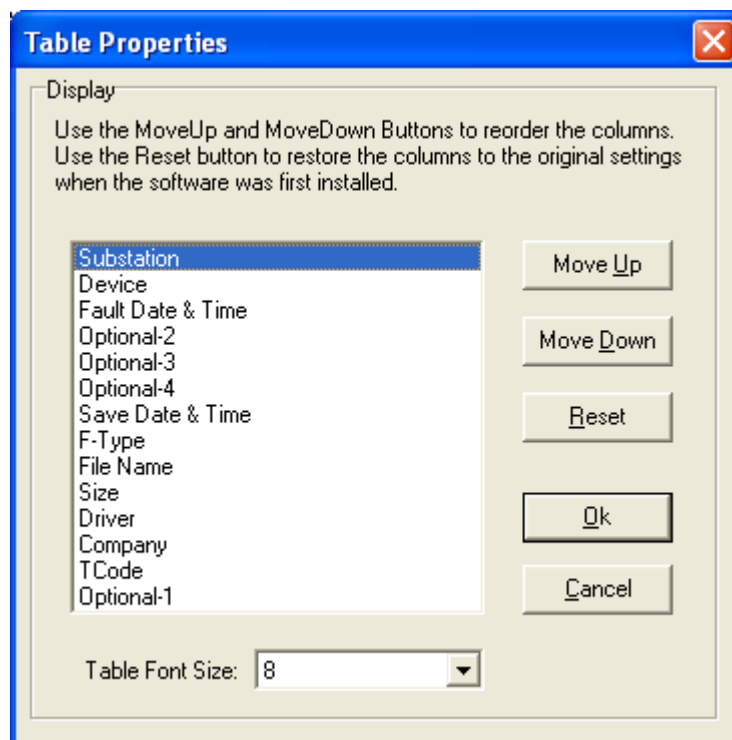


Figure 4.11 Customize Table Columns

PRINTING THE FILE TABLE

The print feature provides two options: print all or marked files in the active directory. To print all the files press Alt+F,P,A or Alt+F,P,M to print the marked files. An error message is displayed if the software cannot access the printer port.

COMPRESSING COMTRADE ASCII FILES

The File Manager contains a built in compression routine that converts COMTRADE ASCII files to COMTRADE Binary files. To compress COMTRADE ASCII files, mark the files and select “Compress COMTRADE Files” from the Options menu. The software prompts for confirmation, click **Yes** to continue, or **No** to cancel.

SAVING AS COMTRADE

Oscillography formats supported by the software can be converted to the COMTRADE ASCII or Binary format. Two Comtrade versions are supported: the older 1991 format and the newer 1999 format. The Comtrade format can be selected from the Data Plotting Window's Properties dialog. The default format is the newer 1999 format. Refer to Figure 4.12. To create a COMTRADE file place the cursor on the event file or mark the desired files and select “**Save As COMTRADE**” (ASCII or Binary) from the Options menu. Enter the destination path and filename (do not enter a filename extension) and click **OK**. The “.DAT” and “.CFG” files are automatically created. If a path is not defined, the COMTRADE files are saved in the active directory.

If the sample values in the selected file(s) are RMS calibrated and the desired Comtrade file must have instantaneous values set the “Comtrade Settings” fields to automatically convert the RMS data to instantaneous values. To set the “Comtrade Settings” fields open the “Window Properties” dialog in the analysis display. Select the “Comtrade” tab then select “Yes” for the “Convert RMS Calibrated Data to Peak Data”.

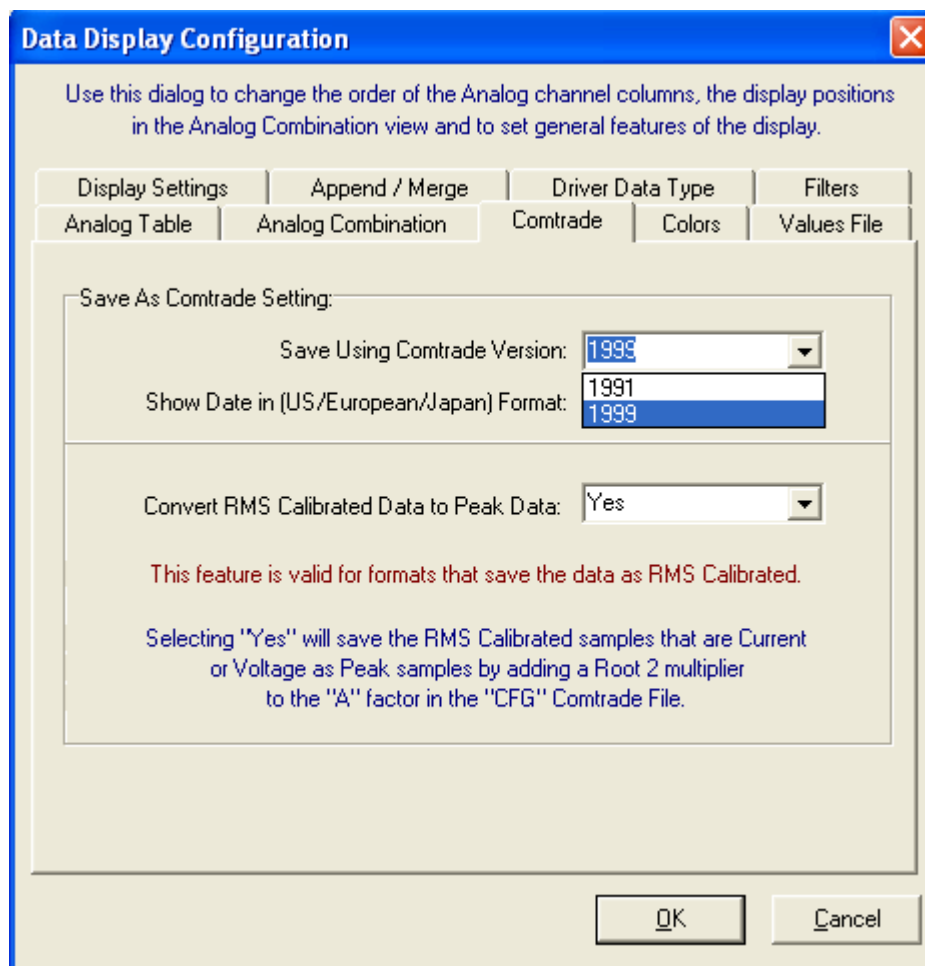


Figure 4.12 Comtrade Version

To automatically convert the selected file(s) to Comtrade using the IEEE long file naming format check the “Use the ComNames Naming Convention to Name the Comtrade File(s)” field in the “Save As Comtrade” Dialog and leave the File Name field empty. Refer to Figure 4.13. All files marked in the table will be converted to the selected Comtrade format and will be named using the IEEE long file naming convention.

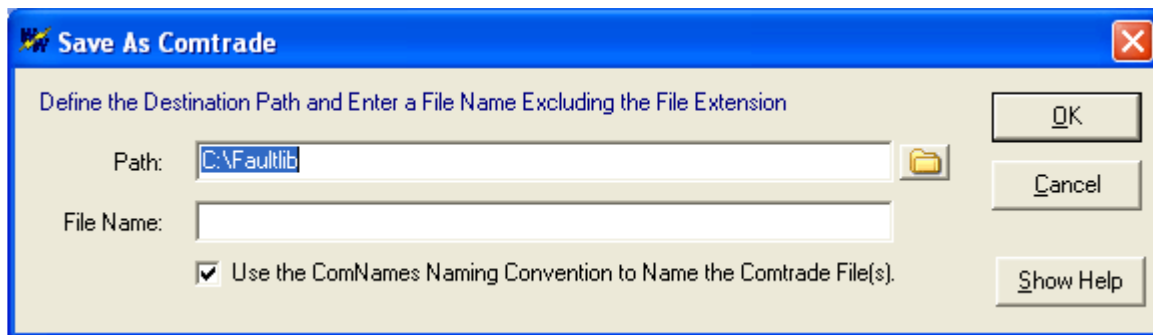


Figure 4.13 Save As Comtrade

RUNNING APPLICATIONS

Files that contain the extension EXE, BAT, and COM can be activated from the file table. To run an application from the active folder place the cursor on the filename and press <enter> or double click the mouse button. To run an application from a non-active folder select “Run” from the File menu, enter the path and the filename in the “Open” field, and click **OK**. Refer to Figure 4.14.

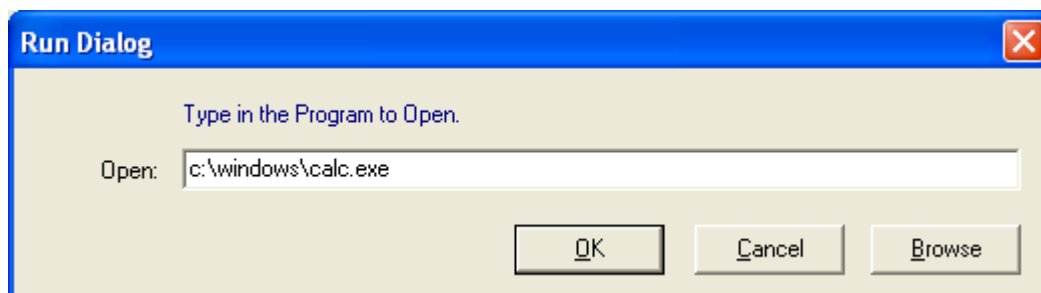


Figure 4.14 Run Dialog

DISPLAYING OSCILLOGRAPHY RECORDS

A library of device drivers is used to display various types of oscillography formats (Universal Viewer). The formats currently supported by the system are:

- COMTRADE ASCII and Binary
- Hathaway DFR I, II, IIB, and 2000
- Emax Faxtrax & Director DFR
- Mehta Transcan DFR
- Rochester TR16** DFR
- SEL Relays (all series including the compressed format)
- ABB Relays (REL 301/302, MDAR 300, GPU, TPU & DPU 2000R and below)
- ABB Load Profile (Wye-Connected VTs and Delta-Connected VTs)
- GE Relays (DLP1 & DLP3)
- Dranetz SER
- Satec PM295
- RFL 9300

SDC Log Files
 Fluke Scope Meter
 SEL Load Profile Data
 Ametek TR-100+, DL-8000, TR-2000 & P&QR128
 NxtPhase Tesla
 NxtPhase BPRO, TPRO, LPRO & FPRO
 Emax Long Term Records
 GE-SR745 & GE-SR489
 Hathaway Replay Plus (DFR, TSS & CSS files)
 TIS
 S&C IntelliRupter Waveform
 S&C PXI
 S&C Extended Waveform Capture
 Audio Wave File
 S&C Meter
 S&C Daily High Low File

To plot the contents of a file, place the cursor on the filename and select the appropriate driver from the “Driver” menu. A maximum of ten display windows can be opened at one time. Refer to the “Analysis” section for more information.

ASSOCIATING FILE TYPES

The File Manager automatically associates file types according to the file naming structure. The associated driver is displayed in the driver column. When the <enter> key is pressed or the mouse button is double clicked the software inspects the filename at the cursor and executes the assigned driver. Files are associated according to the following parameters:

Driver	Association Parameter
Directories	Directories are tagged according to the parameters read from the file allocation table.
Applications	Files with the extension “.BAT”, “.COM”, or “.EXE” are tagged as application files.
Hathaway DFR I,II, IIB & 2000	Files that match the Hathaway Base32 file naming scheme or are long files with the .DFR extension are tagged as DFR I,II, IIB, & 2000 files.
EMAX Faxtrax II / Director	Filenames with the extensions “.RCD”, “.RCL”, “.RCU”, and there is a cooresponding “.CTL” file, are tagged as Faxtrax II / Director files. The Emax Faxtrax II / Director (12-bit/16bit) format is supported.
Mehta Transcan	Files that have an extension starting with “X” and a corresponding “.SCF” file exists are tagged as Mehta Transcan files.
Rochester TR16**	Files that have the same name and an extension with a number and there is a corresponding .PRE file in the same directory are tagged as Rochester files.
NxtPhase Tesla	Files with the extension “.TLR” are tagged as NxtPhase Tesla files.
COMTRADE	Files with the extension “.DAT” that have a cooresponding “.CFG” file are tagged as COMTRADE files.
SEL	Files with the extensions “.SEL”, “.CEV” or “.EVE” are tagged as SEL files.
SEL LPD	Files with the extension “.BSV” are marked as SEL Load Profile Data files
DLP	Files with the extension “.OSC” are tagged as DLP relays. GE DLP1 and DLP3 formats are supported.
REL300/301/302	Files with the extension “.REL” are tagged as ABB-MDAR files.
TPU/DPU/GPU	Files with the extension “.CAP” are tagged as ABB-TPU/DPU/GPU files.
ABB Load Profile	Files with the “.DLA” extension are tagged as ABB Load Profile-Wye files.
GE SR745/489 File	Files with the “.CSV” extension are tagged as GE SR745 Files.

Driver	Association Parameter
SDC Log File	Files with the “.CSV” extension are tagged as SDC Log Files.
TIS File	Files with the “.TIS” extension are tagged as TIS (Trip Information System) Files.
Ametek Files	Files with the “.AMT” extension are tagged as Ametek TR-100+, DL-8000, TR-2000 & P&QR128 Files.
NxtPhase Tesla	Files with the “.TLR” extension are tagged as NxtPhase Tesla Files.
NxtPhase Relays (BPRO, TPRO, LPRO & FPRO)	Files with the “.BPR, .TPR, .LPR, FPR” extensions are tagged as NxtPhase Relay Files.
Emax Long Term	Files with the “.DAT” extension with an associated “.SET” file are tagged as Emax Long Term Files.
Hathaway Replay Plus	Files with the “.DAT” extension with no “.CFG” associated with it are tagged as Hathaway Replay Plus Files.
S&C IntelliRupter	Files with the extension “.WFC” are tagged as S&C IntelliRupter Waveform Files.
S&C PXI	Files with the extension “.TSV” are tagged as S&C PXI Waveform Files.
S&C Extended Waveform Capture	Files with the extension “.EWC” are tagged as S&C IntelliRupter Extended Waveform Files.
Audio Wave	Files with the extension “.WAV” are tagged as Microsoft’s Wave Files.
S&C Meter	Files with the extension “.PRO” are tagged as S&C IntelliRupter Meter Files.
DXF	Files with the extension “.DXF” are tagged as Drawing Exchange Format files.
Application Files	Word Documents (“.Doc” & “.RTF”), Excel Documents (“.XL”, “.XLS”, “.XLT”, “.XLM”, “.XLA”, “.XLC” & “.XLW”), Web pages (“.HTM”, “.HTML”, “.MSPX” & “.ASP”), Access Files (“.MDB” & “.ADP”), Power Point Presentation files (“.PPT” & “.PPS”), Image files (“.GIF”, “.TIF”, “.JPG”, “.JPE”, “.BMP”, “.PSD” & “.PDD”), Zip files (“.ZIP”), and PDF files (“.PDF”) are automatically associated with their source application.
ASCII	All other files are tagged as ASCII files.

To change the driver type, place the cursor on the filename and select the driver from the Drivers menu. Once a driver is assigned the file contents appear in the corresponding display window. If the driver encounters an error while reading a file an “Invalid Driver Message” is displayed indicating the line number in which the error was encountered. Use the ASCII or Hexadecimal editors to locate and correct the error. The ASCII and hexadecimal editors display the cursor’s line and character number in the lower left corner of the window. The following drivers are supported:


ASCII (Text)
 Hexadecimal (Binary)
 Table (Comma Delimited, Double Quotes/Comma Delimited, Tab Delimited)
 DXF
 COMTRADE (ASCII and Binary)
 DRF I, II, IIB, and 2000
 Transcan
 Faxtrax II & Director (12/16 bit)
 Rochester TR16**
 Tesla
 SEL
 SEL-Meter
 SEL-Load Profile Data (LPD)
 DLPI and DLP3
 REL 300/301/302
 TPU/DPU/GPU
 GE SR745/489
 PM295

RFL 9300
 SDC Log files
 ABB Wye/Delta Connected VTs Load Profile
 TIS (Trip Information System)
 Fluke Scope Meter
 SEL Load Profile Data
 Ametek TR-100+, DL-8000, TR-2000 & P&QR128
 NxtPhase Tesla
 NxtPhase BPRO, TPRO, LPRO & FPRO
 Emax Long Term Records
 Hathaway Replay Plus (DFR, TSS & CSS files)
 S&C IntelliRupter Waveform (WFC files)
 S&C PXI
 S&C Extended Wavefore Capture
 Audio Wave
 S&C Meter
 S&C Daily High Low

The “Auto Detect” feature inspects the file at the cursor position and tags it according to the filename.

DEVICE CONFIGURATION

The device configuration dialog allows for setting certain parameters for each type of device driver supported. To open, select the “**Device Configuration**” menu option under the “**Options**” menu. The right panel displays all the supported device drivers. Use the mouse or up and down arrow keys to select the device. Refer to Figure 4.15. The left panel displays the available settings for each device. Below is a list of the available settings:

- **Device’s Data Type:** Options (Peak, RMS Calibrated or Log File). Select the type of data that is contained in the files for the selected device.
- **Device Header Directory:** If the device requires support files to display the data then the support files can be placed in a centralize directory so they do not have to be in the directories where the data files are located. Enter the directory or use the folder button  to browse for an existing directory. This field is for devices that maintain separate files for the Analog & Digital info. This field is available for Hathaway, Transcan, Rochester and Comtrade Files.
- **Default Display Frequency:** If the files are preferred to be displayed in a fixed sampling frequency when the files are open then set the default frequency in this field. Example, if the files have 4 samples per cycle and it is preferred to view then with 40 samples per cycles enter 2400. To maintain the original frequency leave this field blank or set to 0.00.

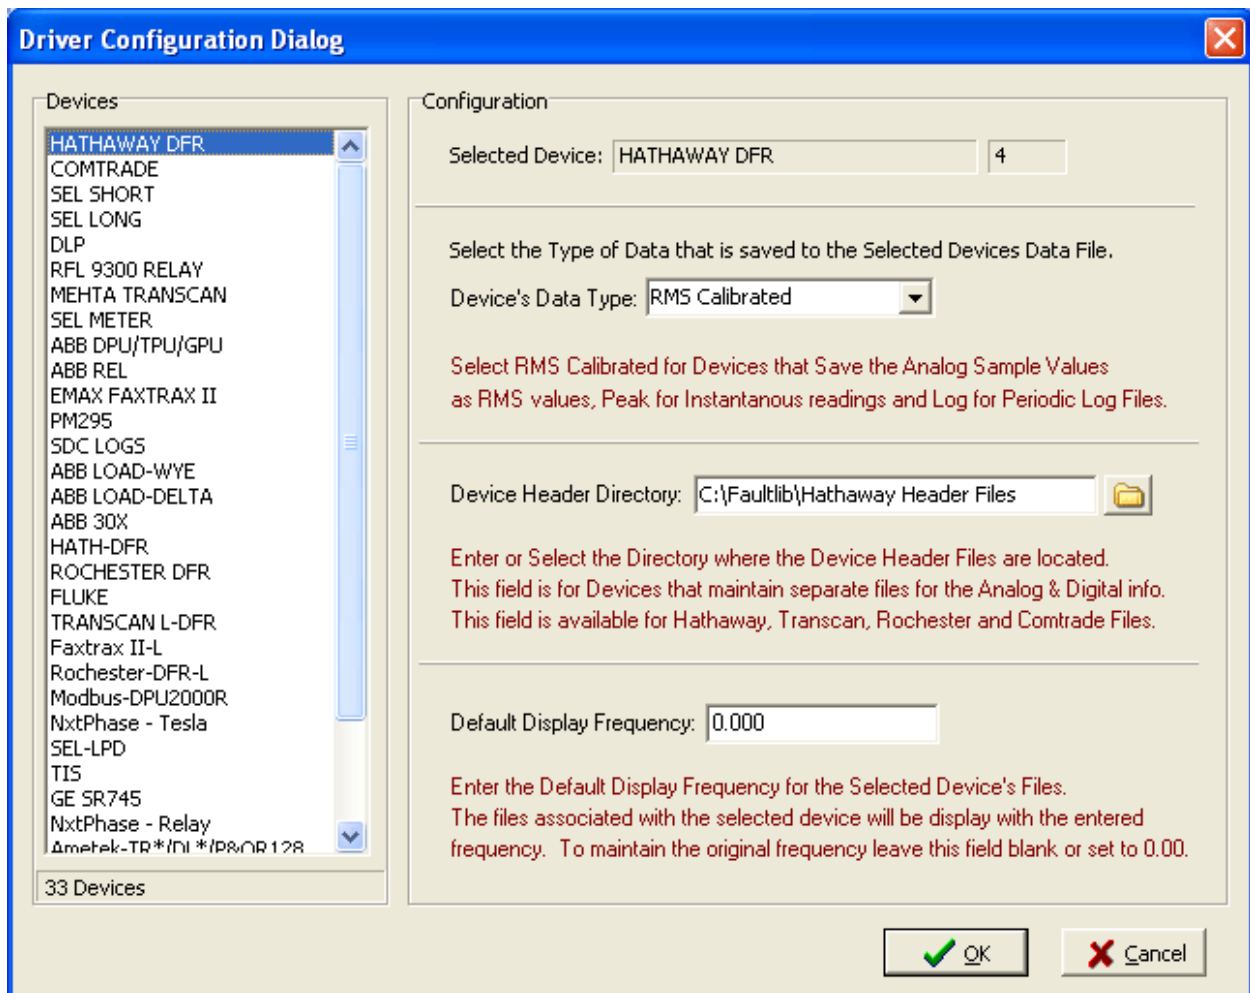


Figure 4.15 Device Configuration Dialog

DAU-DEF EDITOR

The DAU-DEF editor allows for changing the setting for all the available devices defined in the selected Hathaway DAU-DEF file and for adding new dau def configurations. To open, select the “**Edit DAU-DEF File**” menu option under the “**Options**” menu. Navigate to the desired directory and double click on the dau-def file. The right panel displays all the devices defined in the file. Use the mouse or up and down arrow keys to select the device. Refer to Figure 4.16. The left panel displays the available settings for each device. Below is a list of the available settings:

- **Telephone #:** Enter the telephone number to connect to the device.
- **Analog Channels:** The analog channels defined for the selected DAU-DEF record are displayed in a list box. Use the up and down arrow keys or the mouse to select the analog channel to modified. The following fields can be modified for each analog channel.
 - **Name:** Modify the analog channel name.
 - **Full Scale:** Modify the analog channel's full scale value.
 - **Prefix:** Modify the analog channel's prefix.
 - **Unit:** Modify the analog channel's unit.
- **Event Channels:** The event channels defined for the selected DAU-DEF record are displayed in a list box. Use the up and down arrow keys or the mouse to select the event channel to modified. The following fields can be modified for each event channel.
 - **Event #:** Modify the event channel's number.

- **Name:** Modify the event channel's name.
- **NoNc:** Modify the event channel's normally open or normally closed value, option (1,0).
- **Sensor Channels:** The sensor channels defined for the selected DAU-DEF record are displayed in a list box. Use the up and down arrow keys or the mouse to select the sensor channel to modified. The following fields can be modified for each sensor channel.
 - **Sensor #:** Modify the sensor channel's number.
 - **Name:** Modify the sensor channel's name.
 - **NoNc:** Modify the sensor channel's normally open or normally closed value, option (1,0).

To add a new DAU-DEF configuration click on anyone of the “NOT USED” records and fill in the analog and digital information and click “Save”. The DAU-KEY and DAU-TYPE files are updated automatically.

Edit DAU-DEF File: C:\Faultlib\Hathaway Header Files\DAU-DEF

DAU-DEF Records

- 1 - DOUBS SS DAI 1
- 2 - DOUBS SS DAI 2
- 3 - DOUBS SS DAI 3
- 4 - DOUBS SS DAI 4
- 5 - NOT USED
- 6 - NOT USED
- 7 - ATHENIA SW, 26KV DAI 7
- 8 - BRANCHBURG 230KV DAI 8
- 9 - BRANCHBURG 500KV DAI 9
- 10 - YUKON SS DAI 10
- 11 - NOT USED
- 12 - NOT USED
- 13 - MILLER 230KV DAI 13
- 14 - NOT USED
- 15 - Linwood - DAI 15
- 16 - NOT USED
- 17 - NOT USED
- 18 - TRENTON SW, - DAI 18
- 19 - TRENTON 138KV
- 20 - DEANS 230KV GPS DAI 20
- 21 - NOT USED
- 22 - DEANS 500KV DAI 22
- 23 - NOT USED
- 24 - NOT USED
- 25 - Atlantic City DAI 25**
- 26 - NOT USED
- 27 - NOT USED
- 28 - BELLEVILLE 26/230 DAI 28
- 29 - NOT USED
- 30 - KEARNY 138KV DAI 30
- 31 - NOT USED
- 32 - GORGAS NO. 1 DAI 32 N
- 33 - NOT USED
- 34 - NOT USED
- 35 - Northfield NJ - DAI 35
- 36 - NOT USED
- 37 - NOT USED
- 38 - NOT USED
- 39 - NOT USED

Active DAI-DEF Records: 28

Active DAI-Def Record

DAI-ID #: 25 Station Name: Atlantic City DAI 25

DAI-DEF Index: 26 Telephone #: 215,922-6880

Analog Channels:

- Va
- Vb
- Vc
- Ia
- Ib
- Ic
- In
- Untitled
- Untitled

Channel #: 1

Name: Va

Full Scale: 2

Prefix: k

Unit: Volt

Event Channels:

- 50N
- 51B
- Untitled
- Untitled
- Untitled

Event #: 1

Name: 50N

NoNc: 0

Sensor Channels:

- Untitled
- Untitled
- Untitled
- Untitled
- Untitled

Sensor #: 1

Name: Untitled

NoNc: 0

☒ When reading Hathaway Files always default Sensor #8's NoNc Value to 1 (Ignore the Dau-Def Value) .

Figure 4.16 Hathaway DAI-DEF Editor

TESLA FILES

Tesla Files are displayed in the IEEE Comtrade Binary format. NxtPhase has developed an automatic conversion application called "AutoComtrade.exe" to convert the Tesla proprietary files to the Comtrade format for display. To view Tesla Files double click or press enter on the original Tesla files. To obtain a copy of the "AutoComtrade.exe" file please contact NxtPhase.

To edit the Tesla AutoComtrade configuration open the “Device Configuration” dialog from the “Options” menu. Next select the NxtPhase-Tesla device under the device list box. Refer to Figure 4.17. Below is a list of the available settings:

- **Use Long Name Convention:** The converted tesla files can automatically be named using the IEEE PSRC Long File Naming Convention. Select “Yes” to have them automatically renamed. If “No” is selected then the files are named using the original with the sampling frequency truncated to the name. Example: the “2002-07-23-15.49.01.000F1.tlr” Tesla file’s Comtrade files will be named: 2002-07-23-15.49.01.000F1-Converted_S96.dat.
- **Delete Original’s:** To delete or send the original Tesla file to the recycle bin select “Yes”. All files that can be recycled will be sent to the Window’s recycle bin all other are permentally deleted from the active drive. To maintain the original files select “No”.

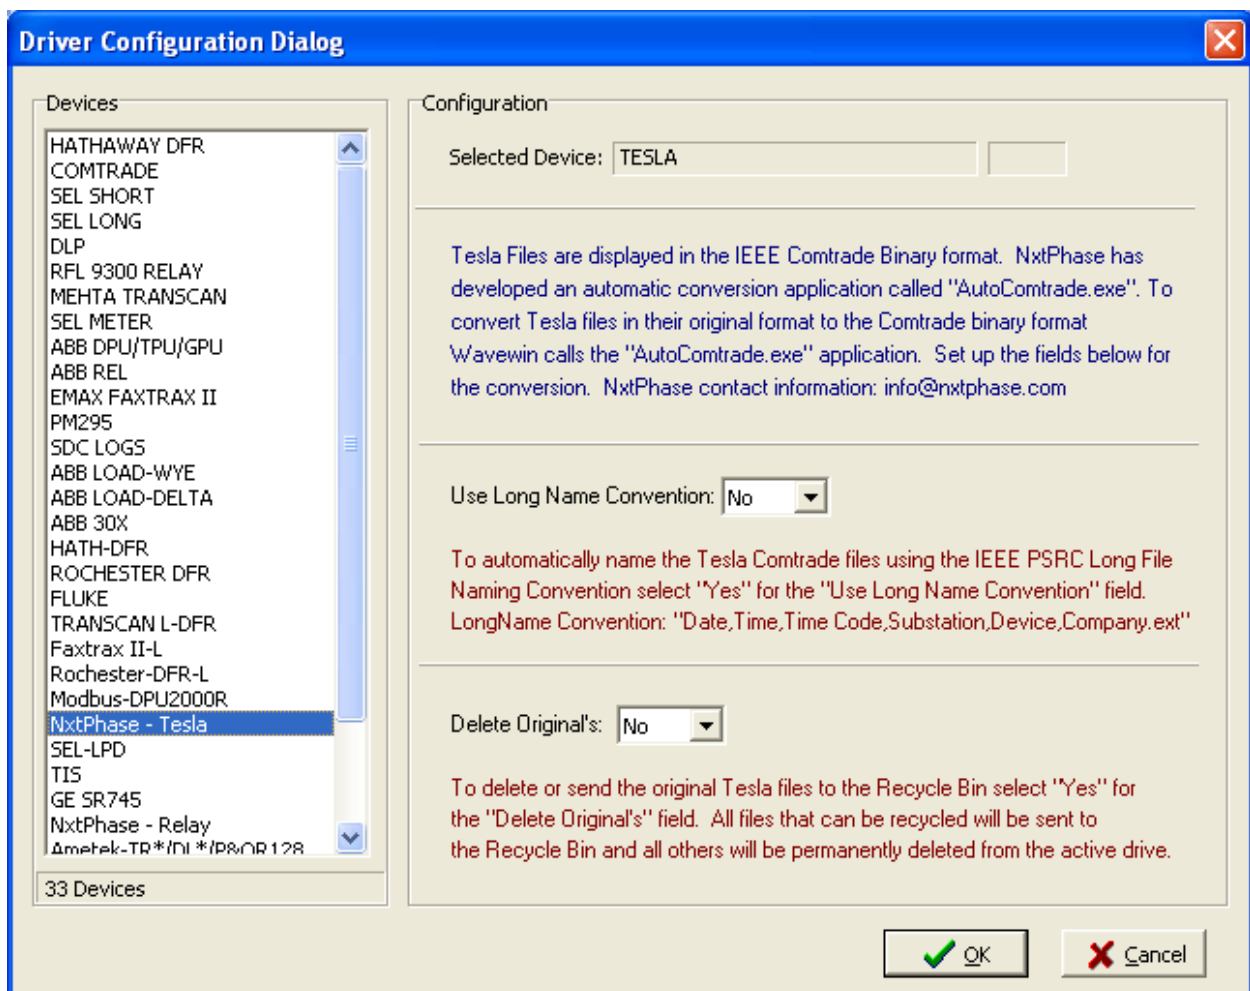


Figure 4.17 Tesla Configuration

LOAD ANALYSIS

The Load Analysis routines are a set of rules and methods used to measure 3 types of abnormal circuit conditions: imbalance, overload and inefficiency in a load “.CSV” file. When the load file is processed 4 analog channels and 5 digital channels are created in the file:

Analog Channels:

- **Max Rating** – The max rating channels displays the defined maximum rating.

- I Average – The I Average channel displays the average value from the IA, IB and IC channels.
- I Max – The I max channel displays the maximum value from the IA, IB and IC channels.
- Derivative – The derivative of the power factor channel.

Digital Channels:

- Breaker Status – The breaker status channel is marked as triggered when a sample indicates an OPEN in the breaker status field (BRK).
- Data Integrity – The data integrity channel is marked as triggered when the date and time for a sample is invalid and the difference between the current samples and the previous samples are greater than 5 times the defined rating.
- Imbalance – The imbalance channel is marked as triggered when an imbalance condition is detected. Refer to the Imbalance section below for more detail.
- Overload – The overload channel is marked as triggered when an overload condition is detected. Refer to the Overload section below for more detail.
- Inefficiency – The inefficiency channel is marked as triggered when an imbalance condition is detected. Refer to the Inefficiency section below for more detail.

Before the load analysis routines can be performed on a file the ratings for the device must be defined. To define the ratings select a file in the file manager then select the “Load Rating” menu option from the “Reports” submenu option under the “Options” menu. Refer to Figure 4.18. Enter the “Summer Normal Rating” and the “Summer Emergency Rating”.

SDC Log Ratings

Substation: STN1#49

Device: 4007#15

Summer Normal Rating

Inside Plant: 600

Outside Plant: 378

Summer Emergency Rating

Outside Plant: 416

Rating File Ok Cancel

Figure 4.18 Load Rating Dialog

An adaptive learning scheme is used to tune the time varying coefficients (W1, W2 & W3) of an imbalance, overload and inefficiency summation equation. The equation is used to classify circuit conditions (i.e., assign priority values).

Figures 4.19 and 4.20 reveal the basic schematic of the expert and adaptive learning models used. Terms used in Expert System Model are defined as follows:

- IA Phase-A current (Amps RMS)
- IB Phase-B current (Amps RMS)
- IC Phase-C current (Amps RMS)
- AVG Average of Phases A, B, and C
- SNR Summer Normal Rating for the circuit (Amps RMS)
- PF Power factor
- X-I Maximum imbalance value (max % change from average)
- X-O Maximum overload value (max % change from rating)
- X-E Maximum inefficiency value (max % change from unity)
- IMB Discrete imbalance signal (1=On, 0=Off)
- OVR Discrete overload signal (1=On, 0=Off)
- INE Discrete inefficiency signal (1=On, 0=Off)
- T-I Total imbalance duration (Days, Hours)
- T-O Total overload duration (Days, Hours)
- T-E Total inefficiency duration (Days, Hours)

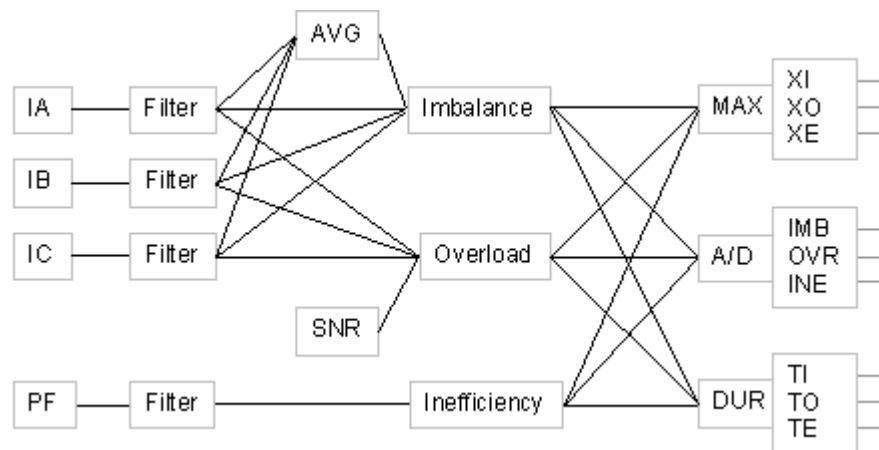


Figure 4.19 Expert System Model

Terms used in Adaptive Learning Model are defined as follows:

- X Multiplication node
- W-1 Time varying coefficient for imbalance condition
- W-2 Time varying coefficient for overload condition
- W-3 Time varying coefficient for inefficiency condition
- Σ^+ Summation node (good/bad circuit classification branch)
- Σ^- Subtraction node (error signal generation branch)
- Desired Input signal used to train the network
- Err Function Cost function that governs the assignment of coefficient values

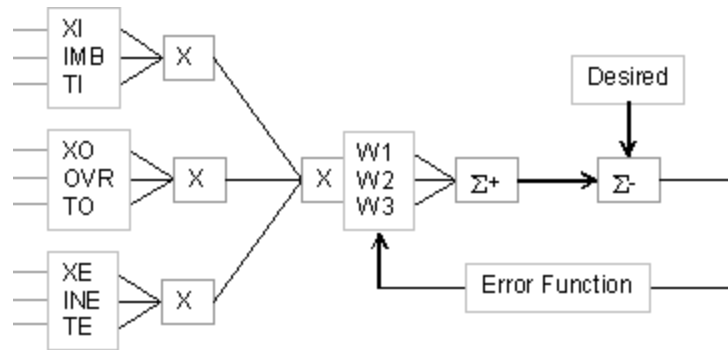


Figure 4.20 Adaptive Learning Model

The “Load Trigger” Dialog allows for programming the level, weight, and duration triggers for the analysis procedures. Refer to Figure 4.21. The triggers are listed by circuit type.

The 'Load Analysis Triggers' dialog box is shown with three tabs: 'Imbalance', 'Overload', and 'Inefficiency'. The 'Imbalance' tab is active. It contains three sections: 'Feeders', 'Transformers', and 'High Side Lines'. Each section has the same set of parameters: 'Over Trigger' (a numeric input), '% Change to Average' (a label), 'Ignore Under' (a numeric input), 'Amps' (a label), 'Start Hour' (a dropdown menu), '[0..23]' (a label), 'End Hour' (a dropdown menu), '[0..23]' (a label), 'Duration' (a numeric input), '# of Consecutive Samples' (a label), and 'Weight' (a numeric input with a range '[1..100]'). At the bottom, there is a section for 'Process And:' with three radio buttons: 'Update Database', 'Create Summary Files', and 'Save As Comtrade'. The 'Save As Comtrade' option is selected. There are also 'OK', 'Cancel', 'Process', and 'Show Help' buttons.

Figure 4.21 Load Analysis Triggers Dialog

A description of the analysis procedures follows:

Imbalance: The system calculates the average value of the 3 phase currents and then measures the difference between each phase and the average. If the maximum percentage change from average is greater than the “Over Trigger” value (say 10% of average) then an imbalanced condition is noted and the maximum percentage imbalance and total duration are tracked. If the condition persists for a consecutive number of readings that is greater than the “Duration” value (say 6 hours) then an actual imbalance alarm is issued.

Overload: The system measures the maximum value of the 3 phase currents and then compares to the summer normal rating that is provided for that circuit. If the maximum value is greater than the “Over Trigger” value (say 90% of rating) then an overload condition is noted and the maximum percentage overload and total duration are tracked. If the condition persists for a consecutive number of readings that is greater than the “Duration” value (say 4 hours) then an actual overload alarm is issued.

Inefficiency: The system looks at the power factor measurements and directly compares to the “Under Trigger” value (say 90% of unity). If the value is less than “Under Trigger” then an inefficiency condition

is noted and the maximum percentage inefficiency and total duration are tracked. If the condition persists for a consecutive number of readings that is greater than the “Duration” value (say 5 hours) then an actual inefficiency alarm is issued.

Cumulative Values: The system calculates a weighted sum of the tracked maximum percentages for imbalance, overload and inefficiency and uses that sum as a priority measure to rate the condition of each circuit. The weights are specified in the “Weight” field as “multiplier, extreme duration”. The actual weight is equal to the multiplier value but it doubles when the total duration exceeds the specified extreme duration.

Data Filters: Data measurements that are taken outside the interval “Start Time” to “End Time”, or that have values below “Ignore Under”, are not processed and the previous state of the system is retained. The system also detects “bad data” (due to spikes, network crashes, incorrect unit designations, modem communication failures and so on) and blocks it from propagating through the system.

To perform the analysis on a directory containing *.CSV load files first mark the desired files then click on the **Load Analysis** menu button to display the **Load Analysis Triggers** dialog or select the desired load option from the load analysis drop down menu. Refer to Figure 4.22.

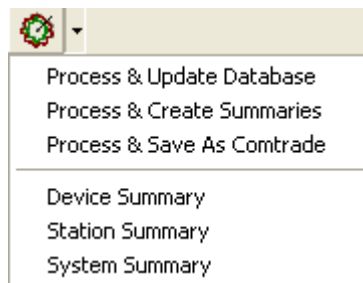


Figure 4.22 Load Menu Button

The first three menu options are also available from the Load Analysis Trigger dialog. Refer to Figure 4.21. Below is a description for each option available.

- **Process & Update Database** – The process & update database will process all the marked *.CSV files in the active directory and update the Max-Imbalance, Max-Overload, Max-Inefficiency and the Priority columns with the new data.
- **Process & Create Summaries** – The process & create summaries will process all the marked *.CSV files in the active directory and create device summary ASCII files for each file processed. A folder destination dialog is displayed. Refer to Figure 4.23. Select the destination folder and define the names for the files. The files are named using the IEEE PSRC Long file naming convention when the “Use ComName” option is checked.
- **Process & Save As Comtrade** – The process & create summaries will process all the marked *.CSV files in the active directory and create Comtrade files for each file processed. A folder destination dialog is displayed. Select the destination folder and define the names for the files. The files are named using the IEEE PSRC Long file naming convention when the “Use ComName” option is checked.

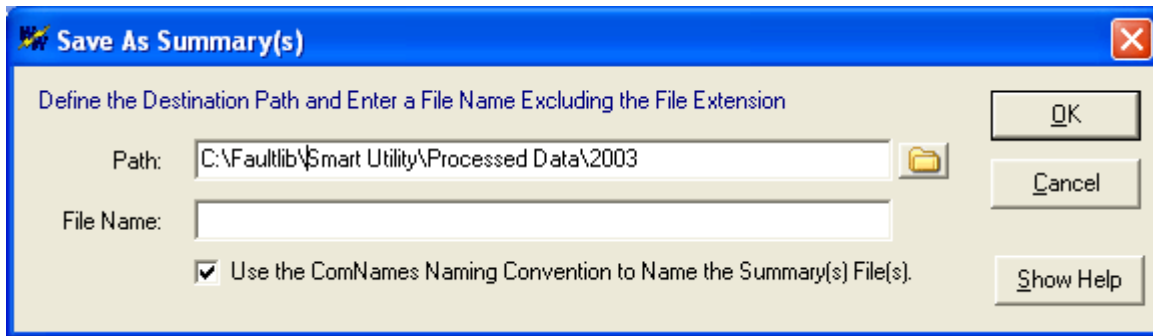


Figure 4.23 Summary Destination Dialog

Summary Files:

- **Device Summary** – The device summary files list all the general information for the file, the maximum and minimum values for imbalance, overload & inefficiency, the maximum and minimum values for each analog channel and SOE for the digital channels. Refer to Figure 4.24.
- **Station Summary** – The station summary lists the imbalance, overload, inefficiency and priority for each device in the station. Refer to Figure 4.25.
- **System Summary** – The system summary lists the imbalance, overload, inefficiency and priority for each device defined in the system along with the average for each station. Refer to Figure 4.26.

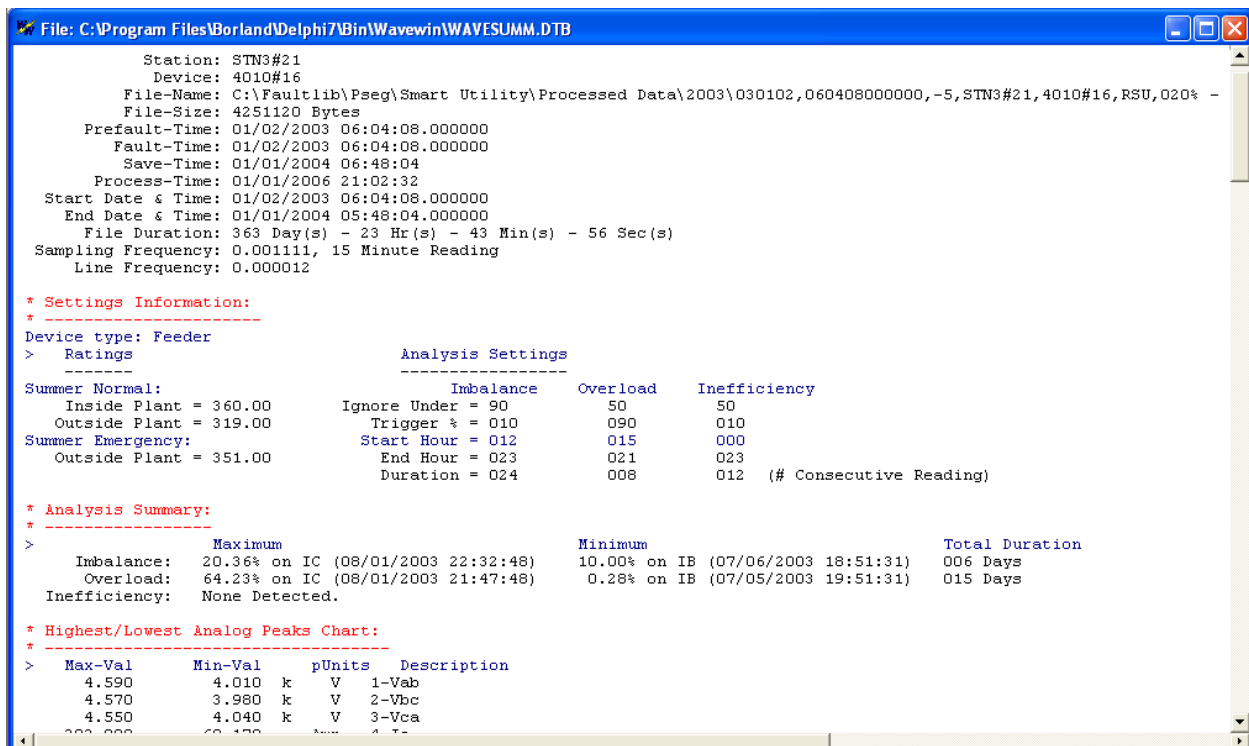


Figure 4.24 Load Device Summary

File: C:\Program Files\Borland\Delphi7\Bin\Wavewin\WAVESSUM.DTB

- Station Summary:
 - Processed Date: 1/1/2006 9:00:19 PM
 - Total Devices: 0025

		Imbalance			Overload			Inefficiency			Priority
		(Trigger	MaxAmps	Dur)	(Trigger	Rating	Dur)	(Trigger	AvgAmps	Dur)	(Rank)
* STN1 #49											
4023 #21	:	118%	0991A	324D	022%	0485A	007D	000%	0503A	000M	0412
4025 #22	:	000%	0995A	000M	009%	0413A	008D	021%	0716A	217D	0158
4003 #27	:	041%	0362A	329D	007%	0352A	004D	000%	0299A	000M	0113
4008 #29	:	032%	0457A	328D	011%	0442A	002D	000%	0375A	000M	0108
4019 #34	:	038%	0229A	310D	000%	0600A	000M	012%	0193A	018H	0100
4012 #30	:	029%	0328A	251D	000%	0428A	000M	012%	0285A	018H	0082
4020 #18	:	000%	0988A	000M	000%	0424A	000M	020%	0459A	155D	0080
4010 #16	:	000%	0970A	000M	000%	0449A	000M	020%	0434A	237D	0080
4001 #11	:	000%	0991A	000M	000%	0442A	000M	020%	0533A	107D	0080
4013 #31	:	021%	0446A	276D	009%	0440A	019H	000%	0425A	000M	0078
4015 #32	:	000%	0166A	000M	000%	0378A	000M	018%	0158A	058D	0072
4004 #13	:	000%	0987A	000M	000%	0428A	000M	018%	0929A	162D	0072
XFMR-4 #7	:	000%	9206A	000M	000%	4625A	000M	034%	4656A	042D	0068
4006 #28	:	018%	0382A	110D	000%	0442A	000M	014%	0360A	001D	0063
XFMR-1 #23	:	016%	1577A	001D	000%	4625A	000M	021%	1557A	001D	0058
XFMR-6 #24	:	013%	1645A	001D	000%	4625A	000M	021%	1601A	002D	0055
4005 #14	:	000%	0903A	000M	000%	0402A	000M	024%	0371A	023D	0048
XFMR-3 #6	:	000%	9080A	000M	000%	4625A	000M	018%	4883A	011D	0036
4022 #20	:	000%	0527A	000M	000%	0364A	000M	018%	0381A	016D	0036
4016 #33	:	000%	0153A	000M	000%	0360A	000M	016%	0144A	013D	0032
4021 #19	:	000%	0800A	000M	000%	0364A	000M	014%	0267A	019D	0028
4002 #12	:	000%	0903A	000M	000%	0442A	000M	014%	0373A	023D	0028
4007 #15	:	000%	0916A	000M	000%	0378A	000M	012%	0399A	001D	0024
4024 #35	:	017%	0396A	056D	000%	0485A	000M	000%	0359A	000M	0017
4011 #17	:	000%	0305A	000M	000%	0411A	000M	000%	0374A	000M	0000
STN1 Averages	:	013%	1388A	079D	002%	1097A	000D	013%	0841A	043D	0077

Figure 4.25 Load Station Summary


File: C:\Program Files\Borland\Delphi7\Bin\Wavewin\WAVESSUM.DTB





- Processed Date: 1/1/2006 8:58:07 PM
 - Total Stations: 05
 - Total Devices: 0095

		Imbalance			Overload			Inefficiency			Priority
		(Trigger	MaxAmps	Dur)	(Trigger	Rating	Dur)	(Trigger	AvgAmps	Dur)	(Rank)
* CUMULATIVES											
STN5 #54	:	029%	0591A	148D	007%	1098A	001D	038%	0538A	070D	0222
STN3 #21	:	020%	0603A	073D	012%	1060A	003D	014%	0555A	046D	0171
STN2 #52	:	017%	1192A	098D	001%	0893A	000D	023%	0542A	062D	0129
STN4 #39	:	009%	0572A	097D	005%	1145A	002D	013%	0533A	058D	0110
STN1 #49	:	013%	1388A	079D	002%	1097A	000D	013%	0841A	043D	0077
System Averages:	:	017%	0869A	099D	005%	1058A	001D	020%	0601A	055D	0141
* STN5 #54											
4009 #13	:	063%	0295A	255D	000%	0442A	000M	083%	0232A	249D	0459
4008 #12	:	068%	0304A	077D	000%	0378A	000M	089%	0209A	244D	0424
4001 #5	:	030%	0297A	247D	000%	0351A	000M	089%	0275A	151D	0417
4006 #10	:	053%	0290A	075D	000%	0294A	000M	086%	0238A	196D	0397
4005 #9	:	015%	0226A	022H	000%	0294A	000M	089%	0217A	197D	0371
4013 #17	:	026%	0521A	284D	022%	0464A	001D	089%	0443A	003D	0319
4010 #14	:	041%	0399A	167D	000%	0464A	000M	058%	0348A	165D	0314
4011 #15	:	030%	0552A	275D	029%	0464A	011D	000%	0473A	000M	0292
4012 #16	:	017%	0578A	005D	016%	0545A	001D	068%	0543A	001D	0217
4002 #6	:	039%	0464A	315D	015%	0442A	001D	000%	0406A	000M	0137
4003 #7	:	034%	0498A	316D	017%	0464A	004D	000%	0427A	000M	0136
4004 #8	:	032%	0519A	262D	017%	0485A	021H	000%	0458A	000M	0131
4014 #18	:	016%	0502A	102D	013%	0485A	002D	000%	0472A	000M	0086
4007 #11	:	041%	0249A	149D	000%	0290A	000M	000%	0190A	000M	0081
XFMR-3 #3	:	000%	1449A	000M	000%	4272A	000M	000%	1409A	000M	0000
XFMR-2 #2	:	000%	1462A	000M	000%	4272A	000M	000%	1406A	000M	0000
XFMR-1 #1	:	000%	1448A	000M	000%	4272A	000M	000%	1406A	000M	0000
STN5 Averages	:	029%	0591A	148D	007%	1098A	001D	038%	0538A	070D	0222
* STN3 #21											
4010 #16	:	020%	0492A	006D	064%	0319A	011D	028%	0416A	170D	0646
4006 #13	:	030%	0600A	271D	034%	0480A	013D	017%	0514A	005D	0370

Figure 4.26 Load System Summary

VIEWING/MODIFYING ASCII FILES

The ASCII Editor allows for viewing and/or modifying the contents of a text file. To open an ASCII file place the cursor on the filename and press F2, or click the **Edit** menu button . Use the up, down, right, left, ctrl+right, ctrl+left, page up, page down, home, end, ctrl+home, and ctrl+end keys, the scroll

bars or the search (F4) and search again (F3)  features to navigate through the file contents. The line and character number at the cursor position are displayed in the status bar (bottom left corner of the window). Refer to Figure 4.27. The **Cut** (ctrl+x) , **Copy** (ctrl+c) , and **Paste** (ctrl+v)  commands are also provided. New files can be created or existing files can be opened, saved and saved under a new name. A maximum of ten editing windows can be opened at one time.

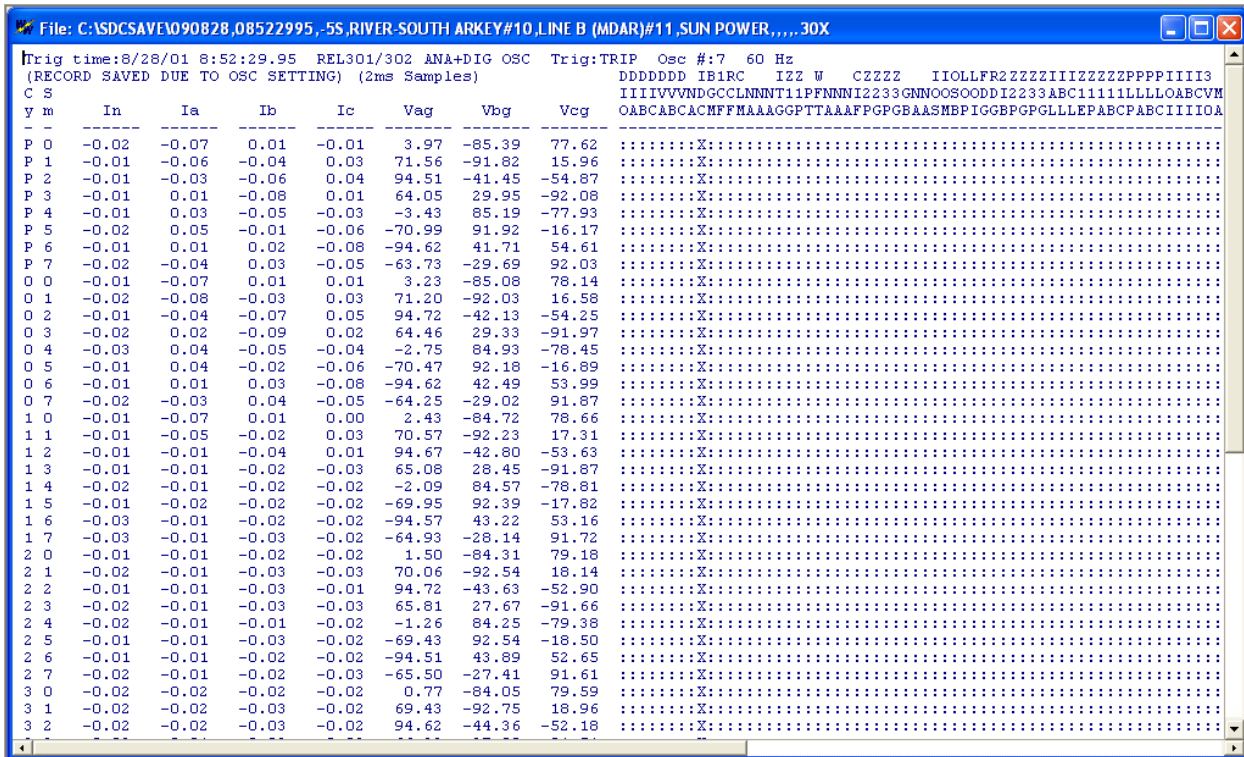


Figure 4.27 ASCII Editor

VIEWING/MODIFYING BINARY FILES

The Hexadecimal Editor allows for viewing and/or modifying the contents of a binary file. To open a binary file, place the cursor on the file and press F3. The Hexadecimal window consists of a hex editor and an ASCII display. Refer to Figure 4.28. When a hex value is entered, the ASCII equivalent appears in the window to the right of the editor. To navigate through the file contents use the up, down, right, left, page up, page down, ctrl+home, and ctrl+end keys or the scroll bar. The byte number at the cursor position is displayed in the lower left corner of the window. To search the contents of a hex file use the search (F4) and search again (F3) functions. To search the ASCII window enter the ASCII information into the "Find Text" Field. To search for a hex value, enter "#", then the hex number into the "Find Text" field. Refer to Figure 4.29.

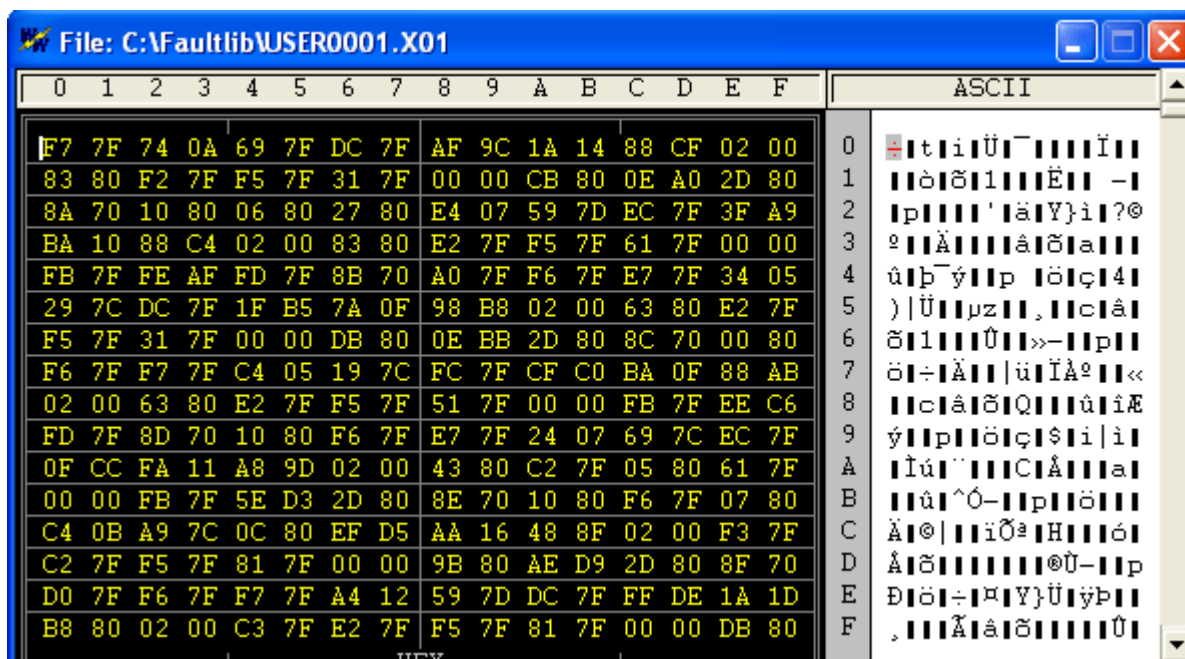


Figure 4.28 Hexadecimal Editor

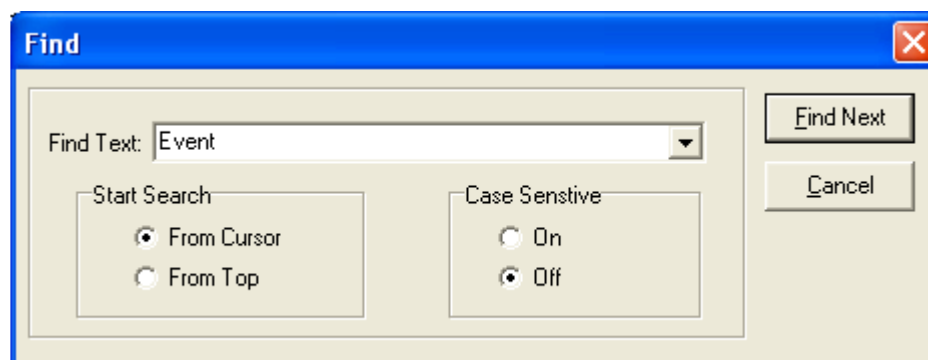


Figure 4.29 Hexadecimal Search

VIEWING WAVEFORM SUMMARIES

The File Manager and Analysis Display features generate analog and digital summaries for the supported oscillography formats. The summary engine extracts key information from the file and saves it to a small summary file. The header, analog, and digital information includes:

Event Information

Field	Description
Station	Name of the Station associated with the event file.
Filename	Name of the event file.
File Size	File size (displayed in kilobytes).
Prefault-Time	Date and time of the first prefault sample.
Fault-Time	Date and time of the first fault sample.
Save-Time	Date and time the file was saved to disk.
Process-Time	Date and time the file summary was processed.
Start Date and Time	Date and time of the first sample in the file.
End Date and	Date and time of the last sample in the file.

Field	Description
Time	
File Duration	Duration of the file measured in days, hours, seconds, milliseconds and/or microseconds, depending on the type of file.
Sampling Frequency	Sampling frequency and the time between each sample.
Line Frequency	Line Frequency defined in the file.

Fault Information - Fault Information is displayed for files that include fault information in their format.

Driver	Fault Information
SEL	Event, Location, Frequency, Duration, Shot, Fault Currents, Targets and more.
DLP	Trip Date and Time, Trip Type, Fault Type, Distance and Operating Time.
Transcan	Triggered event information: Name, Time and Type.

Maximum/Minimum Analog Summary

Field	Description
Max-Inst	Instantaneous maximum values.
Min-Inst	Instantaneous minimum values.
Max-RMS	RMS maximum values.
Min-RMS	RMS minimum values.
OneBit	Channel's full-scale value divide by the channel's resolution.
Inst-Diff	The difference between the Max-Inst and Min-Inst values.
RMS-Diff	The difference between the Max-RMS and Min-RMs values.
pU	Channel prefix and unit.
Description	Channel title and number.


Events/Sensors Activity Summary

Field	Description
Fst	State at which the channel started, A=alarm and N=normal.
Lst	State at which the channel ended, A=alarm and N=normal.
Fst-Change	Date and time the channel first changed state.
Lst-Change	Date and time the channel last changed state.
Changes	Number of times the channel changed state.
Description	Channel title and number.

Events/Sensors Activity Log

Field	Description
State	State of the channel at the triggered time, A=alarm and N=normal.
Trigger Time	Time the channel-changed state.
Description	Channel title and number.

The xx:xx:xx.xxx displayed in the “Fst-Change” and/or “Lst-Change” fields of the Events/Sensors Activity Summary indicates that the digital channel's state did not change from the initial state (Fst).

To generate a summary file, place the cursor on the filename and click the **Summary**  menu button or select “Waveform Summary” from the “Options” menu. Refer to Figure 4.30.

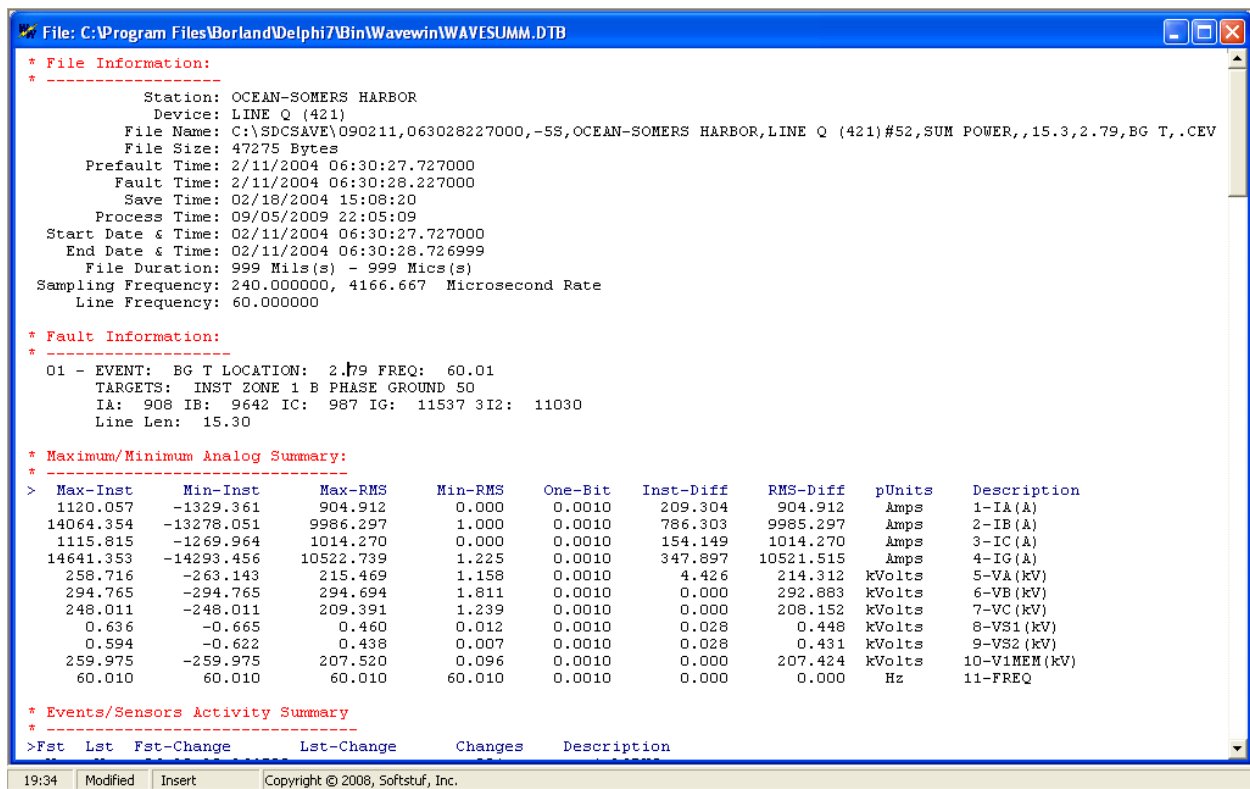


Figure 4.30 Waveform Summary

WAVEFORM FILE(S) OPTIONS

OPEN SELECTED FILE


The Open Selected File option opens the waveform file at the cursor position. Refer to the Displaying Oscillography Records section for a list of the supported waveform files.

OPEN ALL MARKED FILES

The Open All Marked Files option opens all the marked waveform files, tiles the waveform files horizontally and minimize the file manager. To access the file manager click the “Files” menu button



A maximum of ten data windows can be opened at one time.

The plot button icon  will plot all the marked files. If there are no marked files, the selected file is plotted.

APPEND WAVEFORM FILES

The Append Waveform Files option appends the marked files according to time. There are two options available under the Append Menu:

- Discard Common Times: Any common times found in the marked files will be deleted from the older file. Refer to Figure 4.31.
- Back to Back: The files are appended back to back. No samples are deleted. Refer to Figure 4.32.

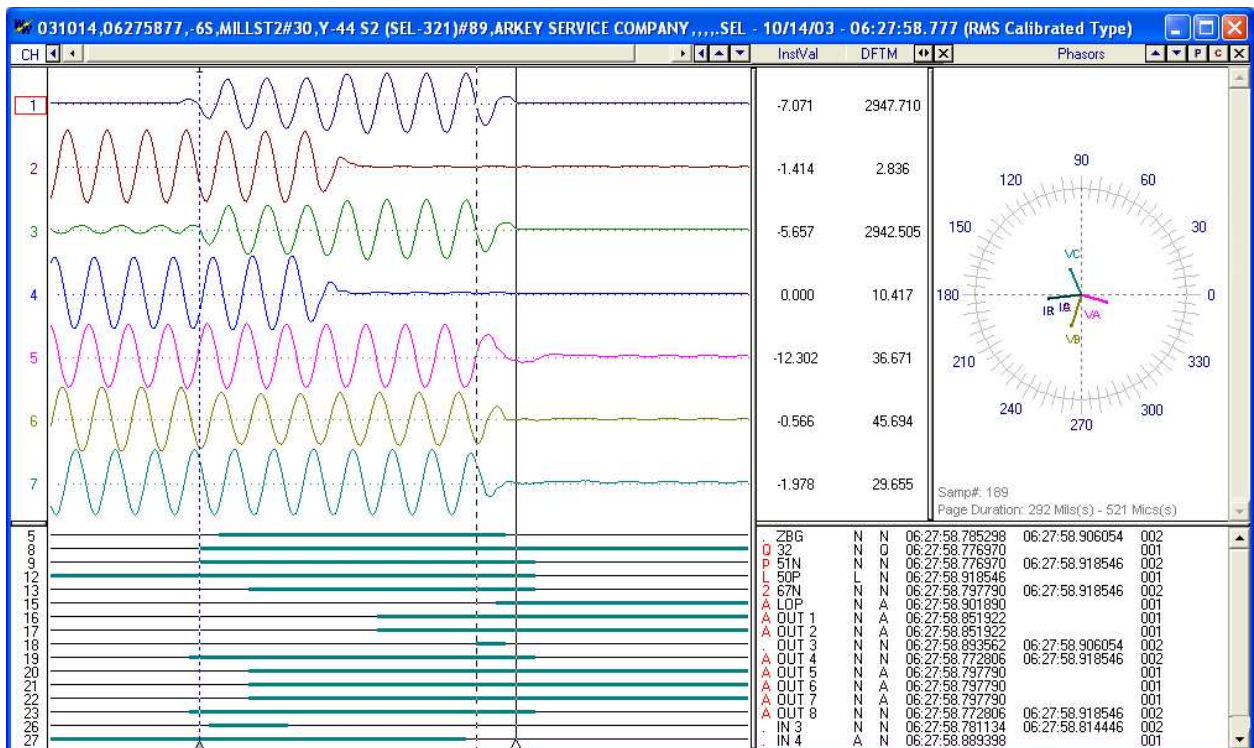


Figure 4.31 Append Waveform Files: Discard Common Times

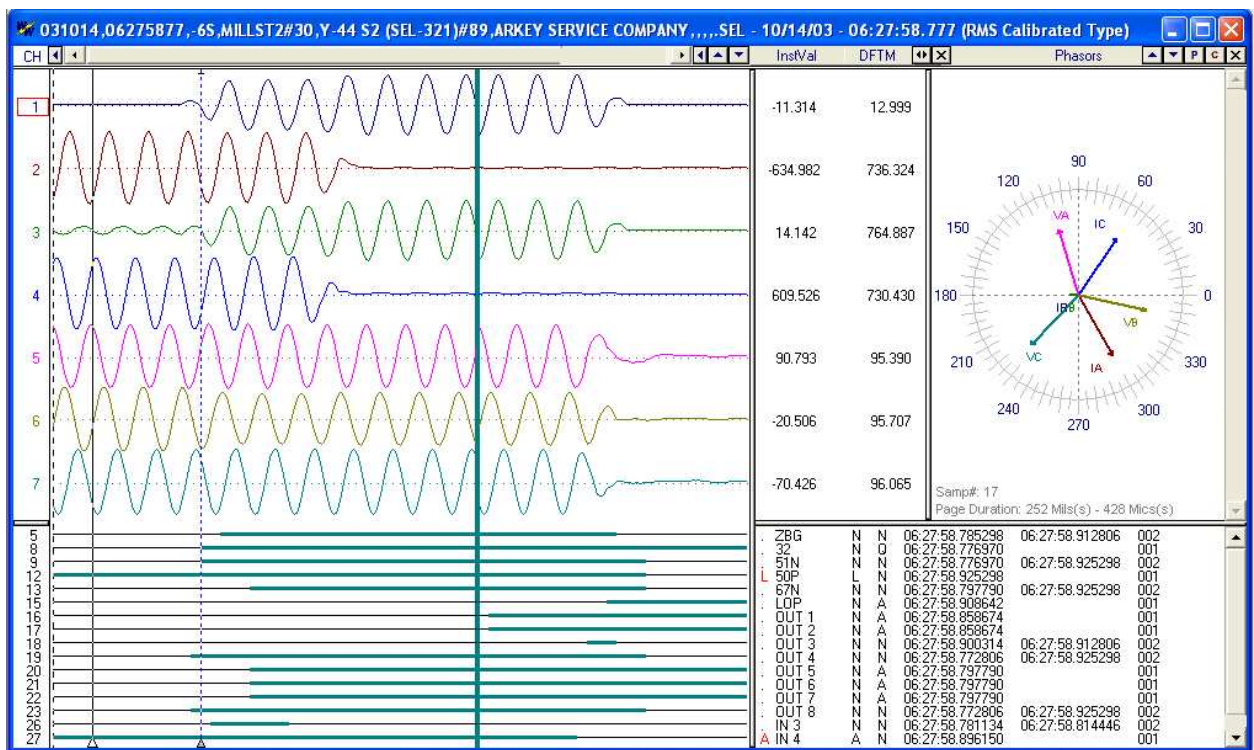


Figure 4.32 Append Waveform Files: Back to Back

MERGE WAVEFORM FILES

The Merge Waveform Files option merges the marked waveform files. There are two options available under the Merge Menu:

- By Time: Merge channel samples if they have a common time segment. The reference time is derived from the file with the latest start date and time. The file with the least amount of samples determines the length of the new merged file. Refer to Figure 4.35.
- By Sample: Merge regardless of time stamps. The reference time is derived from the first marked file. The file with the least number of samples determines the length of the file. Refer to Figure 4.36.

When files with different sampling frequencies are merged a dialog will be displayed. The dialog contains a list of all the sampling frequencies in the marked files. Select the frequency for the merged file or enter a new frequency. Refer to Figure 4.33.

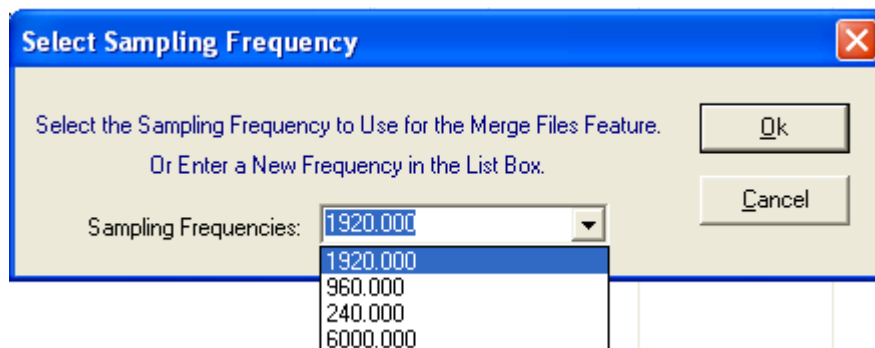

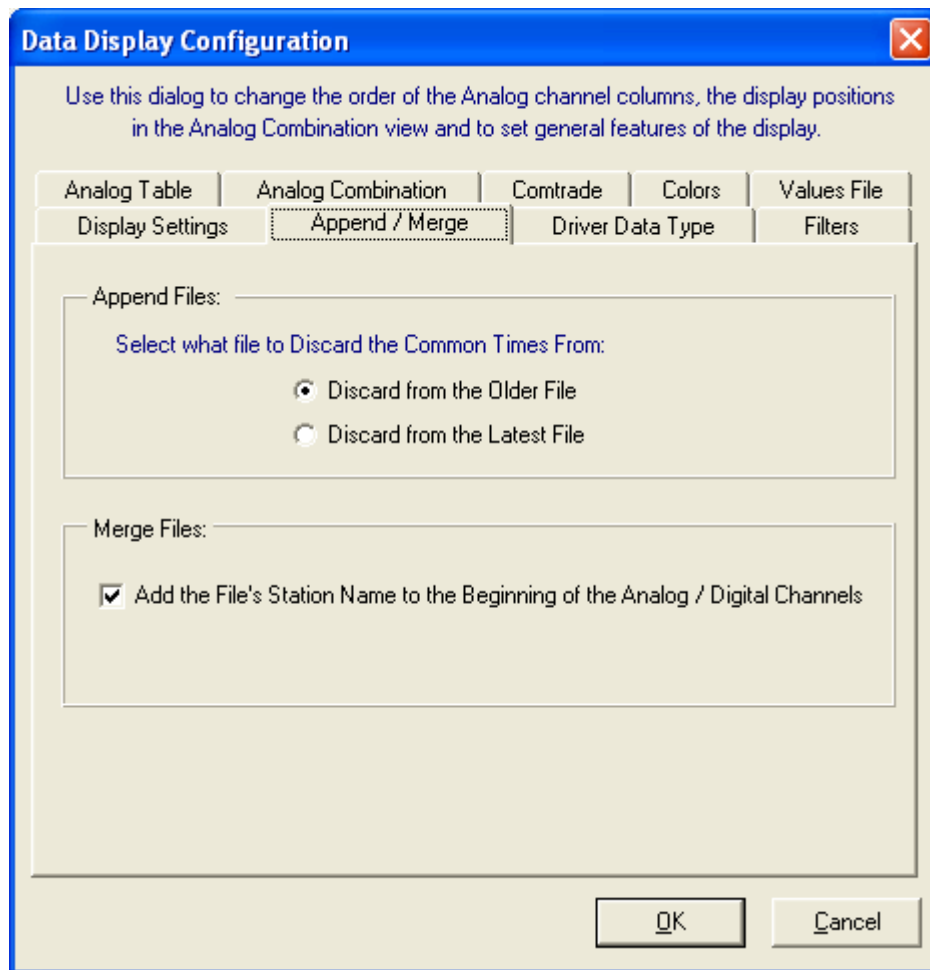


Figure 4.33 Merge Waveform Files: Select Frequency

If the merged files have different data types (RMS Calibrated or Peak Values) then the RMS values will be converted to Peak values by multiplying the RMS values by Root 2.

To identify the merged channels the station name for each file is added to the beginning of the analog and digital channel names. To turn off this feature open the Properties dialog  in the analysis window. Click on the Append/Merge tab and uncheck the “Add the File’s Station Name to Beginning of the Analog/Digital Channels” field. Refer to Figure 4.34.

**Figure 4.34 Append/Merge Properties**

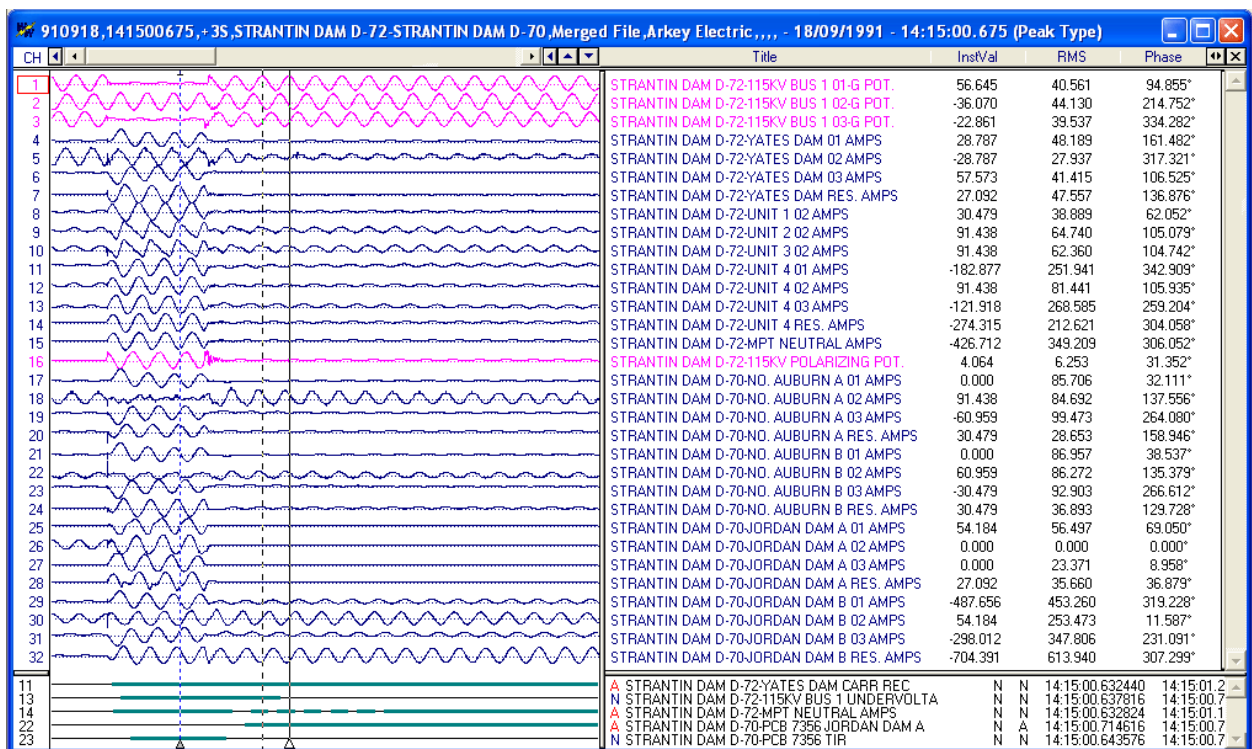


Figure 4.35 Merge Waveform Files By Time

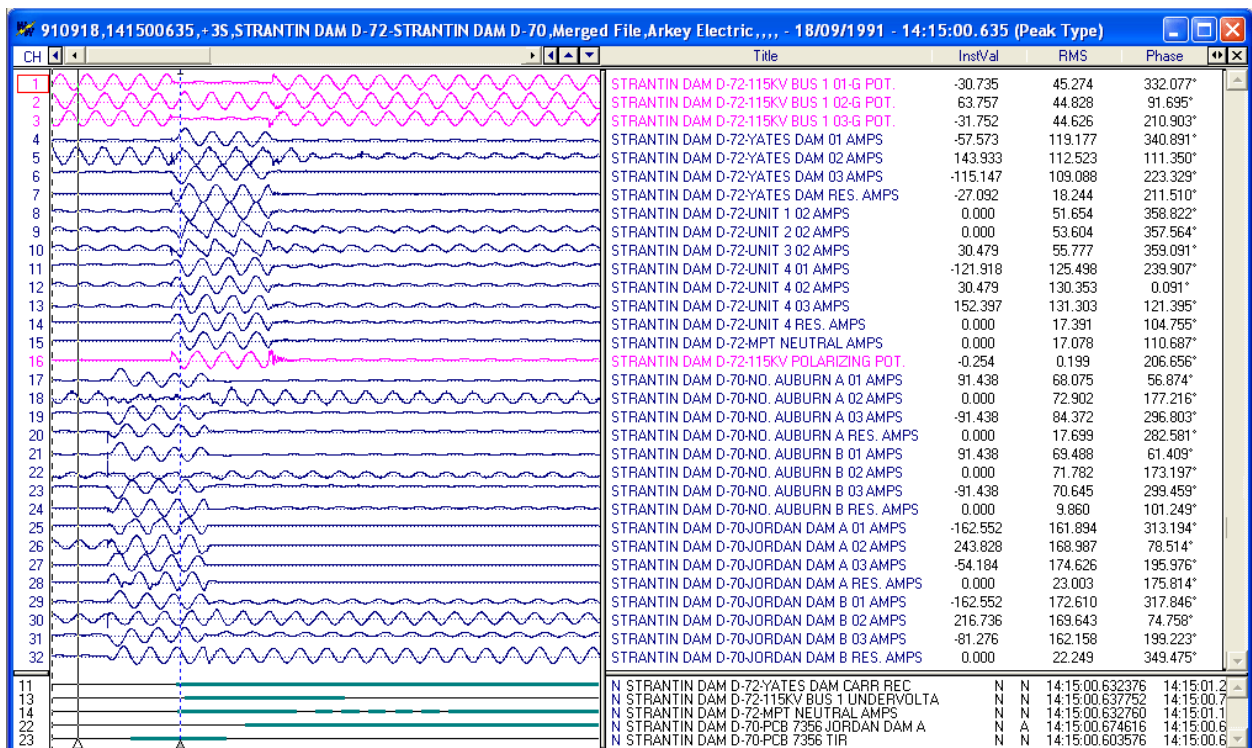


Figure 4.36 Merge Waveform Files By Sample

FILE REPORTS

GENERATING CALIBRATION REPORTS

The Calibration report list the Maximum and Minimum analog summary information for the marked files.

Calibration reports should only be generated on files that contain no fault data such as snap shot files. To generate a report, mark the desired files and select “Calibration...” menu option from the “Report” submenu option under the “Options” menu. Refer to the “Summary” section for field descriptors. The report information is saved in the DVREPORT.DTB file located in the system directory.

GENERATING SEQUENCE OF EVENTS (SOE) REPORTS

To generate a table of sequence of events from multiple waveform files, mark all of the desired files then press F11 or Select the "SOE List" menu option from the "Reports" submenu under the "Options" menu. A table listing all of the events triggered in the selected files is displayed. Refer to Figure 4.37. The table is sorted according to date and time. The columns listed in the table include:

State: The state on the event/sensor at the displayed date and time (A=Abnormal, N=Normal).

Trigger Date: The date the event/sensor triggered or cleared.

Trigger Time: The time the event/sensor triggered or cleared.

Chan: The channel number of the event/sensors in the file from which it was read.

Channel Title: The channel title of the event/sensors.

Device: The device from which the event/sensors originated.

Substation: The substation from which the event/sensors originated.

File: The filename from which the event/sensors originated.

The Query section at the bottom of the table allows for searching events from specific substations, devices, and channels. To plot the file containing the specific events press <enter> or double click on the event.

Substation	Device	State	Trigger Date	Trigger Time	Ch.	Channel Title	File
MARTIN DAM	DAU 71	A	09/18/1991	14:15:00.632120	9	THURLOW DAM CARR XMIT	C:\Faultlib\7108Q1EF.063
MARTIN DAM	DAU 72	A	09/18/1991	14:15:00.632888	11	YATES DAM CARR REC	C:\Faultlib\7208Q1EF.063
MARTIN DAM	DAU 71	A	09/18/1991	14:15:00.633080	33	SYLACAUGA RES. AMPS	C:\Faultlib\7108Q1EF.063
MARTIN DAM	DAU 71	A	09/18/1991	14:15:00.633080	10	THURLOW DAM CARR REC	C:\Faultlib\7108Q1EF.063
MARTIN DAM	DAU 72	A	09/18/1991	14:15:00.633272	34	MPT NEUTRAL AMPS	C:\Faultlib\7208Q1EF.063
MARTIN DAM	DAU 71	A	09/18/1991	14:15:00.634232	34	HARRIS DAM RES. AMPS	C:\Faultlib\7108Q1EF.063
EXAMPLE 69 KV LINE - SEL121	SEL 121C	L	09/18/1991	14:15:00.637668	1	RELAYS 50P	C:\Faultlib\910918.141500646000.+3S.EX
MARTIN DAM	DAU 72	A	09/18/1991	14:15:00.638264	33	115KV BUS 1 UNDERVOLTAGE	C:\Faultlib\7208Q1EF.063
MARTIN DAM	DAU 71	A	09/18/1991	14:15:00.641144	35	CROOK CRK/BREMEN RES AMP	C:\Faultlib\7108Q1EF.063
EXAMPLE 69 KV LINE - SEL121	SEL 121C	A	09/18/1991	14:15:00.646000	9	OUTPUTS A1	C:\Faultlib\910918.141500646000.+3S.EX
EXAMPLE 69 KV LINE - SEL121	SEL 121C	P	09/18/1991	14:15:00.646000	5	RELAYS 51N	C:\Faultlib\910918.141500646000.+3S.EX
EXAMPLE 69 KV LINE - SEL121	SEL 121C	2	09/18/1991	14:15:00.646000	4	RELAYS 67N	C:\Faultlib\910918.141500646000.+3S.EX
TPU Relay	TPU Relay	A	09/18/1991	14:15:00.649840	47	PICKUP 150G-2 WDG2 2ND IN...	C:\Faultlib\910918.141618800000.+3S.TP
TPU Relay	TPU Relay	A	09/18/1991	14:15:00.649840	45	PICKUP 50G-2 WDG2 1ST GRN...	C:\Faultlib\910918.141618800000.+3S.TP
TPU Relay	TPU Relay	A	09/18/1991	14:15:00.649840	43	PICKUP 51G-2 WDG2 GROUND...	C:\Faultlib\910918.141618800000.+3S.TP
TPU Relay	TPU Relay	A	09/18/1991	14:15:00.649840	40	PICKUP 150N-1 WDG1 2ND NE...	C:\Faultlib\910918.141618800000.+3S.TP
TPU Relay	TPU Relay	A	09/18/1991	14:15:00.649840	38	PICKUP 50N-1 WDG1 1ST NET...	C:\Faultlib\910918.141618800000.+3S.TP
TPU Relay	TPU Relay	A	09/18/1991	14:15:00.649840	36	PICKUP 51N WDG1 GROUND...	C:\Faultlib\910918.141618800000.+3S.TP
TPU Relay	TPU Relay	A	09/18/1991	14:15:00.649840	20	OUTPUT STATUS BIT, 2ND HA...	C:\Faultlib\910918.141618800000.+3S.TP
EXAMPLE 69 KV LINE - SEL121	SEL 121C	P	09/18/1991	14:15:00.650166	6	RELAYS 51P	C:\Faultlib\910918.141500646000.+3S.EX
EXAMPLE 69 KV LINE - SEL121	SEL 121C	2	09/18/1991	14:15:00.650166	3	RELAYS 21P	C:\Faultlib\910918.141500646000.+3S.EX
TPU Relay	TPU Relay	A	09/18/1991	14:15:00.654000	61	FAULT 50G-2 WDG2 1ST GRN...	C:\Faultlib\910918.141618800000.+3S.TP
TPU Relay	TPU Relay	A	09/18/1991	14:15:00.654000	54	FAULT 50N-1 WDG1 1ST NET...	C:\Faultlib\910918.141618800000.+3S.TP
TPU Relay	TPU Relay	A	09/18/1991	14:15:00.654000	42	PICKUP 51P-2 WDG2 PHASE T...	C:\Faultlib\910918.141618800000.+3S.TP
TPU Relay	TPU Relay	A	09/18/1991	14:15:00.654000	37	PICKUP 50P-1 WDG1 1ST PH. I...	C:\Faultlib\910918.141618800000.+3S.TP
TPU Relay	TPU Relay	A	09/18/1991	14:15:00.654000	35	PICKUP 51P WDG1 1ST PHAS...	C:\Faultlib\910918.141618800000.+3S.TP
EXAMPLE 69 KV LINE - SEL121	SEL 121C	A	09/18/1991	14:15:00.654332	11	OUTPUTS A3	C:\Faultlib\910918.141500646000.+3S.EX
EXAMPLE 69 KV LINE - SEL121	SEL 121C	A	09/18/1991	14:15:00.654332	7	OUTPUTS TP	C:\Faultlib\910918.141500646000.+3S.EX
TPU Relay	TPU Relay	A	09/18/1991	14:15:00.658160	53	FAULT 50P-1 WDG1 1ST PH. I...	C:\Faultlib\910918.141618800000.+3S.TP
TPU Relay	TPU Relay	A	09/18/1991	14:15:00.658160	33	PICKUP 87T DIFFERENTIAL O...	C:\Faultlib\910918.141618800000.+3S.TP
TPU Relay	TPU Relay	A	09/18/1991	14:15:00.662320	49	FAULT 87T DIFFERENTIAL OV...	C:\Faultlib\910918.141618800000.+3S.TP
TPU Relay	TPU Relay	N	09/18/1991	14:15:00.662320	20	OUTPUT STATUS BIT, 2ND HA...	C:\Faultlib\910918.141618800000.+3S.TP
TPU Relay	TPU Relay	A	09/18/1991	14:15:00.662320	17	OUTPUT STATUS BIT, TRIP	C:\Faultlib\910918.141618800000.+3S.TP
EXAMPLE 69 KV LINE - SEL121	SEL 121C	N	09/18/1991	14:15:00.666830	18	INPUTS 52A	C:\Faultlib\910918.141500646000.+3S.EX
MARTIN DAM	DAU 71	N	09/18/1991	14:15:00.702776	35	CROOK CRK/BREMEN RES AMP	C:\Faultlib\7108Q1EF.063
MARTIN DAM	DAU 71	N	09/18/1991	14:15:00.703736	34	HARRIS DAM RES. AMPS	C:\Faultlib\7108Q1EF.063
MARTIN DAM	DAU 71	N	09/18/1991	14:15:00.703736	33	SYLACAUGA RES. AMPS	C:\Faultlib\7108Q1EF.063
MARTIN DAM	DAU 72	N	09/18/1991	14:15:00.707768	34	MPT NEUTRAL AMPS	C:\Faultlib\7208Q1EF.063

Figure 4.37 SOE List

GENERATING SEQUENCE OF EVENTS (SOE) SUMMARIES

To generate a summary of the sequence of events for multiple waveform files, mark all the desired files then Select the "SOE Summary" menu option from the "Reports" submenu under the "Options" menu. A table listing a summary of all the events triggered in the selected files is displayed. Refer to Figure 4.38. The table is sorted according to date and time. The columns listed in the table include:

- Substation: The substation that triggered the event/sensor.
- Device: The device that triggered the event/sensor.
- Fst-State: State the channel started at, A=alarm and N=normal.
- Lst-State: State the channel ended at, A=alarm and N=normal.
- Fst-Change Date: Date the channel first changed state.
- Fst-Change Time: Time the channel first changed state.
- Lst-Change Date: Date the channel last changed state.
- Lst-Change Time: Time the channel last changed state.
- Changes: Number of times the channel changed state.
- Chan #: Channel number in the file.
- Channel Title: The channel title of the event/sensor.
- File: The filename from which the event/sensors originated.

The Query section at the bottom of the table allows for searching events from specific substations, devices, and channels. To plot the file containing the specific events press <enter> or double click on the event.

Sequence of Events Summary: C:\Program Files\Borland\Delphi7\Bin\Wavewin\SOE SUMMARY.CSV											
Substation	Device	Fst...	Lst...	Fst-Change D...	Fst-Change Time	Lst-Change D...	Lst-Change Time	Ch...	Ch...	Channel Title	
MARTIN DAM	DAU 71	DAU 71	N	A	09/18/1991	14:15:00.632120	09/18/1991	14:15:00.555512	001	9	THURLOW DAM CARR XMIT
MARTIN DAM	DAU 72	DAU 72	N	N	09/18/1991	14:15:00.632888	09/18/1991	14:15:01.239428	002	11	YATES DAM CARR REC
MARTIN DAM	DAU 71	DAU 71	N	N	09/18/1991	14:15:00.633080	09/18/1991	14:15:00.703736	002	33	SYLACAUGA RES. AMPS
MARTIN DAM	DAU 71	DAU 71	N	A	09/18/1991	14:15:00.633080	09/18/1991	14:15:00.555512	001	10	THURLOW DAM CARR REC
MARTIN DAM	DAU 72	DAU 72	N	N	09/18/1991	14:15:00.633272	09/18/1991	14:15:01.156280	014	34	MPT NEUTRAL AMPS
MARTIN DAM	DAU 71	DAU 71	N	N	09/18/1991	14:15:00.634232	09/18/1991	14:15:00.703736	002	34	HARRIS DAM RES. AMPS
EXAMPLE 69 KV LINE - SEL121	SEL 121C	SEL 121C	N	N	09/18/1991	14:15:00.637668	09/18/1991	14:15:00.725154	002	1	RELAYS 50P
MARTIN DAM	DAU 72	DAU 72	N	N	09/18/1991	14:15:00.638264	09/18/1991	14:15:00.737720	002	33	115KV BUS 1 UNDERVOLTAGE
MARTIN DAM	DAU 71	DAU 71	N	N	09/18/1991	14:15:00.641144	09/18/1991	14:15:00.702776	002	35	CROOK CRK/BREMEN RES AMP
EXAMPLE 69 KV LINE - SEL121	SEL 121C	SEL 121C	N	N	09/18/1991	14:15:00.646000	09/18/1991	14:15:00.716822	002	9	OUTPUTS A1
EXAMPLE 69 KV LINE - SEL121	SEL 121C	SEL 121C	N	N	09/18/1991	14:15:00.646000	09/18/1991	14:15:00.725154	002	5	RELAYS 51N
EXAMPLE 69 KV LINE - SEL121	SEL 121C	SEL 121C	N	N	09/18/1991	14:15:00.646000	09/18/1991	14:15:00.720988	002	4	RELAYS 67N
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.649840	09/18/1991	14:15:00.030000	001	47	PICKUP 150G-2 WDG2 2ND INST. OVER
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.649840	09/18/1991	14:15:00.030000	001	45	PICKUP 50G-2 WDG2 1ST GRND. INST.
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.649840	09/18/1991	14:15:00.030000	001	43	PICKUP 51G-2 WDG2 GROUND TIME C
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.649840	09/18/1991	14:15:00.030000	001	40	PICKUP 150N-1 WDG1 2ND NET. INST.
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.649840	09/18/1991	14:15:00.030000	001	38	PICKUP 50N-1 WDG1 1ST NET. INST.
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.649840	09/18/1991	14:15:00.030000	001	36	PICKUP 51N WDG1 GROUND OVERCU
TPU Relay	TPU Relay	TPU Relay	N	N	09/18/1991	14:15:00.649840	09/18/1991	14:15:00.662320	002	20	OUTPUT STATUS BIT, 2ND HARMONIC
EXAMPLE 69 KV LINE - SEL121	SEL 121C	SEL 121C	N	N	09/18/1991	14:15:00.650166	09/18/1991	14:15:00.716822	002	6	RELAYS 51P
EXAMPLE 69 KV LINE - SEL121	SEL 121C	SEL 121C	N	N	09/18/1991	14:15:00.650166	09/18/1991	14:15:00.716822	002	3	RELAYS 21P
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.654000	09/18/1991	14:15:00.030000	001	61	FAULT 50G-2 WDG2 1ST GRND. INST.
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.654000	09/18/1991	14:15:00.030000	001	54	FAULT 50N-1 WDG1 1ST NET. INST. O
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.654000	09/18/1991	14:15:00.030000	001	42	PICKUP 51P-2 WDG2 PHASE TIME OVE
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.654000	09/18/1991	14:15:00.030000	001	37	PICKUP 50P-1 WDG1 1ST PH. INST. O
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.654000	09/18/1991	14:15:00.030000	001	35	PICKUP 51P WDG1 1ST PHASE TIME C
EXAMPLE 69 KV LINE - SEL121	SEL 121C	SEL 121C	N	N	09/18/1991	14:15:00.654332	09/18/1991	14:15:00.716822	002	11	OUTPUTS A3
EXAMPLE 69 KV LINE - SEL121	SEL 121C	SEL 121C	N	N	09/18/1991	14:15:00.654332	09/18/1991	14:15:00.720988	002	7	OUTPUTS TP
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.658160	09/18/1991	14:15:00.030000	001	53	FAULT 50P-1 WDG1 1ST PH. INST. O
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.658160	09/18/1991	14:15:00.030000	001	33	PICKUP 87T DIFFERENTIAL OVERCUR
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.662320	09/18/1991	14:15:00.030000	001	49	FAULT 87T DIFFERENTIAL OVERCUR
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.662320	09/18/1991	14:15:00.030000	001	17	OUTPUT STATUS BIT, TRIP
EXAMPLE 69 KV LINE - SEL121	SEL 121C	SEL 121C	A	N	09/18/1991	14:15:00.666830	09/18/1991	14:15:00.583510	001	18	INPUTS 52A
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.733040	09/18/1991	14:15:00.030000	001	63	FAULT 150G-2 WDG2 2ND INST. OVER
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.733040	09/18/1991	14:15:00.030000	001	56	FAULT 150N-1 WDG1 2ND NET. INST.
TPU Relay	TPU Relay	TPU Relay	N	A	09/18/1991	14:15:00.966000	09/18/1991	14:15:00.030000	001	18	OUTPUT STATUS BIT, BREAKER FAIL

Figure 4.38 SOE Summary

APPENDING LOG FILES

The Appending Log features combine an unlimited number of CSV log files into one file. The files must be marked and of the same type (generated from the same device). The generated combined file can be displayed in a table or plotted in the log data viewer. This feature allows for analyzing load data over a long period.

COMBINING LOG FILES

The Combine Log feature combines an unlimited number of CSV log files into one file. The files must be marked and can be from different file types (generated from different devices). The substation and device of each file is added in the file. The saved file is displayed in a table. This feature allows for analyzing load data over a long period for different devices.

VIEWING CAD-DXF FILES

The CAD-DXF Viewer reads and displays the contents of a Drawing Exchange Format (DXF) file. Refer to Figure 4.39. DXF files can be created using an off-the-shelf program such as AutoCAD, Turbo CAD, Technical Visio, Drafix, or MEDUSA. To view a DXF file double click the mouse button on the DXF filename. The viewer allows for opening and closing of DXF files, changing display resolution, setting zoom ratio, and selecting background color. It also provides zooming and printing capabilities.

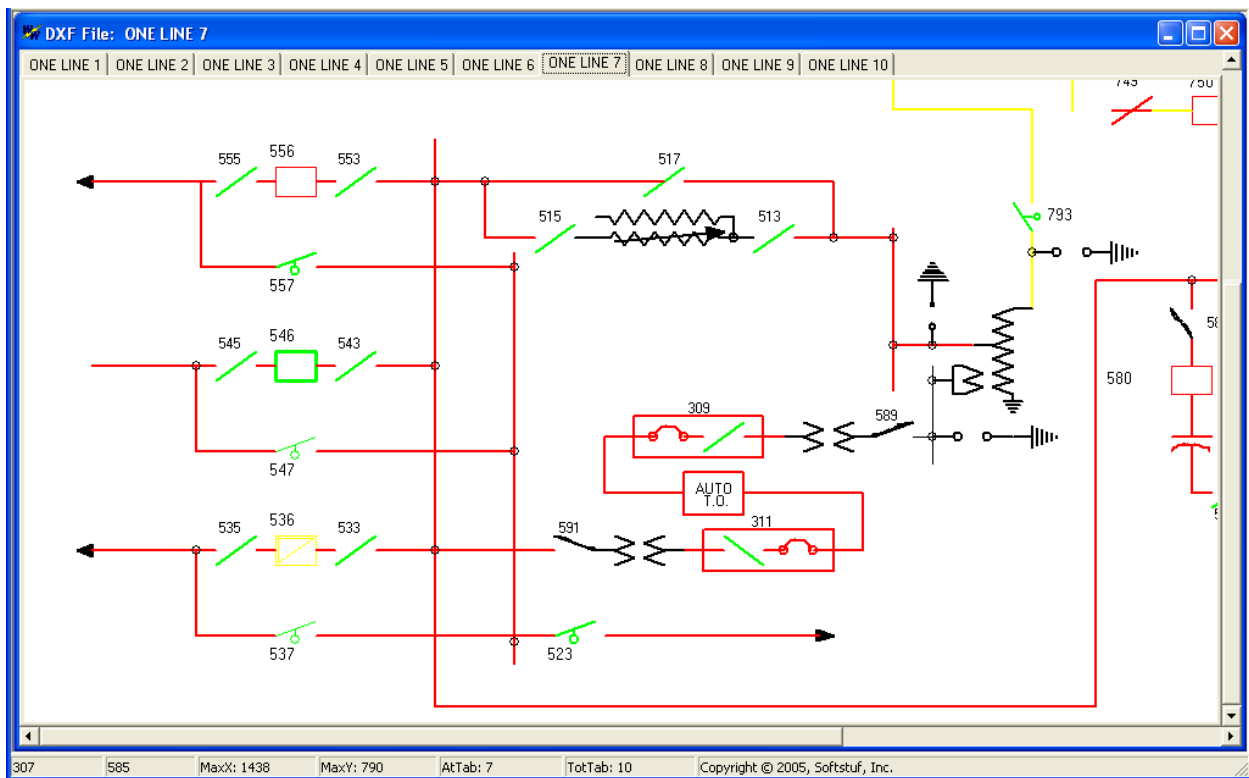






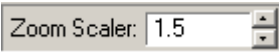



Figure 4.39 DXF Viewer

The status bar at the bottom of the screen displays the X and Y coordinates of the mouse position, the maximum X and Y coordinates of the drawing, the active tab number and the total number of tabs in the window. Refer to Figure 4.39. To zoom in or out use the **Zoom In**  and **Zoom Out**  menu buttons. To view the drawing in its original size click the **Original Display**  menu button, or click the **Fit to Window**  menu button to resize the drawing to fit in the window. Use the **Open File**  menu button to add DXF files to the window. Click on the **Close File**  menu button to close an open DXF file.

The Zoom Scalar selectable box  is used to increase or decrease the drawing's display resolution. For example, when the Zoom In feature is activated the drawing's X and Y resolution values are multiplied by the Zoom IN/OUT Ratio to increase the resolution. When the Zoom Out feature is activated the drawing's X and Y resolution values are divided by the Zoom IN/OUT Ratio to decrease the resolution.

The **Const**  menu button allows for changing the file, the drawing's display resolution, and the background color. Refer to Figure 4.40. The dialog fields are described below:

Field	Description
File Name	The path and the DXF filename. Default: Empty. Use the Browse button to browse for a file.
Background Color	The background color for the displayed DXF file. Default: White.
Max X Pixels	The maximum number of X pixels used to display the DXF file. Enter an integer value.
Max Y Pixels	The maximum number of Y pixels used to display the DXF file. Enter an integer value.

Use the tab or shift+tab keys to navigate between fields and the up and down arrow keys to view the selectable options. Click **Apply** to view the changes, **OK** to accept the changes, or **Cancel** to terminate the changes.

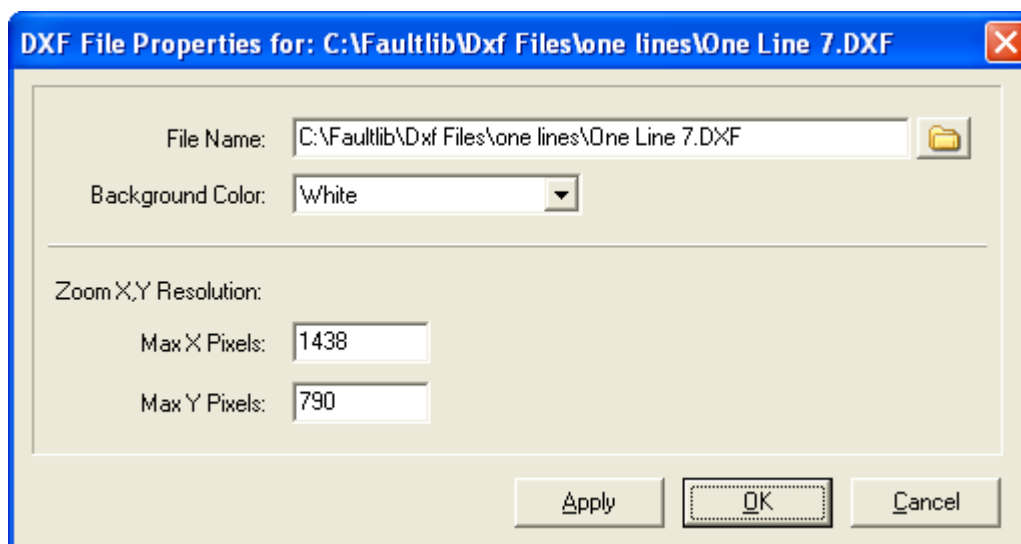


Figure 4.40 DXF Drawing Constants

VIEWING ASCII FILES IN DATABASE FORMAT

The database viewer provides an effective way to organize, sort, and search comma delimited, double quoted comma delimited, or tab delimited text files. Refer to Figure 4.41. The data is presented in tabular form, and an unlimited number of rows and columns can be displayed. The viewer allows for intelligent queries, column sorting, selecting and grouping data, row deletion, printing, saving and saving in a new file.

Use the column headers to sort the data in ascending or descending order and the query fields to search the data. Refer to the "Querying Files" section for more information. To browse the data use the up, down, right, left, page-up, page-down, home, end, ctrl+home, and ctrl+end keys or use the scroll bars. Rows must be marked in order to delete them from the table.

The database viewer is useful for processing COMTRADE data files, employing under triggers and over triggers, locating instantaneous maximum and minimum peak values and analyzing load information.

Text Table: C:\Faultlib\000508,123456789,-55,DESSEX SUBSTATION,501 REL,Electric Power,000001270,ACG.DAT

1	2	3	4	5	6	7	8	9	10	11	12	13	14
000000000	000000000	022017	016732	010391	017555	016822	014744	016381	016377	016374	016375	016385	016376
000000001	000000833	020894	018444	009814	017206	017214	014694	016383	016378	016375	016379	016388	016373
000000002	000001666	019453	020030	009673	016798	017553	014765	016386	016376	016373	016378	016385	016376
000000003	000002500	017815	021351	009998	016362	017817	014937	016382	016377	016377	016379	016385	016374
000000004	000003333	016075	022345	010751	015930	017977	015210	016385	016377	016379	016381	016389	016377
000000005	000004166	014357	022930	011890	015530	018029	015561	016383	016380	016375	016378	016385	016378
000000006	000005000	012771	023070	013334	015184	017966	015969	016383	016379	016377	016380	016386	016374
000000007	000005833	011429	022750	014988	014919	017793	016398	016383	016378	016374	016378	016384	016372
000000008	000006666	010425	021992	016739	014752	017522	016837	016377	016377	016375	016379	016385	016376
000000009	000007500	009829	020859	018452	014703	017177	017235	016381	016378	016376	016379	016385	016373
000000010	000008333	009683	019406	020036	014762	016769	017572	016377	016378	016375	016379	016383	016374
000000011	000009166	009992	017764	021359	014937	016344	017831	016380	016373	016376	016377	016384	016372
000000012	000010000	010736	016024	022356	015209	015914	017993	016378	016376	016372	016377	016386	016371
000000013	000010833	011862	014309	022941	015558	015519	018040	016378	016373	016375	016378	016382	016374
000000014	000011666	013304	012727	023079	015966	015178	017972	016381	016376	016372	016377	016382	016374
000000015	000012500	014941	011400	022756	016402	014922	017796	016376	016372	016373	016376	016378	016372
000000016	000013333	016682	010404	022000	016833	014758	017526	016378	016375	016372	016374	016379	016369
000000017	000014166	018399	009822	020858	017232	014703	017178	016379	016375	016372	016372	016379	016369
000000018	000015000	019989	009683	019415	017582	014768	016772	016378	016375	016372	016376	016381	016372
000000019	000015833	021327	010000	017765	017843	014941	016338	016383	016376	016375	016376	016381	016373
000000020	000016666	022328	010750	016025	018010	015206	015906	016383	016375	016374	016374	016382	016371
000000021	000017500	022925	011886	014307	018062	015551	015506	016383	016375	016373	016375	016383	016369
000000022	000018333	023075	013332	012720	018001	015959	015168	016383	016376	016376	016374	016384	016375
000000023	000019166	022768	014978	011394	017826	016387	014913	016386	016376	016376	016378	016383	016374
000000024	000020000	022019	016726	010395	017555	016818	014746	016383	016375	016375	016378	016384	016374
000000025	000020833	020896	018438	009813	017209	017213	014695	016383	016375	016374	016375	016385	016374
000000026	000021666	019459	020024	009678	016798	017553	014765	016383	016376	016376	016378	016383	016375
000000027	000022500	017818	021348	009996	016365	017816	014938	016383	016377	016377	016381	016387	016378
000000028	000023333	016078	022342	010747	015934	017976	015209	016385	016379	016377	016381	016387	016378
000000029	000024166	014362	022927	011887	015533	018028	015561	016384	016376	016378	016379	016387	016377
000000030	000025000	012774	023068	013332	015186	017966	015969	016383	016379	016375	016379	016385	016376
000000031	000025833	011433	022751	014982	014920	017792	016397	016383	016376	016377	016379	016386	016378
000000032	000026666	010427	021996	016733	014752	017524	016834	016382	016377	016377	016382	016385	016374
000000033	000027500	009831	020858	018444	014702	017175	017232	016379	016376	016377	016378	016383	016375
000000034	000028333	009681	019414	020031	014764	016770	017572	016379	016374	016372	016377	016384	016371
000000035	000029166	009991	017766	021354	014933	016342	017830	016376	016373	016373	016376	016382	016371
000000036	000030000	010735	016028	022355	015208	015914	017992	016378	016374	016374	016378	016384	016371
000000037	000030833	011860	014311	022940	015556	015518	018040	016378	016376	016375	016378	016383	016372
=	=	=	=	=	=	=	=	=	=	=	=	=	=

Figure 4.41 Database Viewer

SHOW/HIDE CHANNEL TITLES

The data plotting window automatically hides channels that contain certain characters in the channel title. Below is a list of the characters defined as invalid channels when a file is displayed.

- UNUSE
- UNDEF
- NOT D
- NOT U
- NOT I
- NOT A
- {
- N/A
- ANALOG INPUT
- UNTITLED
- ANALOG CHANNEL
- EXTERNAL INPUT
- EVENT CHANNEL
- CHANNEL:
- DIGITAL TRACE #
- SPARE

If a channel title contains the above characters in the beginning of an analog or digital channel title the channel is automatically hidden. These characters can be modified to show a channel when a file is displayed. To show a title that contains the above characters select the “Show/Hide Channel Titles...” menu option under the “Options” menu. Refer to Figure 4.42.

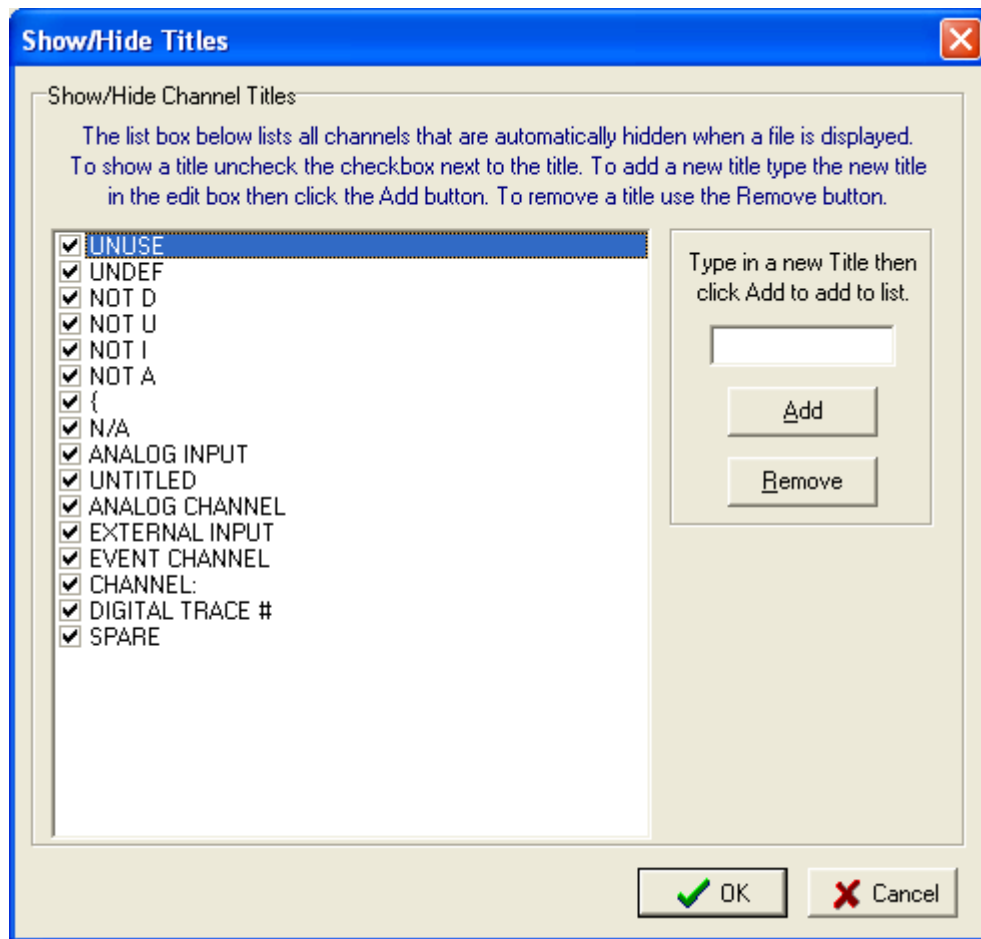


Figure 4.42 Show/Hide Channel Titles Dialog

To show a title, uncheck the checkbox next to the displayed invalid channel title. To remove a title from the list select the title in the list box then click the “Remove” button or press the delete key. To add a new title, first type the new title in the edit box then click the “Add” button. The new title is added to the end of the list with the checkbox automatically checked.

QUERYING FILES

The query fields are used to search for specific information in the table. Query fields are located below the table. Refer to Figure 4.43. Use the tab key to move the cursor from the table to the query fields and up arrow to return to the table. The Ctrl-left/right keys moves between the query fields. Each field contains a criteria and an operator. The criteria is directly entered from the keyboard, and may include the “*” and “?” wild cards. Operators are located above the criteria fields and can be changed by clicking the mouse button on the operator symbol or by pressing the F9 key. The selectable options include equal to (=), less than (<), and greater than (>).

[illegible]

Figure 4.43 Query Fields

When a query is launched, the engine numerically compares the criteria with the information in the table. If numerical comparison is not possible, symbolic comparison is performed. When multiple fields are defined, the engine searches for a match on the first field “AND” on the second field “AND” on the third field and so on.

Three query options are available: Query All Files, Query Marked Files, or Query Unmarked Files. Files that meet the specified query requirements are marked, grouped, and displayed at the top of the table. Use the tab and shift-tab keys to navigate through the query fields and the <enter> key to process the criteria at the cursor position.

DSITURBANCE REPORT

The disturbance report feature creates a comma delimited file that contains the following information for each file processed (if available in the file):

- Utility Name,
- Device Name (Fault),
- File Start Date & Time,
- Substation Name,
- Report Date,
- Faulted Phase,
- Fault Location,
- Line Length,
- Fault Current,
- Maximum Voltage,
- Maximum Frequency,
- Minimum Frequency,
- Pass/Fail,
- Passed Filters and the
- Source file's folder and filename.

The disturbance report dialog allows for setting the report's destination folder and filename. It also allows for setting the folder(s) where the event files are located. The filter section is for setting filter levels for the Faulted Phase, Fault Location, Current and Voltage thresholds and the deviation for the frequency.

To open the disturbance report dialog, open the “Options” menu in the file manager’s table, select the “Report” submenu then click on the “Disturbance Report” menu option. Refer to Figure 4.44.

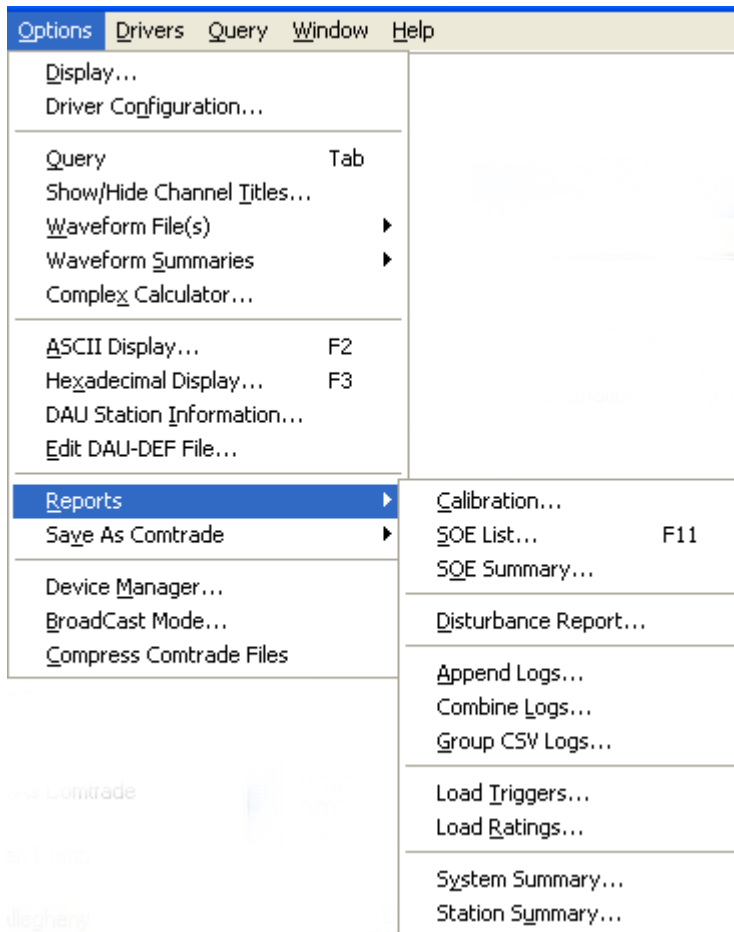


Figure 4.44 Disturbance Report Menu

The disturbance report dialog is displayed when the “Disturbance Report” option is selected. Refer to Figure 4.45.

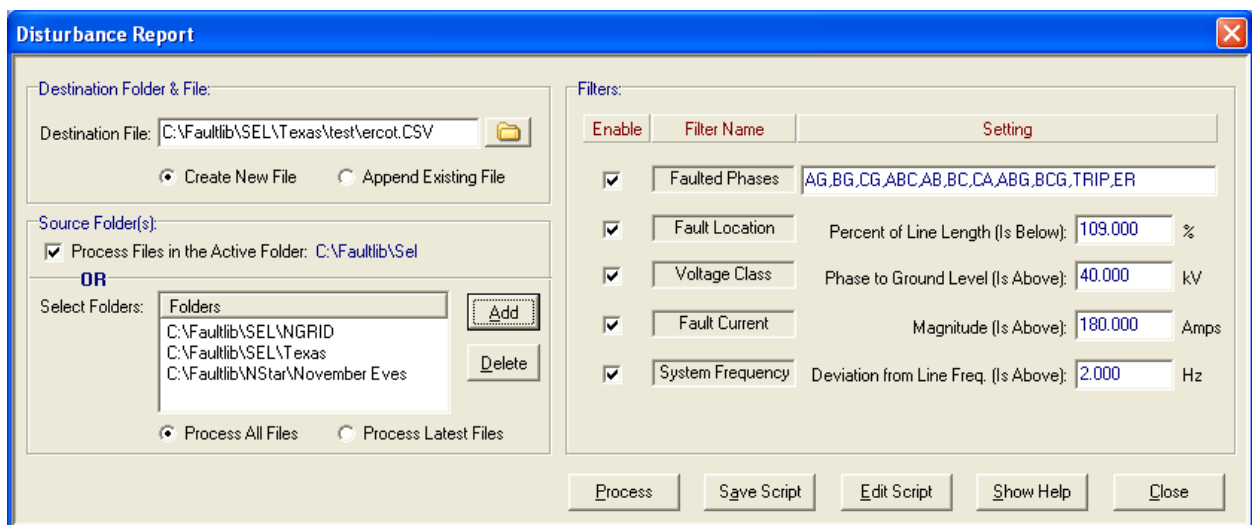


Figure 4.45 Disturbance Report Dialog

The disturbance dialog has 3 sections: Destination Folder & File, Source Folder(s) and Filters. Each section is explained below along with the functions for each button.

DESTINATION FOLDER & FILE:

The Destination Folder & File section is used to set the disturbance report folder & filename. Type the drive, folder and filename into the "Destination File:" field or use the Browse button to locate an existing file or for creating a new file and/or folder. Refer to Figure 4.46.

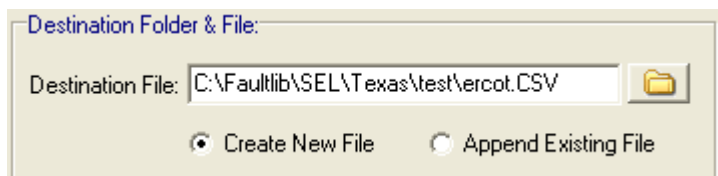


Figure 4.46 Disturbance Report: Destination Folder & File

To save the disturbance information to a new file, click the "Create New File" radio button. This option will clear the file before processing the event files. To append the disturbance information to the end of an existing file, click the "Append Existing File" radio button.

FOLDERS:

The Folders section is used for defining where the event files are located. To process files located in the File Manager's active folder check the "Process Files in the Active Folder" check box. If files are marked in the active folder, then this feature will process only the marked event files. If there are no marked files then all the event files are processed.

If the event files are located in different folders then use the "Add" button to add a folder to the Source Folder list. To remove a folder from the list, use the "Delete" button. Refer to Figure 4.47.

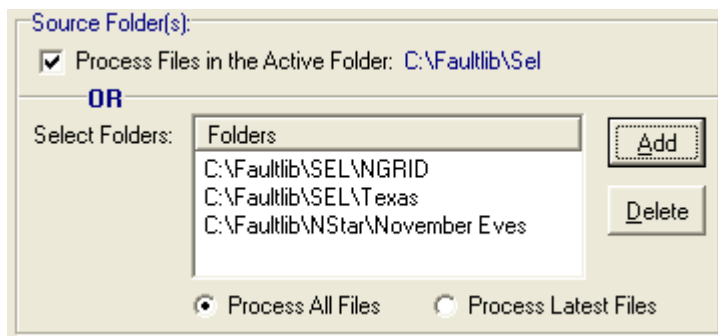


Figure 4.47 Disturbance Report: Source Folder(s)

FILTERS:

The Filters section is used to define the faulted phases, the filter levels for the fault location, voltage class and fault current levels. It also, defines the deviation of the maximum and minimum frequency values from the Line Frequency. Refer to Figure 4.48.

Filters:

Enable	Filter Name	Setting
<input checked="" type="checkbox"/>	Faulted Phases	AG,BG,CG,ABC,AB,BC,CA,ABG,BCG,TRIP,ER
<input checked="" type="checkbox"/>	Fault Location	Percent of Line Length (Is Below): 109.000 %
<input checked="" type="checkbox"/>	Voltage Class	Phase to Ground Level (Is Above): 40.000 kV
<input checked="" type="checkbox"/>	Fault Current	Magnitude (Is Above): 180.000 Amps
<input checked="" type="checkbox"/>	System Frequency	Deviation from Line Freq. (Is Above): 2.000 Hz

Figure 4.48 Disturbance Report: Filters

After the filters are applied to the data file the file will be tagged with a PASS or FAIL. A PASS means that the file's fault type exists in the list AND the fault location is within the entered percentage of the line length AND the fault current is above the entered fault current value AND the voltage class is above the entered voltage class value OR the maximum or minimum frequency is above the entered deviation from the line frequency. The calculations used are listed below:

For files with no Voltage Channels a PASS Equals:

Faulted Phase is in the List of Filter Phase Settings

AND

Maximum Fault Current is > Entered Fault Current Filter

OR

|Maximum/Minimum Frequency Value - Line Frequency| is > Entered Filter Deviation Value

For files with Voltage Channels a PASS Equals:

Faulted Phase is in the List of Filter Phase Settings

AND

Fault Location is < Entered % of the Line Length

AND

Maximum Voltage Value is > Entered Voltage Class Filter

AND

Maximum Fault Current is > Entered Fault Current Filter

OR

|Maximum/Minimum Frequency Value - Line Frequency| is > Enter Filter Deviation Value

Each file in the report also lists the filters that triggered. The 5 columns to the right of the PASS/FAIL column list the filters that triggered. Each column is labeled according to the filter:

P = Faulted Phase Filter

L = Fault Location Filter

C = Current Filter

V = Voltage Filter

F = Frequency Filter

If a filter triggers then the filter letter is displayed in the columns otherwise it is left blank. Refer to Figure 4.49.

Text Table: C:\Faultlib\SEL\Texas\test\ercot.CSV

Comm...	Phase	Fault Loca...	Line Len...	Fault Current	kV	Max Freq	Min Freq	Pass/F...	P	L	C	V	F
TRIP1				4.410	N/A								C:\Faultlib\Selfwashchg.sel
BG	11.99	5.44	1464.000	20.500	60.040	59.980	FAIL	P					C:\Faultlib\SelN001130.150642055.5S.SEL-CKT 407
BG	11.99	15.44	1464.000	20.500	60.040	59.980	FAIL	P					C:\Faultlib\SelN001130.150642055.5S.SEL-CKT 407
CG T	\$\$\$	999.00	4485.000	36.400	60.160	59.620	FAIL	P					C:\Faultlib\SelN040219.062250673.5A.OC & BKR FAI
CG T	-86.00	28.41	307.000	66.000	60.000	60.000	FAIL	P				V	C:\Faultlib\SelLanexa 92 CarGnd SEL-351-C.cev
ABG	\$\$\$	0.10	7162.000	0.000	60.000	60.000	FAIL	P					C:\Faultlib\SelMidlothian 440 SEL-351-C 30cy.cev
TRIG	\$\$\$	100.00	201.000	133.030	60.000	60.000	FAIL	P				V	C:\Faultlib\SelSEL-421 CEV.cev
ER	\$\$\$	999.00	1604.000	0.000	60.000	60.000	FAIL	P					C:\Faultlib\SelShawboro BF SEL-351-C.cev
BG T	1.00	4025.000	6290.000	N/A	FAIL							V	C:\Faultlib\SelN011213.09223880.6A.No Montgomery
AG T	2.65	2.00	4025.000	6290.000	N/A	FAIL						V	C:\Faultlib\SelN011213.09223880.6A.No Montgomery
AC T	4.32	3.00	4025.000	6290.000	N/A	FAIL						V	C:\Faultlib\SelN011213.09223880.6A.No Montgomery
CG T	\$\$\$	99.00	4343.000	34.700	60.160	59.620	FAIL	P					C:\Faultlib\SelN040219.062250673.5A.OC & BKR FAI
AG T	\$\$\$	299.00	4343.000	34.700	60.160	59.620	FAIL	P					C:\Faultlib\SelN040219.062250673.5A.OC & BKR FAI
AB T	\$\$\$	999.00	4343.000	34.700	60.160	59.620	FAIL	P					C:\Faultlib\SelN040219.062250673.5A.OC & BKR FAI
AG T	+19.53	35.45	13463.000	355.000	60.0	N/A	PASS	P	L			V	C:\Faultlib\SelN040714.014403846000.D0UBS-BRIG
CG T	32.39	48.77	3238.000	134.100	60.01	N/A	PASS	P	L			V	C:\Faultlib\Sel200918.132426980.4A.Line Protector
CG T	30.26	48.77	3595.000	127.900	60.00	N/A	PASS	P	L			V	C:\Faultlib\Sel200918.132443600.4A.Line Protector
CG T	44.90	48.77	2235.000	133.100	60.00	N/A	PASS	P	L			V	C:\Faultlib\Sel200918.132552382.4A.Line Protector
AG	+137.6	28.92	1386.000	204.400	60.0	N/A	FAIL	P				V	C:\Faultlib\Sel330EVENT11.EVE
AG	+137.6	28.92	1467.000	206.000	60.0	N/A	FAIL	P				V	C:\Faultlib\Sel330EVENT11.L.EVE
AG	+137.6	28.92	1449.000	205.400	60.0	N/A	FAIL	P				V	C:\Faultlib\Sel330EVENT11.R.EVE
AG	+137.6	28.92	1449.000	205.400	60.0	N/A	FAIL	P				V	C:\Faultlib\Sel330EVENT11.U.EVE
BG T	7.75	7.50	1993.000	21.500	60.01	N/A	FAIL	P					C:\Faultlib\SelBartonville_TN_BU_Fault1.EVE
BG T	7.72	7.50	1996.000	21.500	60.01	N/A	FAIL	P					C:\Faultlib\SelBartonville_TN_PRI_Fault1.EVE
CG	+36.50	100.00	5424.000	323.400	60.0	N/A	PASS	P	L			V	C:\Faultlib\SelBELMONT-KAMMER765 SEL 321 BU
BG	11.99	5.44	1464.000	20.500	60.040	59.980	FAIL	P					C:\Faultlib\SelCranesCorner Dist SEL-351-Long.eve
BG	11.99	5.44	1464.000	20.500	60.040	59.980	FAIL	P					C:\Faultlib\SelCranesCorner Dist SEL-351-Short.eve
CG T	-86.00	28.41	307.000	66.000	60.000	60.000	FAIL	P				V	C:\Faultlib\SelLanexa 92 CarGnd SEL-351-Long.eve
CG T	-86.00	28.41	302.000	65.900	60.000	60.000	FAIL	P				V	C:\Faultlib\SelLanexa 92 CarGnd SEL-351-Short.eve
ABG	\$\$\$	0.10	7162.000	0.000	60.000	60.000	FAIL	P					C:\Faultlib\SelMidlothian 440 SEL-351-Long 30cy.eve
ABG	\$\$\$	0.10	6648.000	0.000	60.000	60.000	FAIL	P					C:\Faultlib\SelMidlothian 440 SEL-351-Short 30cy.eve
TRIP			N/A	153.090	N/A		FAIL	P				V	C:\Faultlib\SelMorrisville Cap 1-3-01 Trip 1.eve
TRIP			N/A	153.090	N/A		FAIL	P				V	C:\Faultlib\SelMorrisville Cap 1-3-01 Trip 1.eve
BG	18.19	3.31	3986.000	21.700	61.050	58.930	FAIL	P					C:\Faultlib\SelMt Road 475 1-7-01 Comp.eve
ABC T	3.67	3.31	3986.000	21.700	61.050	58.930	FAIL	P					C:\Faultlib\SelMt Road 475 1-7-01 Comp.eve
BCG	3.57	3.31	3986.000	21.700	61.050	58.930	FAIL	P					C:\Faultlib\SelMt Road 475 1-7-01 Comp.eve
AG	4.45	3.31	3986.000	21.700	61.050	58.930	FAIL	P					C:\Faultlib\SelMt Road 475 1-7-01 Comp.eve
ER	\$\$\$	3.31	3986.000	21.700	61.050	58.930	FAIL	P					C:\Faultlib\SelMt Road 475 1-7-01 Comp.eve

Total Rows: 212 AtRow: 1 TotMarks: 0 Sort Field: Utility

Figure 4.49 Disturbance Report

The “Process” button starts the disturbance report. Once started the Disturbance dialog is closed and each file is processed. The progress bar displayed in the button speed bar is updated according to the number of files to process and the current file being processed.

When the processing is complete a comma delimited table is displayed. Refer to Figure 4.49. The comma delimited table allows for sorting each column by clicking on the column’s header. The query section located below the table allows for quickly searching for specific files. Also, the processed files can be displayed by double clicking on a row or moving the table cursor to the row and pressing enter. The file will be displayed in the analysis window. Refer to Figure 4.50.

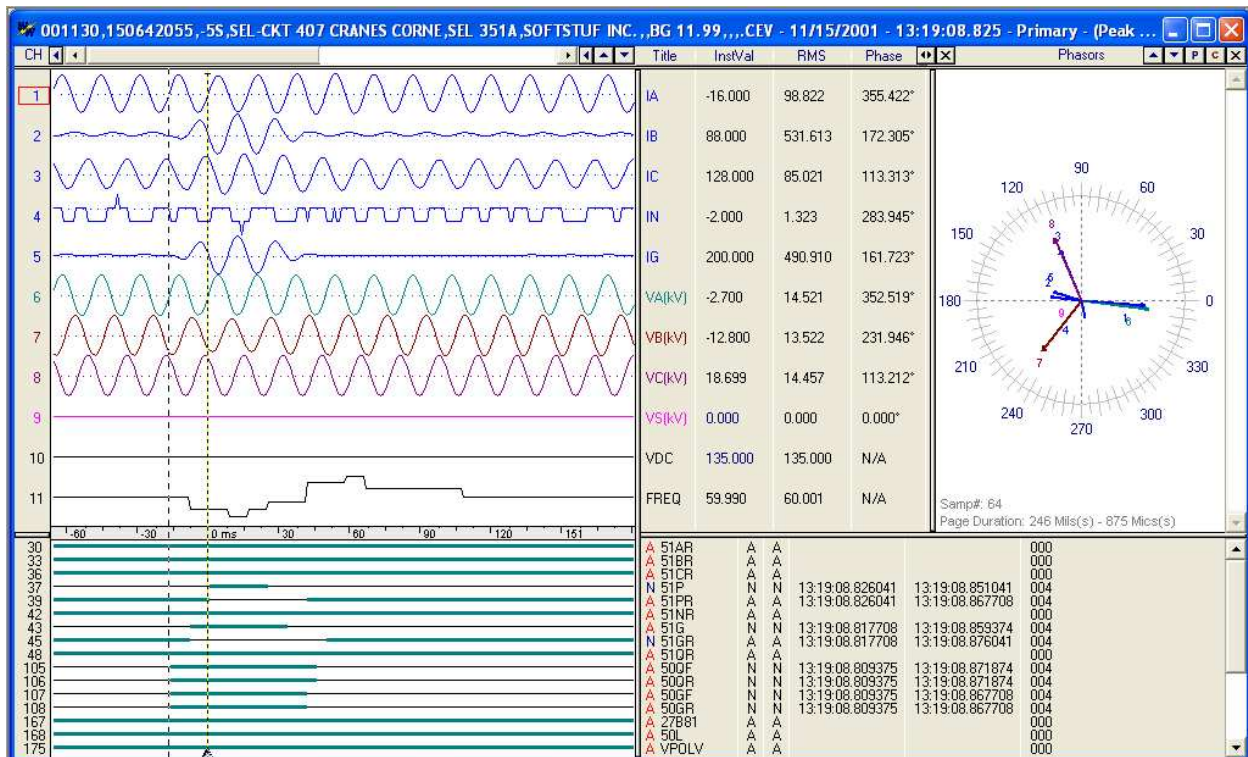


Figure 4.50 Disturbance Display File

BUTTONS:

There are 5 buttons displayed at the bottom of the disturbance dialog. Each button is explained below:

1. **Process Button:** The process button starts the disturbance report. The dialog is closed and each file is processed. The progress bar displayed in the button speed bar is updated according to the number of files to process and what file is currently being processed.
2. **Save Script:** All the information displayed in the dialog is saved in a script file located in the folder where Wavewin is located. The file is called: Disturbance.ini. A message box is displayed confirming that the information has been saved. The dialog information is also saved to the Disturbance.ini file when the "Process" button is clicked.
3. **Edit Script:** The edit script button closes the dialog and displays the Disturbance.ini file in the ASCII editor.
4. **Show Help:** The show help button displays the help information in a note pad below the buttons. The window size is increased to show the note pad. When the help window is displayed the "Show Help" button's text changes to "Hide Help". To hide the help window click on "Hide Help".
5. **Close:** Close the dialog without saving the entered information.

C H A P T E R 5

Analysis Quick Start

This chapter describes the main features of the Analysis Display.

Analysis Features

The Analysis Display offers a high-resolution graphical interface for displaying, analyzing, and manipulating analog and digital channels of an oscillography record or a periodic load file. Refer to Figure 5.1. Displayed channels can be marked, merged, appended, moved, zoomed, removed, restored, superimposed, scaled, numerically processed, and summarized. A maximum of ten data windows can be opened at one time.

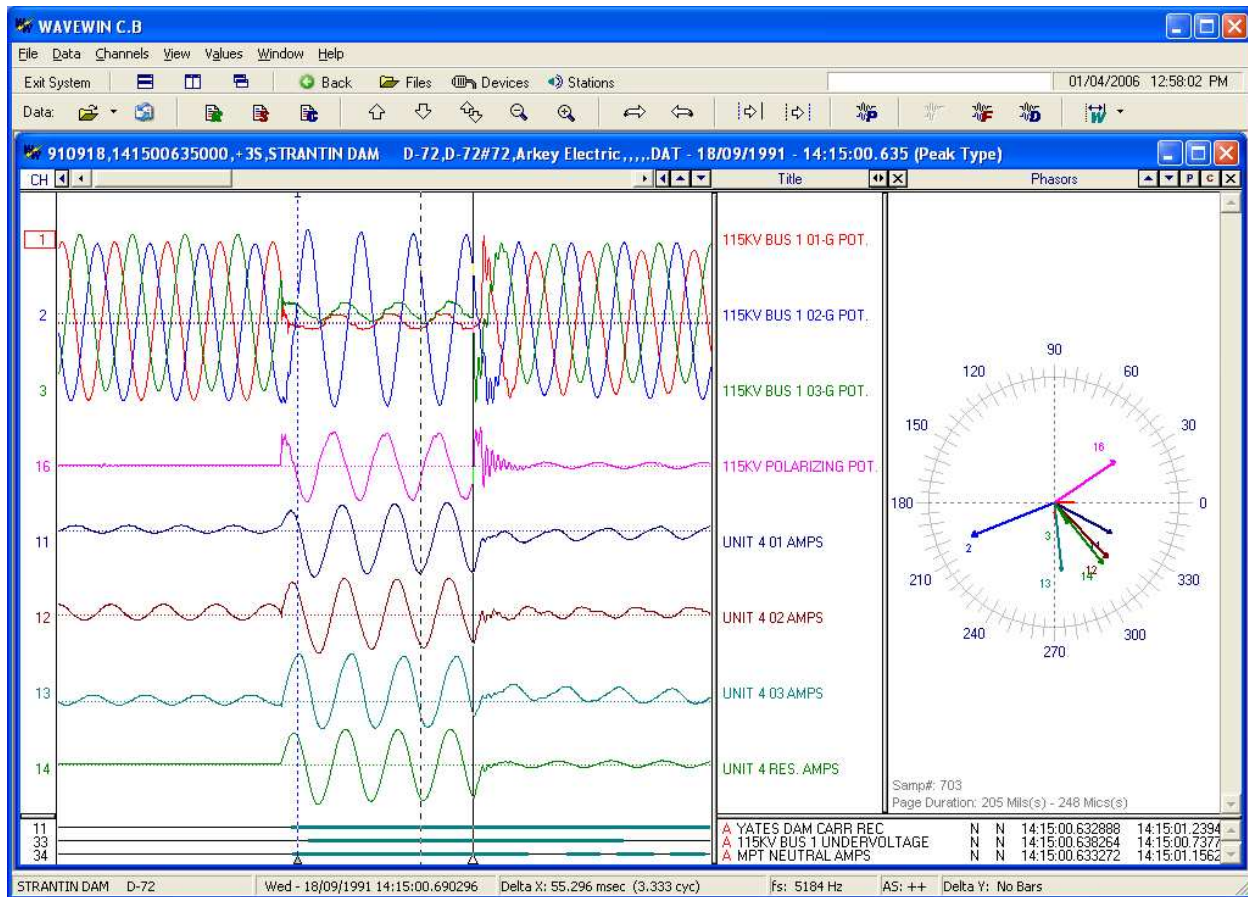




Figure 5.1 Analysis Display

The Analysis Display contains two sections: the analog view and the digital view. The analog view plots the oscillography or load data. Some of the values displayed are the channel's highest peak, RMS, phase, reference, instantaneous, maximum, and minimum values. The cursor bars are used to view the data values. The digital view plots the events and sensors and displays the channel's original state, the channel's final state, time of the first change, time of the last change, and the number of times the channel changed state.

Up to 256 analog and 1024 digital channels can be displayed. The main features are described below.

PHASORS

The phasor diagram shows a vector for each visible analog channel. The diagram is displayed to the right of the analog information window. Refer to Figure 5.1. To increase or decrease the size of the phasor window place the cursor over the vertical separator between the analog information window and the phasor window and drag the mouse to the left to increase or to the right to decrease. To close the phasor window click the close button located in the header. To navigate the phase angles use the left arrow, right arrow, home, end, page up and page down keys or the data scroll bar. To increase/decrease the length of a channel's vector, mark the channel and use the increase/decrease amplitude menu buttons or the Ctrl-Up and Ctrl-Down keys. To increase/decrease only the length of the vectors, use the up and down phasor buttons. 

To toggle between the phasor display and the circular chart display click the “P” button above the phasor display for phasors or the “C” button for a circular chart. 

There are two types of phasor displays: non-referenced and referenced. Refer to Figure 5.2. The non-referenced display shows the phase angle for each sample in the display. The reference display shows the phase angle for each sample with respect to the reference channel. The reference channel is the first marked channel in the window. All angles at a sample are subtracted from the reference angle. If there are no marked channels the non-referenced display is shown.

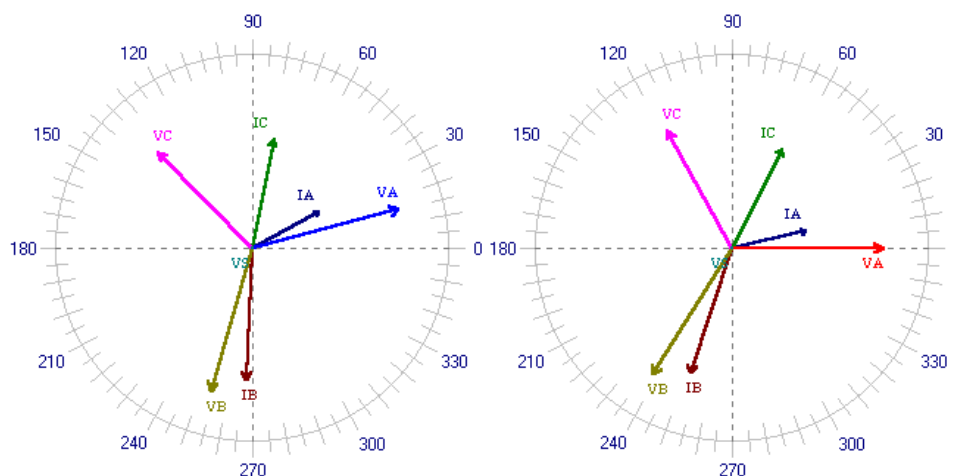


Figure 5.2 (a) Non-Referenced Phasors


(b) Referenced Phasors

HARMONICS

The harmonics window displays as many harmonics as possible based on the file's sampling frequency. A maximum of 200 harmonics can be displayed in the table. Refer to Figure 5.4. To display the harmonics window right click in the phasor diagram or in the analog information section and select the Harmonics menu option. The harmonics window displays the first marked analog channel or if no channels are marked, the first visible channel. Changing the marked channel in the data plotting window will update the harmonics window with the appropriate channel.

The harmonic calculation is performed on one cycle of data, starting at the RMS bar and going forward to the data bar. There are three fields displayed at the bottom of the harmonics table and histogram; TrueRMS, CalculatedRMS and Total Harmonic Distortion (THD). The TrueRMS field displays the RMS value calculated by using the samples in the active cycle displayed in the waveform trace window. The CalculatedRMS field displays the square root of the summation of the squares of the DFT Magnitudes from harmonics 2 to the maximum harmonic divided by square root of 2. The THD field displays the

square root of the summation of the squares of the DFT Magnitudes from harmonics 2 to the maximum harmonic and that quantity divided by the DFT Magnitude of the Fundamental.

The harmonics can be viewed in a table format or in a histogram. Click on the harmonics toggle button  to change the view. Refer to Figure 5.5. The histogram can show only one column from the table. To change the data displayed click the histogram drop down menu and select the column. Refer to Figure 5.3. The default view is the % of Fundamental.

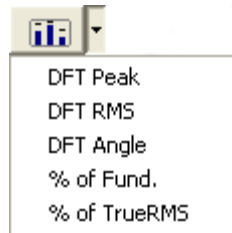




Figure 5.3 Histogram Drop Down Menu

The harmonic histogram bars can be resized using the resize up and down arrows  to display more or less harmonics in the window. The text displayed above the histogram bars can be shown or hidden by clicking on the Show/Hide text bar button . The harmonics window can be resized by dragging the edge of the window to show more or less harmonics per window.

Also, a vector for each harmonic is displayed in the phasor diagram. To hide/show the harmonic vectors toggle the "Vector Harmonics" menu option under the "View" menu from checked=on to unchecked=off.

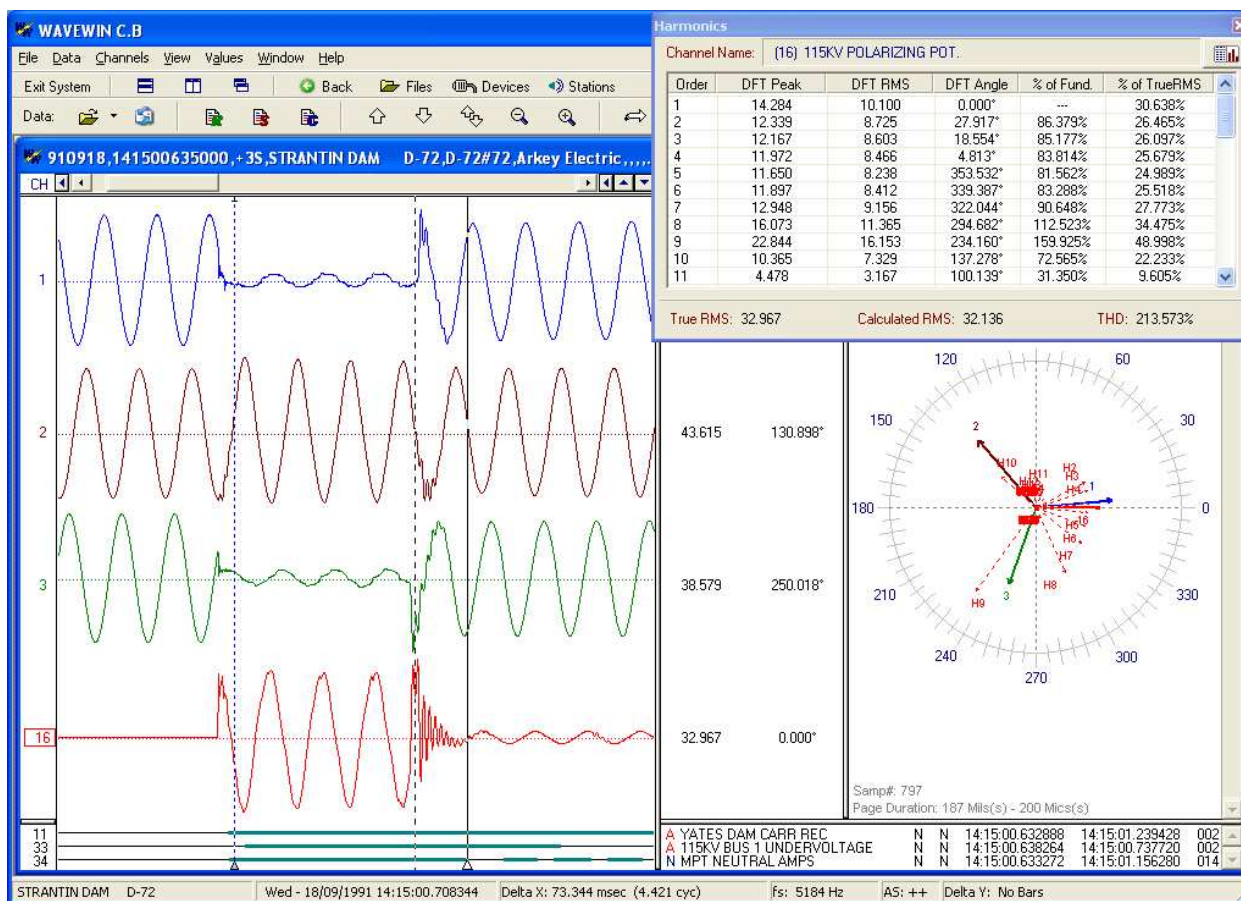


Figure 5.4 Harmonics Table View

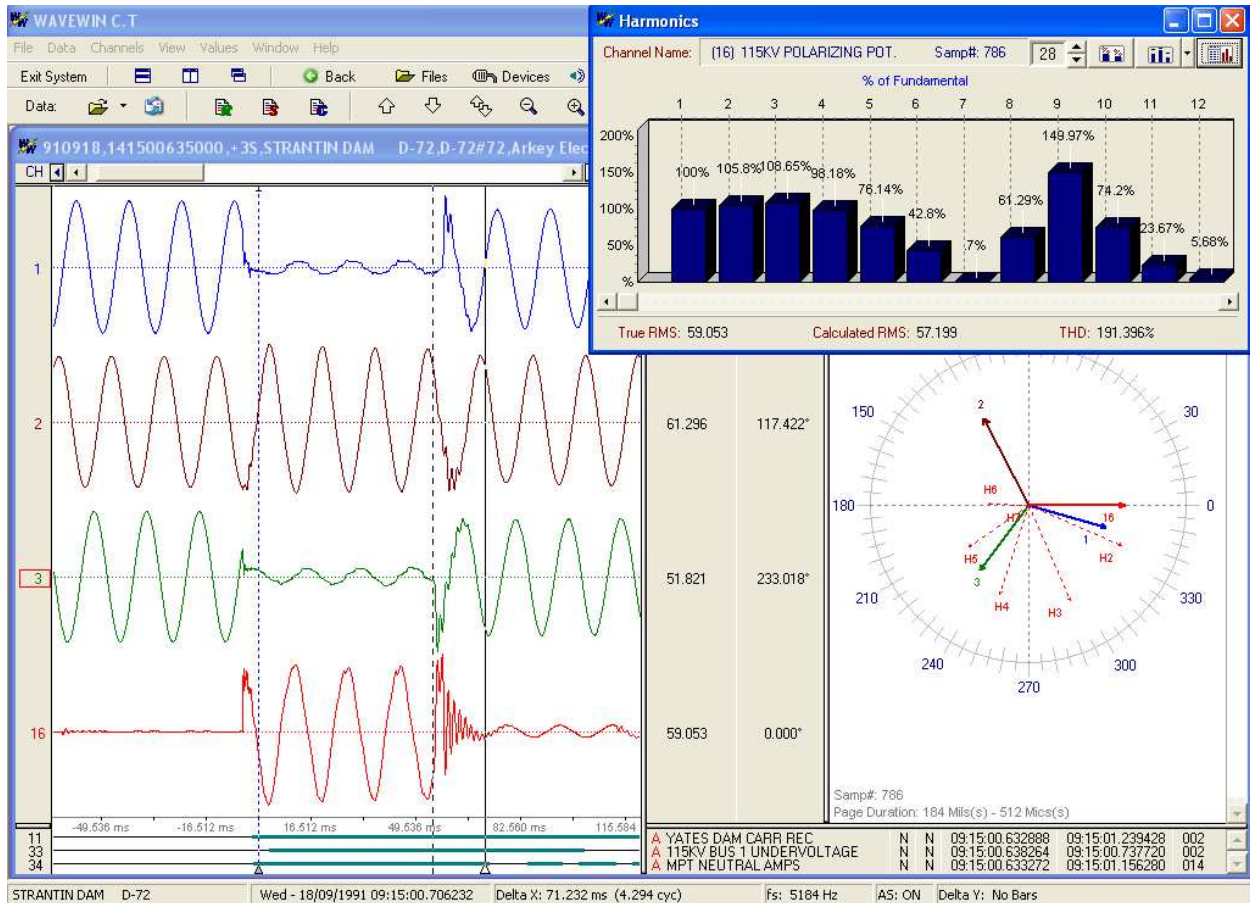


Figure 5.5 Harmonics Histogram View

PERIODIC LOG FILES

The periodic log viewer allows for viewing and analyzing large amounts of event data in a single display. Refer to Figure 5.6. The data is displayed in envelope form and may contain one day, one week, one month or one year of event data. This feature is useful for load flow analysis.

A circular chart of the data displayed in the trace window is plotted to the right of the channel information window. The circular chart cursor is positioned on the sample at the waveform data bar. The duration of the data displayed also is shown below the circular chart along with the sample number at the cursor bar.

The ABB Load Profile and SDC log drivers are specific drivers used to view periodic log data. The COMTRADE format also displays log data. The ABB Load Profile format is an ASCII text file that contains time sequenced load information. The SDC Log format is an ASCII comma delimited CSV text file. The first line of the file is the header information. These files are generated from the Station Data Concentrator (SDC).

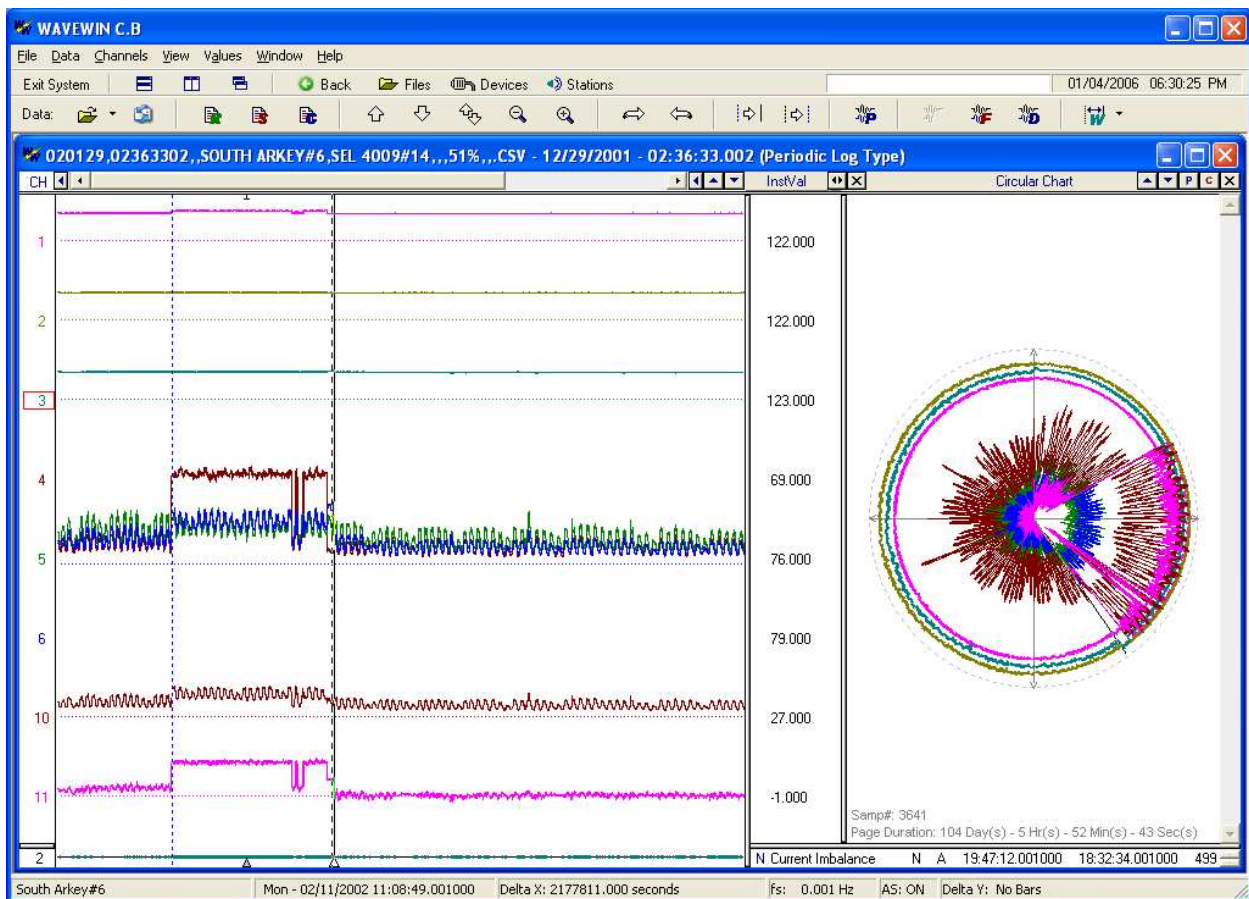




Figure 5.6 Periodic Log File

CIRCULAR CHART

The Circular Chart diagram shows a circular display for each visible channel. The diagram is displayed to the right of the analog information window. Refer to Figures 5.6 and 5.7. The amount of data displayed in the circular chart is equal to the amount of data displayed in the waveform trace window. The duration of the data displayed is shown at the bottom of the circular chart. To increase or decrease the size of the circular chart window place the cursor over the vertical separator between the analog information window and the circular chart window and drag the mouse to the left to increase or to the right to decrease. To close the circular chart window click the close button  located in the header.

To navigate the circular chart use the left arrow, right arrow, home, end, page up and page down keys or the data scroll bar. The cursor bar on the circular chart displays where the data bar is in the chart. To increase/decrease the display area of a channel on the circular chart, mark the channel and use the increase/decrease amplitude menu buttons or the Ctrl-Up and Ctrl-Down keys or use the up and down arrow button  located in the circular chart header.

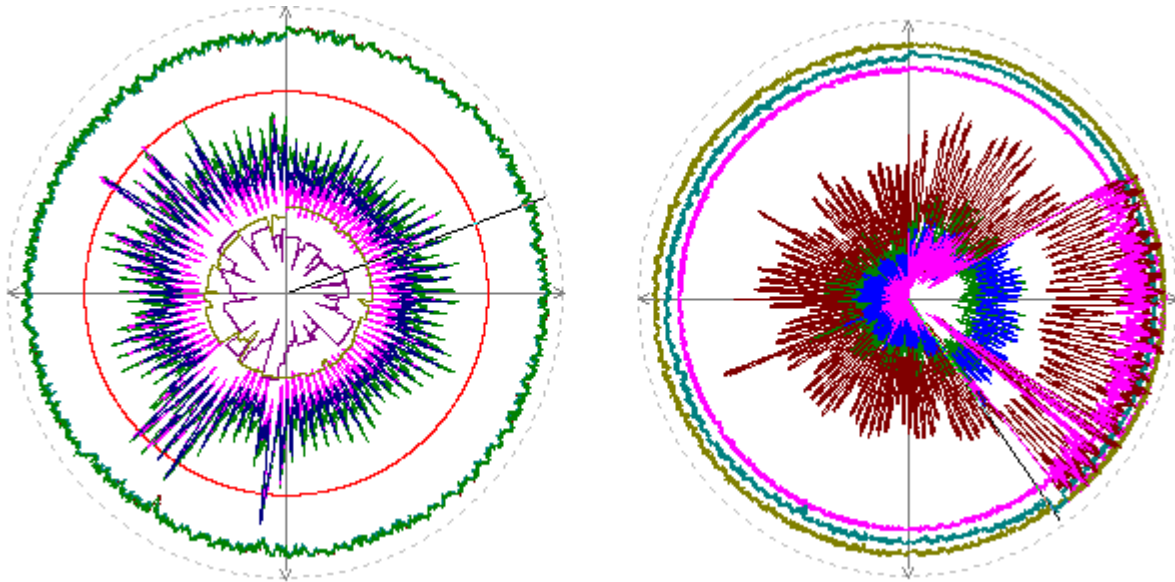



Figure 5.7 Circular Charts

DISPLAY DRIVER'S DATA TYPE

The data stored in the displayed file can be instantaneous values or RMS values. The default setting for all drivers is instantaneous values. If the display driver saves the sample values as RMS calibrated, set the display driver's data type. If the display driver is not set properly the analog column data will be

displayed incorrectly. To set the driver's data type click the "Window Properties"  menu button from the speed bar or select the "Window Properties" option under the "File" menu. Click the "Driver Data Type" tab and set the "Display Device's Data Type" field to "RMS Calibrated" for RMS calibrated values and "Peak Type" for instantaneous values. Refer to Figure 5.8.

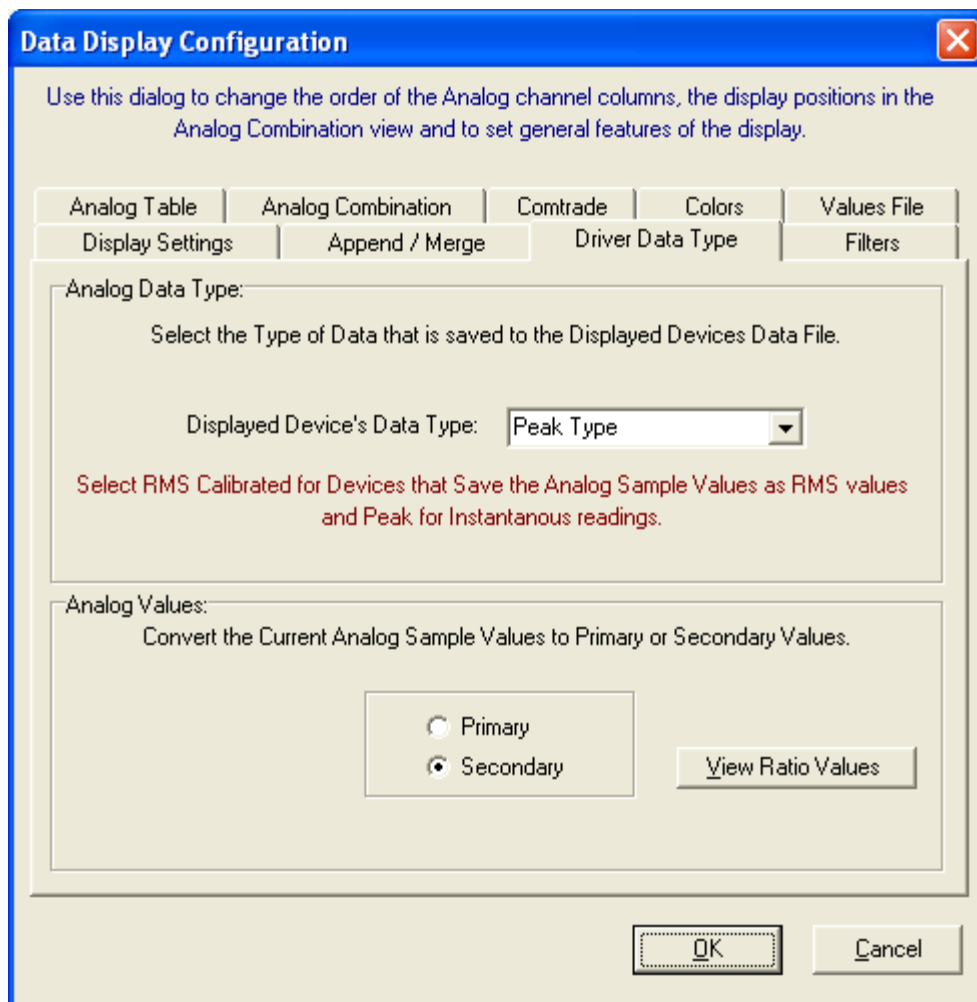



Figure 5.8 Analog Data Type Setting

REOPEN WAVEFORM FILE

To reopen a waveform file that was previously viewed click the reopen menu button  and select one of the files from the drop down list. Refer to Figure 5.9.

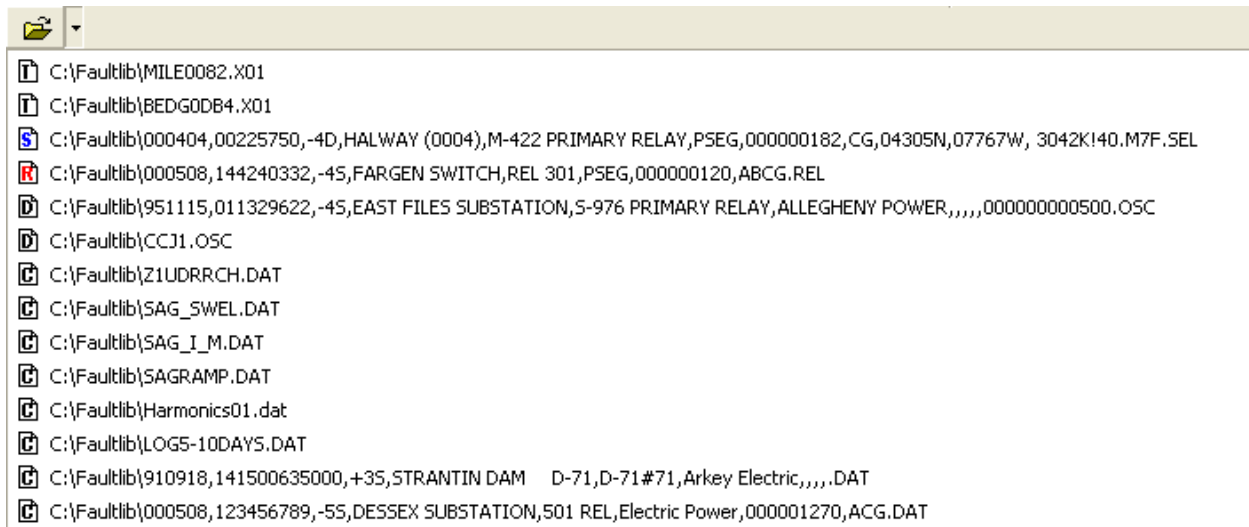



Figure 5.9 ReOpen Data File

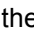


EMAIL ACTIVE FILE


The active data file can be sent via email by clicking on the email  menu button or by selecting “Email Active File” from the “File” menu. The data file displayed and all the support files associated with the file are included as attachments.

NAVIGATING

Use the up and down arrow keys or the vertical scroll bar to browse the analog channels. The tab key toggles between the analog and digital views.

The analog and digital values are displayed in a table to the right of the channel traces. Hold the mouse button down and drag the table separator bars to resize the viewing area. To view the analog sample values use the following navigation tools:

- Left and right arrow keys to navigate sample by sample
- Ctrl+left or ctrl+right keys to peak navigate
- Shift+ctrl+left or shift+ctrl+right keys to cycle hop
- Home and end keys to display the channel's first and last samples
- Triangle  at the bottom of the data bar to drag the data bar through the samples
- Page up and page down keys to page through the samples
- Left button  displayed to the left of the data scroll bar to move the sample at the data bar to the position of the first sample displayed
- Left button  displayed to the right of the data scroll bar to move the trace and table separator to the position of the data bar

Click the left/right arrow button  (located to the right of the analog table headers) or use the shift-right/left arrows to scroll through the analog table columns. Refer to the “Viewing Analog Data” section for field descriptions.

NOTE: If no channels are marked then the peak navigate and cycle hop features navigate through the first channel's data.


SETTING THE CURSOR BARS

Four vertical cursor bars are displayed in the analog view. The blue dotted line represents the reference bar, the black solid line represents the data bar, the black dotted line represents the RMS bar and the red dotted line represents the fault position defined in the configuration file. There also are two horizontal bars displayed when the “Horizontal Bars” menu option under the “View” menu is checked.


DATA BAR

The data bar is displayed as a black solid line with a white triangle below the line. The data bar is automatically displayed at the end of the first cycle in the data file. To move the data bar use the left and right arrow keys to move one sample, use the Ctrl-left and Ctrl-right keys to peak hop, use the Shift-Ctrl-left and Shift-Ctrl-right keys to cycle hop, use the page up and page down keys to move one page up or down or left click the mouse to move to any position in the data or drag the triangle to scroll through the data. When the mouse is held over the triangle a hint message displays the sample number at the data bar and the delta time from the first sample. The time of the sample at the data bar is displayed in the second status bar field. The channel values at the data bar are displayed to the right of the traces in the analog channel information table.

REFERENCE BAR

The reference bar is displayed as a blue dotted line. The reference bar is defaulted to the fault time specified in the file. To move the reference bar to the position of the data bar use the "Move Reference Bar to Data Bar" option inside the “View” menu or press Ctrl-A or click the **SetRef** menu button . Click the opposite mouse button to move the reference bar to any position in the data area. The status field Delta X in the status bar at the bottom of the screen shows the time difference (in milliseconds or seconds) between the reference bar and the data bar. It also shows how many cycles are between the two bars.

RMS BAR


The RMS bar is displayed as a black dotted line. The RMS bars default is always to be one cycle away from the data bar, except when the data bar is positioned at the beginning of the data. This bar is used for calculating the RMS value displayed in the analog table view. The RMS value in the analog table is calculated using all of the sample values displayed between the data bar and the RMS bar. To move the RMS bar to the position of the reference bar (blue dotted line) use the "Move RMS Bar to Reference Bar" option inside the “View” menu or press Ctrl-Z or click the **SetRMS**  menu button.


FAULT BAR

The fault bar is displayed as a red dotted line. The fault bar is fixed and positioned at the fault time defined in the configuration file. The fault bar can be shown or hidden by selecting “Yes” or “No” options for the “Show Vertical Fault Bar” field in the properties dialog under the “Display Settings” tab.

HORIZONTAL BARS

When the “Horizontal Bars” menu option under the “View” menu is checked two horizontal bars will be displayed. The solid black line follows the data bar and the dotted blue line follows the reference bar. The bars will be positioned at the first marked analog channel (displayed in red), if no channels are marked, they are positioned at the first displayed channel. The Delta Y field in the status bar shows the difference between the two bars.

To automatically resize the RMS sliding window click on the **Resize Sliding Window** menu button  or open the “Resize Sliding Window” menu option under the “View” menu. Refer to Figures 5.10 to 5.12.

To manually resize the RMS sliding window click the opposite mouse button to set the reference position and the mouse button to set the data bar position then click the **SetRMS**  menu button. The RMS bar is moved to the reference position. The Delta X field displayed in the status bar at the bottom of the screen shows the time difference (in milliseconds or seconds) between the date bar and reference bar and the number of cycles between the two bars. Use the left, right, ctrl+left, and ctrl+right, shift+ctrl+left, and shift+ctrl+right keys or the horizontal scroll bar to move the sliding window.

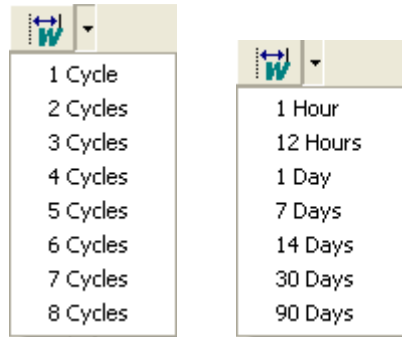


Figure 5.10 Resize Sliding Windows Drop Down Menus

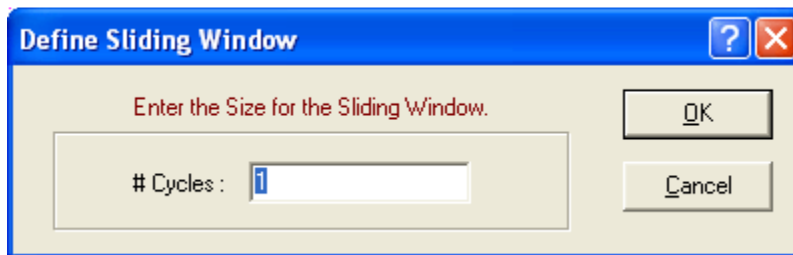


Figure 5.11 Resize Sliding Dialog for Waveforms

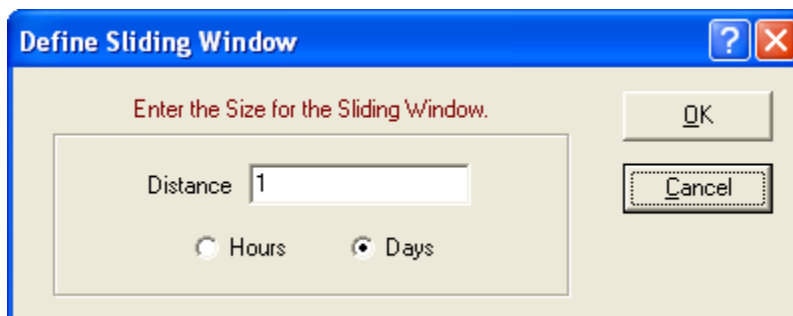


Figure 5.12 Resize Sliding Windows Dialog for Log Files

SAVE DISPLAYED VALUES

The Save Displayed Values feature saves all displayed values in the analog table to a common delimited file (default format), to a user defined format file or to the Windows clipboard. To setup the waveform display for saving analog values follow the following steps:

SELECT ANALOG COLUMNS

All columns displayed in the table will be saved to the Selected Values file. Move the data bar along the waveform to change the sample values displayed in the table

To change the way the columns are displayed open the "Properties" dialog located in the "File" menu. Select the "Analog Table" tab. A list of all of the available analog columns is displayed. Use the "Move Up" and "Move Down" buttons to change the order of the columns and the check box next to each column header to hide or show the column (checked =show, unchecked=hide).

Resizing the Analog table can also isolate the columns to save. Use the Shift-left and Shift-right keys to navigate through the columns. Navigate to the first column to be saved then resize the window by dragging the table/phasor separator bar to show only the columns needed.

SELECT ANALOG CHANNELS

The template file defines the channels to save in two ways: by the visible position of the channel or by specifying the actual channel number. If the template defines channels to save by position, the channels displayed need to be selected and arranged properly to match the template file. In both methods the channel values must be visible in the analog table.

To isolate certain analog channels mark the desired channels. Marked channels are plotted in red. To mark a channel move the channel cursor to the channel and press the spacebar or click on the channels number or table values. After marking all of the desired channels press <enter>. Only the selected channels will be displayed.

ARRANGE ANALOG CHANNELS

To arrange the analog channels in a specific order mark the channels to be moved and press the "+" key to move them up or the "-" key to move them down.

SETUP THE VALUES FILE

Before saving values to the Values file the file must first be defined. To create or change the existing file, select the "New" option from the "Values File" submenu under the "Values" menu. Type in a new file name or select an existing file from the list. The new file automatically will be created.

MARK & SAVE

To save values to a file move the data bar to the desired sample and select the "Mark & Save" option under the "Values" menu. The sub menu allows for selecting the default format or a user defined format. The default format is the basic format defined in the "Values File" tab in the "Properties" dialog. Refer to the "User Templates" section below for more information on the user-defined formats. All user defined template files must be saved in the Wavewin directory and have an extension ".TMP" to be listed in the template menu.

Once the format is selected the sample at the data bar is marked and all of the values displayed in the table are saved to the selected values file. Marked samples have a red upside down T displayed at the top of the window. To clear the marked samples select the "Clear Marked Values" menu option under the "Values" menu.

OPEN VALUES FILE

To view the contents of the Values File select the "Open" option under the "Values File" submenu. A notepad window will be displayed. Refer to Figure 5.13. This window allows for editing the file, saving any changes, saving the file under a new name, and opening other Value files.

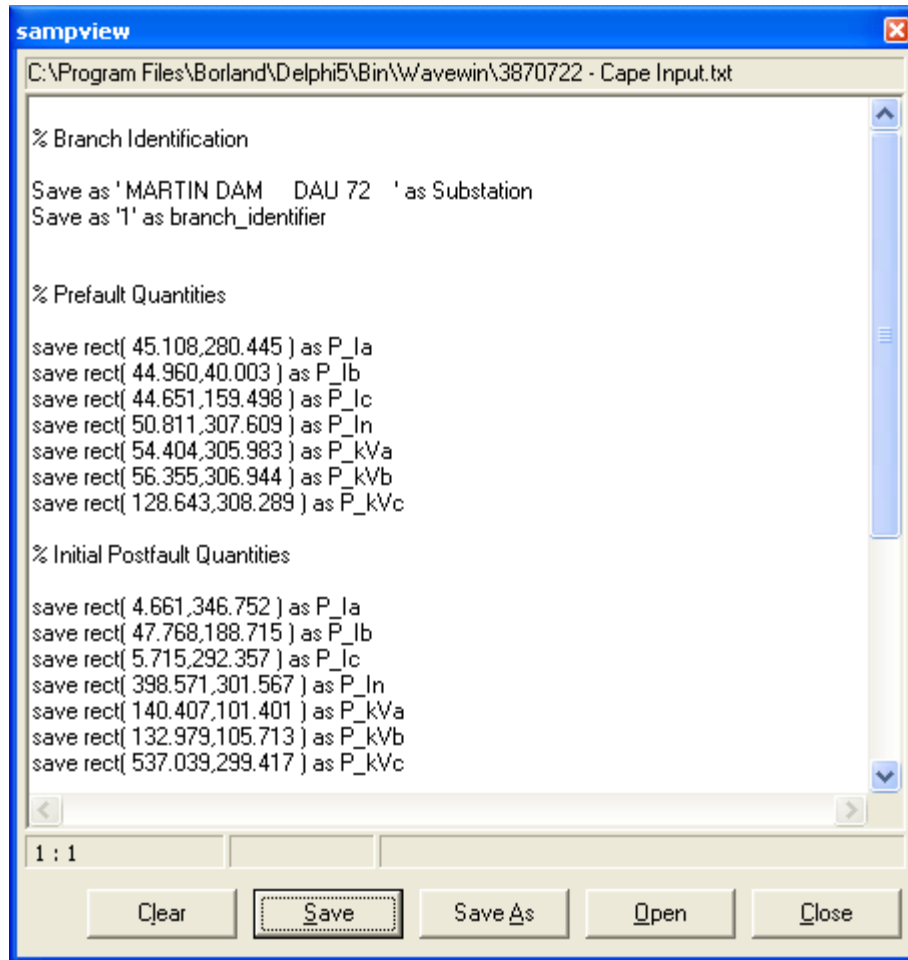


Figure 5.13 Values File

CLEAR VALUES FILE

The "Clear" menu option under the "Values File" submenu or the "Clear" button inside the "View Values" window will clear the contents of the file. Use this feature if the Value File always remains the same. New value files are created using the "Save As" button in the "View Values" window. This feature also can be used if an error was made during saving and the file needs to be cleared to start over.

DEFAULT FORMAT

The "Values File" tab in the "Properties" dialog defines the default format for saving displayed values to the Values file.

Below is a description of each field:

- Save To - Select file to save the values to an ASCII text file, select clipboard to have the values go directly to the Windows clipboard or select both for both features.
- Select Values File - Select an existing file or create a new file. If the file does not exist, a message that requests creation of the file upon exit of the dialog will be displayed.
- Save Type - Select Rewrite to clear the file before every save, or select Append to add the values to the existing file.

- Save Format - Select Fixed ASCII to format the data as a table or select comma delimited to save the values separated by a comma.
- Add Titles - Select “Yes” to add the titles of the column to the file or select “No” to define no titles (Used in the Default format only).

USER FORMATS

User formats are used to create custom templates in which to save the displayed values. The user formats are selected from the “Mark & Save” menu. User format files must be saved to the active Wavewin directory and have an extension “.TMP” to be listed in the “Mark & Save” menu.

The format files can contain any ASCII text. Tags are used to define where the specified values are to be placed in the values file. When saving channel information the channel values must be visible in the analog table.

Available Tags:

- <Channel position #> - the position of the visible channel in the data plotting window.
- <^Channel #> - the channel number displayed in the data plotting window.
- <station> - the station displayed in the first status field.
- <date> - then date displayed in the D&T status field.
- <time> - then time displayed in the D&T status field.

OPEN FORMAT FILE

To view the contents of a format file select the “Open” option under the “Format Files” submenu. A notepad window will be displayed. This window allows for editing the file, saving any changes, saving the file under a new name, and opening other Format files.

CREATE NEW FORMAT FILES

To create a new Format File, select the “New” option under the “Format Files” submenu. A notepad window will be displayed. This window allows for adding text to the file, saving any changes, saving the file under a new name, and opening other Format files.

User template files must be saved to the active Wavewin directory and have the extension “.TMP” to appear in the “Mark & Save” menu.


MARKING, DELETING, AND RESTORING CHANNELS

To mark or unmark a channel, click the mouse button on the channel ID or channel title, or use the space bar. To mark a group of channels use the mouse button to mark the first channel and the shift mouse button to mark the last channel. Marked channels are displayed in red.

To mark/unmark all analog and digital channels press the F8 key or select the “Mark/UnMark All” menu option under the “Channels” menu option. If no channels are marked, all of the analog and digital channels will be marked. If any channels are marked, all of the channels will be unmarked. To mark/unmark all the analog channels select the “Analog Mark/Unmark All” menu option under the “Channels” menu. To mark/unmark all of the digital channels select the “Digital Mark/Unmark All” menu option under the “Channels” menu.







Channels must be marked to delete them from the display. The Delete key removes the marked channels and the Insert key restores all the deleted channels.



SCALING ANALOG CHANNELS

When the analysis display is initially opened, all the analog channels are scaled to one value. To scale the channels according to the maximum space allocated for display, press F6 or click the **AutoScale**  menu button. This option toggles among the three views: On, Off and ++. The active auto scale state is displayed in the “AS” status field. Each view is defined below:

- **ON** – The On view plots the channel data scaled to the maximum value allocated along the zero reference line.
- **OFF** – The Off view plots all of the channels that are scaled to the maximum value in the file.
- **++** - The ++ view plots the signal using the number of maximum pixels allocated for the channel. The highest value is plotted at the maximum position and the smallest value is plotted at the lowest position. This feature was added to clearly show the profile of a frequency, Vdc and load data channels.


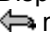
The number of pixels allocated for each channel is displayed in the last column of the analog table.

To increase or decrease a channel's amplitude, along with the phasors and circular chart display mark the channels and click the **AmpUp**  or **AmpDn**  menu buttons or use the ctrl+up/down arrow keys. The auto scale multiplier (ASM) is used to amplify or attenuate the channel's data values. For example, when the amplitude increases the ASM value is multiplied by the channel's current “Pixsdisp” and when the amplitude decreases the ASM value is divided by the channel's current “Pixsdisp”. To change the ASM value, select the “Properties” menu option under the “File” menu then click the “Display Settings” tab, enter a number and click **OK**. This value is initially defaulted to 2.00. To increase/decrease only the analog channels amplitude, click the up and down arrow buttons   located to the right of the data scroll bar. To increase/decrease only the phasor magnitude or circular chart click the up and down arrow buttons   located in the phasor/circular chart header.

To increase or decrease the channel's time scale, click the **Condense**  or **Expand**  menu buttons or press the ctrl+page up and ctrl+page down keys.


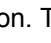
NOTE: If no channels are marked all the visible channels are scaled accordingly.

ZOOMING CHANNELS

To zoom in on analog or digital channels, mark the channels and press <enter> or click the **ViewMrks**  menu button. The unmarked channels are removed from the Analysis Display. To restore the hidden channels press the <esc> key, the <backspace> key, or click the **ViewAll**  menu button.

When returning to the original view all channels in the previous view remain marked for quick selection of additional channels for a new view.

SELECTING PREDEFINED VIEWS

The DFR Transcan and Faxtrax records have predefined views encoded into their format. To select the predefined views click on the “Show All/ Select View” drop down menu button  or select the “Select Views” menu option under the “View” menu. A list of the available lines/graphs will be displayed. Refer to Figures 5.14 & 5.15. Click on the desired view. The analog channels defined in the select view will be displayed. To view all the analog channels in the file press the <esc> key, the <backspace>, or click the “Show All” menu button or click the **ViewAll**  menu button. To view user defined views refer to the “User Views” section.

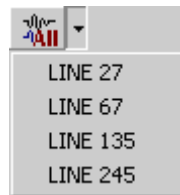


Figure 5.14 Predefined Lines

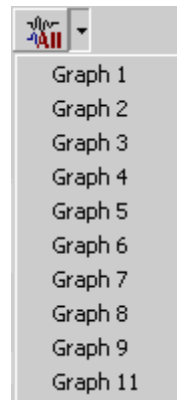


Figure 5.15 Predefined Graphs


REPOSITIONING CHANNELS

Analog channels can be repositioned in the Analysis Display. To move a channel up one position mark the channel and press the “+” key or select “Shift Marks Up” from the “Channel” menu. To move a channel down one position mark the channel and press the “-” key or select “Shift Marks Down” from the “Channel” menu.

PRINTING WAVEFORM FILES

To print all of the data for the visible channels, select “Print/All” from the File menu. The page numbers are located on the top right corner of each printout. The date and time of the first sample on each page is printed at the bottom left corner. To print only the data currently displayed in the data window select “Print”/“Page” from the File menu. Use the zoom feature to print only the selected channels. If the software cannot access the printer port, an error message is displayed.

SAVING AS COMTRADE

The visible analog and digital channels can be saved in the COMTRADE ASCII or Binary format. The Comtrade versions supported are: the 1991 and 1999 format. The Comtrade format is selected in the “Properties” dialog under the “Comtrade” tab. The default format is the newer 1999 format. Mark the analog and digital channels to save and press <enter> or click the **ViewMrks** menu button . To create a COMTRADE file select the “Save as COMTRADE” (ASCII or Binary) option from the “File” menu. Enter the destination path and filename (do not define the filename extension) and click **OK**. Refer to Figure 5.16. The “.DAT” and “.CFG” files are automatically created. If a path is not defined, the COMTRADE files are saved in the active directory.

To automatically name the Comtrade file using the IEEE long file naming format check the “Use the ComNames Naming Convention to Name the Comtrade File(s)” field in the “Save As Comtrade” dialog and leave the “File Name” field empty. The selected channels are converted to the specified Comtrade format and are named using the IEEE long file naming convention.

If the sample values in the displayed file are RMS calibrated and the outcome Comtrade file must have instantaneous values, set the “Comtrade Settings” fields to automatically convert the RMS data to instantaneous values. To set the “Comtrade Settings” fields open the “Properties” dialog. Select the “Comtrade” tab then select “Yes” for the “Convert RMS Calibrated Data to Peak Data”.

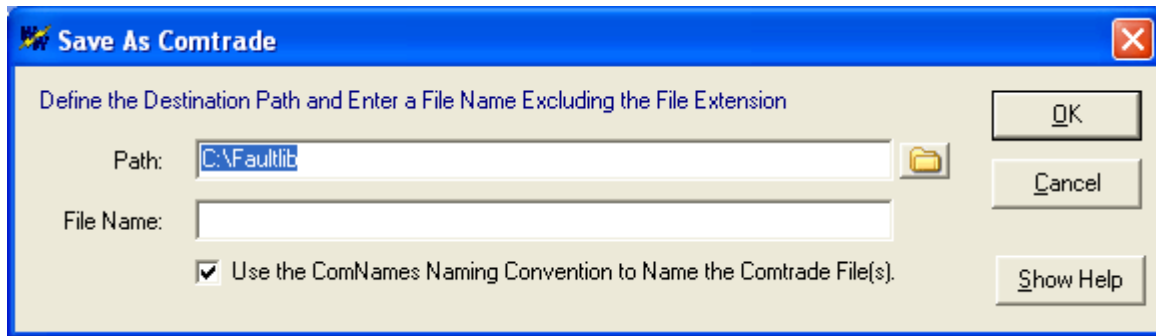



Figure 5.16 Save As COMTRADE

VIEWING ANALOG DATA

The values displayed in the analog view can be presented in tabular form (analog table) or in a concentrated form (combination view). Press F4 to toggle between the two views or use the View  button (located to the right of the analog table headers) or the shift-right/left arrow keys to toggle through the analog table columns. To close the analog table, click the Close button located in the header. Valid analog channels are displayed in the left portion of the window and the analog information in the right. An analog channel is marked as invalid if the title is empty, or it contains any of the following strings in the beginning of the title. To show an invalid channel use the “Show/Hide Channel Title” dialog in the file manager. Refer to the “Show/Hide Channel Title” section for usage.

- UNUSE
- UNDEF
- NOT D
- NOT U
- NOT I
- NAT A
- UNDEF
- {
- N/A
- ANALOG INPUT
- ANALOG CHANNEL
- EXTERNAL INPUT
- EVENT CHANNEL
- CHANNEL
- DIGITAL TRACE #
- SPARE

A maximum of 256 analog channels can be displayed in one window. The values displayed in the analog table and combination view are described below.

Analog Table View:

The analog table view is the default view. Use the view button or the shift-right/left arrow keys to navigate through the columns of the table. The original sample values are plotted according to one of the following data types:

- Peak to Peak data
- RMS Calibrated data
- Log files.

All of the display drivers in the system are defaulted to peak to peak except the predefined log drivers. To change the settings for a driver select the "Window Properties" option under the "File" menu. Click on the "Driver Data Type" tab and select the type from the "Displayed Device's Data Types" drop down list. Periodic Log File's data type cannot be changed.

The following tables describe the analog data for the sinusoidal peak-to-peak, non-sinusoidal, and sinusoidal RMS data types:

Peak to Peak

Field	Description
Title	The analog channel titles.
RMS	The TrueRMS value is calculated by taking the summation of the square of all the sample values that are between the RMS bar (black dotted line) and the data bar. The result is divided by the total number of samples between the two bars and takes the square root of that result.
InstPeak	The highest absolute value of all of the samples between the two zero reference crossings surrounding the data bar (black solid line).
Phase	The phase angle of each channel.
InstVal	The sample value at the data bar (black solid line).
RefVal	The sample value at the reference bar (blue dotted line).
MaxPeak	The maximum peak value of the channel.
MinPeak	The minimum peak value of the channel.
Units	The analog channels prefix and units.
PixsDisp	The number of pixels allocated for displaying the trace.
DFT Peak	The DFT Magnitude calculated between the RMS bar (black dotted line) and the data bar (solid data bar).
Crest	The DFTMag column divided by the RMS column.

Sinusoidal RMS Calibrated

Field	Description
Title	The analog channel titles.
RMS	The RMSVal column calculates an RMS value for all of the samples between the RMS bar (black dotted line) and the data bar (black solid line). Since the data is RMS calibrated each sample value is multiplied by the square root of 2 before it is squared.
InstPeak	The square root of 2 multiplied by the peak value measured between the two reference crossings surrounding the data bar (black solid line).
Phase	The phase angle of each channel.
InstVal	The RMS sample value at the data bar (black solid line) multiplied by Root 2.
RefVal	The RMS sample value at the reference bar (blue dotted line) multiplied by Root 2.
MaxPeak	The RMS maximum peak value of the channel multiplied by Root 2.
MinPeak	The RMS minimum peak value of the channel multiplied by Root 2.
Units	The analog channels prefix and units.
PixsDisp	The number of pixels allocated for displaying each trace.
DFT Peak	The DFT Magnitude calculated between the RMS bar (black dotted line) and the data bar (solid data bar).
Crest	The DFTMag column divided by the RMS column.

Non-Sinusoidal (Load Files)

Field	Description
Title	The analog channel titles.
MaxWin	The absolute maximum value between the sliding window bar (black dotted

Field	Description
	line) and the data bar (black solid line).
InstVal	The sample value at the data bar (black solid line).
RefVal	The sample value at the reference bar (blue dotted line).
MaxVal	The maximum value of the channel.
MinVal	The minimum value of the channel.
Units	The analog channels prefix and units.
PixsDisp	The number of pixels allocated for displaying the trace.
AvgWin	The average value of all of the samples between the sliding window bar (black dotted line) and the data bar (black solid line)

Combination View:

The combination view shows all of the channel information in a signal view. This view only is available if there is sufficient room between analog channels to display three lines of text.

Default Display format:

Peak to Peak:

Channel Title			
RMS	MaxPeak	RefVal	
InstVal	MinPeak	Units	ASV

RMS Calibrated:

Channel Title			
RMS	MaxPeak	RefVal	
InstVal	MinPeak	Units	ASV

Load Files:

Channel Title			
MaxWin	MaxVal	RefVal	
InstVal	MinVal	Units	ASV

The peak sample values are displayed in red when the data bar is on the channel's maximum value and they are displayed in blue when the data bar is on the channel's minimum value. Use the Tab key to toggle between the analog and digital channels. To hide the channel information, select the "Channel Information" menu option from the "View" menu.

The analog table and combination views can be resized by selecting the vertical separator bar and dragging it to the right or left. The cursor changes to the vertical resize cursor when the mouse is positioned over the separator bar.

To change how the analog data is displayed in the analog table and combination view select the "Properties" menu option from the "File" menu. Some of the functions of the "Properties" dialog are reordering, hiding, and showing the analog table columns; changing the data positions in the combination view; changing the background colors and trace colors; and for changing the drivers data type and trace/phasor scale multipliers.

VIEWING DIGITAL DATA

The default digital view consists of only the triggered digital channels, which are displayed at the bottom of the screen. To view all of the digital channels including the unused channels press F9 or select "All Digital Channels" from the "View" menu.

The digital trace is displayed as a thin black line when the sample value equals the original state defined in the displayed format and is displayed as a thick green line when the sample value differs from the

original state. The Cursor State column in the digital table displays an “A” for Alarm and “N” for Normal or the SEL defined state. These values are set by comparing the sample value at the data bar with original state, “A” = different than original state, “N” = same as original state.

The digital information is displayed in tabular form. The data columns are described below:

Column Number	Description
1 – Cursor State	The digital state of the sample at the cursor position (A=Alarm, N=Normal).
2 – Title	The channel title, a maximum of 40 characters can be displayed.
3 – Fst	The digital state of the first sample (A=Alarm, N=Normal).
4 – Lst	The digital state of the last sample (A=Alarm, N=Normal).
5 – Fst-Change	The time the channel first changed state.
6 – Lst-Change	The time the channel last changed state.
7 – Changes	The number of times the channel-changed state.

Use the scroll bar or the up and down arrow keys to navigate through the channels and use the tab key to toggle between the analog and digital views.

CUSTOMIZING THE ANALYSIS DISPLAY

The “Properties” option in the “File” menu allows for customizing the analysis display window. Below is a definition of each tab:

- **Analog Table** – The Analog Table tab is used to reorder, hide and show the columns in the Analog Table.
- **Analog Combination** – The Analog Combination tab is used to change the position of the data values in the Combination view.
- **Comtrade** – The Comtrade tab is used to define the Comtrade format for saving, the date and time format for display and for setting automatic conversion from RMS data to Peak data when using the “Save As Comtrade” feature.
- **Colors** – The Colors tab is used to define the background colors of each display section and to set the default analog channel colors.
- **Values File** – The Values File tab is used to define the Values File and general information used when saving samples values to a file.
- **Display Settings** – The Display Settings tab is used to define the ASM scale multiplier for the traces and phasor/circular chart scaling. It also can define general display information for the window such as: setting the display trace type (sample based or time based), showing the time reference bar between the analog channels and the digital channels, showing the separator bar between multiple events displayed in one window, showing or hiding the fault bar (red dotted vertical bar), and defining the option to reference angles across windows when Sync mode is active. When “Yes” is defined, all phase angles for the currently opened windows will be referenced from the first marked channel in the active window.
- **Append / Merge** – The Append/Merge tab is used to define from which file the samples will be discarded when the append/discard common times option is used. It also is used to determine whether the station name should be added to the analog/digital titles when an append/merge option is executed.
- **Driver Data Type** – The Driver Data type tab is used to define the type of data that is saved to the displayed device’s data file: RMS Calibrated or Peak Type.
- **Filters** – The Filters tab is used to define if spikes detected in the data file should be ignored when the maximum and minimum values are calculated and at what level they should be ignored.

TIME & SAMPLE BASED DISPLAYS

The “Trace Display Type” field located in the “Display Settings” tab of the “Properties” dialog allows for toggling between the “Time Based” display and the “Sample Based” display. The sample based display plots the channel data with one pixel distance between each displayed sample. Sample based displays are useful for showing changes in sampling frequency. The time based display plots the channel data in time. Time based displays are useful for showing changes in line frequency.

To change the trace display type open the “Properties” dialog under the “File” menu. Click the “Display Settings” tab and change the “Trace Display Type” field to time based or sample based.

FAULT REFERENCE TIME BAR

The Fault Reference Time Bar is displayed between the analog and the digital traces. It displays the time difference from the fault time defined in the displayed file. The units are displayed in the Delta X status field.

To show or hide the fault reference time bar open the “Properties” dialog under the “File” menu. Click the “Display Settings” tab and select “Yes” or “No” for the “Show Reference Time Bar” field.

SUPERIMPOSING ANALOG CHANNELS

To superimpose two or more analog channels, mark the channels and press F7 or select the “Super Impose” menu option from the “Data” menu. The marked channels are superimposed and placed at the top of the display. If no channels are marked, all channels are superimposed. Press F7 to turn this feature ON/OFF.

CHANGING ANALOG CHANNEL COLORS

To change the color of an analog channel, click the opposite mouse button on the channel ID. Select the channel color from the list or click “More Colors” to select from the color palette. Channels must be unmarked to change their colors.

SYNCHRONIZING DATA CURSORS

The Sync Data Cursors feature is used to synchronize the data bars for two or more display windows. Refer to Figure 5.17. To synchronize two or more data bars, open the files, select “Tile Horizontal” from the Windows menu, then select the “Sync Data Cursors” menu option from the “Data” menu. This feature offers two sync functions: “By Time” and “Manually”. When a function is selected, the data bars in the non-active windows are moved to the synchronization point of the active window. The two functions are described below:

By Time

When the time function is activated, the data bars in the non-active windows are moved to the sample time of the data bar in the active window. For example, if the data bar in the active window is positioned on a sample at time 01:12:34.5600 all of the non-active data bars are moved to the sample at that time. If the time cannot be found the data bar does not move.

Manually

The manual sync function allows for the selection of different cursor positions in the windows before synchronization is activated. For example, open four display windows and tile horizontally. Move the data bar to the beginning of the fault cycle in each window and select the Manual cursor sync function. Press the left arrow, right arrow, ctrl+left, ctrl+right, page up, page down, ctrl+page up, ctrl+page down, home and end keys or use the scrollbar to move the data bars.



Figure 5.17 Cursor Synchronization

In Sync Mode phase angles can be referenced across analysis display windows. The phase angles in the opened data windows are referenced by the first marked channel in the active data window. This feature is activated from the "Properties" dialog under the "Display Setting" tab in the Sync Mode section. Sync Mode must be active for the angles to be referenced.

APPEND OPEN FILES

The "Append Open Files" menu option under the "File" menu appends all of the open windows into a new display window. There are two options available under the Append Open Files Menu:

- Discard Common Times: Any common times found in the open files will be deleted from the oldest file.
- Back to Back: The files are appended back to back. No samples are deleted.

MERGE OPEN FILES

The "Merge Open Files" option under the "File" menu merges all of the displayed or marked channels into one display window. There are three options available under the Merge Open Files Menu:

- By Time: Merge channel samples if they have a common time segment. The reference time is taken from the file with the latest start date and time. The file with the least number of samples determines the length of the new merged file. Refer to Figure 5.20 and 5.21.
- Manually: Use the data bars to highlight the location of the common sample time in each window. Then Merge Manually will line up the data bars and adjust the time stamps accordingly. This option is used when the file times are not synchronized. The active window determines the time stamp of the new merged file and the open window with the least number of samples determines the length of the new merged file. Refer to Figure 5.22 and 5.23.
- By Sample: Merge without regard to time stamps and/or data bar positions. The reference time is taken from the active window. The file with the least number of samples determines the length of the file. Refer to Figure 5.24.

When files with different sampling frequencies are merged a dialog will be displayed. The dialog contains a list of all the sampling frequencies in the opened files. Select the frequency for the merged file or enter a new frequency. Refer to Figure 5.18.

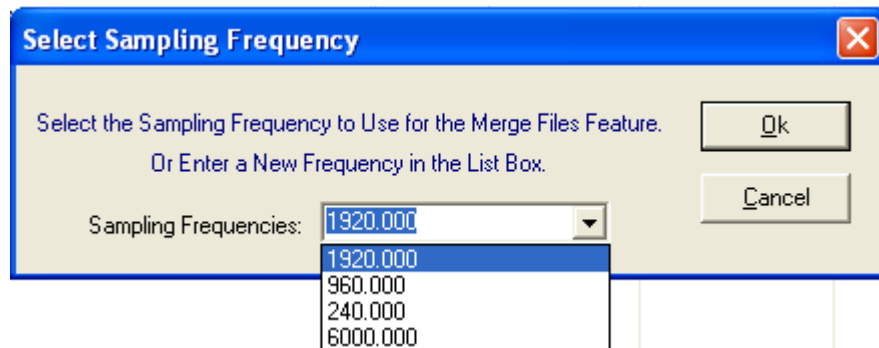



Figure 5.18 Merge Open Files: Select Frequency

Merging Open Files allows for flexibility of which channels are merged. “Merge Open Files” will merge either the marked channels only, if there are no marked channels then it will merge the visible channels.

If the merged files have different data types (RMS Calibrated or Peak Values) the RMS values will be automatically converted to Peak values by multiplying the RMS values by Root 2.

To identify the merged channels the station name for each file is added to the beginning of the analog and digital channel titles. To turn off this feature open the “Properties” dialog . Click on the “Append/Merge” tab and uncheck the “Add the File’s Station Name to Beginning of the Analog/Digital Channels” field. Refer to Figure 5.19.

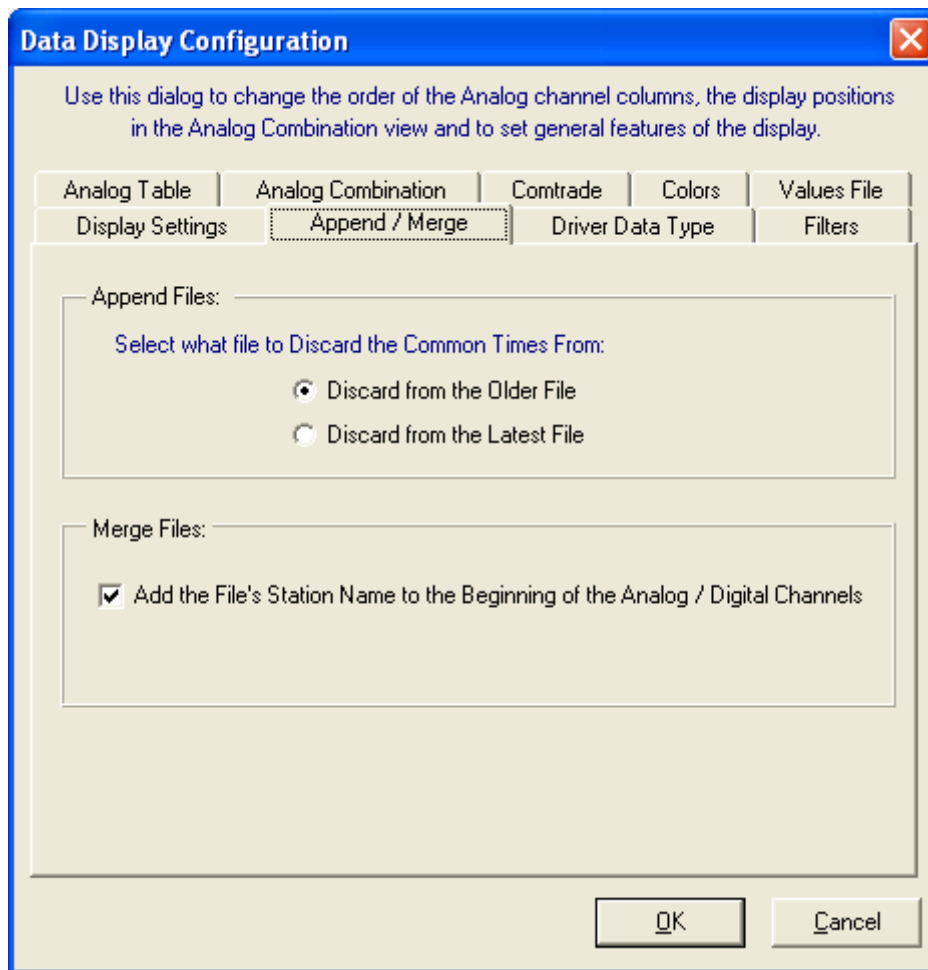


Figure 5.19 Append/Merge Properties

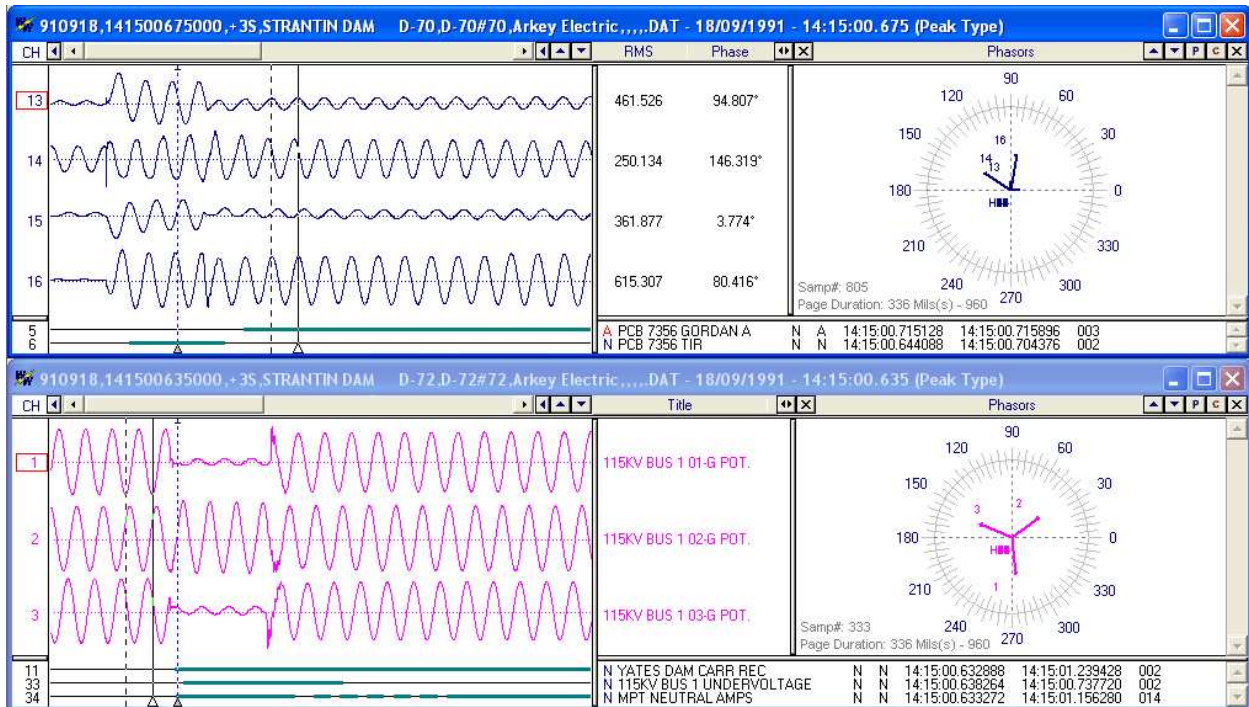


Figure 5.20 Merge Open Files – By Time: Open files and select channels to Merge

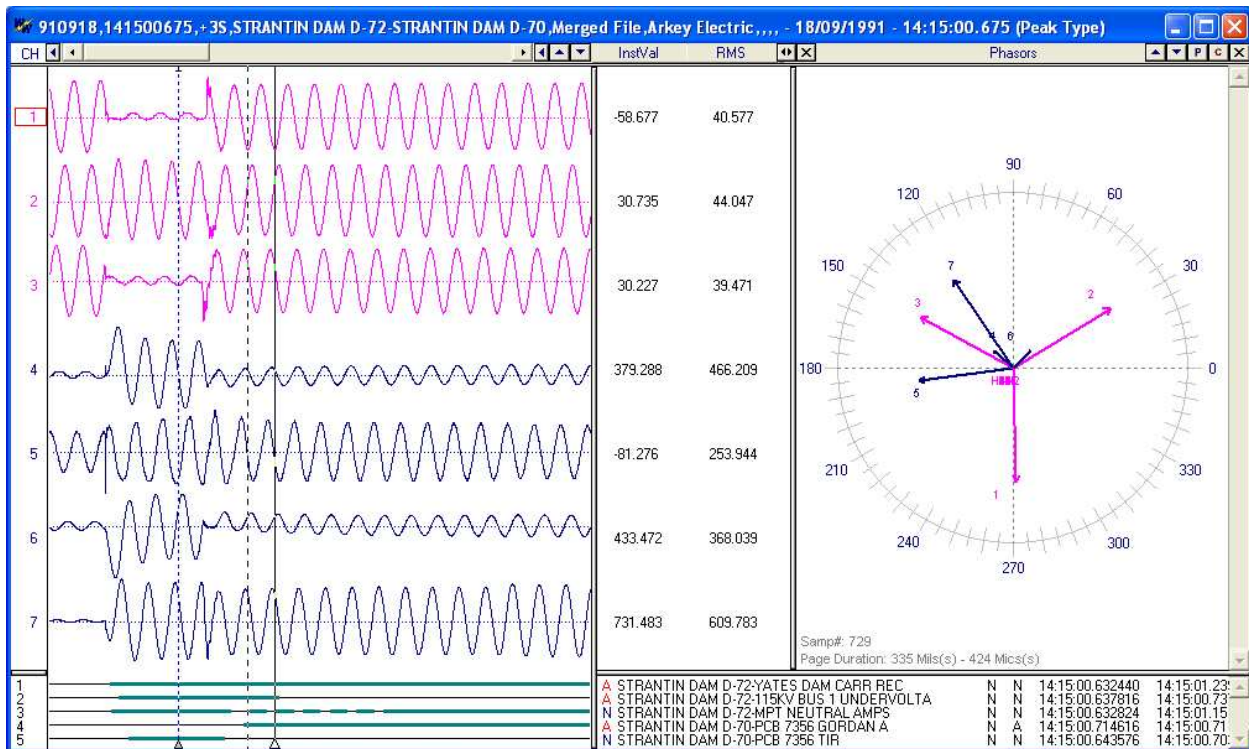


Figure 5.21 Merge Open Files – By Time: Result: By Time

Merge Open Files “By Time” only will merge the samples with common times. The reference time is the file with the latest start date and time.

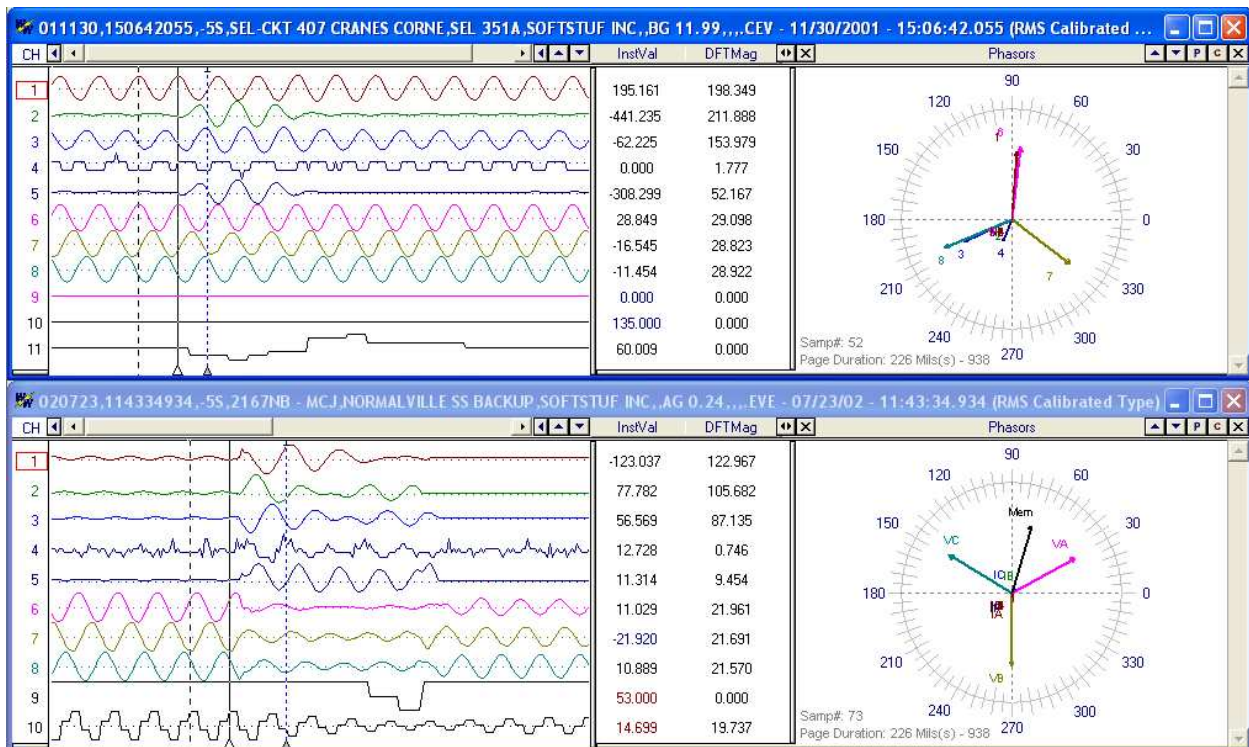


Figure 5.22 Merge Open Files – Manually: Select Channels & Position Data Bars

First, select the channels to merge by marking the channels and pressing the <enter> key. Next, position the data bars at the point representing the Same Point in time.

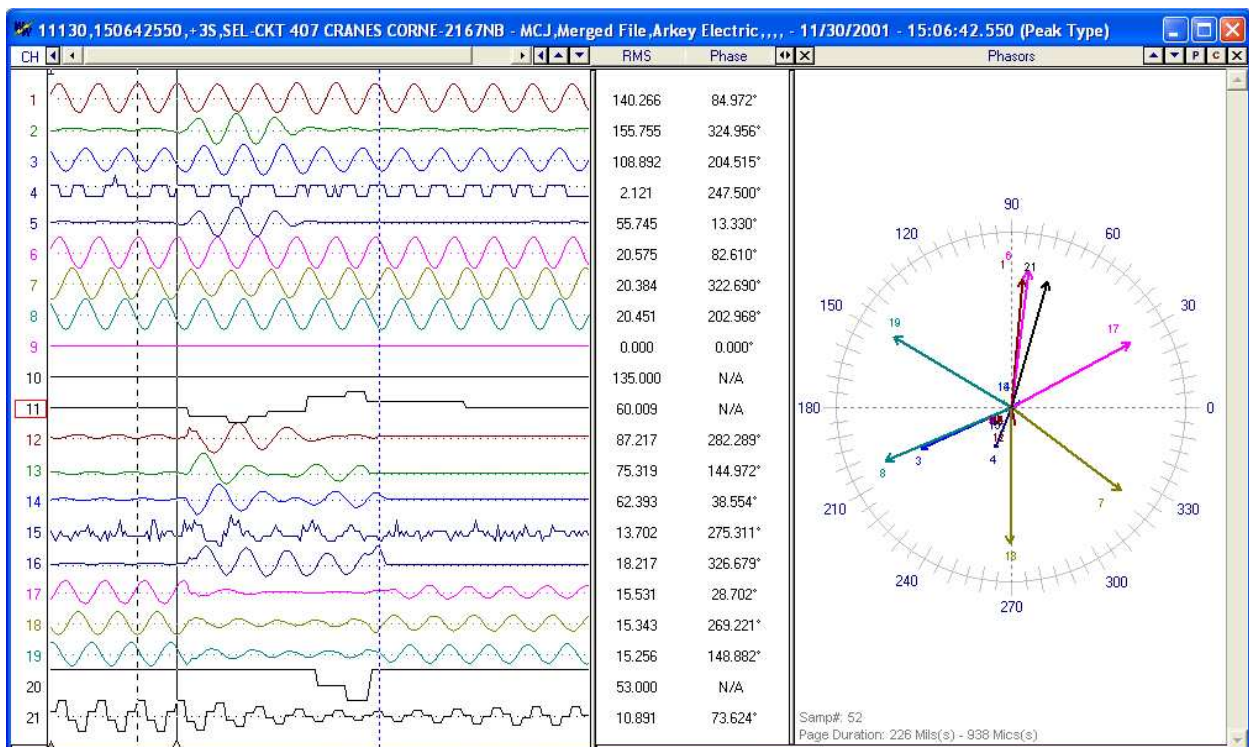


Figure 5.23 Merge Open Files – Result: Manually

Merge Open Files Manually is used when the file times are not synchronized. Place the data bars in the position where the times should be synced and merge the files. Merge will align the samples according to the position of the data bar in each open file. The data bar with the least number of samples at the beginning determines the number of samples to truncate from the beginning of all other open files. The active window's time stamp is used for the merged file and the open file with the least number of samples determines the length of the merged file.

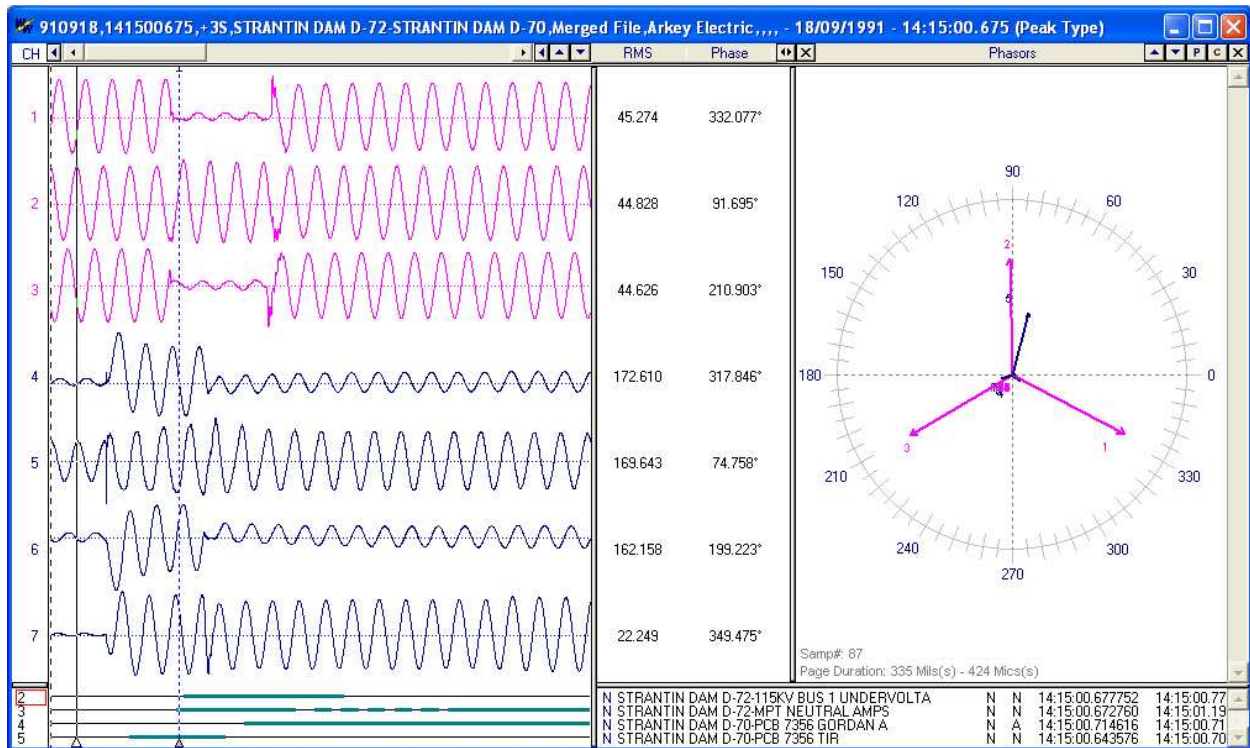


Figure 5.24 Merge Open Files – Result: By Sample (As Applied to Figure 1.70)

Merge Open Files “By Sample” merges without regard for time stamps and/or data bar positions. It merges “as is”. The reference time is from the active window and the file with the least number of samples determines the length of the file.

CHANGE FREQUENCY

Change Frequency changes the current sampling frequency to the entered frequency. Refer to Figure 5.25. If the entered frequency is greater than the current frequency samples are added. If the entered frequency is less than the current frequency samples are deleted. Refer to Figure 5.26 and 5.27 for an example that sets a multiple frequency file to a single frequency. The entered frequency must be greater than two times the line frequency.

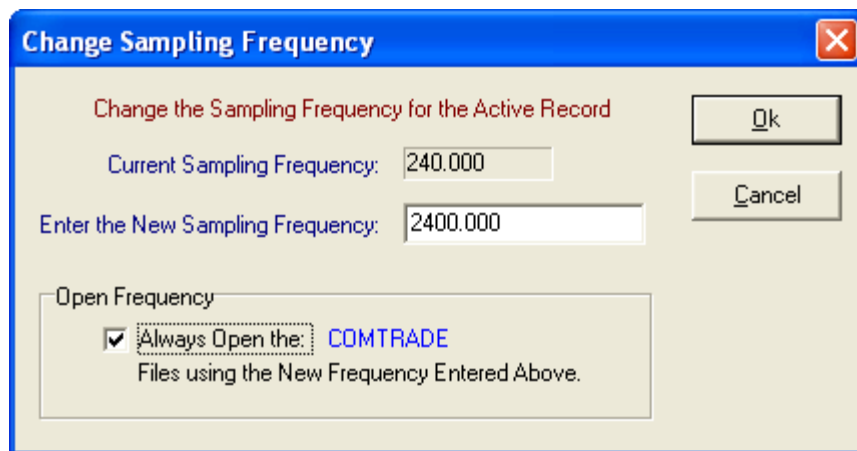


Figure 5.25 Change Frequency Dialog

It also allows for defaulting a driver to always display its' files using the entered frequency. For example, all SEL 4 samples/cycle (240fs) files can be set to automatically display 40 samples/cycle (2400fs).

NOTE: If Open Frequency is checked, the Restore Original is not available.

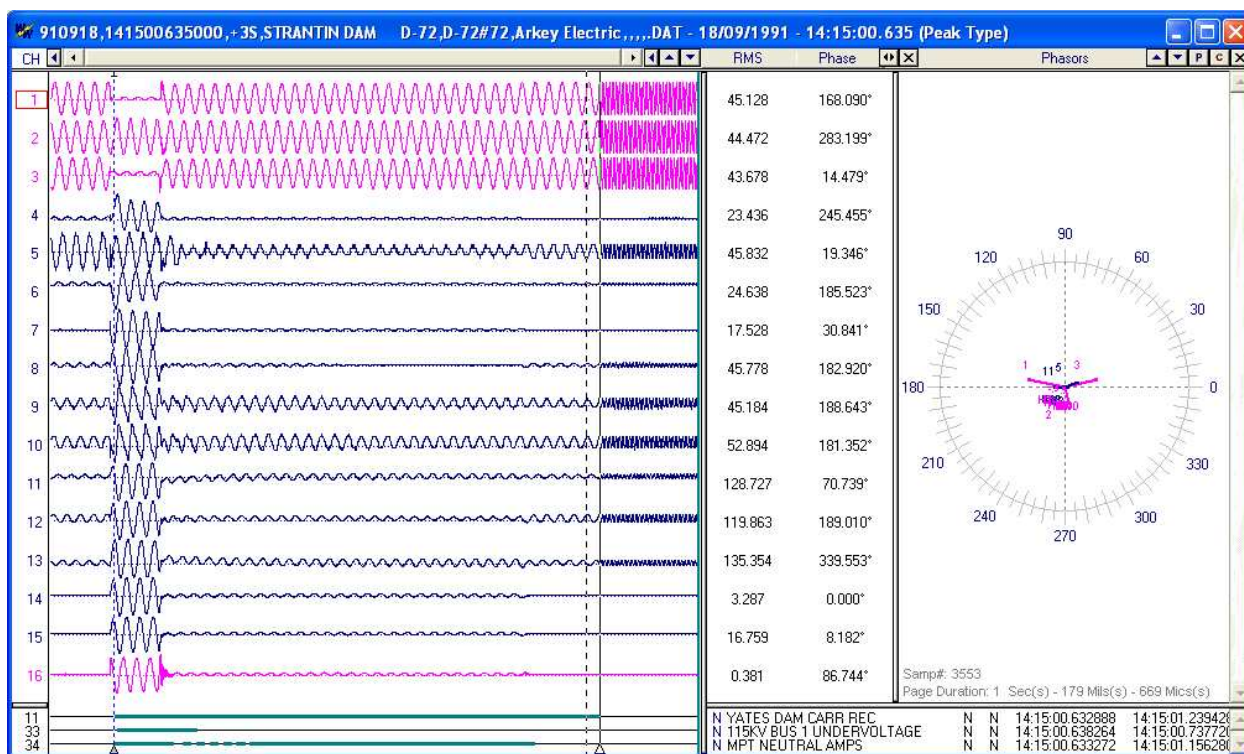


Figure 5.26 Change Frequency: Change a Mutiple Frequency File

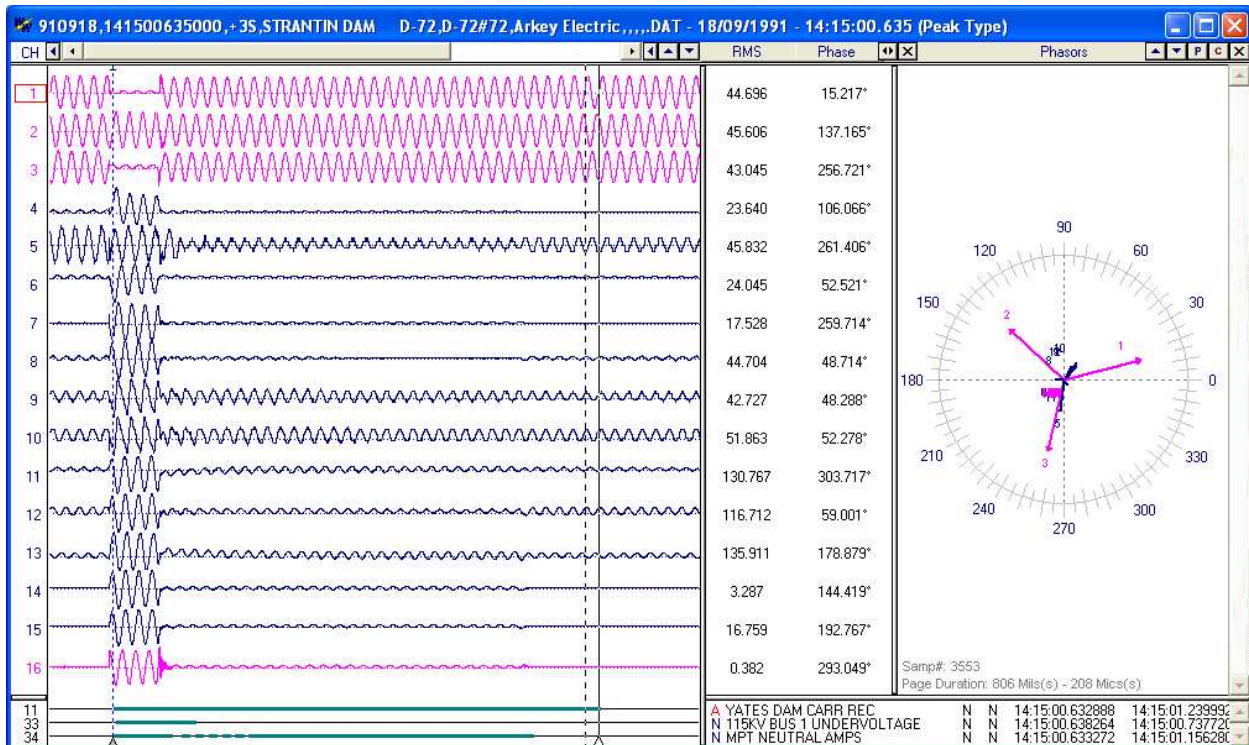


Figure 5.27 Change Frequency: Results

TRUNCATE CYCLES

Truncate Cycles removes the specified number of cycles from the analysis display. Refer to Figures 5.28 and 5.29. Three options are available under the "Truncate Cycles" submenu option.

- Left: Remove all cycles from the first sample to the data bar.
- Right: Remove all cycles from the data bar to the last sample.
- Middle: Remove all cycles from the data bar to the reference bar (blue dotted line).

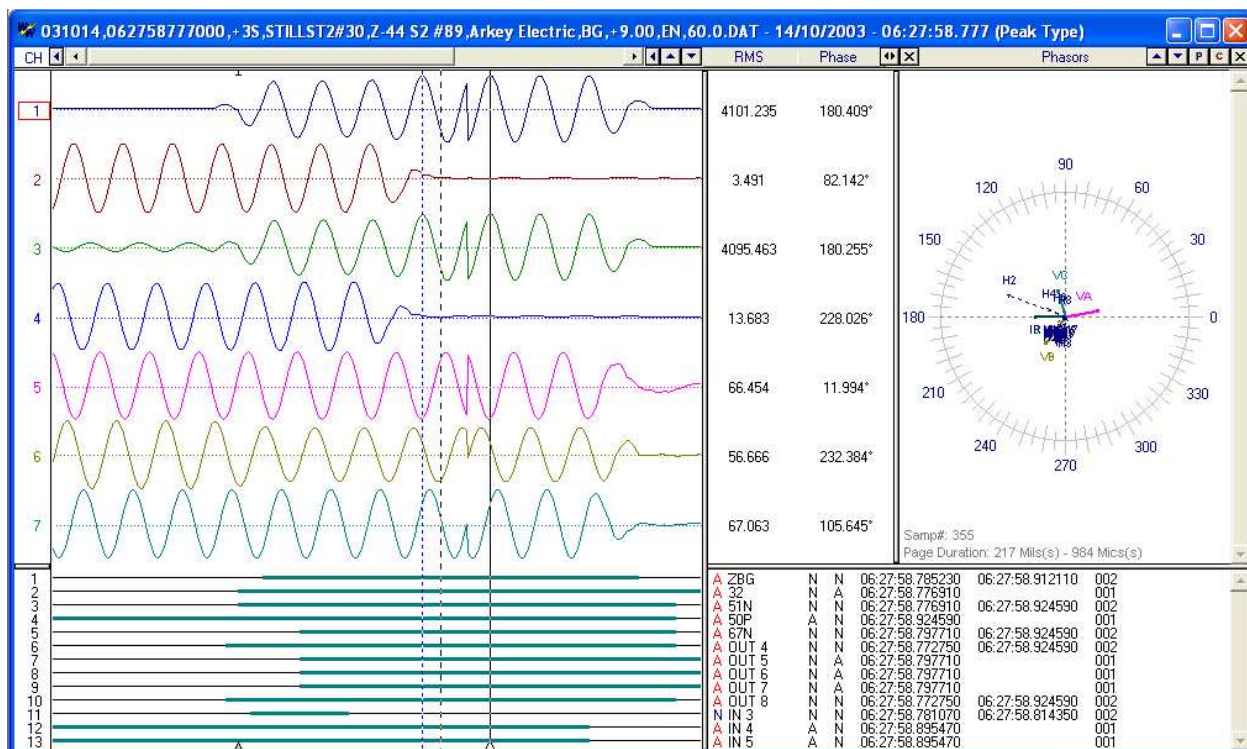


Figure 5.28 Truncate Cycles: Append Non Time Matching Waveforms

After appending two waveform files it may be necessary to truncate the cycle that did not match. First, align the reference bar on the peak before the appended position then align the data bar on the peak following the appended position and select the truncate middle menu option.

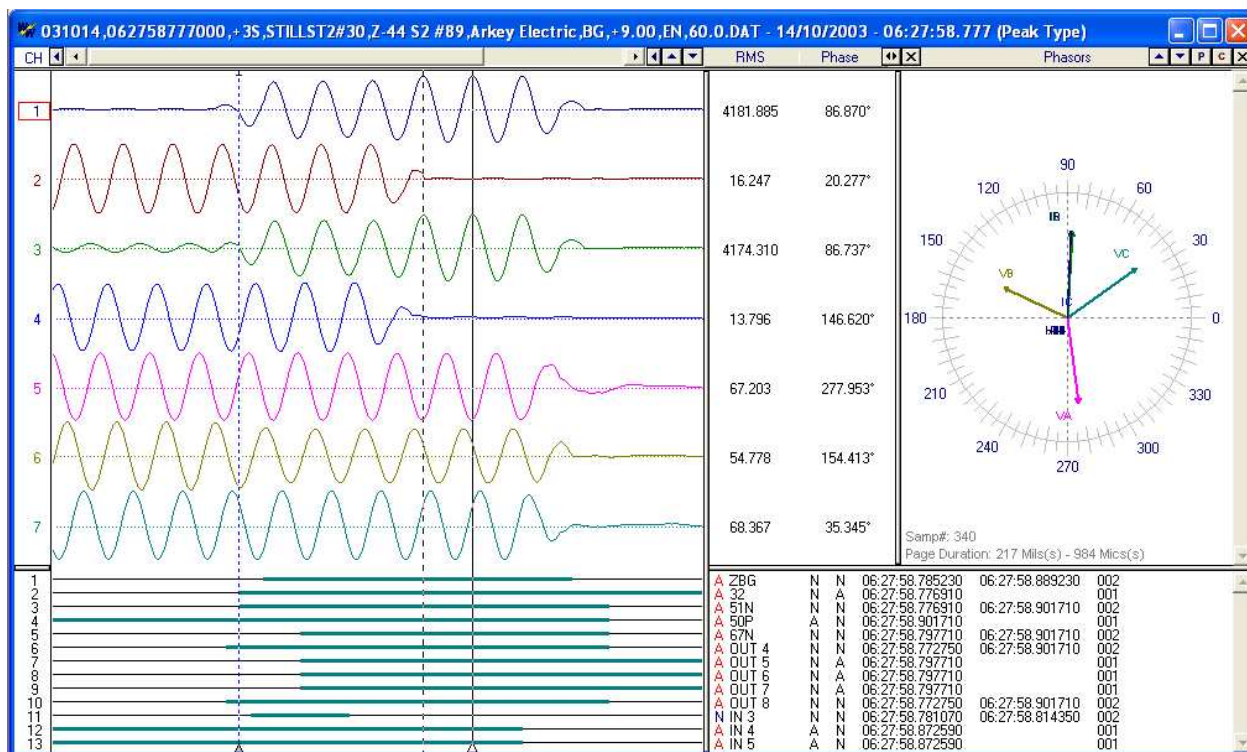


Figure 5.29 Truncate Cycles: Results

DUPLICATE CYCLES

Duplicate Cycles duplicates the cycle at the data bar by the number of times entered in the Duplicate Cycles Dialog. Refer to Figure 5.30. This feature is useful for creating Comtrade files to play back to test set applications and for modeling and simulation applications. Refer to Figures 5.31 and 5.32 for an example that adds five cycles of fault cycles to a file.

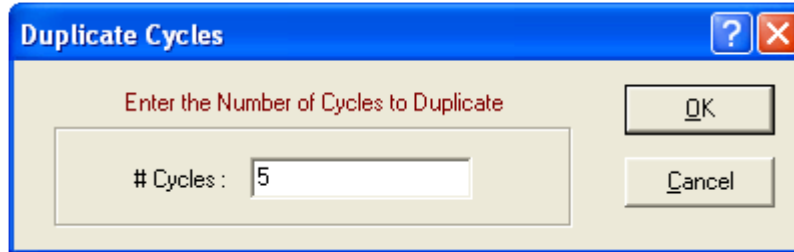


Figure 5.30 Duplicate Cycles Dialog

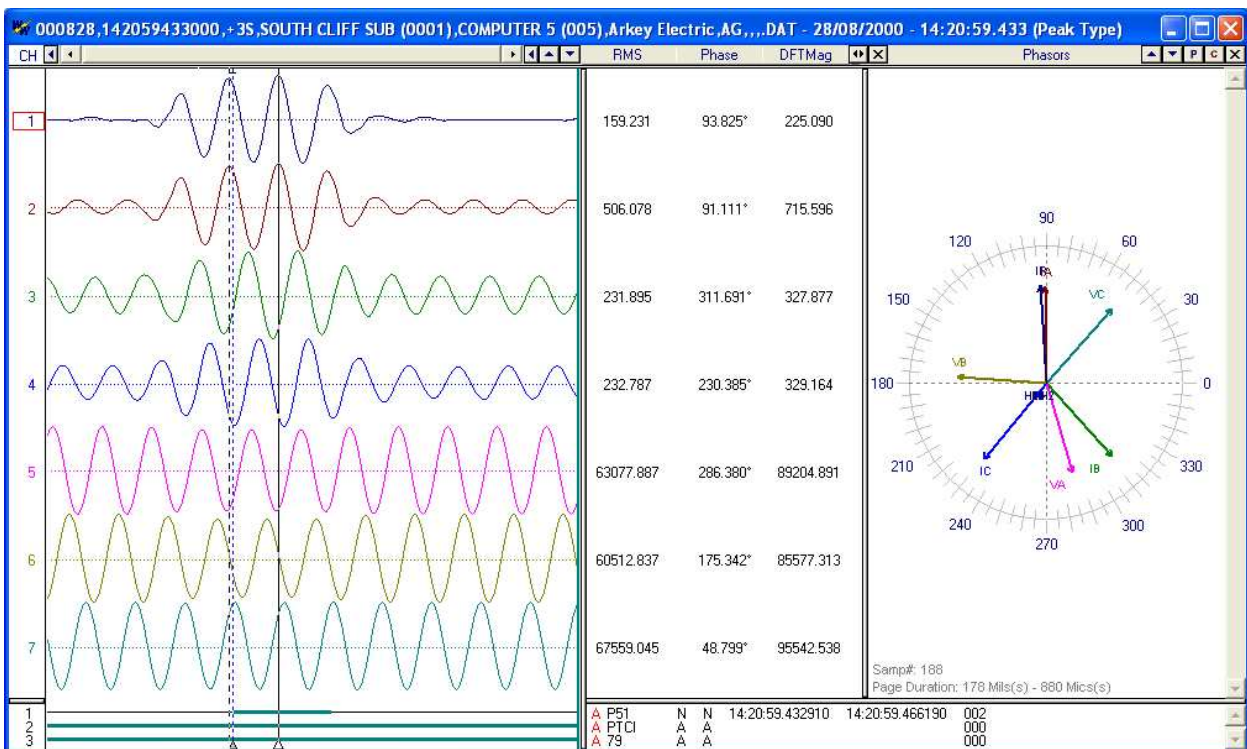


Figure 5.31 Duplicate Cycles: Initial File

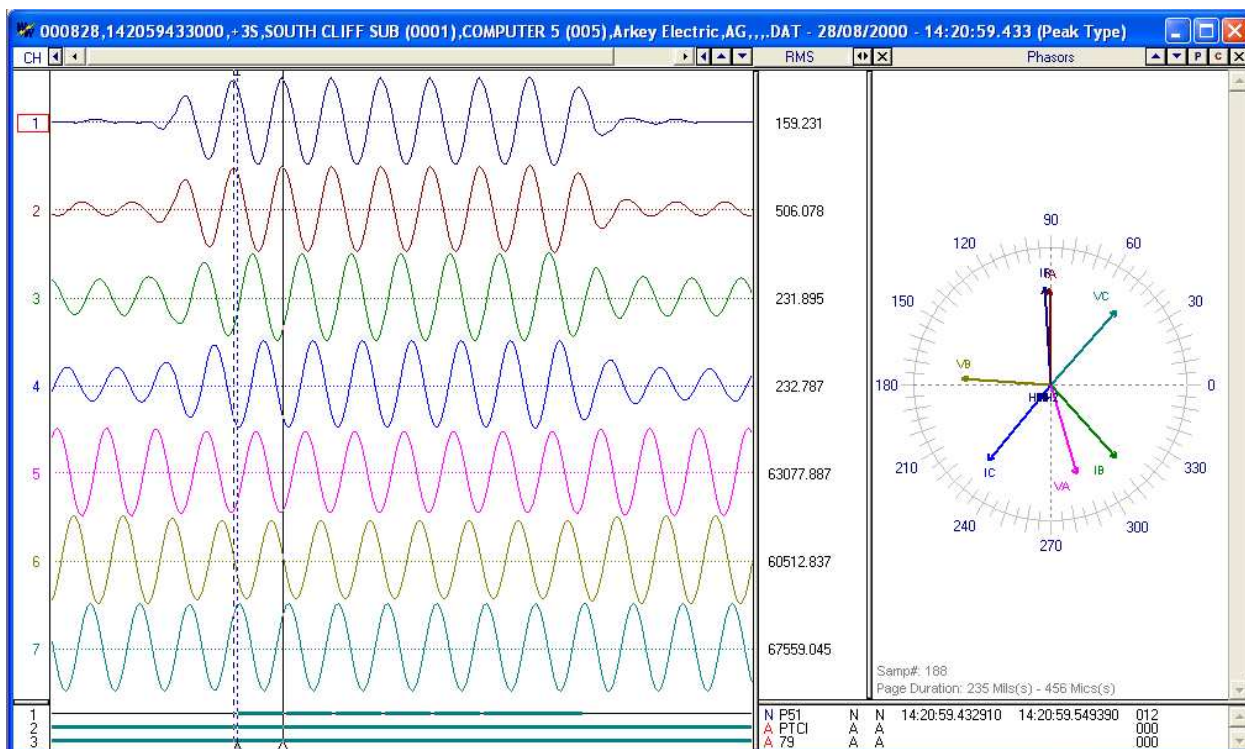


Figure 5.32 Duplicate Cycles: Results

RESTORE ORIGINAL DATA

Restore Original Data will reread and display the sample values from the active waveform file on disk. Any changes made to the analysis window, such as: duplicate cycles, change frequency and truncate cycles will be lost when this feature is activated. If the Open Frequency option is checked in the "Change Frequency" dialog the Restore Original is not available.

MARK RAW VALUES

Mark Raw Values marks the raw values saved in the active waveform file on disk. A small hollow blue circle is placed at the raw value. This feature is helpful in highlighting the raw sample values saved in low sampling rate files. Refer to Figure 5.33.

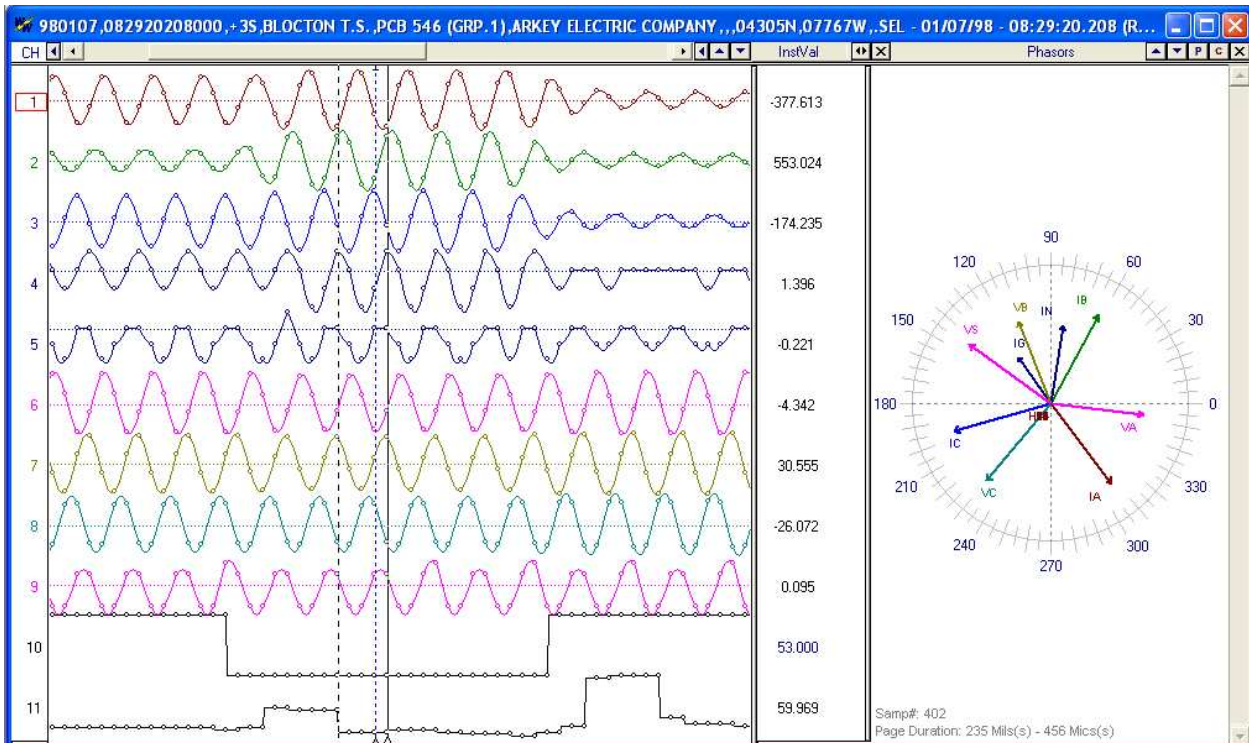


Figure 5.33 Mark Raw Values

MARK PEAK VALUES

Mark Peak Values marks the peak sample values for all visible analog traces. A small solid gray square is placed at the peak values. Refer to Figure 5.34. This feature is helpful in highlighting the positive and negative peak values.

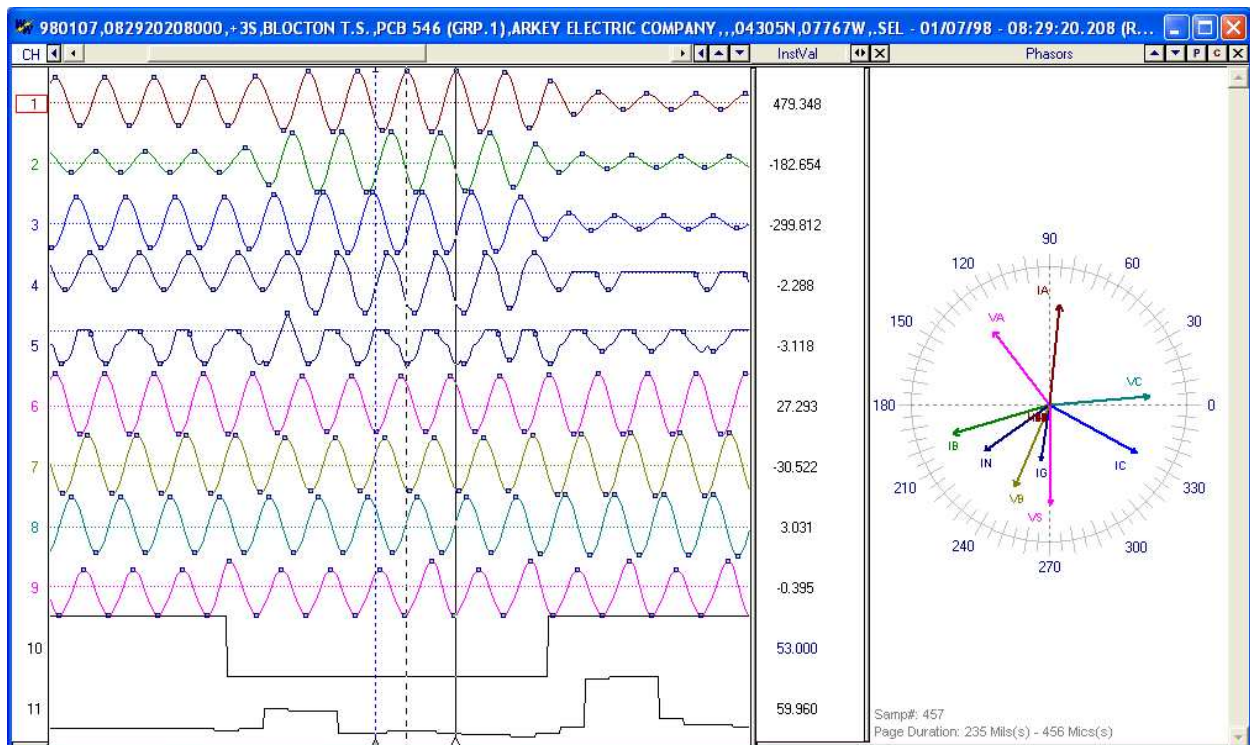


Figure 5.34 Mark Peak Values

MARK CHANGE IN SIGN VALUES

Mark Change In Sign marks all samples where a change in sign occurs. A small solid gray triangle is placed at the change position. Refer to Figure 5.35. This feature is helpful in highlighting the position where a change in sign occurs in the signal.

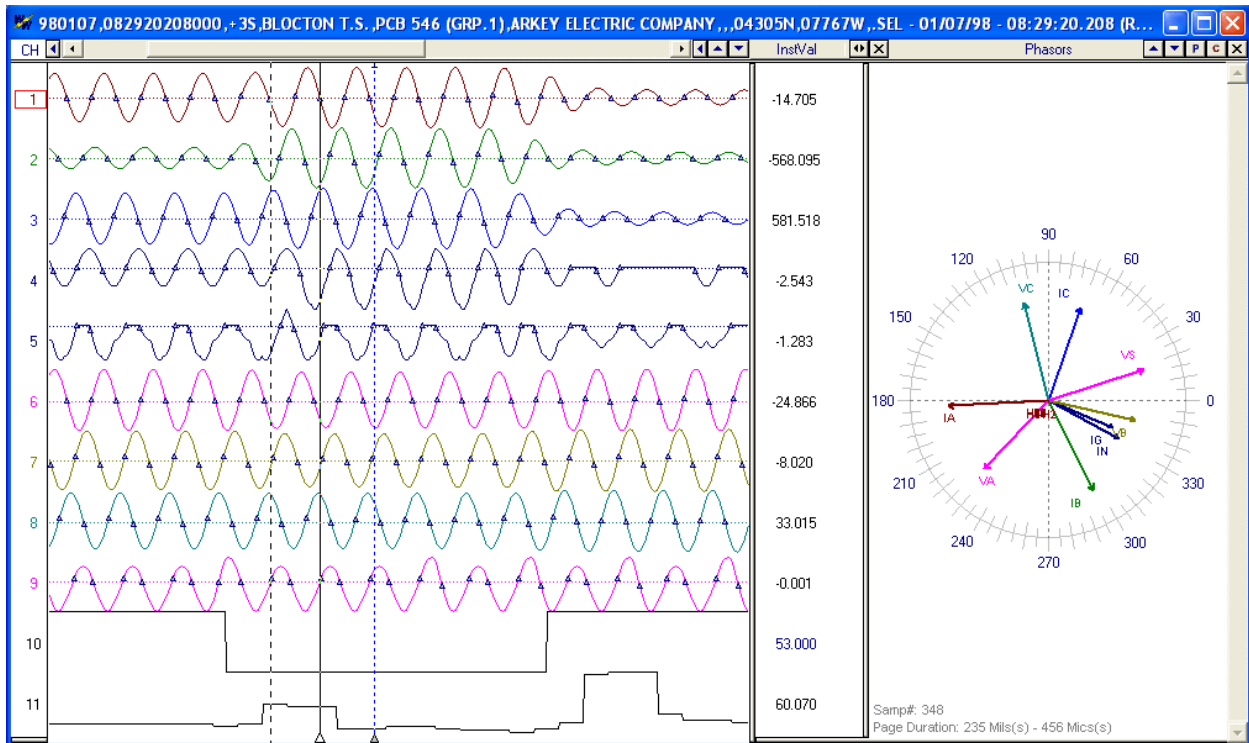


Figure 5.35 Mark Change in Sign

CHANGE ANALOG VALUES (PRIMARY \leftrightarrow SECONDARY)

The values displayed in the analog table are either in primary or secondary quantities. If the file defines the type of values saved the type is displayed in the window header. Refer to Figure 5.36. Also, if the CT and PT ratios are defined in the configuration file the values can be changed from primary to secondary and vice versa. To change the values open the properties dialog and click on the "Driver Data Type" tab, and select the Primary or Secondary radio button to switch between values. Refer to Figure 5.37.

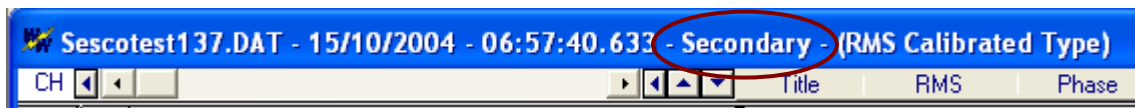


Figure 5.36 Type of Analog Values Displayed

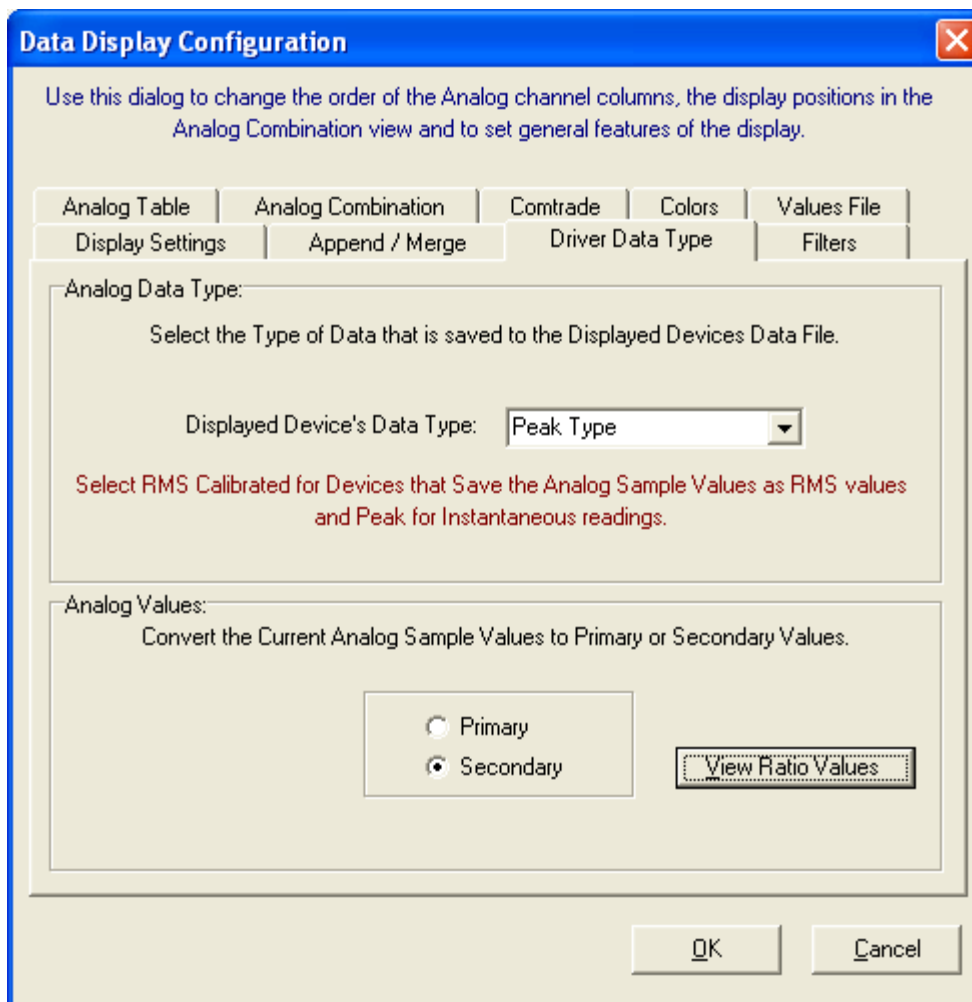
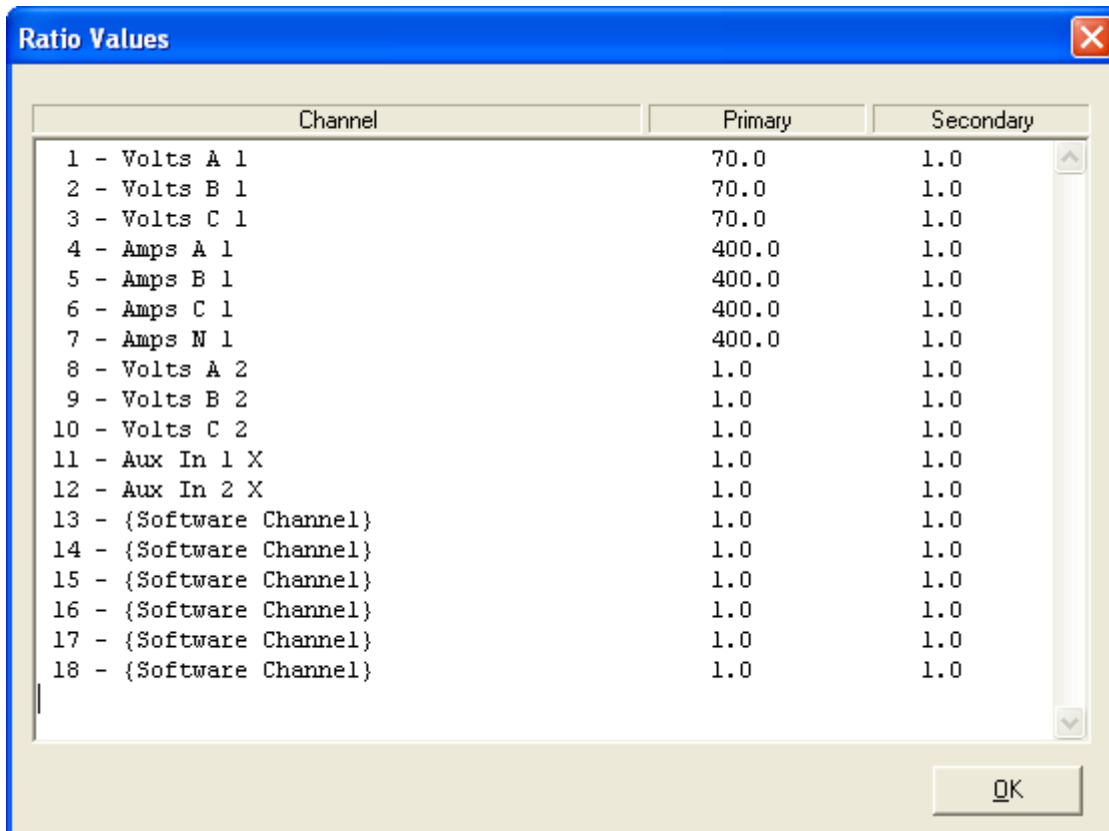


Figure 5.37 Change Analog Values (Primary ↔ Secondary)

The CT and PT ratio values can be viewed by clicking on the "View Ratio Values" button in the "Driver Data Type" tab. The values are listed in a table format for each analog channel. Refer to Figure 5.38.



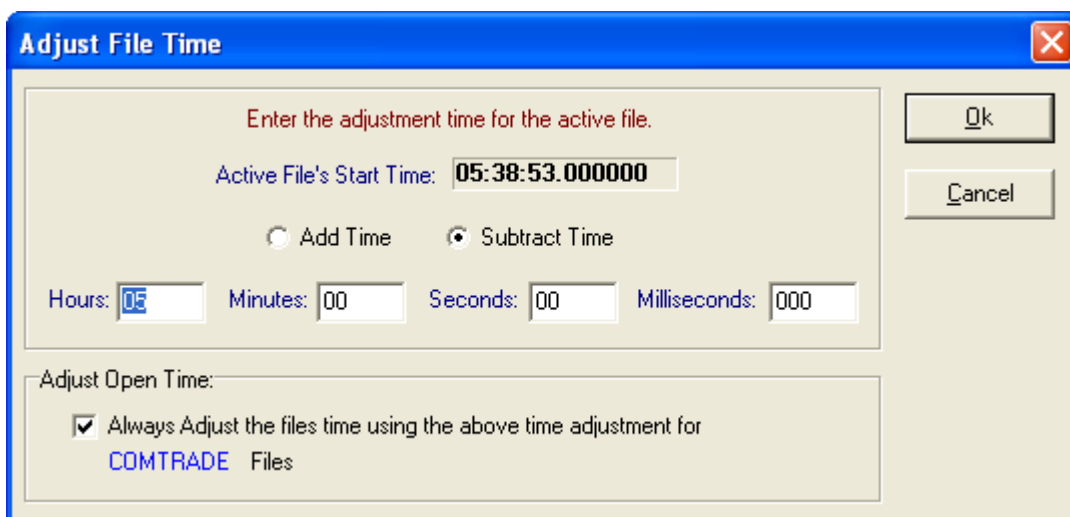
The Ratio Values dialog box displays a table with three columns: Channel, Primary, and Secondary. It lists 18 channels with their corresponding primary and secondary ratio values. The Primary column contains values like 70.0, 400.0, and 1.0, while the Secondary column contains values like 1.0. The last six channels are marked as software channels.

Channel	Primary	Secondary
1 - Volts A 1	70.0	1.0
2 - Volts B 1	70.0	1.0
3 - Volts C 1	70.0	1.0
4 - Amps A 1	400.0	1.0
5 - Amps B 1	400.0	1.0
6 - Amps C 1	400.0	1.0
7 - Amps N 1	400.0	1.0
8 - Volts A 2	1.0	1.0
9 - Volts B 2	1.0	1.0
10 - Volts C 2	1.0	1.0
11 - Aux In 1 X	1.0	1.0
12 - Aux In 2 X	1.0	1.0
13 - {Software Channel}	1.0	1.0
14 - {Software Channel}	1.0	1.0
15 - {Software Channel}	1.0	1.0
16 - {Software Channel}	1.0	1.0
17 - {Software Channel}	1.0	1.0
18 - {Software Channel}	1.0	1.0

Figure 5.38 Ratio Values

ADJUST FILES TIME

The Adjust Files Time allows for adjusting the time of the open file. To open the "Adjust File Time" dialog, select the "Adjust Files Time" menu option under the "Data" menu. You can specify to add or subtract a given time increment from the file's current time. Enter the desired time increment for the hour, minutes, seconds and milliseconds. If there is no adjustment needed on a specific time field enter 0. Refer to Figure 5.39.



The Adjust File Time dialog box is used to adjust the time of the active file. It shows the active file's start time as 05:38:53.000000. Users can choose to add or subtract time in hours, minutes, seconds, and milliseconds. There is also a checkbox to always adjust the file's time using the specified increments for COMTRADE files.

Enter the adjustment time for the active file.

Active File's Start Time: 05:38:53.000000

☐ Add Time ☒ Subtract Time


Hours: 05 Minutes: 00 Seconds: 00 Milliseconds: 000

Adjust Open Time:

☒ Always Adjust the files time using the above time adjustment for COMTRADE Files

Figure 5.39 Adjust Files Time

To always have the file's time automatically adjusted when a specific driver is used to open a file check the "Adjust Open Time" check box.

To show the file's original date and time click on the "Restore Original" button  or select the "Restore Original Data" menu option under the "Data" menu.

CREATING VIRTUAL CHANNELS

The analysis window allows for six software analog channels (SAC) and eight software digital channels (SDC). These additional virtual channels exist only in RAM. The sample values are created using a function of the existing analog/digital channels. Predefined operators can be used to calculate a missing phase, create positive/negative and zero sequence channels; convert channels to secondary or primary values; calculate the resistance of V/I, multiply, divide, add and subtract multiple channels; multiply, divide, add and subtract channel data by a constant value; create an envelope of an analog channel; define over-trigger or under-trigger values; calculate a missing phase; define the prefix and unit for the channel; or perform bit-wise ANDing/ORing on digital traces.

All calculations are designed to operate "on the fly". For the forward looking SAC operator ("@" some positive angle) care must be taken. Upon opening a file and while the system is reading the data samples, the forward samples are not available. In that case, the system uses the current sample instead of the requested forward sample. To execute forward looking SAC instructions, wait until the file is read to use F5 to recalculate.

SAC title and operators can be saved to an ASCII text file on disk by using the "Save" and "Save As" buttons located to the right of the SAC operators. The "Open" button allows for opening existing SAC file without having to manually enter the SAC titles and operators. These features are useful for reusing existing SAC operations on like files. The "New" button clears the existing SAC title and operators.

The SAC and SDC instructions are composed of an operator and an operand. An operand can be a channel defined by the channel number or a constant. Constant values must have a "^" operator before each value to distinguish between channel numbers and constant values. To phase shift analog channels use the "@" sign before each angle defined. All angles must be defined in degrees. Following is a list of all the software operators that are available:

- "+" - Add (Analog)
- "-" - Subtract (Analog)
- "*" - Multiply (Analog)
- "/" - Divide (Analog)
- "^" - Constant value (Analog)
- "@" - Angle in degrees (Analog)
- "e" - Half cycle envelope (Analog)
- "a" - Envelope (Analog)
- "<" - Under-trigger (Analog)
- ">" - Over-trigger (Analog)
- "h" - Harmonic for Channel
- "h=" - Harmonic for all Back Operations
- "x" - real component,
- "y" -imaginary component,
- "m" -magnitude,
- "d" -angle,
- "r" -true rms,
- "f" -cyclic frequency,
- "q" -instantaneous frequency,
- "t" -delta time frequency,

- "b" -operate between bars only,
- "I" - Absolute Value
- "p=" - Prefix (Analog)
- "u=" - Unit (Analog)
- "+" - And (Digital)
- "." - Or (Digital)
- "/" - Instruction terminator (Analog & Digital)

NOTE: All SAC/SDC operations are performed in Reverse Polish Notation (one operation at a time). The instruction set must always terminate with a "/". An operation error is generated if the instruction formats are not followed.

Operators are formatted as a stacked set of instructions. An instruction is composed of four attributes:

1. The operator: +, -, *, :, ...
2. The operand: channel index (1, 2, 3, ...) or constant value (such as ^3.14)
3. The function: @, h, x, y, m, d, f, ...
4. Instruction terminator: /

Press F5 to display the SAC dialog or select "Software Analog Channels" from the Channels menu. Refer to Figure 5.40. To display the SDC dialog select "Software Digital Channels" from the Channels menu. Below are some examples:

Operations	Example	Description
Addition	+7/+8/+9/	Add channels 7, 8, & 9 and store the result in the SAC.
Subtraction	+7/-8/-9/	Subtract channel 8 from channel 7, and store the result in the SAC then subtract channel 9 from the SAC and restore the values in the SAC.
+ Sequence	+1/+2@120/+3@240/^3/p=k/u=volt/	Calculate the + sequence components and store the result in the SAC then set the SAC's prefix and unit.
- Sequence	+1/+2@240/+3@120/^3/p=k/u=volt/	Calculate the - sequence components and store the result in the SAC then set the SAC's prefix and unit.
0 Sequence	+1/+2/+3/^3/p=k/u=volt/	Calculate the zero sequence components and store the result in the SAC then set the SAC's prefix and unit.
Harmonics	+16/h=1/p=k/u=volt/	Extract the 1 st Harmonic component from Channel 16 and store in the SAC then set the SAC's prefix and unit.
Multiplication	+3/^2.66/	Multiply all sample values in channel 3 with the constant value 2.66 and store the result in the SAC.
Division	+7/:3/	Divide all samples values in channel 7 by the sample values in channel 3 and store the result in the SAC.
Half Cycle Envelope	+2/e/	Calculate the half cycle envelope of channel 2 and store the result in the SAC.
Envelope	+12/a/	Calculate the envelope of channel 12 and store the result in the SAC.

Operations	Example	Description
Under-trigger	+4/<135/	Store all the sample values from channel 4 that are < 135 in the SAC.
Over-trigger	+62/>500/	Store all the sample values from channel 62 that are > 500 in the SAC.
Absolute Value	+7/+8/+9/ p=k/u=Volts/	Add channels 7, 8, & 9 and store the absolute value of the result in the SAC then set the SAC's prefix and unit.
Frequency	+7f/u=Hz/	Store the cyclic frequency of channel 7, and set the SAC's unit to Hertz.
Frequency	+7q/u=Hz/	Store the instantaneous frequency of channel 7, and set the SAC's unit to Hertz.
Magnitude	+11m/u=V/p=k/	Store the magnitude of channel 11, and set the SAC's unit to Volt and the prefix to k.
Real	+4x/+5x/+6x/u=V/	Store the real components of the fundamental of 4, 5 and 6 and set the SAC's unit to Volts.
Imaginary	+4/+5/+6/y2/u=V/	Store the imaginary components of 2nd harmonic of 4, 5 and 6 and set the SAC's unit to Volts.
AND	+2/.33/	AND channel 2 with channel 33 and store the result in the SAC. The "." represents the AND operation.
OR	+2/.4/+14/	AND channel 2 with 4, then OR the result with channel 14 and store the result in the SAC. The "+" sign represents the OR operation.

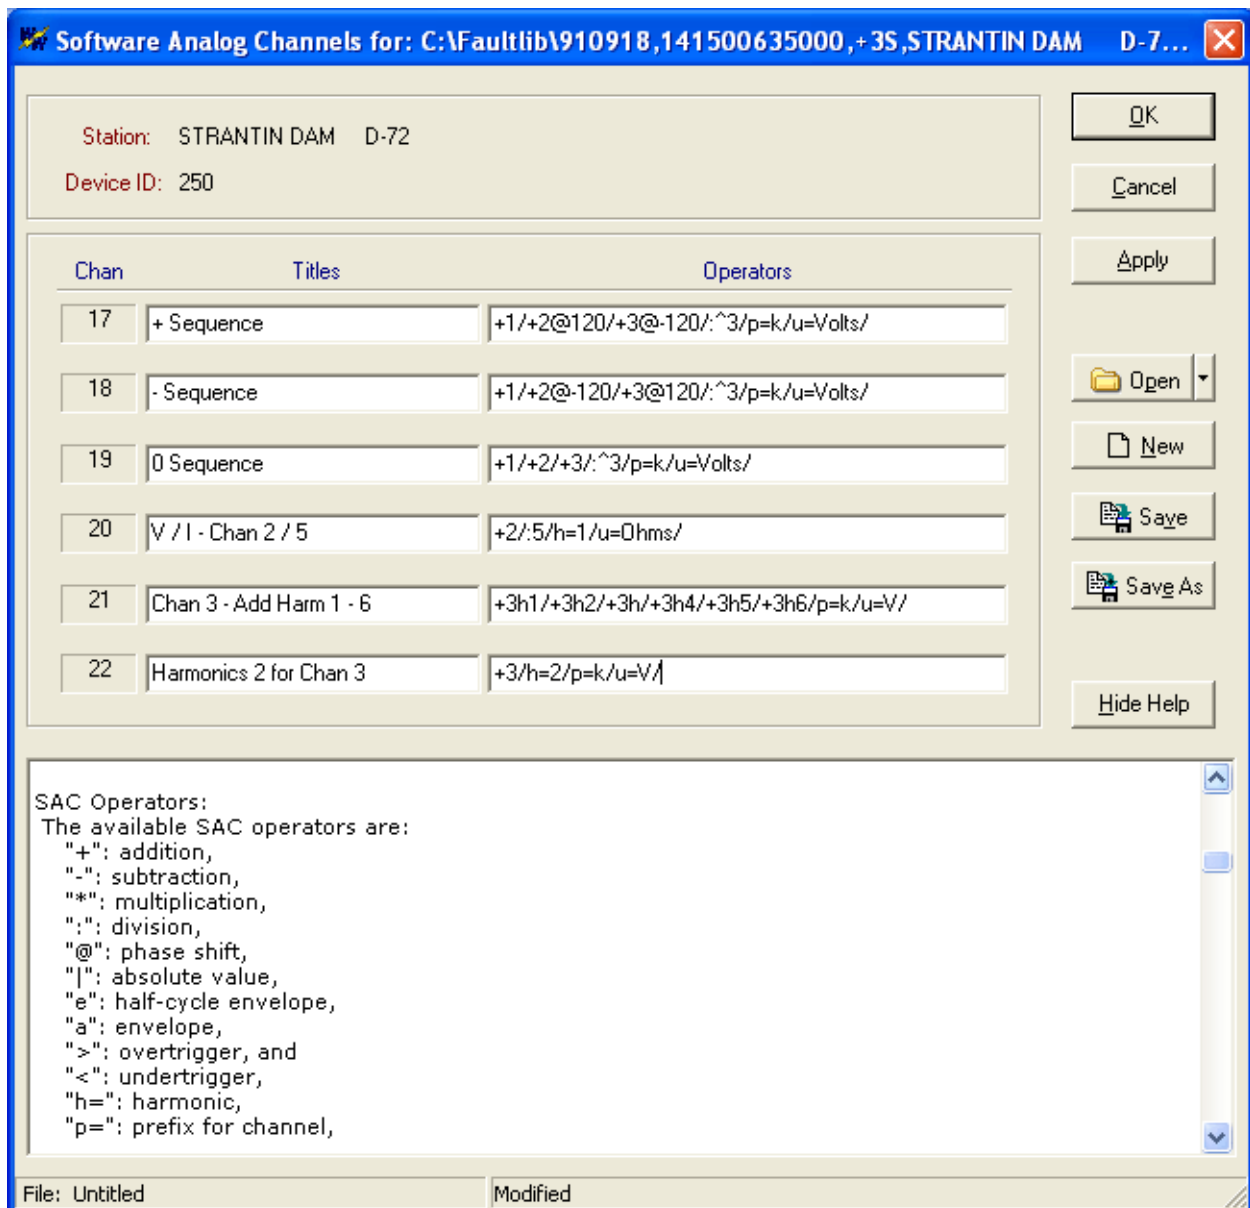


Figure 5.40 SAC Dialog

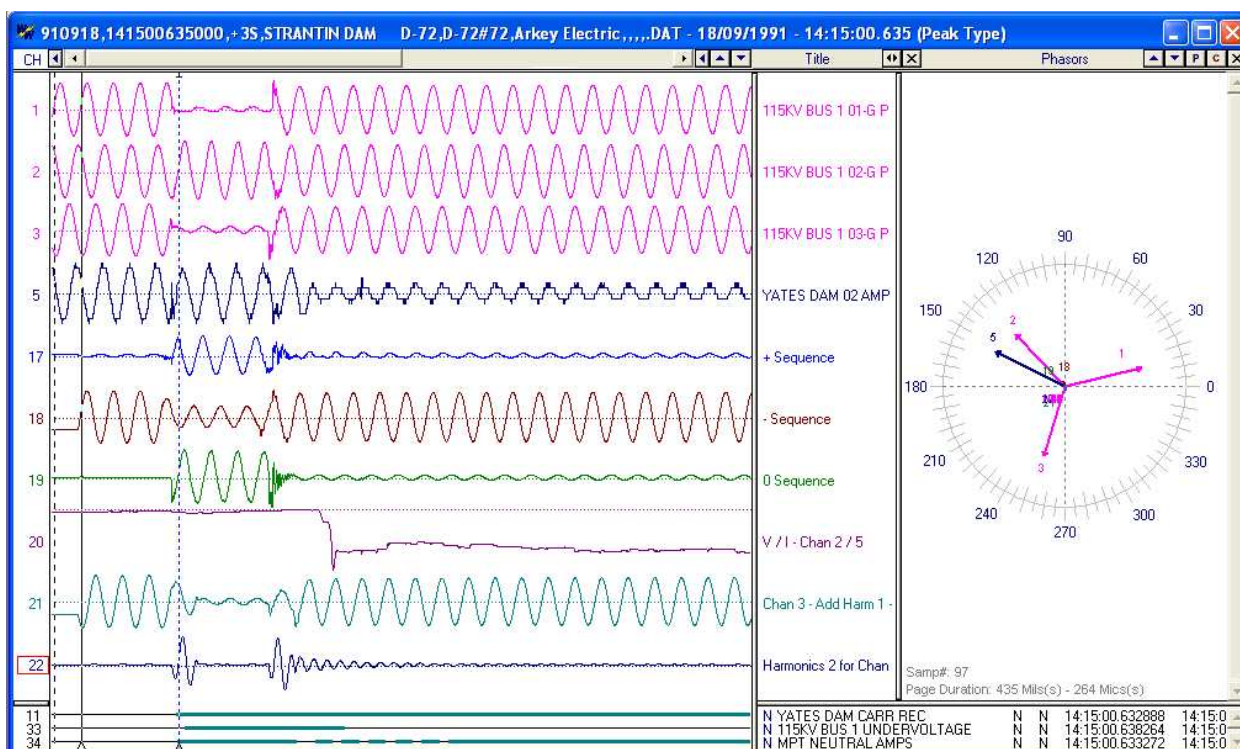


Figure 5.41 SAC Results

Engineers can use the additional channels as a generic tool for monitoring or modeling tasks. A virtual channel can be used to compute one of the phases of a monitored line by adding the remaining phases then subtracting the result from the residual channel. This in turn frees up a hardware channel for other monitoring needs.

The SAC operators and titles can be saved to an ASCII text file on disk to save time when re-entering SAC operator and titles. The SAC files can have any filename but the extension must be .SAC. If an extension is entered when saving a SAC file then the extension is deleted and .SAC is added to the filename. The active SAC path and filename is displayed in the first status field. The second status field indicates if the SAC title or operator fields were modified.

There are 4 options for the SAC files, Open, New, Save and Save As. Each option is explained below:

SAC File Operator	Description
Open	Open an existing SAC file. The Window's open file dialog is displayed. Refer to Figure 5.42. Navigate to the desired folder and double click on the SAC file. The SAC title and operator fields are populated with the contents of the selected file. If the file is not a valid SAC file then an error message is displayed.
New	Clear the current SAC title and operators and change the SAC filename in the first status field to Untitled. If the previous SAC title and operators were modified then a message will be prompted asking to save the existing SACs before clearing the fields.
Save	Save the active SAC title and operators to the SAC file listed in the first status field. If the SAC filename is listed as Untitled then the "Save As" dialog is displayed.
Save As	Save the existing SAC title and operators to a new SAC file. The Window's "Save As" dialog is displayed. Navigate to the desired folder and enter the new name in the "File name" field and click the "Save" button or press enter.

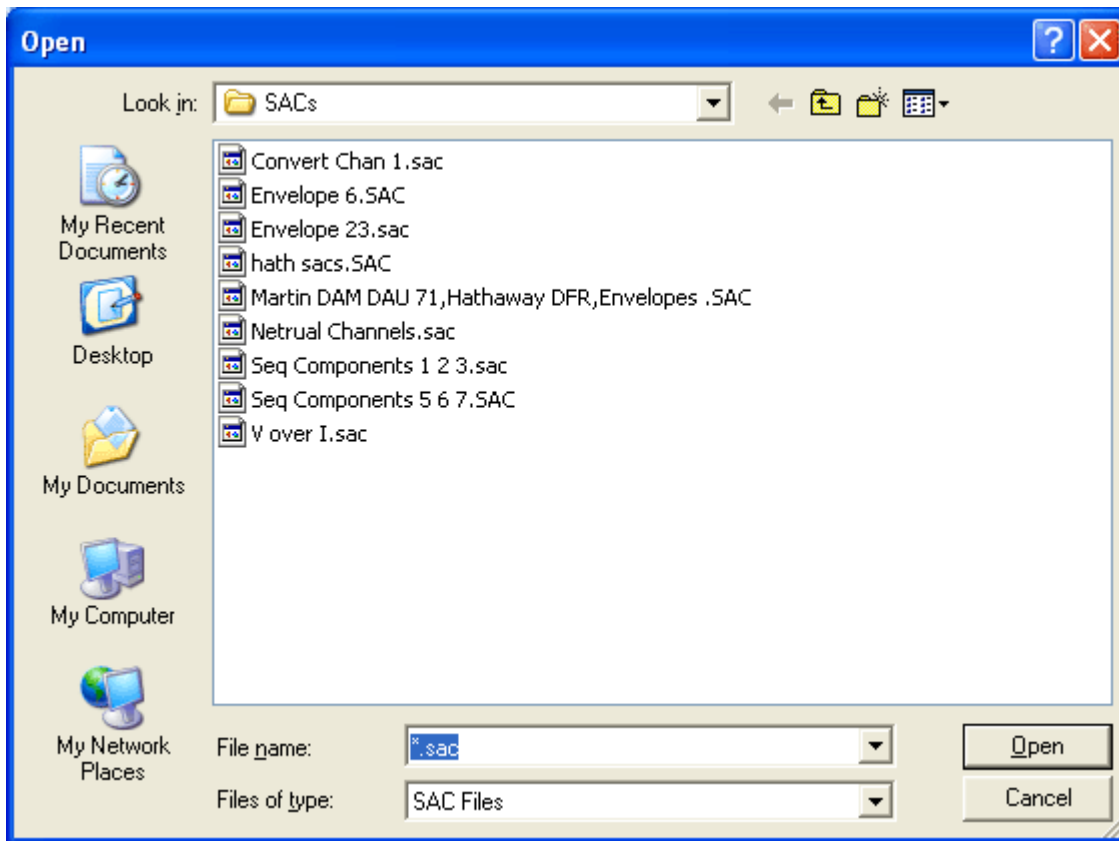


Figure 5.42 Open SAC File

SINGLE ENDED FAULT LOCATION

The Single Ended Fault Location Dialog is used to interface to the SingleEndFaultLocation.dll. The SingleEndFaultLocation.dll will calculate the fault location, fault type and fault time.

The sampling frequency must be set to ensure 24 samples per cycle. The sampling frequency must be set prior to opening the fault location dialog. If the sampling frequency is not set to 1440 Hz for 60 Hz or 1200 Hz for 50 Hz then the change sampling frequency dialog will automatically be displayed. Refer to Figures 5.43 & 5.44. Click OK or press enter to change the sampling frequency then reopen the Fault Location dialog.

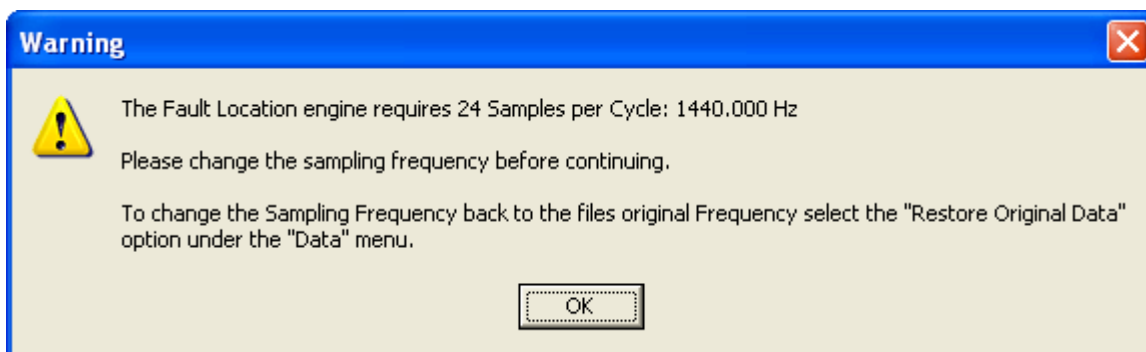


Figure 5.43 Fault Location Change Sampling Frequency Message

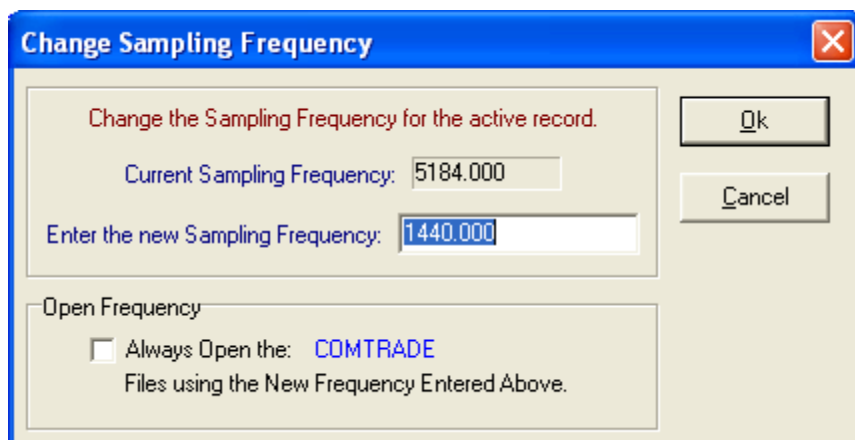


Figure 5.44 Fault Location Change Sampling Frequency Dialog

Also, all sample values sent to the DLL must be in secondary quantities. If the sample values are in primary values then the CT and PT ratio values must be available in the data configuration file. If the CT and PT ratio values are not available a message will be displayed asking to ignore the request or abort displaying the fault location dialog. Refer to Figure 5.45.

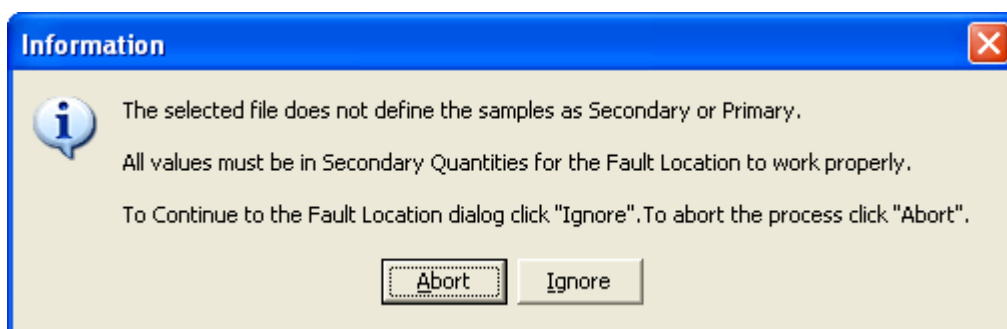


Figure 5.45 Fault Location Secondary Quantities Message

If the analog values are in primary quantities and the CT and PT ratio values are available then the fault location dialog will automatically convert the sample values to secondary quantities before sending them to the DLL.

The fault location window is divided into 6 sections; Inputs, Advanced, Analog Channels, Outputs, Configuration Buttons and Action Buttons. Refer to Figure 5.46. Each section is defined below.

Single Ended Fault Location

Inputs (All in Secondary Values)

	Magnitude	Angle
Zline:	0.061	82.240
kZN:	0.741	-13.340
kZM:	0.000	0.000

Line Length: 174.000
Vnom (Volts): 82.000
Inom (Amps): 1.000

Phase Selection: Internal
Use the Advanced button below to change the Phase Selection.
Advanced

Analog Channels

VA: VOK2A IA: IAR2A
VB: VOK2B IB: IAR2B
VC: VOK2C IC: IAR2C
IM:
Pre Reference Bar Cycles: 10
Post Reference Bar Cycles: 100

Outputs

Flt-Dist: 42.209
Flt-Type: AN
Flt-Time: 15/10/2004 06:57:40.654707

Errors and Warnings

Open Save Save As New Start Print Show Help Close

File: C:\Program Files\Borland\Delphi7\Bin\Wavewin\LongLine.FLT Start Samp: 114 Total Samps: 2641

Figure 5.46 Fault Location Dialog

Input Fields

All input fields must be entered in secondary quantities.

Field	Type	Units	Description
Zline	Real	Per Unit Length	Positive sequence impedance
Zline Angle	Real	Degrees	Positive sequence angle
kZN	Real	Factor	Compensated zero sequence impedance ($Z_0 - Z_1$)/(3* Z_1)
kZN Angle	Real	Degrees	Compensated zero sequence factor angle ($Z_0 - Z_1$)/(3* Z_1)
kZM	Real	Factor	Mutual compensation factor (Z_{0m})/(3* Z_1)
Line Length	Real	Not Required	Line Length
Vnom	Real	Voltage	Nominal phase to phase voltage
Inom	Real	Amps	Nominal current

Advanced Dialog

The advanced dialog is used to enter specific information to help tune the fault location algorithms. Refer to Figure 5.47. Modify the advanced dialog to specify the phase selection, Z1 & Z2 % of line, thresholds and reach settings. Each field is explained below.

Advanced Fault Location

Inputs

Z1 (% of Line Length): 1.200 R0: 10.000 /Inom I0 Threshold (% of Inom): 10.000

Z2 (% of Line Length): 1.200 Rg: 20.000 /Inom I2 Threshold (% of Inom): 20.000

Ph Select Index: 241 Average Count: 24

Faulted phase selection

Ph Select Mode: Internal

Note: If phase selection is set to External then the reference bar must be placed a 1/4 cycle after the fault otherwise false results will occur.

Save Cancel

Figure 5.47 Fault Location Advanced Dialog

Field	Type	Units	Description
Z1 (% of Line)	Real	Percent	Zone 1 forward impedance (default value is 120% of line positive sequence impedance (=1.2 * Zline * Length))
Z2 (% of Line)	Real	Percent	Zone 2 reverse impedance (default value is 120% of line positive sequence impedance (=1.2 * Zline * Length))
R0	Real	Ohms	Phase loop resistance reach (default value set to 10/Inom)
Rg	Real	Ohms	Ground loop resistance reach (default value set to 20/Inom)
I0 Threshold	Real	% of Inom	Zero sequence current threshold for VTS (default value set to 10)
I2 Threshold	Real	% of Inom	Neg. sequence current threshold for VTS (default value set to 10)
Ph. Select Index	Integer	Samples	Index of the sample corresponding to the fault inception instance (this field is automatically calculated according to the position of the reference bar and the Pre and Post reference bar cycles defined in the Analog Channel section).
Average Count	Integer	Samples	Total post fault samples for averaging fault distance (default value set to 24)
Ph. Select Mode	N/A	N/A	Phase selection mode (Internal, AG, BG, CG, AB, BC, CA)

If the Phase Section is set to internal then the fault location algorithms will automatically determine the fault position in the file. If it is set to external then the user must specify where the fault position is in the file. To do this move the Reference bar in the data plotting window to a 1/4 cycle after the fault. The reference bar must be set prior to opening the fault location dialog.

Analog Channels:

Select the Current and Voltage channels from the drop down lists. Also, define how many cycles to send before the Reference bar (blue dotted line) and after the reference bar. The reference bar can be moved by right clicking on the desired sample.

Outputs:

The results of the fault location calculations are displayed in the output section. The Fault Distance, Fault Type and Fault Time are displayed. Any errors or warnings sent from the SingleEndFaultLocation.dll are displayed in the Error and Warnings edit box.

Configuration Buttons:

The configuration buttons allow for saving the fault location fields, creating a new fault location configuration and for opening previously saved configurations. The configuration files must have a *.FLT extension. Click on the "Open" button to open an existing configuration. Window's file navigation dialog is displayed, navigate to the desired folder and double click on the fault location file.

To save an existing configuration, under a new name click on the "Save As" button. Navigate to the desired folder enter the new name then click "Save". The extension must be .FLT.

Click the "Save" button to save any changes made to an existing configuration. To create a new fault location configuration, click the "New" button.

Action Buttons:

The action buttons are used to perform specific actions. Each button is described below:


- **Start:** The Start button initiates all communications with the SingleEndFaultLocation.dll. It first sends all of the input fields, next all samples are sent to the DLL. The starting sample and the total number of samples sent is defined by the reference bar position and the Pre and Post reference bar cycles. The starting sample number and the total number of samples sent are displayed in the status bar. Once all samples are sent it then calls calculate. If no errors occurred then the fault location results are displayed in the Output section. All errors or warnings are displayed in the Error & Warning edit box.
- **Print:** The print button sends a screen dump of the fault location dialog to the system's default printer.
- **Help:** Show or hide the drop down help window.
- **Close:** The close button closes the fault location dialog. If any changes were made to the fault location fields a message will be display asking to save the changes.

PLAY CHANNELS AUDIO

It is now possible to hear the characteristics of a signal through the analysis window. To play the audio of a specific analog channel first mark the channel. Then open the "Analog Channel Audio" dialog by selecting the "Play Channels Audio" menu option under the "Data" menu. The Analog Channel Audio dialog is displayed in the bottom right hand corner of the analysis window. Refer to Figure 5.48.



Figure 5.48 Play Audio Dialog

The “Active Channel” section displays the analog channel marked in the analysis window. The “Audio Controls” section allows for playing the active analog channel’s data through the computer’s speakers and for increasing/decreasing the volume of the output. The “Save .WAV File” section allows for saving the analog channel data in the Window’s .WAV format. Click the folder button  to select a destination folder and to enter a new “.WAV” file or for selecting an existing “.WAV” file. The selected folder and filename will be updated in the “Audio Filename” field.

To view the saved “.WAV” file exit the analysis window, navigate to the “.WAV” folder and double click on the wave file. A new display driver has been added to plot Microsoft’s “.WAV” files.

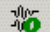
ALIGN CHANNEL DATA

The “Align Channel Data” option aligns the analog channel samples according to the defined phase shift angles. The alignment routines use the Thiran 3rd Order All Pass Fractional filter. The all-pass delay guarantees no magnitude deterioration and fractional because delays can be a fraction of the sample interval.

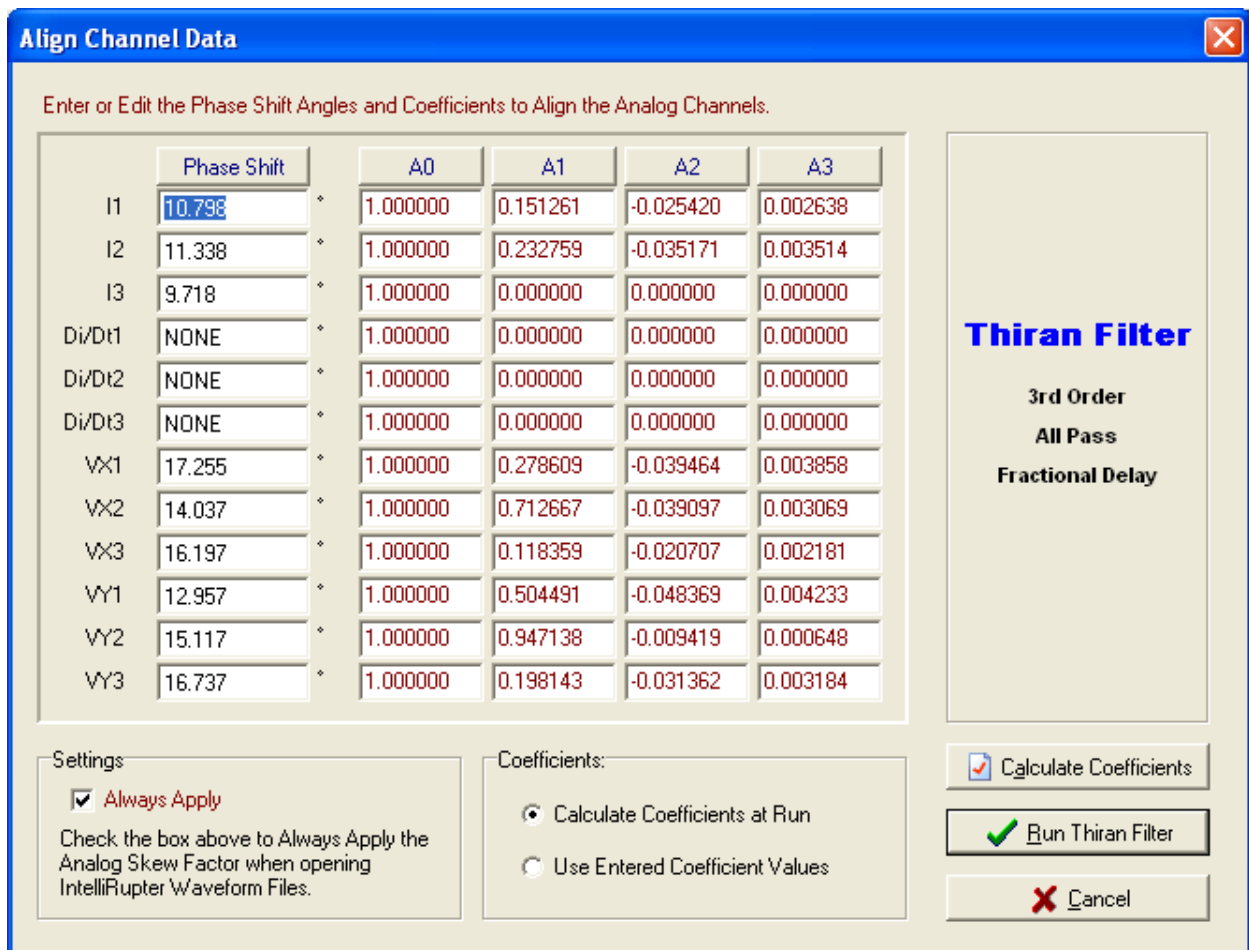
To align the analog channels manually select the “Align Channel Data” menu option under the “Channel” menu. If the Thiran filter has already been applied to the displayed analog channels a message is displayed. Refer to Figure 5.49.



Figure 5.49 Align Channel Message

To continue to the “Align Channel Data” dialog click “Yes”. To apply the filter to the file’s original unfiltered data click “No” or “Cancel”. Then select the “Restore Original Data” menu option under the “Data” menu or click on the “Restore Original” menu button. 

The “Align Channel Data” dialog applies the Thiran filter according to the entered Phase Shift angles. Enter the phase shift angle for each analog channel. Refer to Figure 5.50. If the filter does not apply to a specific analog channel enter 0 or leave the field blank or enter NONE. To display the coefficient values used for each analog channel click the “Calculate Coefficients” button. The “A0, A1, A2 and A3” fields will be updated with the coefficients for the entered phase shift angles.



Align Channel Data

Enter or Edit the Phase Shift Angles and Coefficients to Align the Analog Channels.

	Phase Shift		A0	A1	A2	A3
I1	10.798	*	1.000000	0.151261	-0.025420	0.002638
I2	11.338	*	1.000000	0.232759	-0.035171	0.003514
I3	9.718	*	1.000000	0.000000	0.000000	0.000000
Di/Dt1	NONE	*	1.000000	0.000000	0.000000	0.000000
Di/Dt2	NONE	*	1.000000	0.000000	0.000000	0.000000
Di/Dt3	NONE	*	1.000000	0.000000	0.000000	0.000000
VX1	17.255	*	1.000000	0.278609	-0.039464	0.003858
VX2	14.037	*	1.000000	0.712667	-0.039097	0.003069
VX3	16.197	*	1.000000	0.118359	-0.020707	0.002181
VY1	12.957	*	1.000000	0.504491	-0.048369	0.004233
VY2	15.117	*	1.000000	0.947138	-0.009419	0.000648
VY3	16.737	*	1.000000	0.198143	-0.031362	0.003184

Thiran Filter

3rd Order
All Pass
Fractional Delay

Settings


☒ Always Apply


Check the box above to Always Apply the Analog Skew Factor when opening IntelliRupter Waveform Files.

Coefficients:

☒ Calculate Coefficients at Run

☐ Use Entered Coefficient Values

 Calculate Coefficients

 Run Thiran Filter



 Cancel

Figure 5.50 Align Channel Data Dialog

To always apply the Thiran filter on files for the active driver click the “Always Apply” check box. Always apply automatically runs the Thiran filter with the defined phase shift angles before displaying the file.

To display the files original samples click the “Restore Original” menu button  or select the “Restore Original Data” menu option under the “Data” menu.

The coefficients used for the filter can be edited. If the coefficients are modified click the “Use Entered Coefficients Values” radio button. To have the coefficients automatically calculated when the filter is applied click the “Calculate Coefficients at Run” radio button.

USER VIEWS

User Views allow for saving and displaying specific information about a selected view. When a view is saved the following information is saved to an ASCII text file in the user defined folder.

- Displayed analog channels,
- Analog channel order,
- Superimposed channels,
- Analog channel colors,
- Digital channels displayed,
- Sampling frequency,
- Time scale,
- Sliding window size (RMS bar to Data bar),
- Phasor window size,
- Table window size,
- Red fault bar,
- Auto scale and
- Phasor or circular chart displayed

To save a view, first setup the desired view. Then select the “Save View” menu option under the “View” menu. The “Save View” dialog is displayed. Refer to Figure 5.51.

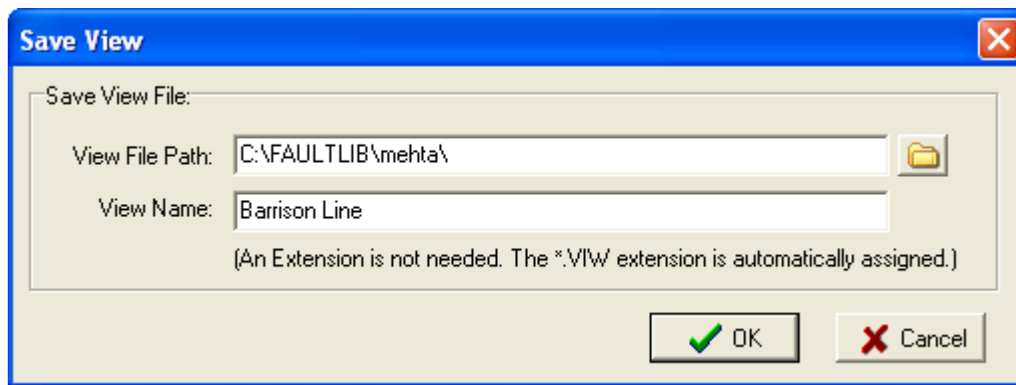


Figure 5.51 Save View Dialog

Enter the view’s name in the “View Name” field and select or enter the destination folder into the “View File Path” field. By selecting the destination folder, it is possible to save a hierarchy of views that allows for easy access to specific views according to the users preference.

To select a view open the view drop down menu. Refer to Figure 5.52. The drop down menu lists the last seven saved/selected views. If the view is not listed click on the “More View” option to open Microsoft’s select file dialog. Refer to Figure 5.53. Navigate to the view’s folder and double click on the view file.

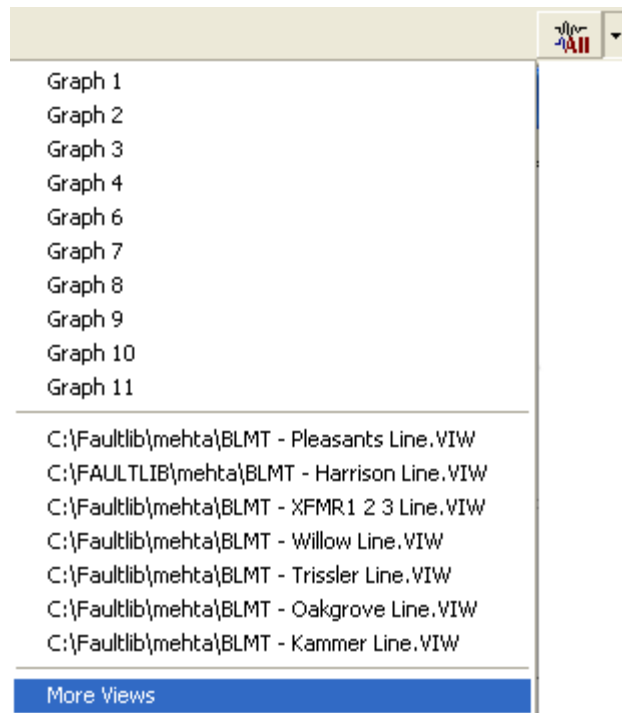


Figure 5.52 Select View Drop Down Menu

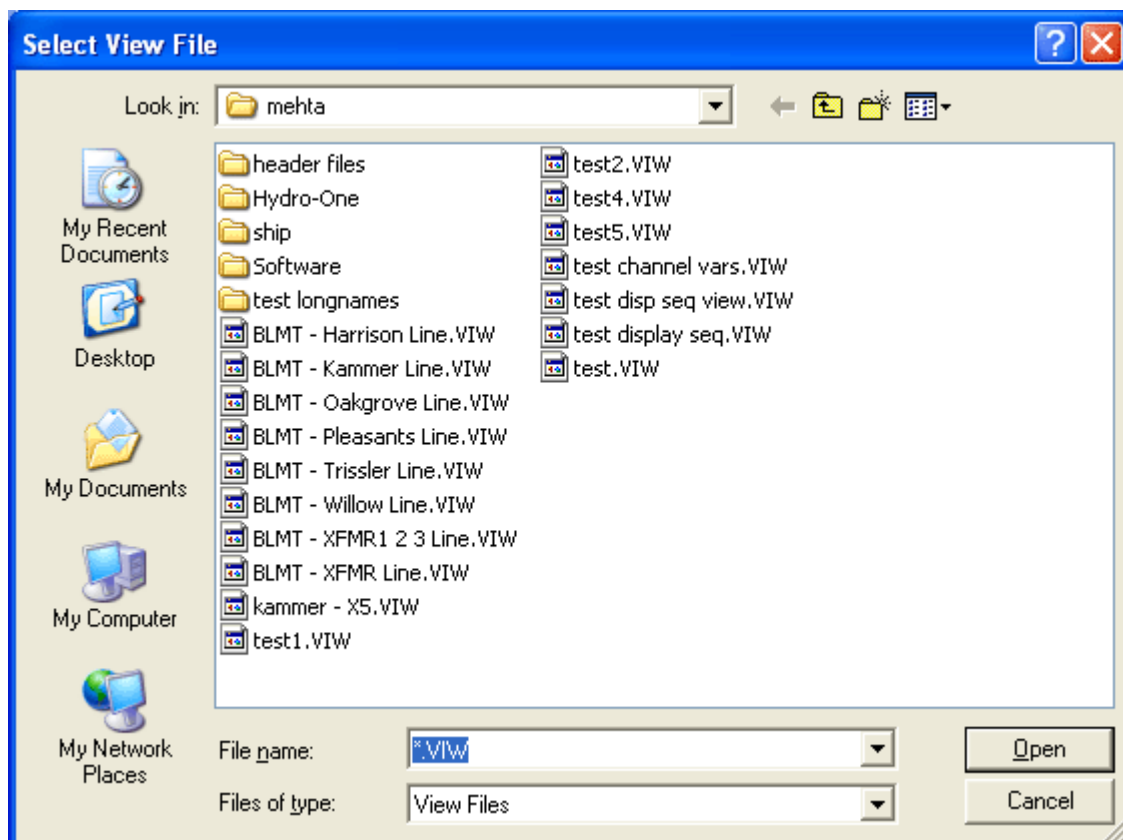


Figure 5.53 Select View File Dialog

To view the details of a saved view before selecting it, open the “Select View” dialog from the “View” menu. Refer to Figure 5.54. The select view dialog has four sections. On the left side of the dialog is the list of all the available views located in the displayed view path. To change the view path either use the browse button or select a previous navigated directory from the “View Path” drop down list. Under the view files is the window’s settings defined in the file. On the right side is the view information for each analog channel and digital channel in the view.

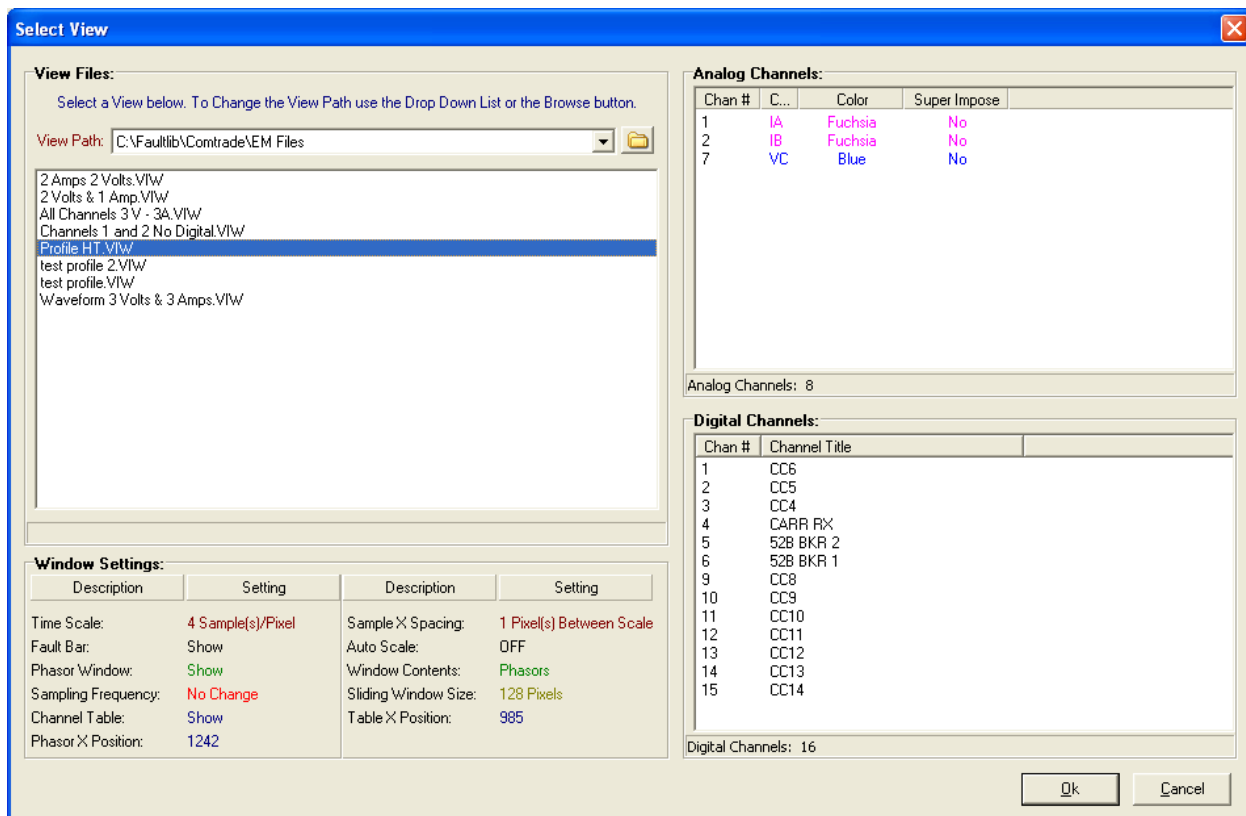


Figure 5.54 Select View Details Dialog

Double click on the view file or select the file and click “OK”. If the analog channel and digital channel names defined in the view file are not in the displayed file than an error message is displayed. To exit the dialog without selecting a view, click on the “Cancel” button.

C H A P T E R 6

Fields & Features

This chapter describes all of the fields and features available in the software. They are listed alphabetically for your convenience.

ACTIVE TOPIC - HELP

Location: All child windows

Description: Display the active window's Help file.


Activation: *Menu:* Alt-H, T

ADJUST FILES TIME

Location: Analysis

Description: The Adjust Files Time allows for adjusting the time of the open file. To open the “Adjust File Time” dialog select the "Adjust Files Time" menu option under the "Data" menu. You can specify to add or subtract a given time increment from the files current time. Enter the desired time increment for the hour, minutes, seconds and milliseconds. If there is no adjustment needed on a specific time field enter 0.

Activation: *Menu:* Alt-D, J

Comments: To always have the file's time automatically adjusted when a specific driver is used to open a file check the "Adjust Open Time" check box. To show the file's original date and time click on the “Restore Original” button  or select the “Restore Original Data” menu option under the “Data” menu

See Also: Adjust Files Time in Chapter 1


ALIGN CHANNEL DATA

Location: Analysis

Description: The Align Channel Data option allows for aligning the channel data using the Thiran 3rd Order All-Pass Fractional filter. To open the “Align Channel Data” dialog select the "Align Channel Data" menu option under the "Channel" menu. Enter the phase shift for each analog channel. If the filter does not apply to a specific analog channel, enter 0 or leave the field blank. Click the “Run Thiran Filter” to apply the filter.

Activation: *Menu:* Alt-C, T

Fields:	<i>Phase Shift:</i>	The phase shift angle for each analog channel.
	<i>A0:</i>	The Thiran A0 coefficient for each analog channel.
	<i>A1:</i>	The Thiran A1 coefficient for each analog channel.
	<i>A2:</i>	The Thiran A2 coefficient for each analog channel.
	<i>A3:</i>	The Thiran A3 coefficient for each analog channel.
	<i>Always Apply:</i>	Always apply the filter when opening files for the active driver.

- Coefficients:** Calculate coefficients at run or use the entered coefficients.
- Options:**
- Calculate Coefficients:* Calculate the Thiran coefficients for each analog channel.
 - Run Thiran Filter:* Run the Thiran filter.
 - Esc/Cancel:* Exit the dialog without executing the command.
- Comments:** To always have the filter automatically applied when a specific driver is used to open a file check the "Always Apply" check box. To show the file's original date and time click on the "Restore Original" button  or select the "Restore Original Data" menu option under the "Data" menu.
- See Also:** Align Channel Data in Chapter 1


AMETEK TR*/DL*/PQR128 DRIVER

- Location:** File Manager (Universal Viewer)
- Description:** Change the driver at the cursor position to the Ametek TR*/DL*/PQR128 driver.
- Activation:** *Menu:* Alt-D, P
- Comments:** An error message is displayed if the selected file is not a valid Ametek file. Files that have a ".AMT" extension or files that have the first 2 characters in the name as "ZQ" and the file has no extension are automatically tagged as Ametek files.
- See Also:** Display Oscillography in Chapter 1
Associating File Types in Chapter 1

ANALOG MARK/UNMARK ALL

- Location:** Analysis
- Description:** Mark all analog channels if there are no analog channels marked otherwise unmark all the marked channels.
- Activation:** *Menu:* Alt-C, N
- Comments:** The channels ID and titles are displayed in light red when marked. Press F8 to mark or unmark all the analog and digital channels.


ANALOG TABLE VIEW

- Location:** Analysis
- Description:** Displays the channel titles, ASV, units, and associated data values.
- Comments:** Use the  button or the shift-right/left arrow keys to scroll the columns in the table. This button is located to the right of the analog table headers.
- See Also:** Viewing Analog Data in Analysis Quick Start.

ANIMATED CAD- DXF

Location: Device Manager

Description: Display the DXF window to periodically execute the device's assigned drivers and update the parsed information into the appropriate graphical DXF drawing.

Activation: *Direct:* F8 – menu button 
Menu: Alt-O, D

Comments: Information parsed by the device drivers can be used to populate a CAD-DXF drawing. In order to populate the drawing, control points must be added to offset the parsed data. The word “Device”, the associated device number, and/or the device title (optional) indicates a control point. For example, if the CAD-DXF reader encounters the text “Device 12 SEL-321” in the DXF file, the information parsed by the assigned driver is offset at the upper left corner of the letter “D” in the word “Device”. Refer to Appendix B for more information on setting up DXF control points.

DXF drawings can be created using an off the shelf program such as AutoCAD, Turbo CAD, Technical Visio, Drafix, or MEDUSA. The animated CAD-DXF reader also supports layered objects and multiple paging views. To activate the animated CAD-DXF display, click the **DXF** menu button or press F8.

See Also: Animated CAD-DXF in the Device Manager Quick Start.

APPEND LOGS

Location: File Manager

Description: Combine a number of log files (ABB Load Profile, Comtrade Logs and SDC Logs), of the same types (the columns match), into one comma delimited file with the extension .CSV.

Activation: *Menu:* Alt-O, R, A

Comments: The files must be of the same type (columns must be equal and data extracted from the same device). The save file can be displayed in a table or plotted in the log data viewer.

See Also: Combine Logs

APPEND OPEN FILES

Location: Analysis

Description: Combine a number of open files of the same type (the analog/digital channel titles must match) in time. All of the currently open waveform files will be appended into a new analysis window.

Activation: *Menu:* Alt-F, F, D (Append the open files by Discarding the common times)
Menu: Alt-F, F, B (Append the open files Back-to-Back)

Comments: The files must be of the same type (the analog/digital channel titles must match). The results in the new analysis window can be saved in a Comtrade file for archiving.

See Also: Append Waveform Files
 Append Open Files in Analysis Quick Start

APPEND WAVEFORM FILES

Location: File Manager

Description: Combine a number of waveform files of the same types (the analog/digital channel titles must match) in time into an analysis window.

Activation: *Menu:* Alt-O, W, A, D (Append waveform files by Discarding the common times)
Menu: Alt-O, W, A, B (Append waveform files Back-to-Back)

Comments: The files must be of the same type (the analog/digital channel titles must match). The results in the data analysis window can be saved in a Comtrade file for archiving.

See Also: Append Open Files
Append Waveform Files in File Manager Quick Start

ASCENDING SORT

Location: All Tables

Description: Sort the device columns in ascending order with respect to the selected sort field.

Activation: *Menu:* Alt-S, A

Comments: To change the sort field, place the cursor in the desired column and select “Set Sort Field” in the “Sort” menu. The sort field is displayed in the status bar at the bottom of the window. To sort the columns directly press the column header button. The header buttons toggle between ascending and descending order.

See Also: Descending Sort
Sorting in the Quick Starts

ASCII DRIVER

Location: File Manager

Description: Display the file at the cursor position in the ASCII text editor.

Activation: *Menu:* Alt-D, 1

See Also: ASCII Editor

ASCII EDITOR

Location: File Manager

Description: Edit the ASCII file at the cursor position.


Activation: *Direct:* F2
Menu: Alt-O, A (Options menu) or Alt-D, 1 (Driver menu)

Comments: The file content is displayed in text format. Use the up arrow, down arrow, left arrow, right arrow, page up, page down, home, end, Ctrl-home and Ctrl-end keys or the scroll bar to navigate through the data and the Edit menu options to cut, copy, or paste text. A maximum of ten ASCII Editors may be opened simultaneously.

ASCII EVENT FILES

Location: Device Manager

Description: View the selected device event file in an ASCII editor. The “Type” column in the device table indicates the type of editor displayed: ASCII or Binary (Hexadecimal). The type column is defined in the device record. To open the device record, select the device and press F2.


Activation: *Direct:* F6 – menu button 
Menu: Alt-O, E

Comments: The file content is displayed in text format. Use the up arrow, down arrow, left arrow, right arrow, page up, page down, home, end, Ctrl-home and Ctrl-end keys or the scroll bar to navigate through the data and the Edit menu options to cut, copy, or paste text. A maximum of ten event files may be opened simultaneously.

ASCII TERMINAL MODE

Location: Device Manager

Description: Display the ASCII terminal mode window to transmit ASCII characters, escape sequences and/or Function key definitions to the output device.

Activation: *Direct:* <Enter> – menu button 
Menu: Alt-O, T

Comments: The type of terminal mode window displayed is determined by the type field (ASCII or Binary) defined in the device record. To communicate with an ASCII device place the cursor on the desired device and press <enter> or click the **Terminal** menu button. Data is transmitted to the output device by pressing the predefined function keys or by manually pressing the numeric and letter keys. If the device does not respond, check the device's communication parameters (F2) or the device connection. Use the up arrow, down arrow, right arrow, left arrow, page up, and page down keys to browse the data and the <esc> key to exit.

See Also: Function Keys
 Binary Terminal Mode

AS STATUS FIELD

Location: Analysis (Status Bar)

Description: Displays the current state of the Auto Scaling feature (ON, OFF or ++).

Comments: To toggle through the Auto Scaling options (ON, OFF or ++), press F6 or select the “Auto Scale” menu option from the “Options” menu. When auto scaling is turned “ON”, the channel data is scaled to the maximum value allocated for display from the zero reference line. When auto scaling is in the “++” state the signals are plotted using the maximum value allocated for display, ignoring the zero reference line. The highest value is plotted at the maximum position and the smallest value is plotted at the lowest position. This feature shows the full profile of frequency, Vdc and load channels. In the “OFF” state all channels are scaled according to maximum and minimum values in all of the analog channels.

See Also: ASV Column
Auto Scaling

ATFILE

Location: File Manager (Status Field)

Description: Displays the file number of the selected file in the table.

ATREC

Location: Device Manager (Status Field)

Description: Displays the record number of the selected device in the table.

See Also: TotRecs
TotMarks

ATTAB

Location: Animated CAD-DXF (Status Field)

Description: Displays the currently highlighted tab number.

See Also: AtTab

AUDIO WAVE DRIVER

Location: File Manager

Description: Changes the driver at the cursor position to the Window's Audio Wave driver (*.WAV) and plots the input channels.

Activation: *Menu:* Alt-D, V

Comments: All files that have a ".WAV" extension are tagged as Microsoft Audio Wave files.

AUTO DETECT DRIVER

Location: File Manager

Description: Infers the filename at the cursor position and activates the associated driver.


Activation: *Menu:* Alt-D, Z

See Also: Associating File Types in File Manager Quick Start.

AUTO SCALING

Location: Analysis

Description: Turns the state of amplitude auto scaling to On, Off or ++ for all the visible analog channels.

Activation: *Direct:* F6 - ASV menu button 
Menu: Alt-D, A, F-Off, O-On and P-Plus

Comments: The AS field displayed in the status bar indicates the auto scale's current state, ON, OFF or ++. When auto scaling is turned "ON", the channel data is scaled to the maximum value allocated for display from the zero reference line. When auto scaling is in the "++" state the signals are plotted using the maximum and minimum values allocated for display, ignoring the zero reference line. The highest value is plotted at the maximum position and the smallest value is plotted at the lowest position. This feature shows the full profile of frequency, Vdc and load channels. In the "OFF" state all channels are scaled according to maximum and minimum values in all of the analog channels.

See Also: Increase Amplitude
 Decrease Amplitude
 Auto Scale Multiplier
 AS Status Field

BACKGROUND COLOR

Location: DXF Animated CAD (Properties dialog)

Description: Select the background color for the active DXF tab drawing.

Activation: *Direct:* F2
Menu: Alt-T, D

Default: Black

BINARY EVENT FILE

Location: Device Manager

Description: View the selected device event file in a binary editor. The "Type" column in the device table indicates the type of editor displayed: ASCII or Binary (Hexadecimal). The type column is defined in the device record. To open the device record, select the device and press F2.


Activation: *Direct:* F6
Menu: Alt-O, E

Comments: The file contents are displayed in a Binary (Hex) editor. Use the up arrow, down arrow, page up, page down, Ctrl-home and Ctrl-end keys to navigate through the file's data, or use the scroll bar. When a hex value is over written the ASCII equivalent is displayed in the window to the right of the editor. A maximum of ten event windows can be simultaneously.

BINARY TERMINAL MODE

Location: Device Manager

Description: Display a binary terminal mode window to transmit hex values and/or Function key definitions to the output device.

Activation: *Direct:* <Enter> – menu button 
Menu: Alt-O, T

Comments: The type of terminal mode window displayed is determined by the type field (ASCII or Binary) defined in the device record. To communicate with a binary device place the cursor on the desired device and press <enter> or click the **Terminal** menu button. Data is transmitted to the output device by pressing the predefined function keys or by manually pressing the hex numeric and letter keys (0..9,A..F). If the device does not respond, check the device's communication parameters (F2) and/or the device connection. Use the up arrow, down arrow, right arrow, left arrow, page up, and page down keys to browse the data and the <esc> key to exit.

See Also: Function Keys
ASCII Terminal Mode

BPRO DRIVER

Location: File Manager (Universal Viewer)

Description: Change the driver at the cursor position to the NxtPhase BPRO driver and plot the input channels.

Activation: *Menu:* Alt-D, O

Comments: NxtPhase files are displayed in the IEEE Comtrade Binary format. NxtPhase has developed an automatic conversion application called "AutoComtrade.exe". Wavewin calls "AutoComtrade.exe" to convert NxtPhase files to the Comtrade binary format for display. To view NxtPhase relay files double click or press enter on the original BPRO files. To obtain a copy of the "AutoComtrade.exe" file please contact NxtPhase.

Files with the .BPR extension are automatically tagged as NxtPhase BPRO files.

See Also: Tesla Files in File Manager Quick Start.
Display Oscillography in the File Manager Quick Start
Associating File Types in the File Manager Quick Start

CALIBRATION REPORT

Location: File Manager

Description: Generate a calibration report for all marked event files.

Activation: *Menu:* Alt-O, R, C

Comments: The Calibration report list the Maximum and Minimum analog summary information for the marked files.

For this feature to work properly reports should be generated on non-fault data. The DVREPORT.DTB file, saved in the installed directory contains the last generated report. To archive the contents of this file use the Save As option to save the file under a new name.

See Also: Waveform Summary

CHANGE DEVICE CONFIGURATION

Location: Device Manager

Description: Change the active device configuration table.

Activation: *Menu:* Alt-D, G




Comments: The “Open Device Configuration” dialog allows for selecting configurations stored in different directories. Navigate to the desired directory and select the “CFG_DEVS.DTB” file stored in the newly selected directory. The device table is updated with the new configuration and all devices are initialized.

See Also: New Device Configuration
Copy Device Records

CHANGE DRIVE/DIRECTORY

Location: File Manager

Description: Change the file table's active path.

Activation: *Direct:* F7, ChDir button , Back button , Up button , Right Click, Folder Tree
Menu: Alt-F, H, Alt-F, T

Comments: There is a number of ways to change the file table's active folder. Use the folder tree to navigate the connected drives. To enter a folder use the “Change Drive/Directory” dialog located in the File menu. To select from a list of the last 12 active folders click the opposite mouse button in the file table. To navigate back through the last 12 active folders use the Back menu button. To change to the previous folder use the “Up” menu button. An error message is displayed if the destination path is not found.

See Also: Navigating Files in the File Manager Quick Start

CHANGE DXF FILES

Location: Device Manager

Description: Display the “Change DXF Files” dialog to change the DXF files displayed in the Animated CAD-DXF window tabs.

Activation: *Menu:* Alt-O, C

Fields:	<p><i>DXF Files List:</i> Lists the currently selected DXF files to display in the Animated CAD-DXF window.</p> <p><i>Background Color:</i> Select the background color for the highlighted DXF file in the DXF Files List.</p> <p><i>Max X Pixels:</i> Set the Max X Pixels for the highlighted DXF file in the DXF Files List.</p> <p><i>Max Y Pixels:</i> Set the Max Y Pixels for the highlighted DXF file in the DXF Files List.</p>
----------------	---

Options:

<i>Add:</i>	Add one or multiple DXF file(s) to the DXF Files List.
<i>Delete:</i>	Delete the highlighted DXF file(s) from the DXF Files List.
<i>Clear:</i>	Clear all the listed DXF files from the DXF Files List.
<i>OK/Enter:</i>	Exit and save the dialog then open the animated CAD-DXF window.
<i>Esc/Cancel:</i>	Exit the dialog without saving the dialog data.

Comments: To add a new file, click the “Add” button. A file select dialog is displayed. To select multiple files use the Ctrl+click or Shift+Up/Down arrows. All selected files will be added to the DXF files list. To delete file(s) mark the file(s) in the DXF files list and click the “Delete” button. To clear the list, click the “Clear” button.

The DXF drawing fields for each listed file can be defined in the dialog prior to opening the DXF drawing window. To set up the DXF drawing fields for each listed file select the file and tab to the drawing fields defined below the list. This dialog will be displayed if there are no DXF files selected before the animated CAD-DXF option is activated.

See Also: Change DXF Files in the Device Manager Quick Start.

CHANGE FREQUENCY

Location: Analysis

Description: Change the current sampling frequency.

Activation: *Direct:* Change Frequency menu button
Menu: Alt-D, F



Fields:

<i>Current Sampling Frequency:</i>	The current sampling frequency.
<i>Enter the New Sampling Frequency:</i>	The new sampling frequency.
<i>Open Frequency:</i>	Sets the driver to open with the new frequency.

Options:

<i>Enter/Ok:</i>	Changes frequency.
<i>Esc/Cancel:</i>	Exits the dialog without executing the command.

Comments: The “Open Frequency” field will set the current display driver to always convert the files to the new frequency before displaying.

CHANGE PASSWORDS

Location: Device Manager

Description: Activate the Change Passwords feature to verify modem connections and to automatically change the password on devices directly or remotely connected to the Wavewin system.

Activation: *Menu:* Alt-O, P

Comments: This feature secures all the existing modem and network connections to digital relays, communication processors, port switches and/or any other type of remotely accessible device used in the company. Upon activation change passwords performs the following steps for each connected device:

- As applicable dial, switch to, or Ethernet connect and logon.

- Generate a new random password, 6 characters in length.
- Change the old password to the new one using the appropriate communication driver.
- Confirm the password was successfully changed.
- Upon confirmation, update the password file (SETPSW.CSV), the database file (CFG_SHOT.DTB) and the device table.
- Logout from the active device and as applicable hang-up, switch out or terminate the Ethernet connection.
- Retry failures if any errors were encountered (up to 3 retries per failure).

A small summary file is created in the system directory containing the performance results. It is saved to the company network if any failed connections or logon attempts were detected.

The random password generator is seeded once upon initial execution to ensure even distribution across a 6 character spectrum. The new passwords are stored in SETPSW.CSV. Before activation the existing SETPSW.CSV file is renamed using the IEEE long file naming format including the current date and time and the company name fields only, example: 040909,123456789,,,,South Electric,,,,.CSV".

See Also: Change Passwords in the Device Manager Quick Start.

CHANGE QUERY OPERATORS

Location: Query Fields

Description: Change the operator for the active query field.

Activation: *Direct:* F9
Menu: Alt-Q, O

Comments: To change the operator press F9 or click the mouse button on the operator symbol.

See Also: Equal To (=),
Greater Than (>),
Less Than (<)

CHANNEL BACKGROUND COLOR

Location: Analysis

Description: Change the background colors for the analysis window. The background colors fields are listed in the "Window Properties" dialog under the "Colors" tab.

Activation: *Menu:* Alt-F, T, Color's Tab

CHANNEL INFORMATION (ON/OFF)

Location: Analysis

Description: Show or hide the channel information table displayed in the frame to the right of the analog and digital traces.

Activation: *Direct:* Analog table close button 

Menu: Alt-V, C

Comments: The channel information frame can be resized by selecting the vertical separator bar and dragging it to the right or left. The cursor changes to the vertical resize cursor when the mouse is positioned over the separator bar.

CLEAR ANALOG COLORS

Location: Analysis

Description: Set the analog channel colors to the default color, black.

Activation: *Menu:* Alt-C, C

Comments: To change the color of an analog channel click the right mouse button on the channel ID or channel title.

CLEAR QUERY AREA

Location: Query Fields

Description: Set all the query fields to blanks and default the query operators to equal (=).

Activation: *Direct:* F8
Menu: Alt-Q, C

COMBINE LOGS

Location: File Manager

Description: Combine a number of log files (ABB Load Profile, Comtrade Logs and SDC Logs), of different types (different columns), into one comma delimited file with the extension .CSV.

Activation: *Menu:* Alt-O, R, L

Comments: The files can be of different types (columns do not have to be equal). The substation and device names for the data will be added as the first two columns in the file. The result file can be displayed in a table.

See Also: Append Logs

COMBINED VIEW

Location: Analysis

Description: Display all the selected information contained in the analog table in a condensed form.

Activation: *Direct:* F4
Menu: Alt-V, A

Comments: Use the F4 key to toggle between the tabular view and the combination view. The combination view is only available if there is enough space between the analog channels to display three lines of text. To change the position of the data values select the

“Window Properties” option from the “File” menu, then click on the “Analog Combination” tab.

See Also: Viewing Analog Information in the Analysis Quick Start.

COMMA DELIMITED TABLE DRIVER

Location: File Manager

Description: Display the selected comma delimited file in a table format. Comma delimited files have textual fields separated by commas, such as 0001,7834,872.

Activation: *Menu:* Alt-D, 3, C

Comments: The file data is presented in tabular form. An unlimited number of rows and columns can be displayed.

See Also: Viewing ASCII Files in Database Format in the File Manager Quick Start.
Double Quotes/Comma Delimited Table Driver
Tab Delimited Table Driver

COMNAME PROPERTIES

Location: File Manager

Description: Setup the fields not available in the supported waveform files for the IEEE long file naming format.

Activation: *Menu:* Alt-F, O

Fields:

<i>Company Name:</i>	Enter the Company name that will be used in the long naming format.
<i>Time Code:</i>	Enter the time code for the device files to rename.
<i>User Field 1:</i>	Enter the 1 st User Field.
<i>User Field 2:</i>	Enter the 2 nd User Field.

Options:

<i>Enter/Ok:</i>	Save the entered data.
<i>Esc/Cancel:</i>	Exit the dialog without saving.

Comments: These fields are used for all the files renamed to the IEEE long file naming format. Update this dialog for file with different time code, latitude and longitude coordinates.

See Also: ComName(s) Rename in the File Manager Quick Start
ComName Properties in the File Manager Quick Start
ComName(s) Rename

COMNAME(S) RENAME

Location: File Manager

Description: Rename all the marked time sequenced data file to the IEEE long file naming format.

Activation: *Menu:* Alt-F, A

Comments: A message box will be prompted before renaming the file to insure the execution of the rename feature. This feature will permanently rename the files. It is advisable to back up the files before renaming. Some proprietary applications may not be able to read the files once they are renamed.

See Also: ComName(s) Rename in the File Manager Quick Start.
ComName Properties

COMPANY COLUMN

Location: File Manager

Description: Displays the company name associated with the long file name. The sixth field in the file name defines the company field for the IEEE long file-naming format.

See Also: Long File Naming Format in the File Manager Quick Start.

COMPANY NAME (SAVE & ARCHIVE)

Location: Device Manager - Save & Archive Dialog

Description: The name of the company where the connected devices are installed. The company name is used in the IEEE long file naming format. The sixth field in the file name defines the company name.

Comments: The following characters are not permitted in a file name: : ? " / \ < > * | @ # and cannot be part of the company name.

See Also: Long File Naming Format in the Device Manager Quick Start.

COMPRESS COMTRADE FILES

Location: File Manager

Description: Convert all the marked COMTRADE ASCII files to COMTRADE Binary files.

Activation: *Menu:* Alt-O, C

Comments: This feature compresses the COMTRADE ASCII file size. It is useful for porting files to floppy or transferring files through a medium.

See Also: Compressing COMTRADE Files in the File Manager Quick Start.

COMTRADE DRIVER

Location: File Manager

Description: Change the driver at the cursor position to the COMTRADE driver and plot the input channels.

Activation: *Menu:* Alt-D, 5


Comments: All files that have a ".DAT" or "D##" file extension, and a corresponding ".CFG" file are tagged as COMTRADE files. If the selected file does not have a corresponding ".CFG"

file an error message is generated. Both the COMTRADE ASCII and Binary formats are supported.

CONDENSE TIME

Location: Analysis

Description: Condense the time scale for all visible channels.




Activation: *Direct:* Ctrl-Page Down or the Condense menu button 
Menu: Alt-D, C

See Also: Expand Time

COPY/CUT/PASTE FILES

Location: File Manager

Description: Copy or Cut the marked files to the clipboard. Navigate to the destination folder and Paste the files.

Activation: *Direct:* Ctrl-X (Cut)  Cut, Ctrl-C (Copy)  Copy, Ctrl-V (Paste)  Paste
Menu: Alt-E, T (Cut), Alt-E, C (Copy), Alt-E, P (Paste)

Comments: Marked files are displayed in red. The TotMarks and MrkSize fields displayed in the status bar are updated accordingly. To copy/cut/paste files use the Edit menu options, the shortcut keys or right click in the file table and select the desired option.

See Also: Copy File
 Move Files
 Mark/Unmark File

COPY DEVICE RECORDS

Location: Device Manager

Description: Copy the marked device records to the system clipboard files.

Activation: *Menu:* Alt-D, Y


Comments: Device records can be copied from one configuration to another. To copy device records mark the desired records in the device table (marked devices are displayed in red) then select the “Copy” menu option under “Device” menu. The marked records will be copied to the “DEV_CLIPBOARD.CLP” and the devices function keys will be copied to the “LOG_CLIPBOARD.CLP”. These files are cleared before each copy operation.

See Also: Change Device Configuration
 New Device Configuration
 Paste Device Records

COPY FILES

Location: File Manager

Description: Copy the marked files to the specified destination path. If the path does not exist, type the directory name in the edit box. The system prompts prior to creating the directory.

Activation: *Direct:* F8 or the Copy menu button 
Menu: Alt-F, C

Fields: *Directory Name:* The destination path where the marked files are to be copied. To specify a new path type the path directly into this edit box.
Directories: Displays a tree of the system's directories, double click to open a node in the tree and click on the desired directory to highlight it.
Files: Displays a list of the files in the highlighted directory.
Drives: A list of all the connected drives. Select the desired drive.

Options: *Enter/Ok:* Copy the marked files to the destination path.
Esc/Cancel: Exit the dialog without executing the command.


Comments: Marked files are displayed in red. The TotMarks and MrkSize fields displayed in the status bar are updated accordingly. Files that were unsuccessfully copied are marked and grouped at the top of the table.

See Also: Move Files
 Mark/Unmark File

COPY TEXT

Location: ASCII Event File

Description: Copy the blocked text to the clipboard.

Activation: *Direct:* Ctrl-C, Ctrl-Ins - Copy menu button 
Menu: Alt-E, C

Comments: To block text use the shift key plus the up arrow, down arrow, page up and page down keys or the drag the mouse.

See Also: Cut Text
 Paste Text

CREATE DIRECTORY

Location: File Manager

Description: Create a new directory.


Activation: *Menu:* Alt-F, E

Fields: *Directory:* The new directory's name.

Options: *Enter/Ok:* Create the new directory.
Esc/Cancel: Exit the dialog without executing the command.

Comments: If there is no path defined the new directory is placed in the active directory.

CUT TEXT

Location: ASCII Event File**Description:** Copy the blocked text to the Windows clipboard then delete the blocked text.**Activation:** *Direct:* Ctrl-X, Shift-Del - Cut menu button 
Menu: Alt-E, T**Comments:** Use the shift keys and the up arrow, down arrow, page up and page down keys to block text.**See Also:** Copy Text
Paste Text**CYCLE HOP**

Location: Analysis**Description:** Move the data bar (vertical black solid line) one cycle forward or backward in time.**Activation:** *Direct:* Shift-Ctrl-Left arrow and Shift-Ctrl-Right arrow**Comments:** Use the shift+ctrl left/right keys to move one cycle in time. The number of cycles is displayed in the status bar with the Reference bar (vertical blue dotted line) as the reference position.**See Also:** Data Bar**D&T**

Location: Analysis (Status Field)**Description:** Displays the data and time of the sample at the data bar.**See Also:** Delta X Field**DATA BAR**

Location: Analysis**Description:** Displays the channel's instantaneous sample value. The data bar is the solid black line that runs vertically across the analog and digital channels.**Comments:** The data bar is used to view channel information (such as analog sample values, RMS values, digital information, data and time...). The information is displayed in the channel frame positioned to the right of the traces and in the status bar. The Ctrl-Left/Right keys moves the data peak to peak and the Shift-Ctrl-Left/Right keys moves the data one cycle in time.**See Also:** RMS bar
Reference bar
Horizontal Bars
Cycle Hop

Peak Hop
Fault Bar

DECREASE AMPLITUDE

Location: Analysis

Description: Decrease the amplitude of all or marked analog channels.

Activation: *Direct:* Ctrl-Down Arrow or the AmpDn menu button 
Menu: Alt-D, D

Comments: When the channels' amplitude is decreased the Trace Scale Multiplier is divided into the Pixsdisp value. To change the Trace Scale Multiplier, select "Window Properties" from the "File" menu then select the "Display Settings" tab.

See Also: Increase Amplitude
Trace Scale Multiplier

DELETE DEVICES

Location: Device Manager

Description: Tag all the marked device records as deleted records.

Activation: *Direct:* Delete
Menu: Alt-D, D

Comments: Marked records are displayed in red. The TotMarks field displayed in the status bar is updated accordingly. Records that were unsuccessfully deleted are marked and grouped at the top of the table.

Restrictions: The marked records are tagged as deleted records and will not show up in the table again. They are not physically removed from the device database (CFG_DEVS.DTB) file but are marked as deleted.

See Also: Mark/Unmark Records

DELETE FILES

Location: File Manager

Description: Remove all the marked files and empty directories from the active directory.

Activation: *Direct:* Delete
Menu: Alt-F, D

Comments: Marked files and directories are displayed in red. The TotMarks and MrkSize fields displayed in the status bar are updated accordingly. Files and directories that were unsuccessfully deleted are marked and grouped at the top of the table.

Restrictions: A marked directory must be empty in order to remove it from the file table.

See Also: Mark/Unmark File

DELETE TEXT

Location: ASCII Event File

Description: Delete the blocked text from the file.

Activation: *Direct:* Del
Menu: Alt-E, D

Comments: Use the shift keys and the up arrow, down arrow, page up and page down keys to block text.

See Also: Cut Text

DELTA X

Location: Analysis (Status Field)

Description: Displays the time in microseconds, milliseconds, or seconds between the RMS bar and the data bar. The number of cycles is also displayed if the samples in the file are microseconds or milliseconds apart.

See Also: D&T Field
RMS bar

DELTA Y

Location: Analysis (Status Field)

Description: Displays the difference between the data horizontal bar and the reference horizontal bar.

See Also: Delta X Field

DESCENDING SORT

Location: All Tables

Description: Sort the device columns in descending order with respect to the selected sort field.

Activation: *Menu:* Alt-S, D

Comments: To change the sort field, place the cursor in the desired column and select “Set Sort Field” in the Sort menu. The sort field is displayed in the status bar at the bottom of the window. To sort the table columns directly press the column header button. The header buttons toggle between ascending and descending order.

See Also: Ascending Sort
Sorting Devices in the Quick Starts

DEVICE COLUMN

Location: File Manager

Description: Displays the device name associated with the long file name. The fifth field in the file name defines the device field for the IEEE long file-naming format. It represents the name or code of the device that originated the file.

See Also: Long File Naming Format in the File Manager Quick Start.

DEVICE FIELD

Location: IEEE Long File Name

Description: The 5th field in the IEEE long file naming format. The title and device number columns are used for the device field in the long naming format. The device number is concatenated to the title by the #, example SEL 351#83.

See Also: Long File Naming Format in the Device Manager Quick Start.

DFR I II IIB & 2000 DRIVER

Location: File Manager (Universal Viewer)

Description: Change the driver at the cursor position to the Hathaway DFR I II IIB and 2000 driver.

Activation: *Menu:* Alt-D, 6

Comments: An error message is displayed if the system cannot find the files DAU header file or there was a problem reading the file.

See Also: Display Oscillography in the File Manager Quick Start
Associating File Types in the File Manager Quick Start

DIGITAL MARK/UNMARK ALL

Location: Analysis

Description: Marked all digital channels if there are no digital channels marked else unmark all the marked digital channels.

Activation: *Menu:* Alt-C, I

Comments: The channels ID and titles are displayed in light red when marked. Press F8 to mark or unmark all the analog and digital channels.

DISPLAY DIALOG

Location: All Tables

Description: Reposition the columns in the table.

Activation: *Menu:* Alt-O, I

Fields: *File Column List:* A list of all the columns in the table.
Table Font Size: A list of the font sizes for the table.

Options:

<i>Move Up:</i>	Move the highlighted column before the previous column.
<i>Move Down:</i>	Move the highlighted column after the next column.
<i>Reset:</i>	Default the order of the columns to how they were when the software was first installed.
<i>OK:</i>	Change the order of the columns and redraw the device table.
<i>Cancel:</i>	Exit the dialog without executing the command.

Comments: To resize the table columns place the mouse over the column separator and drag the mouse to the left or the right or double click on the column separator to expand to the maximum area for that column.

See Also: Customizing the Table in the Quick Starts
Resize Columns

DISTURBANCE REPORT

Location: File Manager (Universal Viewer)

Description: Create a disturbance report from the defined fault files.

Activation: *Menu:* Alt-O, R, D

Fields:

<i>Destination File:</i>	The folder and filename where the report is saved.
<i>Source Folder(s):</i>	The source folder(s) where the event files are located.
<i>Filter: Faulted Phases:</i>	Enter the valid faulted phases (separated by commas).
<i>Filter: Fault Location:</i>	Enter the maximum % of the line length to detect.
<i>Filter: Voltage Class:</i>	Enter the voltage kv value that is above the phase to ground level.
<i>Filter: Fault Current:</i>	Enter the minimum magnitude value.
<i>Filter: System Frequency:</i>	Enter the deviation from the line frequency to detect.

Options:

<i>Process:</i>	Process the report and display the results.
<i>Save Script:</i>	Save the entered values to the Disturbance.ini script file.
<i>Edit Script:</i>	Edit the Disturbance.ini script file.
<i>Show Help:</i>	Show the help file below the buttons.
<i>Close:</i>	Close the disturbance dialog without saving.

Comments: The result disturbance report is saved to the defined destination file and displayed in a comma delimited table. The table allows for sorting, querying, deleting of rows and saving.

See Also: Disturbance Report in the File Manager Quick Start.

DLP1/DLP3 DRIVER

Location: File Manager (Universal Viewer)

Description: Plot the contents of the oscillography file using the DLP1/DLP3 driver. If the driver encounters an error while reading the file an "Invalid Driver Message" is displayed indicating the line number in which the error was encountered. Use the ASCII or Hexadecimal editors to locate and correct the error. The ASCII and hexadecimal editors display the cursor's line and character number in the lower left corner of the window.

Activation: *Menu:* Alt-D, C

Comments: An error message is displayed if the file is not a valid DLP file. All files that have an “.OSC” extension are tagged as DLP files.

DOUBLE QUOTES/COMMA DELIMITED TABLE DRIVER

Location: File Manager

Description: Display the double quote delimited file in a table format. Double quote-delimited files have textual fields separated by double quotes and commas, such as “CHANNEL”, “DATE”, “TIME”.

Activation: *Menu:* Alt-D, 3, Q


Comments: The file data is presented in tabular form. An unlimited number of rows and columns can be displayed.

See Also: Viewing ASCII Files in Database Format in the File Manager Quick Start.
Comma Delimited Table Driver
Tab Delimited Table Driver

DRAWING PROPERTIES

Location: DXF Animated CAD

Description: Display the DXF “Drawing Properties” dialog to define the background color and Zoom X & Y resolution values.

Activation: *Direct:* F2, menu button 
Menu: Alt-T, D

Fields: *Background Color:* Set the DXF drawings background color.
Max X Pixels: Set the DXF drawings max X pixels for display.
Max Y Pixels: Set the DXF drawings max Y pixels for display.

Options: *Apply:* Apply and save the changes made without exiting the dialog.
Enter/OK: Exit, apply and save the changes made.
Esc/Cancel: Exit the dialog without executing or saving the changes made.

Comments: Use the tab or shift+tab keys to navigate between the fields and the up and down arrow keys to view the selectable options.

See Also: Drawing Properties in Chapter 1

DRIVER COLUMN

Location: File Manager

Description: Displays the display driver associated with the file.

See Also: Associating File Types in Chapter 1.

DRIVER CONFIGURATION DIALOG

Location: File Manager

Description: Display the driver configuration dialog. The driver configuration dialog allows for setting certain features pertaining to a specific driver.

Activation: *Menu:* Alt-O, N

Fields:

<i>Driver List:</i>	A list the supported drivers in the system.
<i>Devices Data Type:</i>	Select the type of data that the device saves (RMS or Peak).
<i>Device Header Dir:</i>	Enter a localized directory for all support files needed to display the files.
<i>Default Frequency:</i>	Enter the default frequency to display the device's file when the files are first displayed.

Options:

<i>Ok:</i>	Save the changes made and close the dialog.
<i>Cancel:</i>	Ignore any changes made and close the dialog.


Comments: The file data is presented in tabular form. An unlimited number of rows and columns can be displayed.

See Also: Driver Configuration in the File Manager Quick Start.

DRIVER DATA TYPE

Location: Analysis

Description: Set the active display driver's data type.


Activation: *Direct:* Window Properties menu button 
Menu: Alt-F, T, Driver Data Type Tab

Comments: The data stored in the displayed file can be instantaneous values or RMS values. The default setting for all drivers is instantaneous values. If the display device saves the sample values as RMS calibrated then select RMS Calibrated Type from the drop down list. If the data type is RMS Calibrated and the data type is not set to RMS calibrated type then the analog column data will be displayed incorrectly.

DUPLICATE CYCLES

Location: Analysis

Description: Duplicate the cycle between the Data bar and the RMS bar.

Activation: *Direct:* Duplicate Cycles menu button 
Menu: Alt-D, L

Fields: *# Cycles:* Enter the number of time to duplicate the highlighted cycle(s).

Options: *Enter/Ok:* Duplicate the highlighted cycle(s) .
Esc/Cancel: Exit the dialog without executing the command.

Comments: This feature is useful for creating test set files or for creating file to play back into simulation or modeling applications.

See Also: Duplicate cycles in the Analysis Quick Start.
Truncate Cycles

DUPLICATE DEVICE RECORD

Location: Device Manager

Description: Duplicate the selected device record in the table.

Activation: *Menu:* Alt-D, U

Fields: ***Device Settings:***

Device Number: Set the number of the device. Each device must have a unique number. The device number is used in the IEEE long file naming format.

Address: Set the address of the device. The address can be the port number off a 2020/2030 or a modbus address.

Station ID: Set the ID number for the station each station must have a unique number.

Data Type: Select the type of data being polled (ASCII/Binary).

Print : Select if the data polled is sent to the connected printer (On/Off).

Title: Set the device title.

Driver: Select the main driver that will poll the device.

Station Name: Set the station name.

Time Code: Select the main driver that will poll the device.

EscSeq: The EscSeq field contains 7 separate fields separated by a blank. Set the appropriate information in the appropriate fields. The fields can contain passwords, phone numbers, file names, FTP settings, TCP/IP settings for a specific device refer to the "Device Configuration" document.

Port Settings:

Port Number: Select the COM port number from the list of COM ports registered on the machine or enter a new COM port number. For TCP/IP and FTP connections each device must have a unique COM port number.

Baud Rate: Select the port's baud rate.

Parity: Select the port's parity (None, ODD, Even, Mark).

Data Bits: Select the port's Data Bits (7 or 8).

Stop Bits: Select the port's stop bits (1 or 2).

Flow Control: Select the port's flow control (None, Software or Hardware).

Terminal Settings:

CR/LF: Select if a CR/LF is added after a TX string, RX string, both or none in terminal mode.

Local Echo: Select if the transmitted text is echoed to the terminal window.

Terminal Settings:

CR/LF: Select if a CR/LF is added after a TX string, RX string, both or none in terminal mode.

TX Delay:

Inter Char Delay: Enter the number of milliseconds to wait when transmitting characters to the device.

Options: *Save/Enter:* Exit and save the dialog fields.

Esc/Cancel: Exit the dialog without saving the dialog fields.

Comments: The selected device in the table is duplicated as a new record at the end of the table. The device number must be changed. All device numbers must be unique. An error message will be displayed if any invalid fields are encountered. The Title and Substation fields are used in the IEEE long file naming format. The following characters (: ? “ / \ < > * | @ #) are not valid in file names and cannot be used in the title and substation fields.

See Also: New Device Record
Edit Device Record

DXF ANIMATED CAD

Location: Device Manager

Description: Poll the devices defined in a graphical one line diagrams and display the parsed data.

Activation: *Menu:* Alt-O, D


Comments: For the DXF window to poll the connected devices the polling drivers must be written and configured and the DXF drawings must have the device control points defined. Refer to Appendix A for an example of polling drivers and Appendix B for setting control points in a DXF file.

See Also: Animated CAD/DXF in the Device Manager Quick Start.
Appendix A
Appendix B

DXF CONTROL DIALOG

Location: DXF Animated CAD

Description: Display the “DXF Control” dialog to communicate directly to a device.

Activation: *Direct:* menu button 
Menu: Alt-T, O

Fields: *Control Menu List:* Select the DXF tab containing the device to communicate with, select the device then select the communication driver.

Options: *Operate/Enter:* Exit the dialog and execute the selected communication driver.
Esc/Cancel: Exit the dialog without executing the communication driver.

Comments: The “Control Menu” list box to the right contains all tab names displayed in the DXF window. Select the tab to send commands to. Once a tab is selected the list is updated with all the devices defined the tab’s drawing. Select the device to communicate with. The list again is updated with the available communication drivers defined in the “Drivers.ini” file. The “Control Level” window is updated upon entry into each level. Once the communication driver is selected the “DXF Control” dialog is closed and the command is sent to the selected device. The device’s response is parsed and updated in the selected DXF tab.

See Also: DXF Control in the Device Manager Quick Start.

DXF DRIVER

Location: File Manager**Description:** Displays the file(s) drawing information in graphical form.**Activation:** *Menu:* Alt-D, 4, S or M**Comments:** An error message is displayed if the file is not a valid DXF file. All files that have the “.DXF” extension are tagged as DXF files. A single file can be opened or multiple files can be opened at the same time. For multiple files first mark the files then select Marked files from the DXF submenu option.**EDIT DAU-DEF**

Location: File Manager**Description:** Display the DAU-DEF editor for Hathaway DAU-DEF files. The DAU-DEF editor allows for changing certain fields defined in the DAU-DEF records. A Windows file selection dialog is display to select the DAU-DEF to edit. Navigate to the desired directory and double click on the DAU-DEF file to edit.**Activation:** *Menu:* Alt-O, E


Fields:	<i>DAU-DEF Records:</i> A list the all DAU-DEF records defined in the selected file. <i>Analog Channels:</i> A list of all the analog channels defined for the selected record. <i>Analog Name:</i> Edit the analog name for the selected analog channel. <i>Analog Full Scale:</i> Edit the analog full scale value for the selected analog channel. <i>Analog Prefix:</i> Edit the analog prefix for the selected analog channel. <i>Analog Unit:</i> Edit the analog unit for the selected analog channel. <i>Event Channels:</i> A list of all the event channels defined for the selected record. <i>Event #:</i> Edit the event's number for the selected event channel. <i>Event Name:</i> Edit the event name for the selected event channel. <i>Event NoNc:</i> Edit the event's normally open normally close value for the selected event channel. <i>Sensor Channels:</i> A list of all the sensors channels defined for the selected record. <i>Sensor #:</i> Edit the sensor number for the selected sensor channel. <i>Sensor Name:</i> Edit the sensor name for the selected sensor channel. <i>Sensor NoNc:</i> Edit the sensor's normally open normally close value for the selected sensor channel.
----------------	--

Options:	<i>Save:</i> Save the selected DAU-DEF record. <i>Ok:</i> Save all changes made and close the dialog. <i>Cancel:</i> Ignore any changes made and close the dialog. <i>Default Sensor #8:</i> Checking this option will always default Sensor channel #8;s NoNc value to be 1.
-----------------	--

Comments: When this feature is activated a Windows file selection dialog is display, navigate to the desired directory and double click on the DAU-DEF file to edit.**See Also:** Edit DAU-DEF in the File Manager Quick Start.**EDIT DEVICE RECORD**

Location: Device Manager

Description: Edit the selected device record in the table.

Activation: *Direct:* F2 –menu button 
Menu: Alt-D, E

Fields: ***Device Settings:***

Device Number: Set the number of the device. Each device must have a unique number. The device number is used in the IEEE long file naming format.

Address: Set the address of the device. The address can be the port number off a 2020/2030 or a modbus address.

Station ID: Set the ID number for the station each station must have a unique number.

Data Type: Select the type of data being polled (ASCII/Binary).

Print : Select if the data polled is sent to the connected printer (On/Off).

Title: Set the device title.

Driver: Select the main driver that will poll the device.

Station Name: Set the station name.

Time Code: Select the main driver that will poll the device.

EscSeq: The EscSeq field contains 7 separate fields separated by a blank. Set the appropriate information in the appropriate fields. The fields can contain passwords, phone numbers, file names, FTP settings, TCP/IP settings for a specific device refer to the “Device Configuration” document.

Port Settings:

Port Number: Select the COM port number from the list of COM ports registered on the machine or enter a new COM port number. For TCP/IP and FTP connections each device must have a unique COM port number.

Baud Rate: Select the port's baud rate.

Parity: Select the port's parity (None, ODD, Even, Mark).

Data Bits: Select the port's Data Bits (7 or 8).

Stop Bits: Select the port's stop bits (1 or 2).

Flow Control: Select the port's flow control (None, Software or Hardware).

Terminal Settings:

CR/LF: Select if a CR/LF is added after a TX string, RX string, both or none in terminal mode.

Local Echo: Select if the transmitted text is echoed to the terminal window.

Terminal Settings:

CR/LF: Select if a CR/LF is added after a TX string, RX string, both or none in terminal mode.

TX Delay:

Inter Char Delay: Enter the number of milliseconds to wait when transmitting characters to the device.

Options: *Save/Enter:* Exit and save the dialog fields.
Esc/Cancel: Exit the dialog without saving the dialog fields.

Comments: An error message will be displayed if any invalid fields are encountered. The Title and Substation fields are used in the IEEE long file naming format. The following characters (: ? “ / \ < > * | @ #) are not valid in file names and cannot be used in the title and substation fields.

See Also: New Device Record


Duplicate Device Record

EMAIL FILES

Location: File Manager and Analysis**Description:** Email a group of files or a single file using the users default email application. All support files needed to display the selected files will be automatically attached. Support files include Comtrade configuration (*.CFG), header (*.HDR) & information (*.INF) files, DFR's analog and digital information files such as: Hathaway DAU files, Rochester preamble and header files, Faxtrax/Director CTL files, Transcan SCF and TCF files.**Activation:** *Menu:* File Manager: Alt-F, L Analysis: Alt-F, E

Fields:


<i>To:</i>	Recipient of the email, initially empty.
<i>From:</i>	Sender, automatically defaulted.
<i>Subject:</i>	Empty.
<i>Attachment:</i>	All selected files and their support files automatically attached.

Comments: Files can be email either in the file table or in the analysis window. To email a set of files, mark the desired files in the file table and select the "Email Marked Files" option from the "File" menu or right click on the file table and select the "Email"  Email option from the pop-up menu. To email a file from the analysis window select the "Email Active File" option under the "File" menu. All support files needed to display the file(s) are automatically attached.**See Also:** Email Files and Email Active File in the File Manager and Analysis Quick Starts.**EMAX LONG TERM DRIVER**

Location: File Manager (Universal Viewer)**Description:** Change the driver at the cursor position to the Emax Long Term driver and plot the input channels.**Activation:** *Menu:* Alt-D, Q**Comments:** If the selected file is not a valid EMAX Long Term file an error message is generated. All files that have the ".DAT" extension along with a corresponding .SET file are tagged as EMAX Long Term files.**See Also:** Display Oscillography in the File Manager Quick Start
Associating File Types in the File Manager Quick Start**EQUAL TO (=)**

Location: Query Fields**Description:** Search the active configuration for records that match the entered criteria.**Comments:** To change the query operator press F9 or click the mouse button on the operator symbol.**See Also:** Greater Than (>)
Less Than (<)

EXPAND TIME

Location: Analysis**Description:** Expand the time scale of all visible analog channels.**Activation:** *Direct:* Ctrl-Page Up or the Expand menu button 
Menu: Alt-D, E**See Also:** Condense Time**EXPORT**

Location: Device Manager**Description:** Export all or marked devices to a tab delimited ASCII file.**Comments:** This feature is useful for changing common information for all devices quickly. For example if a COM port number has changed for a number of devices then those devices can be exported. The export file can be opened in “Excel” and all of the Com port fields can be changed easily. To import the changes back into the device configuration table use the “Import” menu option under the “Device” menu.**See Also:** Import**F-TYPE COLUMN**

Location: File Manager**Description:** Displays the file type. The “/dr” indicates that the file is a sub-directory. The DAU ID number is displayed for DFR I, II, IIB and 2000 files and the extension of the file is displayed for all other files.**Comments:** If the active directory is a sub-directory then the first 2 rows of the table are reserved for the “.” and “..” navigation shortcuts. The “.” is a shortcut to the root directory and the “..” is a shortcut to the previous directory.**FAULT BAR**

Location: Analysis**Description:** The Fault bar is the red dotted line that runs vertically across the analog and digital channels.**Comments:** The fault bar is fixed and positioned at the fault time defined in the configuration file. The fault bar can be shown or hidden by selecting “Yes” or “No” for the “Show Vertical Fault Bar” field in the properties dialog under the “Display Settings” tab.**See Also:** Data bar
RMS Bar
Reference Bar

FAULT DATE COLUMN

Location: File Manager

Description: Displays the fault date of the oscillography files. This column is left blank if the file is not a valid oscillography file or the fault date and time is not available in the file name.

See Also: Fault Time Column

FAULT REFERENCE TIME BAR

Location: Analysis

Description: Displays the time difference from the fault time defined in the displayed file. The units are displayed in the Delta X status field.

Comments: The fault reference time bar is displayed between the analog channels and the digital channels. To show or hide the fault reference time bar open the “Window Properties” dialog under the “File” menu. Click the “Display Settings” tab and toggle the “Show Reference Time Bar” field.

See Also: Fault Reference Time Bar in the Analysis Quick Start

FAULT TIME COLUMN

Location: File Manager

Description: Displays the fault time of the oscillography files. This column is left blank if the file is not a valid oscillography file or the fault date and time is not available in the file name.

See Also: Fault Date Column

FAXTRAX II (12-BIT) & DIRECTOR DRIVER

Location: File Manager (Universal Viewer)

Description: Change the driver at the cursor position to the Faxtrax II (12-bit) driver or the Director format depending on the format of the file.

Activation: *Menu:* Alt-D, 8

Comments: If the selected file does not have a corresponding “.CTL” file an error message is generated. All files that have the “.RCD”, “.RCL” and “.RCU” extensions, and there is a corresponding “.CTL” file in the same directory, are tagged as Faxtrax/Director files.

FILE NAME COLUMN

Location: File Manager

Description: Displays the name of the files/directories in the active directory.

Comments: If the active directory is a sub-directory then the first 2 rows of the table are reserved for the “.” and “..” navigation shortcuts. The “.” is a shortcut to the root directory and the “..” is a shortcut to the previous directory.

See Also: F-Type Column

FLIP MARKS

Location: All Tables

Description: Mark all the unmarked records and unmark all the marked records.

Activation: *Menu:* Alt-M, F

Comments: Marked records are displayed in red. The TotMarks field displayed in the status bar is updated accordingly.

See Also: Unmark Marked Records
Mark/Unmark Records

FOLDER TREE

Location: File Manager

Description: Displays all connected drives and folders in a tree structure.

Activation: *Menu:* Alt-F, T – Toggle Show/Hide Tree

Comments: To show/hide the folder tree select the “Show/Hide Folder Tree” option under the “Files” menu. Folders can be renamed by left mouse clicking on the folder name until the editor is displayed. Also, folders that reside on the computer can be sent to the recycle bin by selecting the “Delete” option under the folder tree’s right click pop-up menu. If the folders reside on external drives then they are permanently deleted.

See Also: Navigating in the File Manager Quick Start
Change Drive/Directory

FPRO DRIVER

Location: File Manager (Universal Viewer)

Description: Change the driver at the cursor position to the NxtPhase FPRO driver and plot the input channels.

Activation: *Menu:* Alt-D, O

Comments: NxtPhase files are displayed in the IEEE Comtrade Binary format. NxtPhase has developed an automatic conversion application called "AutoComtrade.exe". Wavewin calls "AutoComtrade.exe" to convert NxtPhase files to the Comtrade binary format for display. To view NxtPhase relay files double click or press enter on the original FPRO files. To obtain a copy of the “AutoComtrade.exe” file please contact NxtPhase.

Files that have an “.FPR” extension are automatically tagged as NxtPhase FPRO files.

See Also: Tesla Files in the File Manager Quick Start
Display Oscillography in the File Manager Quick Start
Associating File Types in the File Manager Quick Start

FREE

Location: File Manager (Status Field)

Description: Displays the amount of free hard disk space on the active drive, displayed in Kbytes.

See Also: Size
MrkSize

Fs

Location: Analysis (Status Field)

Description: Displays the sampling frequency of the sample at the data bar.

FST

Location: Waveform Summary (Events/Sensors Activity Summary)

Description: Displays the status of the first digital samples in the file. Fst is the first column in the Events/Sensors Activity Summary. A=Alarm, N=Normal.

Comments: This data is also displayed in the second column of the digital information table view.

FST-CHANGE

Location: Waveform Summary (Events/Sensors Activity Summary)


Description: Displays the date and time the channel first changed state. Fst-Change is the third column in the Events/Sensors Activity Summary.

Comments: This data is also displayed in the forth column of the digital information table view.

FTP CONNECTION

Location: Device Manager

Description: Define the selected device to collect fault records using the FTP protocol.

Activation: *Direct:* Ethernet configuration button  in the Device Configuration dialog.

Fields: *Ethernet Connections:* Select the FTP client option from the list box. The fields in the connection properties changes according to the selection in the connections list box.

Connection Properties:

Port Number: Set the FTP port number. 21 is designated as the FTP port number.

IP Address: Set the device's IP address.

User Name: Set the FTP sessions user name.

Password: Set the FTP sessions password.

Remote Path: Set the device's FTP remote path to poll.

Local Path: Set the path on the local machine where the downloaded file are saved.

File Types: Set the type of file to download, leave blank to check all files.
File Names: Set how to name the downloaded files, (0 – Don't change, 1 – change to the IEEE long file naming format maintaining the original file's extension, 2 – change to the IEEE long file naming format and make the file's extension to the Tesla *.TLR).

Options: *OK/Enter:* Exit and update the Device's EscSeq field.
Cancel/Esc: Exit the dialog without saving the changes made.

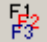
Comments: If the Local Path does not exist then the directory will be created.

See Also: New Device Record
 Duplicate Device Record
 Edit Device Record
 TCP/IP Client
 TCP/IP Server

FUNCTION KEYS

Location: Device Manager

Description: Setup the device's Function keys to be displayed in the terminal mode window.

Activation: *Direct:* F5, menu button 
Menu: Alt-O, F

Fields: *F1-9 : name:* The function key name displayed in the Terminal Mode window.
TX: A string of ASCII characters or hexadecimal values transmitted to the connected device.

Options: *Enter/Save:* Exit the dialog and save the function keys (CFG_SHOT.DTB).
Esc/Cancel: Exit the dialog without executing the command.

Comments: Programmable function keys allow for a string of ASCII characters or hexadecimal values to be transmitted to the output device through a single keystroke. The function keys are active in ASCII and hexadecimal terminal emulators. Each device contains up to nine function keys.

See Also: ASCII Terminal Mode
 Binary Terminal Mode

GROUP MARKED ANALOG CHANNELS

Location: Analysis

Description: Group all the marked analog channels and move them to the top of the display area.

Activation: *Menu:* Alt-C, G

See Also: Mark/Unmark Channels

GROUP MARKED ROWS

Location: All Tables

Description: Group all the marked rows and move them to the top of the table.

Activation: *Menu:* Alt-M, G


See Also: Unmarked Marked Rows
Toggle Marked Rows
Mark/Unmark Row

HARMONICS TABLE

Location: Analysis

Description: View the harmonics table.

Activation: *Direct:* F11, Right click on phasor diagram or information header
Menu: Alt-V, T

Comments: The harmonics table displays the number of harmonics according to the file's sampling frequency with a maximum of 200 harmonics supported. The table displays one channel at a time. It will display the 1st marked analog channel, or if no channels are marked then the first visible channel. The harmonic calculation is performed on one cycle of data, starting at the RMS bar to the data bar. The display values include DFT Peak, DFT RMS, DFT Angles, % of fundamental and % of TrueRMS. When the data bar is moved in the data plotting window the harmonics values will be automatically updated. To view the harmonics in a histogram click on the harmonics toggle  button located next to the channel name.

See Also: Harmonics in the Analysis Quick Start
Histogram
Harmonics Vectors

HARMONIC VECTORS

Location: Analysis

Description: View the harmonics vectors in the phasor diagram.

Activation: *Menu:* Alt-V, H

Comments: The harmonics of the first marked analog channel, or if no channels are marked then the first visible analog channel, is displayed in a vector format in the phasor diagram. The harmonic calculation is performed on one cycle of data. It starts at the RMS bar and goes forward one cycle. To hide/show the harmonic vectors toggle the "Vector Harmonics" menu option under the "View" menu from checked=ON to unchecked=OFF.

See Also: Harmonics in the Analysis Quick Start
Histogram
Harmonics Table

HELP

Location: All Child Windows.

Description: Displays the help file for the active child window.

Activation: *Direct:* F1
Menu: Alt-H, T

Comments: The information contained in the help window is organized in the following fashion:
 Specific Features for the active window,
 Function Keys,
 Menu Options,
 Button Menu Bar,
 Cursor Keys,
 Mouse Actions and
 Status Bar

HEXADECIMAL EDITOR

Location: File Manager

Description: Edit the file at the cursor position in a binary editor.

Activation: *Direct:* F3
Menu: Alt-O, X

Comments: The file contents are displayed in a Hex editor. Use the up arrow, down arrow, page up, page down, Ctrl-home and Ctrl-end keys to navigate through the file's data, or use the scroll bar. When a hex value is over written the ASCII equivalent is displayed in the window to the right of the editor. A maximum of 10 viewing windows can be simultaneously. The F4 and F3 function keys allow for searching ASCII data or Hex values. To search for hex values insert the “#” character before the hex value in the “Find Text” field.

HEXADECIMAL DRIVER

Location: File Manager

Description: Change the driver at the cursor position to the Hexadecimal driver and display the file in binary format.

Activation: *Menu:* Alt-D, 2

See Also: Hexadecimal Editor

HIDE MARK(S)

Location: Analysis

Description: Hide all the marked analog channels and re-space the unmarked channels.

Activation: *Direct:* Delete
Menu: Alt-C, H

Comments: To mark/unmark an analog channel, click the channel ID or the channel data.

See Also: View Mark(s)

Show All Hidden
Restore Mark(s)

HISTOGRAM


Location: Analysis

Description: View the harmonics histogram.

Activation: *Direct:* F11, Right click on phasor diagram or information header
Menu: Alt-V, T

Comments: The histogram displays the number of harmonics according to the file's sampling frequency with a maximum of 200 harmonics supported. The histogram displays one channel at a time. It will display the 1st marked analog channel, or if no channels are marked then the first visible channel. The harmonic calculation is performed on one cycle of data, starting at the RMS bar to the data bar. The display values can be DFT Peak, DFT RMS, DFT Angles, % of fundamental and % of TrueRMS. The default view is % of fundamental. To change the data displayed click on the drop down menu button



and select from the list. When the data bar is moved in the data plotting window the harmonics values will be automatically updated. To view the harmonics in a table click on the harmonics toggle  button located next to the channel name.

See Also: Harmonics in the Analysis Quick Start
Harmonics Table
Harmonics Vectors

HORIZONTAL BARS

Location: Analysis

Description: Displays a solid black line that follows the data bar and displays a dotted blue line that follows the reference bar.

Activation: *Menu:* Alt-V, B

Comments: The bars will be positioned at the first marked analog channel (displayed in red). If no channels are marked then they are positioned at the first displayed channel. The Delta Y field in the status bar shows the difference between the two bars.

See Also: RMS bar
Data Bar
Reference Bar

HP-DIF

Location: Waveform Summary

Description: Displays the absolute value of the HPeak-Up minus the absolute value of the HPeak-Dn divided by the OneBit value.

Comments: The Hpeak-Up value is the highest positive peak in the channel. The Hpeak-Dn is the highest negative peak in the channel. The OneBit value is the channel's full-scale value divided by the channel's resolution.

See Also: Viewing Waveform Summaries in the File Manager Quick Start

HPEAK-DN

Location: Waveform Summary

Description: The highest negative peak value in the channel.

See Also: Viewing Waveform Summaries in the Analysis Quick Start

HPEAK-UP

Location: Waveform Summary

Description: The highest positive peak value in the channel.

See Also: Viewing Waveform Summaries in the File Manager Quick Start

IEEE LONG FILE NAMING FORMAT

Location: IEEE Long File Name

Description: All data polled from the connected devices are saved to files using the IEEE long file naming format. The start date and time comes from the data polled and the time code, substation name, device name, and company name comes from the fields in the device record.

See Also: Long File Naming Format in the Device Manager Quick Start.

IMPORT

Location: Device Manager

Description: Import all changes made to the exported tab delimited ASCII file.

Comments: The import feature is used to import all device information from the exported tab delimited ASCII file. It is advisable to always keep a backup of the existing Device Configuration files before using the import feature. This allows for a quick recovery if any of the changes made to the export file were incorrect. The 3 files to backup are the CFG_DEVS.DTB, CFG_SHOT.DTB & DRIVERS.INI files located in the Wavewin directory.


To import a previously exported file select the "Import" menu option under the "Device" menu. Enter the exported files path and filename or use the "Browse" button to select the file. All device information contained in the imported file will be updated in the active device configuration table.

See Also: Export

INCREASE AMPLITUDE

Location: Analysis

Description: Increase the amplitude of all or marked analog channels.

Activation: *Direct:* Ctrl-Up arrow or the AmpUp menu button 
Menu: Alt-D, I

Comments: When the channels' amplitude is increased the Trace Scale multiplier is multiplied into the Pixsdisp value. To change the Trace Scale Multiplier select "Window Properties" from the "File" menu then select the "Display Settings" tab.

See Also: Decrease Amplitude
Auto Scale Multiplier

INSTPEAK COLUMN

Location: Analysis (Analog Table)

Description: Displays the peak value measured between the two reference crossings surrounding the data bar (black solid line). The value is displayed as Peak type. If the data type for the loaded driver is set to RMS calibrated then the value is multiplied by the square root of 2.

Comments: The value is displayed as Peak type. If the data type for the loaded driver is set to RMS calibrated then the value is multiplied by the square root of 2.

See Also: Viewing Analog Data in the Analysis Quick Start

INSTVAL COLUMN

Location: Analysis (Analog Table)

Description: Displays the instantaneous sample value at the data bar.

Comments: This value is multiplied by the square root of 2 if the driver's data type is set to RMS calibrated.

See Also: Viewing Analog Data in the Analysis Quick Start
Data Bar

INTELLIRUPTER DRIVER

Location: File Manager (Universal Viewer)

Description: Change the driver at the cursor position to the S&C IntelliRupter driver.

Activation: *Menu:* Alt-D, S

Comments: An error message is displayed if the selected file is not a valid IntelliRupter file. Files that have a ".WFC" extension are automatically tagged as IntelliRupter files.

See Also: Display Oscillography in the File Manager Quick Start
Associating File Types in the File Manager Quick Start

LATITUDE FIELD

Location: IEEE Long File Name

Description: An optional field in the IEEE long file naming format. The latitude defines the geographical position of the substation associated with the file name. The letter N indicates latitude in the Northern Hemisphere.

See Also: Long File Naming Format in Chapter 1.

LESS THAN (<)

Location: Query Fields

Description: Search the active configuration for records that are less than the entered criteria.

Comments: To change the operator press F9 or click the mouse button on the operator symbol.

See Also: Equal To (=)
Greater Than (>)

LP-DIF

Location: Waveform Summary

Description: Displays the absolute value of the LPeak-Up minus the absolute value of the LPeak-Dn divided by the OneBit value.

Comments: The Lpeak-Up value is the lowest positive peak in the channel. The Lpeak-Dn is the lowest negative peak in the channel. The OneBit value is the channel's full-scale value divide by the channel's resolution.

See Also: Viewing Waveform Summaries in the File Manager Quick Start

LPEAK-DN

Location: Waveform Summary

Description: The lowest negative peak value in the channel.

See Also: Viewing Waveform Summaries in the File Manager Quick Start

LPEAK-UP

Location: Waveform Summary

Description: The lowest positive peak value in the channel.

See Also: Viewing Waveform Summaries in the File Manager Quick Start

LPRO DRIVER

Location: File Manager (Universal Viewer)

Description: Change the driver at the cursor position to the NxtPhase LPRO driver and plot the input channels.

Activation: *Menu:* Alt-D, O

Comments: NxtPhase files are displayed in the IEEE Comtrade Binary format. NxtPhase has developed an automatic conversion application called "AutoComtrade.exe". Wavewin calls "AutoComtrade.exe" to convert NxtPhase files to the Comtrade binary format for display. To view NxtPhase relay files double click or press enter on the original LPRO files. To obtain a copy of the "AutoComtrade.exe" file please contact NxtPhase.

Files that have an ".LPR" extension are automatically tagged as NxtPhase LPRO files.

See Also: Tesla Files in the File Manager Quick Start
Display Oscillography in the File Manager Quick Start
Associating File Types in the File Manager Quick Start

LST

Location: Waveform Summary (Events/Sensors Activity Summary)

Description: Displays the status of the last digital samples in the file. Lst is the second column in the Events/Sensors Activity Summary. A=Alarm, N=Normal.

Comments: This data is also displayed in the third column of the digital information table view.

LST-CHANGE

Location: Waveform Summary (Events/Sensors Activity Summary)


Description: Displays the date and time the digital channel last changed state. Lst-Change is the forth column in the Events/Sensors Activity Summary.

Comments: This data is also displayed in the fifth column of the digital information table view.

MARK ALL ROWS

Location: All Tables

Description: Mark all the rows in the table.

Activation: *Direct:* Mark menu button (if no files are marked). 
Menu: Alt-M, A

Comments: Marked rows are displayed in red. The TotMarks field displayed in the status bar is updated accordingly. The Mark menu button toggles between marking and unmarking all rows in the table.

See Also: Unmarked Marked Rows
Flip Marks
Group Marked Rows

MARK/UNMARK ALL CHANNELS

Location: Analysis**Description:** Unmark all analog & digital channels if the total number of marked channels is less than the total number of displayed channels otherwise mark all the channels.**Activation:** *Direct:* F8
Menu: Alt-C, M**Comments:** When an analog channel is marked the ID, title, ASV, and units are displayed in light red. When a digital channel is marked the ID and titles are displayed in light red. To mark or unmark a channel click the channel's corresponding ID number or title, or use the space bar.**MARK/UNMARK ROW**

Location: All Tables**Description:** Toggle the row at the cursor position between the marked and unmarked state.**Activation:** *Direct:* Spacebar, Ctrl-Left Mouse Click
Menu: Alt-M, M**Comments:** Marked rows are displayed in red. The TotMarks field displayed in the status bar is updated accordingly. The Mark menu button toggles all the rows in the table between the marked and unmarked state.**MARK CHANGE IN SIGN**

Location: Analysis**Description:** Mark all positions in the analog channels where the waveform changes in sign.**Activation:** *Menu:* Alt-A, H**Comments:** A small gray triangle marks the change in sign position.**See Also:** Mark Raw Values
Mark Peak Values**MARK PEAK VALUES**

Location: Analysis**Description:** Mark all positive and negative peaks on the analog channels.**Activation:** *Menu:* Alt-A, H**Comments:** A small gray square marks the positive and negative peaks.**See Also:** Mark Change in Sign
Mark Raw Values

MARK RAW VALUES

Location: Analysis

Description: Mark all the raw samples read from the active waveform file.

Activation: *Menu:* Alt-A, M


Comments: A small hollow blue circle is placed at the raw samples read from the file.

See Also: Mark Change in Sign
Mark Peak Values

MAX X PIXELS

Location: DXF Animated CAD (Drawing Properties Dialog)

Description: Displays the total number of X pixels allocation for the active DXF drawing.

Activation: *Direct:* F2 – drawing properties menu button 
Menu: Alt-T, D


Comments: This value changes automatically when the Zoom In/Out features are used and is updated accordingly in the DXF status bar.

See Also: Zoom In
Zoom Out
Zoom X, Y Resolution Properties

MAX Y PIXELS

Location: DXF Animated CAD (Drawing Properties Dialog)

Description: Displays the total number of Y pixels allocation for the active DXF drawing.

Activation: *Direct:* F2 – drawing properties menu button 
Menu: Alt-T, D

Comments: This value changes automatically when the Zoom In/Out features are used and is updated accordingly in the status bar.

See Also: Zoom In
Zoom Out
Zoom X, Y Resolution Properties

MAXPEAK COLUMN

Location: Analysis (Analog Table)

Description: Displays the maximum peak value of the channel.

Comments: If the active driver's data type is set to RMS calibrated then the files maxpeak value is multiplied by Root 2.

See Also: Viewing Analog Data in the Analysis Quick Start

MAXVAL COLUMN

Location: Analysis (Analog Table)

Description: Displays the maximum value of the channel.

Comments: This column is displayed if the active driver's data type is set to Non-Sinusoidal-Log Files.

See Also: Viewing Analog Data in the Analysis Quick Start

MAXWIN COLUMN

Location: Analysis (Analog Table)

Description: Displays the absolute maximum value between the RMS bar (black dotted line) and the data bar (black solid line).

Comments: This column is displayed if the active driver's data type is set to Non-Sinusoidal-Log Files.

See Also: Viewing Analog Data in the Analysis Quick Start
Data Bar
RMS Bar

MDAR REL 301/302 DRIVER

Location: File Manager (Universal Viewer)

Description: Change the driver at the cursor position to the MDAR REL 301/302 driver and plot the input channels.


Activation: *Menu:* Alt-D, D

Comments: If the selected file is not a valid REL file an error message is generated. All files that have the ".REL" extension are tagged as MDAR REL files. The MDAR REL driver uses circular interpolation techniques to convert the input sampling frequency to a higher frequency suitable for display. The input sampling frequency is 8 samples per cycle (45 degrees apart).

MEDIUM DISPLAY

Location: Analysis

Description: Display the analog channel using the maximum pixels allowed with no zero reference point. The medium display is activated through the Auto Scale feature.

Activation: *Direct:* F6, - Auto Scale button 
Menu: Alt-D, A, P

Comments: The Auto Scale toggles between (Off, On and ++). ++ plots the signal using the number of maximum pixels allowed for the channel. The highest value is plotted at the maximum position allowed and the smallest value is plotted at the lowest position allowed. This feature was added to clearly show the profile of frequency, Vdc and load data channels.

See Also: Scaling Analog Channels in the Analysis Quick Start
 AS Status Field
 Auto Scaling

MERGE OPEN FILES

Location: Analysis

Description: Merge the visible or marked channels from all the open analysis windows into a new data window. There are three Merge options available. Merge files “By Time” will merge only the common times in the open files. Merge files “Manually” will merge the data according to the positions of the data bars in each open window. Merge files “By Sample” will merge the files by lining up the samples in each open window.

Activation: *Menu:* Alt-F, G, B-“By Time”, M-“Manually”, S-“By Sample”

Comments: To distinguish between the merged channels the station name is placed before each channel merged. To deactivate this feature open the “Window Properties” dialog, select the “Append/Merge” tab and click the “Merge Files” option. If the files have different sampling frequencies a dialog will be display to select the frequency for the new window.

See Also: Merge Open Files in the Analysis Quick Start
 Merge Waveform Files

MERGE WAVEFORM FILES

Location: File Manager

Description: Merge all the channels from the marked waveform file into a analysis window. There are two Merge options available. Merge files “By Time” will merge only the common times in the open files. Merge files “By Sample” will merge the files by lining up the samples in each open window.

Activation: *Menu:* Alt-O, W, M, B-“By Time”, S-“By Sample”

Comments: To distinguish between the merged channels the station name is placed before each channel merged. To deactivate this feature open the analysis “Window Properties” dialog, select the “Append/Merge” tab and click the “Merge Files” option. If the files have different sampling frequencies a dialog will be display to select the frequency for the new window.

See Also: Merge Waveform Files in the File Manager Quick Start
 Merge Open Files

MINPEAK COLUMN

Location: Analysis (Analog Table)

Description: MinPeak is the column that displays the minimum peak value of the channel.

Comments: If the active driver’s data type is set to RMS calibrated then the files minpeak value is multiplied by Root 2.

See Also: Viewing Analog Data in the Analysis Quick Start

MINVAL COLUMN

Location: Analysis (Analog Table)

Description: Displays the minimum value of the channel.


Comments: This column is displayed if the active driver's data type is set to Non-Sinusoidal-Log Files.

See Also: Viewing Analog Data in the Analysis Quick Start

MOVE FILES

Location: File Manager

Description: Copy the marked files to the specified destination path then delete the files from the source directory. If a file is not copied successfully it is marked and grouped at the top of source directory. To create a new destination directory enter the name into the Directories edit box. The system prompts prior to creating the new directory.

Activation: *Direct:* F9, - Move menu button 
Menu: Alt-F, M

Fields:

<i>Directory Name:</i>	The destination path where the marked files are to be moved. To specify a new path, type the path directly into this edit box.
<i>Directories:</i>	Displays a tree of the system's directories, double click to open a node in the tree and click on the desired directory to highlight it.
<i>Files:</i>	Displays a list of the files in the highlighted directory.
<i>Drives:</i>	A list of all the connected drives. Select the desired drive.

Options:

<i>Enter/Ok:</i>	Move the marked files to the selected destination path.
<i>Esc/Cancel:</i>	Exit the dialog without executing the command.

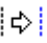
Comments: Marked files are displayed in red. The TotMarks and MrkSize fields displayed in the status bar are updated accordingly.

See Also: Copy Files
Mark/Unmark File

MOVE RMS BAR TO REFERENCE BAR

Location: Analysis

Description: Move the RMS bar (black dotted line) to the sample at the Reference bar position (blue dotted line).

Activation: *Direct:* Ctrl-Z – Set RMS bar menu button 
Menu: Alt-V, R

Comments: The RMS and Data bars define the RMS sliding window.


See Also: Setting the Cursor Bars in the Analysis Quick Start

RMS Bar

MOVE REFERENCE BAR TO DATA BAR

Location: Analysis

Description: Move the Reference bar (blue dotted line) to the sample at the Data bar position (black solid line).

Activation: *Direct:* Ctrl-A – Set Reference Bar menu button 
Menu: Alt-V, M

Comments: The Delta time field (Delta X) in the status bar at the bottom of the screen displays the time difference between the reference bar and the data bar. If the time difference between the samples is in milliseconds or microseconds then the number of cycles between the two bars is also displayed.

See Also: Setting the Cursor Bars in the Analysis Quick Start
 Data Bar
 Reference Bar

MRKSIZE

Location: File Manager (Status Field)


Description: Displays the combined size (in Kbytes) for all marked files.

See Also: Size
 Free

MULTIPOINT INTERROGATION DISPLAY (MID)

Location: Device Manager

Description: Display the MID window to periodically execute the device's assigned drivers and updates the parsed information into the device panel.

Activation: *Direct:* F7 – menu button 
Menu: Alt-O, M

Comments: The Multiport Interrogation Display (MID) contains four device panels per page. A maximum of 999 device panels can be opened at one time. To activate the MID window press F7. If no devices are marked, all devices assigned a driver are displayed and polled. Use the up, down, page up, and page down keys to view the device panels. When F7 is pressed the device's TXCOMMAND assigned in the DRIVERS.INI file is periodically sent to the output device. The response data is parsed by the RXSTRIP commands and updated in the device panel. Each panel displays the device title (Hdr), the assigned active device drive (Drv), the device number (Dev#), and the number of times the driver executed (Cycle).

See Also: Multiport Interrogation Display in the Device Manager Quick Start

NEW DEVICE CONFIGURATION

Location: Device Manager

Description: Open a new device configuration table with 0 devices defined in the table and database files.

Activation: *Menu:* Alt-D, W


Comments: A “Select Directory” dialog allows for selecting an existing directory or for creating a new directory for the new configuration. To create a new directory type the directory name in the “Directory Name” field. If the directory does not exist the system prompts a message for confirmation to create the directory. The “CFG_DEVS.DTB” and “CFG_SHOT.DTB” files are created with zero records. If these files exist in the selected directory then they are cleared. The system will prompt a message asking to copy the existing “DRIVERS.INI” file to the new configuration directory. Select “Yes” to use the existing “DRIVERS.INI” for the new configuration or “No” to create a new “DRIVERS.INI” file.

See Also: System Files in the Device Manager Quick Start
New Device Record
Duplicate Device Record

NEW DEVICE RECORD

Location: Device Manager

Description: Create a new device record in the table.

Activation: *Direct:* F4 –menu button 
Menu: Alt-D, N

NEW DEVICE CONFIGURATION

Location: Device Manager

Description: Open a new device configuration table with 0 devices defined in the table and database files.

Activation: *Menu:* Alt-D, W

Fields: ***Device Settings:***

<i>Device Number:</i>	Set the number of the device. Each device must have a unique number. The device number is used in the IEEE long file naming format.
<i>Address:</i>	Set the address of the device. The address can be the port number off a 2020/2030 or a modbus address.
<i>Station ID:</i>	Set the ID number for the station each station must have a unique number.
<i>Data Type:</i>	Select the type of data being polled (ASCII/Binary).
<i>Print :</i>	Select if the data polled is sent to the connected printer (On/Off).
<i>Title:</i>	Set the device title.
<i>Driver:</i>	Select the main driver that will poll the device.
<i>Station Name:</i>	Set the station name.
<i>Time Code:</i>	Select the main driver that will poll the device.

EscSeq: The EscSeq field contains 7 separate fields separated by a blank. Set the appropriate information in the appropriate fields. The fields can contain passwords, phone numbers, file names, FTP settings, TCP/IP settings for a specific device refer to the “Device Configuration” document.

Port Settings:

Port Number: Select the COM port number from the list of COM ports registered on the machine or enter a new COM port number. For TCP/IP and FTP connections each device must have a unique COM port number.

Baud Rate: Select the port’s baud rate.

Parity: Select the port’s parity (None, ODD, Even, Mark).

Data Bits: Select the port’s Data Bits (7 or 8).

Stop Bits: Select the port’s stop bits (1 or 2).

Flow Control: Select the port’s flow control (None, Software or Hardware).

Terminal Settings:

CR/LF: Select if a CR/LF is added after a TX string, RX string, both or none in terminal mode.

Local Echo: Select if the transmitted text is echoed to the terminal window.

Terminal Settings:

CR/LF: Select if a CR/LF is added after a TX string, RX string, both or none in terminal mode.

TX Delay:

Inter Char Delay: Enter the number of milliseconds to wait when transmitting characters to the device.

Options: **Save/Enter:** Exit and save the dialog fields.
Esc/Cancel: Exit the dialog without saving the dialog fields.

Comments: A “Select Directory” dialog allows for selecting an existing directory or for creating a new directory for the new configuration. To create a new directory type the directory name in the “Directory Name” field. If the directory does not exist the system prompts a message for confirmation to create the directory. The “CFG_DEVS.DTB” and “CFG_SHOT.DTB” files are created with zero records. If these files exist in the selected directory then they are cleared. The system will prompt a message asking to copy the existing “DRIVERS.INI” file to the new configuration directory. Select “Yes” to use the existing “DRIVERS.INI” for the new configuration or “No” to create a new “DRIVERS.INI” file.

Comments: Some of the fields are set to default values such as: port number, baud rate, parity, data bits, stop bits and flow control. The device number is a required field and must be unique. An error message will be displayed if any invalid fields are encountered.

See Also: New Device Record
Edit Device Record
Duplicate Device Record

NEW FILE

Location: ASCII Editor

Description: Open a new empty ASCII edit window with the title defaulted to Untitled.

See Also: Open File

ONEBIT

Location: Waveform Summary

Description: Displays the analog channel's full-scale value divide by the channel's resolution.

Comments: The OneBit value is used to calculate the HP-Dif and the LP-Dif.

See Also: Viewing Waveform Summaries in the File Manager Quick Start
HP-Dif
LP-Dif

OPEN ALL MARKED WAVEFORM FILES

Location: File Manager

Description: Open all the marked waveform files in the file table and minimize the file table.

Activation: *Menu:* Alt-O, W, F

Comments: All the marked waveform files are opened, tiled and the file table is minimized. A maximum of 10 data windows can be open at one time.

See Also: Open All Marked Files in the File Manager Quick Start

OPEN FILE

Location: ASCII Editor

Description: Open the window open file dialog box to select an existing file. The open file will be put in a new ASCII edit window.

See Also: New File

OPTIONAL COLUMNS

Location: File Manager

Description: The IEEE PSRC long file naming convention allows for user defined fields appended at the end of the filename. The file table reserves 4 columns for the first 4 user defined fields. The columns are named Optional-1 to Optional-4.

See Also: Long File Naming Format in the File Manager Quick Start

PASTE DEVICE RECORDS

Location: Device Manager

Description: Paste the device records from the system clipboard files to the active device configuration.

Activation: *Menu:* Alt-D, T


Comments: Device records copied to the system clipboard files (“DEV_CLIPBOARD.CLP”, “LOG_CLIPBOARD.CLP”) can be pasted into the active device configuration files. After each paste operation the device table is updated and all devices are initialized.

See Also: Change Device Configuration
New Device Configuration
Copy Device Records

PASTE TEXT

Location: ASCII Editor

Description: Paste the contents of the clipboard into the document at the cursor position. Existing blocked text is overwritten with the contents of the clipboard.

Activation: *Direct:* Ctrl-V, Shift-Ins - Paste menu button 
Menu: Alt-E, P

Comments: Use the shift keys and the up, down, page up and page down keys to block file text.

See Also: Copy Text
Cut Text

PATH/FILENAME (NO EXT.)

Location: Save as COMTRADE Dialog (ASCII/Binary)

Description: Displays the destination path and filename of the new COMTRADE file.

Comments: The oscillography file at the cursor position is saved in COMTRADE format to the specified filename. When specifying a filename do not enter an extension, the “.CFG” and “.DAT” files are automatically created. If a path is not specified the files are saved to the active directory.

Restrictions: The filename cannot contain an extension.

PHASOR/CIRCULAR CHART SCALE MULTIPLIER (ASM)

Location: Analysis (Window Properties Dialog)

Description: Used as a multiplier to increase/decrease the length of a vector in the phasor diagram or to increase/decrease the circular chart data.

Activation: *Menu:* Alt-F, T, “Display Settings” Tab

Range: Greater Than 1.00

Default: 2.00

Comments: When a channel's amplitude is increased, the phasor/circular chart scale value is multiplied with the Pixsdisp value, and when the channel's amplitude is decreased the phasor/circular chart scale value is divided by the Pixsdisp value.


PIXSDISP COLUMN

Location: Analysis**Description:** Displays the number of pixels allocated for the channels.**Comments:** When a channels' amplitude is increased or decreased the trace scale multiplier, set in the "Window Properties" dialog, is multiplied or divided with the PixsDisp values in the analog information table. To increase or decrease the channels' amplitude, select "Increase Amplitude" or "Decrease Amplitude" from the Data menu. If no channels are marked, all channels are scaled accordingly.**See Also:** Trace Scale Multiplier
Auto Scaling**PLAY CHANNELS AUDIO**

Location: Analysis**Description:** Plays the audio of the first marked analog channel. If no channels are marked then it plays the audio of the first displayed channel.**Activation:** *Menu:* Alt-D, P

Fields:	<i>Analog Channel:</i>	Title of the active analog channel.
	<i>Save Audio:</i>	Active saving the analog channel data to the window's .WAV format.
	<i>Audio Filename:</i>	The path and name of the saved .WAV file.
	<i>Drives:</i>	A list of all the connected drives. Select the desired drive.

Options:	<i>Play:</i>	Play the active analog channels data.
	<i>Volume:</i>	Decrease/Increase the volume of the output.

Comments: Marked channels are displayed in red. The "Active Channel" section displays the active analog channel in the analysis window. The "Audio Controls" section allows for playing the active analog channel's data through the computers speakers and for increasing/decreasing the volume of the output. The "Save .WAV File" section allows for saving the analog channel data in the Window's .WAV format. Click the folder button  to select and destination directory and to enter a new ".WAV" file or for selecting an existing ".WAV" file. The selected file path and name will be updated in the "Audio Filename" field.**See Also:** Play Channels Audio in the Analysis Quick Start**PRIMARY VALUES**

Location: Analysis (Analog Table)**Description:** The values displayed in the analog table are either in primary or secondary quantities. If the file defines the type of values saved then the type is displayed in the window header. Also, if the CT and PT ratios are defined in the configuration file then the values can be changed from primary to secondary and vice versa. To change the values open the properties dialog and click on the "Driver Data Type" tab, select the Primary or Secondary radio button to switch between values.

See Also: Changing Analog Values in the Analysis Quick Start
Secondary Values

PRINT ALL DATA

Location: Analysis

Description: Print all the data for the visible analog and digital channels.

Activation: *Menu:* Alt-F, P, A

Comments: The printer must be registered in the system's WIN.INI file. The printed pages include the page number and the date/time of the first sample in the page. The channel information is printed at the end of the data. Use the print page option to print only the contents of the data window.

See Also: Printer Setup

PRINT ALL ROWS

Location: All Tables

Description: Print all the rows in active table.

Activation: *Menu:* Alt-F, P, A

Comments: The printer must be registered in the system's WIN.INI file. Use the Print Marked option to print only the marked files.

See Also: Printer Setup

PRINT DXF FILE

Location: DXF Animated CAD

Description: Print the contents of the active DXF file.

Activation: *Menu:* Alt-T, P, F

Comments: The printer must be registered in the system's WIN.INI file. Use the Print DXF Page option to print only the contents displayed in the window.

See Also: Printer Setup

PRINTER SETUP

Location: All child windows.

Description: Change the printer type and setup the current printer.

Activation: *Menu:* Alt-F, S – Device Manager/ASCII/Binary Event Editor
Menu: Alt-T, S – DXF Display

PRINT FILE

Location: ASCII/Binary Event File

Description: Print all pages in the open file.

Activation: *Menu:* Alt-F, P, F

Comments: The printer must be registered in the system's WIN.INI file. In the ASCII/Binary editors, use the "Print/File Page" option to print the current page.

See Also: Printer Setup

QUERY ALL ROWS

Location: Query Fields

Description: Compare the entered criteria to all the records in the active configuration.

Activation: *Direct:* F6, <enter>
Menu: Alt-Q, A

Comments: All the records in the active configuration are compared to the entered query criteria. A marked record that does not meet the query requirements is unmarked. The records that meet the query requirements are marked and grouped at the top of the table. Marked records are displayed in red.

The Enter key searches all the records in the table.

See Also: Query Marked Records
Query Unmarked Records
Clear Query Criteria

QUERY MARKED ROWS

Location: Query Fields

Description: Compare the entered criteria to the marked records in the active configuration.

Activation: *Direct:* F5
Menu: Alt-Q, M

Comments: The marked records that meet the query requirements are marked and grouped at the top of the table. All other marked records are unmarked. Marked records are displayed in red.

See Also: Query Unmarked Records
Query All Records

QUERY UNMARKED ROWS

Location: Query Fields

Description: Compare the entered criteria to the unmarked records in the active configuration.

Activation: *Direct:* F7
Menu: Alt-Q, U

Comments: The unmarked records that meet the query requirements are marked and grouped below previous marked records. Marked records are displayed in red.


See Also: Query Marked Records
 Query All Records

RECORDED CHANNELS

Location: Analysis

Description: Display the following information for the active oscillography file:

Channel #	Analog Channel Titles	Full Scale Values
SAC #	SAC Titles	Full Scale Values
Channel #	Digital Channel Titles	Original State Values
SDC #	SDC Titles	Original State Values


Activation: *Direct:* F2 - Channel menu button 
Menu: Alt-F, R

Comments: Triggered digital channel titles are displayed in red. All valid and invalid channels are displayed.

REFERENCE BAR

Location: Analysis

Description: Displays the instantaneous sample value at the reference bar position (dotted blue line that runs vertically across the analog and digital channels). This value is displayed in the RefVal column of the analog table view.

Comments: The reference bar is used to resize the RMS sliding window and display the instantaneous value at the sample position. To resize the sliding window, click the right mouse button to set the reference bar position and the left mouse button to set the data bar position then select the **Set RMS Bar**  menu button.

The Delta time (Delta X) field, displayed in the status bar shows the time difference between the reference bar and the data bar. If the time difference between the samples is in milliseconds or microseconds then the number of cycles between the two bars is also displayed.


The default position of the reference bar is at the fault time.

See Also: Data Bar
 RefVal
 Fault Bar

REFRESH

Location: File Manager

Description: Update the contents of the active directory from the operating system's allocation table.

Activation: *Direct:* Refresh menu button 
Menu: Alt-F, F

REFVAL COLUMN

Location: Analysis (Analog Table)

Description: Displays the sample value at the Reference bar (blue dotted line).

Comments: If the active driver's data type is set to RMS calibrated, the sample value at the data bar position is multiplied by the square root of 2.

See Also: Viewing Analog Data in the Analysis Quick Start Reference Bar

RENAME FILE/DIRECTORY

Location: File Manager

Description: Rename the file or directory at the cursor position.

Activation: *Menu:* Alt-F, N

Fields: *From:* The current name of the file.
To: The new name of the file.

Options: *Enter/Ok:* Change the name.
Esc/Cancel: Exit the dialog without executing the command.

REOPEN WAVEFORM FILE

Location: Analysis

Description: Reopen a file that was previously viewed.

Activation: *Menu Bar:* Open File drop down menu button 

Comments: A list of the last 14 open files is displayed in a drop down menu button. Click the on the file to reopen.

See Also: Reopen Waveform File in the Analysis Quick Start

REPLAY PLUS DRIVER

Location: File Manager (Universal Viewer)

Description: Change the driver at the cursor position to the Hathaway Replay Plus driver and plot the input channels.

Activation: *Menu:* Alt-D, R

Comments: The Replay Plus driver reads and displays waveform (dfr), disturbance (css) and trend (tss) files. If the selected file is not a valid Replay Plus file an error message is generated. All files that have the “.DAT” extension, with no corresponding “.CFG” file are tagged as Replay Plus files.

See Also: Display Oscillography in the File Manager Quick Start
Associating File Types in the File Manager Quick Start

RESIZE COLUMNS

Location: All Tables

Description: Resize the columns in the table.


Activation: *Direct:* Mouse Drag



Comments: To resize the table columns, place the mouse over the column separator and drag to the right or the left. The cursor changes to the vertical resize cursor when the mouse is positioned over the column separator. Double click the mouse over the separators to make the column size the maximum area to display all the text in the column.

RESIZE SLIDING WINDOW

Location: Analysis

Description: Resize the RMS sliding window.

Activation: *Direct:* Resize Sliding Window menu button 
Menu: Alt-V, W


Comments: To automatically resize the RMS sliding window click on the **Resize Sliding Window** menu button  or open the “Resize Sliding Window” menu option under the “View” menu. To manually resize the RMS sliding window click the right mouse button to set the reference position and the left mouse button to set the ending data position then click the **SetRMS**  menu button. The RMS bar is moved to the reference position. The Delta time (Delta X) field displayed in the status bar at the bottom of the screen shows the time difference (in milliseconds or seconds) and the number of cycles between the reference and data bars. Use the left, right, ctrl+left, and ctrl+right keys or the horizontal scroll bar to move the sliding window.

See Also: Setting the Cursor Bars in the Analysis Quick Start
Data Bar
RMS Bar
Reference Bar

RESTORE MARK(S)

Location: Analysis

Description: Restore all the hidden analog channels. The delete key removes the marked analog channels and the insert key restores the channels.

Activation: *Direct:* Insert or the ViewAll menu button 


Menu: Alt-C, R

See Also: View Mark(s)
Hide Mark(s)
Show All Hidden

RESTORE ORIGINAL

Location: Analysis

Description: Restore the displayed file to the original samples stored in the file. This feature will undo all changes made using the change frequency, duplicate cycles and truncate cycles features.

Activation: *Direct:* Restore Original menu button 
Menu: Alt-D, R

See Also: Duplicate Cycles
Truncate Cycles
Change Frequency

RFL 9300 DRIVER

Location: File Manager (Universal Viewer)

Description: Change the driver at the cursor position to the RFL 9300 driver and plot the input channels.

Activation: *Menu:* Alt-D, F

Comments: If the selected file is not a valid RFL 9300 file an error message is generated.

RMS COLUMN

Location: Analysis (Analog Table)

Description: Displays the RMS value for all samples positioned between the RMS bar (black dotted line) and the data bar (black solid line). If the data is RMS calibrated, each sample value is multiplied by the square root of 2 before it is squared.

See Also: Viewing Analog Data in the Analysis Quick Start
RMS Bar
Data Bar

RMS BAR

Location: Analysis

Description: The RMS bar is the black dotted line that runs vertically across the analog and digital channels. The RMS bar and data bar define the RMS sliding window.

Comments: When the analysis window is initially opened the sliding window is defaulted to one cycle. The sliding window is used to calculate the RMS value for all samples positioned between the data bar and the RMS bar. This value is displayed in the Analog View.

To resize the sliding window, click the right mouse button to set the reference bar position and the left mouse button to set the data bar position then select the **Set RMS Bar** menu button. This button will move the RMS bar to the reference bar.

See Also: Data bar
RMSVal Column
TrueRMS Column
Fault Bar

RUN

Location: File Manager

Description: Execute the specified command.

Activation: *Direct:* F5
Menu: Alt-F, R

Fields: *Open:* The path and filename of the application to run.

Options: *Enter/Ok:* Run the specified application.
Esc/Cancel: Exit the dialog without executing the command.
Browse: Display the Windows open dialog to browse for a file.

SAMPLE BASED DISPLAY

Location: Analysis

Description: The sample base display plots the channel data with 1 pixel distance between each displayed sample. Sample based displays are useful for showing changes in sampling frequency.

Comments: To change the trace display settings open the “Window Properties” dialog under the “File” menu. Click the “Display Settings” tab and change the “Trace Display Type” field to time based or sample based.

See Also: Time & Sample Based Displays in the Analysis Quick Start

SAVE & ARCHIVE DIALOG

Location: Device Manager

Description: Display the “Save & Archive” dialog to define the system and file settings.

Activation: *Menu:* Alt-O, S

Fields: *System Settings:*
Station ID: Set the Station number where the system is running.
Station Name: Set the Station name where the system is running
Company Name: Set the company name.

Password: Set the password to gain access to this platform from another station. Refer to Interrogating a Remote Device for more information on using the password to gain access to the Wavewin platform via a remote computer.

File Settings:

Save Rx Data: Save all received data from the devices in a device DTB file.

Save Path: Set the path where the device DTB files are to be saved.
Maximum 80 characters.

Duration (min): Set the duration of the DTB files saved.

End With: Action to take when the duration field has been exceeded.
Archive will rename the DTB files using the IEEE long file naming format and delete will delete the DTB files from disk.

Options: **Save/Enter:** Exit and save the dialog fields.
Esc/Cancel: Exit the dialog without saving the dialog fields.

Comments: Use the tab key to navigate between fields.

See Also: Change DXF Files in Chapter 1
IEEE Long File Naming Format in Chapter 1
Interrogating A Remote Device in Chapter 1

SAVE AS

Location: ASCII/Binary Editor

Description: Save the active event file to a new name.

Activation: *Menu:* Alt-F, A

See Also: Save As Text

SAVE AS COMTRADE (ASCII/BINARY)

Location: File Manager and Analysis

Description: Save the waveform file at the cursor position or the displayed analog/digital channels to COMTRADE ASCII or Binary format.

Activation: *Menu:* Alt-O, V, A – Save in COMTRADE ASCII format
Menu: Alt-O, V, B – Save in COMTRADE Binary format

Fields: **Path:** The destination path.
Filename: The filename with no extension.

Options: **Enter/Ok:** Read the file contents and save it in COMTRADE format.
Esc/Cancel: Exit the dialog without executing the command.

Comments: Do not enter a filename extension. The COMTRADE configuration (.CFG) and data (.DAT) files are automatically created. If a path is not defined, the files are saved in the active directory.

Currently there are two Comtrade versions supported: the older 1991 format and the newer 1999 format. The Comtrade format can be selected from the “Window Properties” dialog in the analysis window. The default format is the newer 1999 format.

If the sample values in the selected file are RMS calibrated and the outcome Comtrade file must have instantaneous values then set the “Comtrade Settings” fields to automatically convert the RMS data to instantaneous values. To set the “Comtrade Settings” fields open the “Window Properties” dialog in the analysis window. Select the “Comtrade” tab then select “Yes” for the “Convert RMS Calibrated Data to Peak Data” field.

To automatically convert the selected channels to Comtrade using the IEEE long file naming convention check the “Use the ComNames Naming Convention to Name the Comtrade File(s)” field in the “Save As Comtrade” Dialog and leave the File Name field empty. The selected channels are converted to the selected Comtrade format and are named using the IEEE long file naming convention.

Restrictions: The selected file must be a supported oscillography file.

See Also: Save As Comtrade in the File Manager & Analysis Quick Start

SAVE AS TEXT

Location: Binary Editor

Description: Save the binary values in the hex editor file to an ASCII text file.

Activation: *Menu:* Alt-F, T

See Also: Save As

SAVE DATE COLUMN

Location: File Manager

Description: Displays the date the file was last saved on disk.

Comments: Click the table’s Save Date header to sort the files in ascending or descending order with respect to the Save Date.

See Also: Fault Date/Time Column
Save Time

SAVE DISPLAYED VALUES(DEFAULT FORMAT)

Location: Analysis

Description: Save the displayed values in the analog table to a file or to the Windows clipboard.

Activation: *Menu:* Alt-F, T “Values File” Tab

Fields:	<i>Save To:</i>	Where to save the values: file, clipboard or both
	<i>Select Values File:</i>	Select the file for the displayed values.
	<i>Save Type:</i>	How to maintain the file: append or rewrite
	<i>Save Format:</i>	How to save the data: fixed ASCII or comma delimited
	<i>Add Titles:</i>	Add the titles to the file or no titles.

Options: *Enter/Ok:* Set the format.
 Esc/Cancel: Exit the dialog without executing the command.

Comments: To save the samples values to a file select the “Mark & Save” menu option under the “Values” menu. Select the format for the selected sample. To view the values file, select the “Values File/Open” menu option under the “Values” menu.

See Also: Save Displayed Values in the Analysis Quick Start

SAVE TIME COLUMN

Location: File Manager

Description: Displays the time the file was last saved on disk.

Comments: Click the table’s Save Time header to sort the files in ascending or descending order with respect to the Save Time.

See Also: Fault Date/Time Column

SAVE USER VIEWS

Location: Analysis

Description: Save the displayed view information in an ASCII text file.

Activation: *Menu:* Alt-V, S

Fields: *View File Path:* Destination path for the file.
 View Name: The name of the view. A file extension is not needed. The “.VIW” extension is automatically assigned.

Options: *Enter/Ok:* Save the view.
 Esc/Cancel: Exit the dialog without executing the command.

Comments: The following information is saved:

- Displayed analog channels,
- Analog channel order,
- Superimposed channels,
- Analog channel colors,
- Digital channels displayed,
- Sampling frequency,
- Time scale,
- Sliding window size (RMS bar to Data bar),
- Phasor window size,
- Table window size,
- Red fault bar,
- Auto scale and
- Phasor or circular chart displayed

See Also: Select User Views
 User Views in the Analysis Quick Start

SECONDARY VALUES

Location: Analysis (Analog Table)

Description: The values displayed in the analog table are either in primary or secondary quantities. If the file defines the type of values saved then the type is displayed in the window header. Also, if the CT and PT ratios are defined in the configuration file then the values can be changed from primary to secondary and vice versa. To change the values open the properties dialog and click on the “Driver Data Type” tab, select the Primary or Secondary radio button to switch between values.

See Also: Changing Analog Values in the Analysis Quick Start
Primary Values

SEL LOAD PROFILE DRIVER

Location: File Manager (Universal Viewer)

Description: Change the driver at the cursor position to the SEL load profile driver and plot the input channels.

Activation: *Menu:* Alt-D, O

Comments: If the selected file is not a valid SEL load profile file an error message is generated. All files that have the “.BSV” extension are tagged as SEL load profile files.

SEL RELAY DRIVER

Location: File Manager

Description: Change the driver at the cursor position to the SEL event driver and plot the input channels.


Activation: *Menu:* Alt-D, A


Comments: If the selected file is not a valid SEL file an error message is generated. All files that have the “.SEL”, “.CEV” and “.EVE” extensions are tagged as SEL files. Use the Drivers menu to change the file’s SEL driver type. All SEL relay display formats are supported.

SELECT LINES/VIEWS

Location: Analysis

Description: Select a specific line or view for display.

Activation: *Direct:* Line/View drop down menu button 
Menu: Alt-C, L

Comments: The DFR Transcan and Faxtrax records have predefined views encoded into their format. To select the predefined views click on the “Show All/ Select View” drop down menu button or select the “Select Views” menu option under the “Channels” menu option. A list of the available lines/graphs will be displayed. To view all the analog channels in the file press the <esc> key, the <backspace>, or click the “Show All” menu button or click the **ViewAll**  menu button.

See Also: Selecting Predefined Views in the Analysis Quick Start

SELECT USER VIEWS

Location: Analysis

Description: Select a view file from the list of files located in the displayed view path.

Activation: *Menu:* Alt-V, V

Fields:

<i>View Files:</i>	A list of all the view files in the displayed view path.
<i>Analog Channels:</i>	All analog channel information defined in the view file.
<i>Digital Channels:</i>	All digital channel information defined in the view file.

Options:

<i>Enter/Ok:</i>	Select the highlighted view.
<i>Esc/Cancel:</i>	Exit the dialog without executing the command.

Comments: The following information is read from the selected view file and applied to the displayed file:

- Displayed analog channels,
- Analog channel order,
- Superimposed channels,
- Analog channel colors,
- Digital channels displayed,
- Sampling frequency,
- Time scale,
- Sliding window size (RMS bar to Data bar),
- Phasor window size,
- Table window size,
- Red fault bar,
- Auto scale and
- Phasor or circular chart displayed

If the analog channel and digital channel names defined in the view file are not in the displayed file than an error message is displayed.

See Also: Save User Views
User Views in the Analysis Quick Start

SEQUENCE OF EVENTS LIST

Location: File Manager

Description: View a table of sequence of events for a number of waveform files. Mark all the desired files then press F11 or select the "SOE List" menu option from the "Reports" submenu under the "Options" menu. A table will be displayed listing all the events triggered in the selected files.

Activation: *Direct:* F11
Menu: Alt-O, R, S

Fields:

<i>Substation:</i>	The substation where the device is installed.
<i>Device:</i>	The device the channel came from.

<i>State:</i>	The state of the channel at that time (A=Abnormal, N=Normal).
<i>Trigger Date:</i>	The trigger date.
<i>Trigger Time:</i>	The trigger time.
<i>Channel:</i>	The channel number of the event in the file.
<i>Channel Title:</i>	The title of the channel.
<i>File:</i>	The file containing the event/sensor channel.

Comments: The table is sorted according to the date and time. The Query section at the bottom of the table allows for searching events from specific substations, devices, channels and more... To view the file containing the specific events press enter or double click on the event.

SEQUENCE OF EVENTS SUMMARY

Location: File Manager

Description: View a table of summarizing the sequence of events for a number of waveform files. Mark all the desired files then select the "SOE Summary" menu option from the "Reports" submenu under the "Options" menu. A table will be displayed listing a summary of the events triggered in the selected files.

Activation: *Menu:* Alt-O, R, O


Fields:	<i>Substation:</i>	The substation that triggered the event/sensor
	<i>Device:</i>	The device the channel originated from.
	<i>Fst-State:</i>	The state the channel started at, A=alarm and N=normal.
	<i>Lst-State:</i>	The state the channel ended at, A=alarm and N=normal.
	<i>First Change Date</i>	The date the channel first changed state.
	<i>First Change Time:</i>	The time the channel first changed state.
	<i>Last Change Date</i>	The date the channel last changed state.
	<i>Last Change Time:</i>	The time the channel last changed state.
	<i>Changes:</i>	The number of times the channel changed state.
	<i>Chan#:</i>	The channel number in the file.
	<i>Channel Title:</i>	The title of the channel.
	<i>File:</i>	The file containing the event/sensor channel.

Comments: The table is sorted according to the first change date and time. The Query section at the bottom of the table allows for searching events from specific substations, devices, channels and more... To view the file containing the specific events press enter or double click on the event.

SET DRAWING PROPERTIES

Location: DXF Animated CAD

Description: Set the DXF drawing properties.

Activation: *Direct:* F2 - Properties menu button 
Menu: Alt-T, D

Fields:	<i>File Name:</i>	Displays the file name for the currently select tab.
	<i>Background Color:</i>	Set the background color for the currently select tab.
	<i>Max X Pixel:</i>	Set the maximum X resolution value.
	<i>Max Y Pixel:</i>	Set the maximum Y resolution value.

Options: *Enter/Ok:* Exit the dialog, then save and execute the entered information.
 Esc/Cancel: Exit the dialog without saving the information.
 Apply : Apply and save the entered parameters without closing the dialog.

Comments: The Max X Pixel and Max Y Pixel values cannot exceed 32000.

SET OPENING FREQUENCY

Location: Analysis

Description: Set a driver's open frequency. This feature is available in the "Change Frequency" dialog.

Activation: *Direct:* Change Frequency menu button
 Menu: Alt-D, F



Fields: *Open Frequency:* Specify to always open the files associated with the active driver using the entered frequency.

Options: *Enter/Ok:* Exit the dialog, then save and execute the entered information.
 Esc/Cancel: Exit the dialog without saving the information.

Comments: Setting the Always Open field will open all files associated with the active driver using the entered frequency. This feature is useful for files with low sampling frequency.

See Also: Change Frequency

SET SORT FIELD

Location: All Tables

Description: Set the active sort field to the column at the cursor position.

Activation: *Direct:* Left Mouse Click on the Column's header
 Menu: Alt-S, S

Comments: The "Ascending" and "Descending" options in the "Sort" menu sorts the table data with respect to the select sort field. To sort the columns directly, click the column header button to toggle between ascending and descending.

See Also: Sort All Rows

SHIFT MARKS DOWN

Location: Analysis

Description: Shift all the marked analog channels down one position.

Activation: *Direct:* "-" key
 Menu: Alt-C, D

Comments: Individual channels can be marked or unmarked by clicking on the channels corresponding display ID or channel information or by pressing the spacebar. Marked analog channels are displayed in red.

See Also: Shift Marks Up

SHIFT MARKS UP

Location: Analysis

Description: Shift all the marked analog channels up one position.

Activation: *Direct:* "+" key
Menu: Alt-C, U

Comments: Individual channels can be marked or unmarked by clicking the channels corresponding display ID or channel data, or by pressing the spacebar. Marked analog channels are displayed in red.

See Also: Shift Marks Down

SHOW/HIDE CHANNEL TITLES

Location: File Manager

Description: The Show/Hide Channel Titles allows for showing invalid channel titles, remove titles from the invalid title list and adding new titles to the invalid channel title list.

Activation: *Menu:* Alt-O, T

Fields: *Title List Box:* Lists all invalid channel titles.
Add Title: Add a new title to the list.
Remove Title: Remove a title from the list.

Options: *Enter/Ok:* Execute changes.
Esc/Cancel: Exit the dialog without executing the command.

Comments: To show a title, uncheck the checkbox next to the title. All new titles are added to the end of the list with the checkbox automatically checked.

See Also: Show/Hide Channel Titles in the File Manager Quick Start

SHOW ALL DIGITAL CHANNELS

Location: Analysis

Description: Show all digital channels or just the triggered digital channels. This menu option toggles between the two views.


Activation: *Direct:* F9
Menu: Alt-V, D

Comments: Placing the mouse on the horizontal separator bar and dragging it up or down can resize the digital channel display area. The cursor changes to the horizontal resize cursor when the mouse is positioned over the bar.

SHOW ALL HIDDEN

Location: Analysis

Description: Show all hidden analog and digital channels.

Activation: *Direct:* ViewAll menu button  , the <esc> key or the <backspace> key
Menu: Alt-C, S

See Also: View Mark(s)
 Hide Mark(s)
 Restore Mark(s)

SHOW CHANNEL INFORMATION

Location: Analysis

Description: Show or hide the channel information window. This menu option toggles between the two views.

Activation: *Menu:* Alt-V, C

Comments: The channel information window can be resized by placing the mouse on the vertical separator bar and dragging it to the right or the left. The cursor changes to the vertical resize cursor when the mouse is positioned over the bar.

SINGLE ENDED FAULT LOCATION

Location: Analysis

Description: Display the single ended fault location dialog. The Single Ended Fault Location Dialog is used to interface to the SingleEndFaultLocation.dll. The SingleEndFaultLocation.dll will calculate the fault location, fault type and fault time.

Activation: *Menu:* Alt-D, O

Fields:

<i>ZLine:</i>	Positive sequence impedance.
<i>ZLine Angle:</i>	Positive sequence angle.
<i>kZN:</i>	Compensated zero sequence impedance $(Z0-Z1)/(3*Z1)$.
<i>kZN Angle:</i>	Compensated zero sequence factor angle $(Z0-Z1)/(3*Z1)$.
<i>kZM:</i>	Mutual compensation factor $(Z0m)/(3*Z1)$.
<i>Line Length:</i>	Line Length.
<i>Vnom:</i>	Nominal phase to phase voltage.
<i>Inom:</i>	Nominal current.
<i>Analog Chans:</i>	Select the analog channels from the drop down lists.
<i>Pre Cycles:</i>	Number of cycles to send before the reference bar.
<i>Post Cycles:</i>	Number of cycles to send after the reference bar.

Advanced Dialog Fields:

Z1 (% of Line): Zone 1 forward impedance.

Z2 (% of Line): Zone 2 reverse impedance.
R0: Phase loop resistance reach.
Rg: Ground loop resistance reach.
IO Threshold: Zero sequence current threshold for VTS.
I2 Threshold: Neg. sequence current threshold for VTS.
Ph Select Ind: Index of the sample corresponding to the fault inception.
Average Count: Total post fault samples for averaging fault distance.
Ph Select Mode: Phase selection mode (Internal, AG, BG, CG, AB, BC, CA).

Options: *Advanced:* Display the Advanced dialog for fine turning the algorithms.
Start: Start the fault location algorithms.
Print: Send a screen dump of the outputs to the system's default printer.
Show Help: Show/Hide the fault location drop down help window.
Open: Open a fault location (*.flt) file.
New: Create a new fault location file.
Save: Save the active fault location file.
Save As: Save the active fault location file under a new name.

Comments: The sampling frequency must be set to ensure 24 samples per cycle. The sampling frequency must be set prior to opening the fault location dialog. If the sampling frequency is not set to 1440 Hz for 60 Hz or 1200 Hz for 50 Hz then the change sampling frequency dialog will automatically be displayed. Click OK or press enter to change the sampling frequency then reopen the Fault Location dialog.

All sample values sent to the DLL must be in secondary quantities. If the sample values are in primary values then the CT and PT ratio values must be available in the data configuration file. If the CT and PT ratio values are not available a message will be displayed asking to ignore the request or abort displaying the fault location dialog.

See Also: Single Ended Fault Location in the Analysis Quick Start

SIZE

Location: File Manager (Status Field)

Description: Displays the total size (in Kbytes) of all files in the active directory.

See Also: Free
MrkSize

SIZE COLUMN

Location: File Manager

Description: Displays the size (in bytes) of the file.

SIZE TO ORIGINAL COORDINATES

Location: DXF Animated CAD

Description: Size the DXF drawing to the original display coordinates (coordinates of the drawing when it was first opened).

Activation: *Direct:* Original Display menu button 


Menu: Alt-V, Z

Comments: The Max X and Max Y Pixel values in the status bar are updated according to the new coordinates.

SIZE TO WINDOW

Location: DXF Animated CAD

Description: Size the DXF drawing to fit in the window.

Activation: *Direct:* Fit in Window menu button 
Menu: Alt-V, W

Comments: The Max X and Max Y Pixel values in the status bar are updated according to the new coordinates.

SOFTWARE ANALOG CHANNELS

Location: Analysis

Description: Display the software analog channel dialog.

Activation: *Direct:* F5
Menu: Alt-C, A

Fields: *Titles:* The titles for the software analog channels.
Operators: Each analog operation followed by an operator terminator “/”.

Options: *Enter/Ok:* Exit the dialog then save and execute the operators.
Esc/Cancel: Exit the dialog without saving or executing the operators.
F1/Help: Display the help window.
Open: Open a *.SAC file.
New: Create a new *.SAC file.
Save: Save the active SAC file.
Save As: Save the active SAC file under a new name.

Comments: Software analog channels (SAC's) are extra channels provided by the system. These channels can be used to calculate a missing phase, create +, - and 0 sequence channels, create an envelope of a selected trace, or define an under/over-trigger values to monitor a given channel. The SAC window is split into two sections: the titles and the operators. To navigate between fields use the tab, up arrow and down arrow keys.

See Also: Creating Virtual Channels in the Analysis Quick Start

SOFTWARE DIGITAL CHANNELS

Location: Analysis

Description: Display the software digital channel dialog.

Activation: *Menu:* Alt-C, D

Fields: *Titles:* The titles for the software digital channels.

Operators: Each digital operation followed by an operator terminator “/”.

Options: *Enter/Ok:* Exit the dialog then save and execute the operators.
Esc/Cancel: Exit the dialog without saving or executing the operators.
F1/Help: Display the help window.

Comments: Software digital channels (SDC's) are extra channels provided by the system. The SDC window is split into two sections: the SDC titles, and the SDC operators. To navigate between fields use the tab, up arrow and down arrow keys.

See Also: Creating Virtual Channels in the Analysis Quick Start.

SORT ALL ROWS

Location: All Tables

Description: Sort all the rows in the table in ascending or descending order.

Activation: *Menu:* Alt-S, A – Ascending
Menu: Alt-S, D – Descending
Shortcut: Column headers

Comments: All the rows in the active table are sorted with respect to the sort field displayed in the table's status field.

See Also: Set Sort Field

SORT FIELD

Location: All Tables (Status Field)

Description: Displays the active sort field.

Activation: *Direct:* Mouse Click on the Column's header
Menu: Alt-S, S

Comments: The “Ascending” and “Descending” options in the “Sort” menu sorts the table data with respect to the select sort field. To sort the columns directly and to set the sort field, click the column header button.

See Also: Sort All Rows

SORT MARKED ROWS

Location: All Tables

Description: Sort the marked rows according to the previously selected sort order.

Comments: All marked records are sorted and grouped at the top of the table.

SR745/489 DRIVER

Location: File Manager (Universal Viewer)

Description: Change the driver at the cursor position to the GE SR745/489 driver and plot the input channels.

Activation: *Menu:* Alt-D, K

Comments: If the selected file is not a valid SR745/489 file an error message is generated. All files that have the “.CSV” extension, and have “CSV format” in the first line of the file are tagged as GE SR745/489 files.

See Also: Display Oscillography in the File Manager Quick Start
Associating File Types in the File Manager Quick Start

START DATE FIELD

Location: IEEE Long File Name

Description: The first field in the IEEE long file naming format. The start date is extracted from the event files downloaded and stored in the following format: Year (2 digits) Month Day: 040909.

Example File Name:

040909,113109123,+3S,Barton Substation#12,SEL421-432#34,ArkElectric,,,,.DAT

See Also: Start Time Field

START TIME FIELD

Location: IEEE Long File Name

Description: The second field in the IEEE long file naming format. The start time is extracted from the event files downloaded and stored in the following format: Hour Minute Second Millisecond: 113109234.

Example File Name:

040909,113109123,+3S,Barton Substation#12,SEL421-432#34,ArkElectric,,,,.DAT

See Also: Start Date Field

SUBSTATION FIELD

Location: IEEE Long File Name

Description: The fourth field in the IEEE long file naming format. The substation name is extracted from the device record.

Example File Name:

040909,113109123,+3S,Barton Substation#12,SEL421-432#34,ArkElectric,,,,.DAT

See Also: Long File Naming Format in the File & Device Managers Quick Starts

SUPER IMPOSE

Location: Analysis

Description: Superimpose all or marked analog channels.

Activation: *Direct:* F7

Menu: Alt-D, S

Comments: Marked channels are superimposed and grouped at the top of the display window. The superimpose menu option and the F7 function key toggles superimposing on and off.

SYNC DATA CURSORS

Location: Analysis

Description: Synchronize the data cursors for two or more open display windows by time or manually.

Activation: *Menu:* Alt-D, Y, T – “By Time”
Menu: Alt-D, Y, M – “Manually”

Options: *By Time:* When the "By Time" sync cursor feature is turned ON the data cursors in the non-active windows are moved to the sample value time in the active window. For example if the active data cursor is positioned on sample time 01:12:34.560, all non active data cursors are moved to the sample value at that time. If the time is not found in the non-active window, the cursor position is unchanged. The active window defines the master data cursor and all other cursors follow this position.

Manually: This feature allows for selection of different cursor positions in the open data windows before synchronization is turned ON. For example, open two data windows and tile horizontally, move the data cursors to the beginning of the fault cycles, and select the sync manual cursor option. When the left, right, ctrl-left, ctrl-right, page up, page down, ctrl-page up, ctrl-page down, home and end keys are pressed the data cursors move simultaneously.

Comments: A check mark indicates that the sync feature is ON. To turn synchronizing OFF click on the active sync menu option to remove the check mark. When synchronizing is ON the channel information displayed to the right of the traces is updated for all open data windows.

See Also: Synchronizing Data Cursors in the Analysis Quick Start

SYSTEM FILES

Location: Device Manager

Description: There are 3 system files needed for the proper operation of the system. The CFG_DEV.DTB file stores the device records stored in the device table. The CFG_SHOT.DTB file stores the device's function keys and the EscSeq field in the device records. The DRIVERS.INI file has all the script code for polling the connected devices and transferring files to a remote computer.

TAB DELIMITED TABLE DRIVER

Location: File Manager

Description: Display the tab delimited file at the cursor position in a table format. Tab delimited files have textual fields separated by blank spaces, such as: CHANNEL DATE TIME.

Activation: *Menu:* Alt-D, 3, T

Comments: The data in the file is presented in tabular form. An unlimited number of rows and columns can be displayed.

See Also: Viewing ASCII Files in Database Format in the File Manager Quick Start
Double Quotes/Comma Delimited Table Driver
Comma Delimited Table Driver

TCODE FIELD

Location: IEEE Long File Name

Description: The third field in the IEEE long file naming format. The TCode is extracted from the device record.

Example File Name:

040909,113109123,+3S,Barton Substation#12,SEL421-432#34,ArkElectric,,,,,DAT

See Also: Long File Naming Format in the File & Device Managers Quick Starts

TESLA DRIVER

Location: File Manager (Universal Viewer)

Description: Change the driver at the cursor position to the Tesla driver and plot the input channels.

Activation: *Menu:* Alt-D, N

Comments: Tesla Files are displayed in the IEEE Comtrade Binary format. NxtPhase has developed an automatic conversion application called "AutoComtrade.exe". Wavewin calls "AutoComtrade.exe" to convert Tesla files to the Comtrade binary format for display. To view Tesla Files double click or press enter on the original Tesla files. To obtain a copy of the "AutoComtrade.exe" file please contact Tesla.


Files that have a .TLR extension are automatically tagged as NxtPhase Tesla files.

See Also: Tesla Files in the File Manager Quick Start.

TCP/IP CLIENT

Location: Device Manager

Description: Define the selected device to communicate using the TCP/IP protocol.

Activation: *Direct:* Ethernet configuration button  in the Device Configuration dialog.

Fields: *Ethernet Connections:* Select the TCP/IP client option from the list box. The fields in the connection properties section changes according to the selection in the connections list box.

Connection Properties:

Port Number: Set the TCP/IP port number.

IP Address: Set the device's IP address.

Options: *OK/Enter:* Exit and update the Device's EscSeq field.
Cancel/Esc: Exit the dialog without saving the changes made.

Comments: If the Local Path does not exist then the directory will be created.

See Also: New Device Record
Duplicate Device Record
Edit Device Record

TEST PORTS

Location: Device Manager

Description: Test the connected port using the loop back test option.

Activation: *Direct:* F3
Menu: Alt-O, L

Comments: Use the loop back plug detection test to check the port connection. Place the loop back plug in the desired port, select the corresponding port, and press F3 or select “Loop Back Test” from the Options menu. A message appears displaying the status of the port: Loop back plug detected or not detected.

TIME BASED DISPLAY

Location: Analysis

Description: The time base display plots the channel data in time. Time base displays are useful for showing changes in line frequency.

Comments: To change the trace display properties open the “Window Properties” dialog under the “File” menu. Click the “Display Settings” tab and change the “Trace Display Type” field to time based or sample based.

See Also: Time & Sample Based Displays in the Analysis Quick Start

TIS DRIVER

Location: File Manager

Description: Change the driver at the cursor position to the TIS driver and plot the input channels.

Activation: *Menu:* Alt-D, M

Comments: The TIS file format is an ASCII comma delimited format with the channel information defined in the first line of the file. If the selected file is not an ASCII comma delimited file then an error message is generated. All files that have a “.TIS” extension are tagged as TIS files.

See Also: Associating File Types in the File Manager Quick Start

TOTAL HARMONICS DISTORTION

Location: Analysis (Harmonics Dialog)

Description: The "Total Harmonic Distortion" field displays the square root of the summation of the squares of DFT Magnitudes for harmonics 2 to n divided by square root of 2 and that quantity divided by the DFT Magnitude of the Fundamental.

See Also: Harmonics
Histogram

TOTFILES

Location: File Manager (Status Field)

Description: Displays the total number of hidden and unhidden files/directories in the active directory. The "." and ".." navigation shortcuts are included in the unhidden total.

See Also: TotMarks

TOTMARKS

Location: All Tables (Status Field)

Description: Displays the total number of marked rows in the active table. Marked rows are displayed in light red.

TOTRECS

Location: Device Manager (Status Field)

Description: Displays the total number of records in the active configuration.

See Also: AtRec
TotMarks

TOTABS

Location: Animated CAD-DXF(Status Field)

Description: Displays the total number of tabs in the Animated CAD-DXF window.

See Also: AtTab

TPRO DRIVER

Location: File Manager (Universal Viewer)

Description: Change the driver at the cursor position to the NxtPhase TPRO driver and plot the input channels.

Activation: *Menu:* Alt-D, O

Comments: NxtPhase files are displayed in the IEEE Comtrade Binary format. NxtPhase has developed an automatic conversion application called "AutoComtrade.exe". Wavewin calls "AutoComtrade.exe" to convert NxtPhase files to the Comtrade binary format for

display. To view NxtPhase relay files double click or press enter on the original TPRO files. To obtain a copy of the “AutoComtrade.exe” file please contact NxtPhase.

Files that have a “.TPR” extension are automatically tagged as NxtPhase TPRO files.

See Also: Tesla Files in the File Manager Quick Start
Display Oscillography in the File Manager Quick Start
Associating File Types in the File Manager Quick Start

TPU/DPU/GPU DRIVER

Location: File Manager (Universal Viewer)

Description: Change the driver at the cursor position to the ABB TPU/DPU/GPU driver and plot the input channels.

Activation: *Menu:* Alt-D, E

Comments: If the selected file is not a valid TPU or DPU or GPU file an error message is generated. All files that have the “.CAP” extension are tagged as TPU/DPU/GPU files.

TRACE SCALE MULTIPLIER (ASM)

Location: Analysis (Window Properties Dialog)

Description: Used as a multiplier to increase/decrease the amplitude of the visible analog channels

Activation: *Menu:* Alt-F, T

Range: Greater Than 1.00

Default: 2.00

Comments: When a channel's amplitude is increased, the trace scale value is multiplied with the Pixsdisp value, and when the channel's amplitude is decreased the trace scale value is divided by the Pixsdisp value.

TRANSCAN DRIVER

Location: File Manager (Universal Viewer)

Description: Change the driver at the cursor position to the Mehta Transcan driver and plot the input channels.

Activation: *Menu:* Alt-D, 7

Comments: If the selected file does not have a corresponding SCF file an error message is generated. All files that have an extension that starts with “.X”, and there is a corresponding “.SCF” file in the same directory, are tagged as Transcan files.

See Also: Associating File Types in the File Manager Quick Start

TRIGGER-TIME

Location: Waveform Summary (Events/Sensors Activity Log)

Description: Displays the time the digital channel changed state. This value is displayed in the third column of the Events/Sensors Activity Log.

Comments: The Events/Sensors Activity Log displays a time-sequenced list of all the events and sensors activity.

TRUERMS

Location: Harmonics Table (Analysis)

Description: Displays the RMS value for all the samples between the RMS bar (black dotted line) and the data bar (black solid line).

Comments: This value is taken directly from the RMS column inside the analog information table.

See Also: Harmonics Table

TRUNCATE CYCLES

Location: Analysis

Description: Remove beginning, middle or end cycles from the active analysis window.

Activation: *Menu:* Alt-D, T, L: Left-Start to Data Bar
Menu: Alt-D, T, R: Data Bar to End
Menu: Alt-D, T, M: Data Bar to Reference Bar

Comments: There are 3 options available under the Truncate Cycles menu option. Left removes the cycles from the first sample to the data bar (solid black vertical line). Right removes the cycles from the data bar to the last sample. Middle removes the cycles from the data bar to the reference bar (dotted blue vertical line)

See Also: Truncate Cycles in the Analysis Quick Start

TYPE COLUMN

Location: File Manager

Description: Displays the fault type associated with the long file name. The eighth field in the file name defines the type field for the IEEE long file-naming format. This field represents the fault type or contents type of the file.

See Also: Long File Naming Format in the File Manager Quick Start

UN/MARK ROWS

Location: All Tables

Description: Mark or unmark the row at the cursor position.

Activation: *Direct:* Spacebar - Ctrl-Mouse Button
Menu: Alt-M, M

Comments: Marked rows are displayed in red. The TotMarks field displayed in the status bar is updated accordingly.

See Also: Unmarked Marks
Group Marked Rows

UNMARK MARKS

Location: All Tables

Description: Unmark all the marked rows in the table.

Activation: *Menu:* Alt-M, U

Comments: Marked rows are displayed in red. The TotMarks field, displayed in the status bar, is updated accordingly.

See Also: Mark/Unmark Rows
Group Marked Rows

VIEW MARK(S)

Location: Analysis

Description: Hide all the unmarked channels and resize the marked channels.

Activation: *Direct:* Enter
Menu: Alt-C, V

Comments: Individual channels are marked and unmarked by clicking the left mouse button on the channel's corresponding display ID or channel information or by pressing the spacebar. Marked channels are displayed in red.

See Also: Hide Mark(s)
Show All Hidden
Restore Mark(s)

VIEW RAW DATA FILE

Location: Analysis

Description: View the contents of the active displayed file in an ASCII editor or a hexadecimal editor.

Activation: *Direct:* Menu button 
Menu: Alt-F, V


Comments: The waveform file is displayed in an ASCII editor if the contents of the file are in text format and displayed in a hex editor if the file is in binary format.

See Also: Viewing/Modifying ASCII Files
Viewing/Modifying Binary Files

WAVEFORM DATA

Location: File Manager

Description: Plot the contents of the event file at the cursor position if there are no marked waveform files else plot all the marked waveform files.



Activation: *Direct:* <enter>, Plot menu button 
Menu: Alt-O, W, O

Comments: A maximum of 10 oscillography/log files can be opened simultaneously.

WAVEFORM SUMMARY

Location: File Manager and Analysis

Description: Generates and displays analog and digital summaries for the active file in the file table or in the analysis window.

Activation: *Direct:* Sum menu buttons  - File Table,  - Analysis
Menu: Alt-O, S – File Table, Alt-F, S – Analysis

Comments: The summary file displays the following information:

Waveform Information

Station: Name of the Station associated with the waveform.

Filename: The name of the waveform file.

File Size: The size of the file in kilobytes.

Prefault-Time: The date and time of the first prefault sample.

Fault-Time: The date and time of the first fault sample.

Save-Time: The date and time the file was saved to hard disk.

Process-Time: The date and time the file was processed into this summary.

Start Date & Time: Date and time of the first sample in the file.

End Date & Time: Date and time of the last sample in the file.

File Duration: Duration of the file measured in days, hours, seconds, milliseconds and/or microseconds, depending on the type of file.

Sampling Frequency: Sampling frequency and the time between each sample.

Line Frequency: Line Frequency defined in the file.

Fault Information

Fault Information is displayed for SEL, DLP and Transcan files. The fault information includes: Fault Type, Fault Time, Location, Targets, Triggers, Frequency, Event and Targets.

Maximum/Minimum Analog Summary

Max-Inst: Instantaneous maximum values.

Min-Inst: Instantaneous minimum values.

Max-RMS: RMS maximum values.

Min-RMS: RMS minimum values.

OneBit: The channel's full-scale value divided by the channel's resolution.

Inst-Diff: The difference between the Max-Inst and Min-Inst values.

RMS-Diff: The difference between the Max-RMS and Min-RMS values.

pU: The channel's prefix and units.

Description: The number and title of the channel.

Events/Sensors Activity Summary

Fst: The state the channel started at, A=alarm, N=normal.

Lst: The state the channel ended at, A=alarm, N=normal.

Fst-Change: The date and time the channel first changed state.

Lst-Change: The date and time the channel last changed state.

Changes: The number of times the channel changed state.

Description: The number and title of the channel.

Events/Sensors Activity Log

State: The state of the channel at the triggered time, A=alarm, N=normal.

Trigger Time: The time the channel changed state.

Description: The number and title of the channel.

Note: An xx:xx:xx.xxx in the events/sensors activity summary indicates that the digital channel's state did not change from the initial state (Fst).

WINDOW PROPERTIES

Location: Analysis

Description: Reposition the columns in the analog table, change the fields displayed in the combination view, change the background colors and trace colors; change the driver's data type, change the trace/phaser scale multipliers and more refer to the fields below.

Activation: *Direct:* Properties Menu Button
Menu: Alt-F, T



Fields:	<i>Analog Table Tab:</i> Reorder/Show/Hide the columns in the analog table. <i>Analog Combination Tab:</i> Change the display positions in the analog combination view. <i>Comtrade:</i> Define the Comtrade format for saving, the date and time format for display and set automatic conversion from RMS data to Peak data when using the "Save As Comtrade" feature. <i>Colors:</i> Change the background colors and trace colors. <i>Values File:</i> Format the save displayed values feature. <i>Display Settings:</i> Change the trace/phaser scale multipliers and set general display properties. <i>Append/Merge:</i> Set the append/merge properties. <i>Driver Data Type:</i> Set the current display driver's data type to Peak type or RMS calibrated. <i>Filters:</i> Define to delete spikes and set up spike properties.
----------------	---

Options: *OK:* Apply the selected changes and redraw the analysis window.
Cancel: Exit the dialog without executing the changes.

Comments: All data windows are defaulted to the display settings. The analog data columns depend on the data type specified.

See Also: Customizing the Analysis Display in the Analysis Quick Start
Viewing Analog Data in the Analysis Quick Start


ZIP FILES

Location: File Manager

Description: Zip a group of files or a single file using the “Zip Marked Files” option under the “File” menu. All support files needed to display the selected files will be automatically included in the zip file. Support files include Comtrade configuration (*.CFG), header (*.HDR) & information (*.INF) files, DFR’s analog and digital information files such as: Hathaway DAU files, Rochester preamble and header files, Faxtrax/Director CTL files, Transcan SCF and TCF files.

Activation: *Direct:* Right Click Pop-up menu Button  Zip
Menu: Alt-F, Z

Fields: *New Zip File Name:* Enter a path and name for the new zip file.
EncryptHeaders: Click to encryptheaders.



Comments: To zip files, mark the desired files in the file table and select the “Zip Marked Files” option from the “File” menu or right click on the file table and select the “Zip”  Zip option from the pop-up menu. All support files needed to display the file(s) are automatically included.

See Also: Zip Files in the File Manager Quick Start

ZOOMING

Location: DXF Animated CAD

Description: Change the DXF display viewing area.


Activation: *Menu:* Alt-V, I, O
Direct: “+” & “-” keys, Menu buttons  & 

Comments: To zoom in press the “+” key, to zoom out press the “-” key or use the Zoom In and Out menu buttons to change the viewing area. If the Max X and Max Y variables, inside the status bar, are at 32000 then this feature is not be available

ZOOM IN

Location: DXF Animated CAD

Description: Increase the drawing's resolution by multiplying 2.5 with the current X, Y resolution.

Activation: *Direct:* “+” key – Zoom in menu button 
Menu: Alt-V, I


Comments: The Max X and Max Y variables inside the status bar are updated accordingly.

Restrictions: The Max X and Max Y resolution values cannot exceed 32000.

ZOOM OUT

Location: DXF Animated CAD


Description: Decrease the drawing's resolution by dividing 2.5 by the current X, Y resolution.

Activation: *Direct:* “-” key – Zoom out menu button 
Menu: Alt-V, O

Comments: The Max X and Max Y variables inside the status bar are updated accordingly.

ZOOM X, Y RESOLUTION PROPERTIES

Location: DXF Animated CAD

Activation: *Direct:* F2 - Properties menu button 
Menu: Alt-T, D

Description: Set the drawings max X and max Y resolution values.

Max X Pixel: The maximum X resolution value.

Max Y Pixel: The maximum Y resolution value.

Range: Less than 32000

A P P E N D I X A

Device Drivers

The DRIVERS.INI file, located in the system directory is used to create device drivers. The driver consists of script commands that periodically interrogate a device, parse information from the response, display the parsed response in a text window or graphical display, activate automatic triggers, generate reports, and/or archive the data. The drivers are created in the DRIVERS.INI file and assigned in the device record dialog.

CHANGE POLLING DRIVERS

There are a number of drivers in the drivers.ini file that have specific information pertaining to current master station being developed, such as polling start times & location on a server where files are saved. The sections below explain how to edit the drivers.ini to make the needed changes.

POLLING TIMES

To change the polling times for the master station open the Drivers.ini file located in the Wavewin32 directory. Navigate to driver # 131. Below are the driver fields.

```
[MASTER POLL DAILY]
DRIVER#=131 &1
TYPE=ASCII
SETMESSAGE=^[^CMND]
;TXPERIOD=0
;TXDELAY=0
TXPERIOD=T0400
RXSTAY=1
```

The SETMESSAGE=^[^CMND] command sets the defined messages in the device's EscSeq command. This tells all devices with the same ATMESSAGE to begin the polling sequence.

The TXPERIOD=0 and TXDELAY=0 commands are used to poll the devices periodically. If serial modems are used then it is not advisable to use periodical polling. This produces large phone bills. In this driver the TXPERIOD=0 and TXDELAY=0 are deactivated. Placing a semicolon before the command deactivates the command. The TXPERIOD=T0400 defines a specific time when to start the polling process in a 24 hour period. The time is defined in military time 0000-2300. T0400 starts polling the devices at 4:00 am. To change the polling start time, change the 0400 to the desired time.

FILE LOCATIONS

To change where the files are saved on the connected server open the Drivers.ini file located in the Wavewin32 directory. Navigate to driver # 130. Below are the driver fields.

```
[MONITOR PATH & XMITFILES]
DRIVER#=130 &133
TYPE=ASCII
SETMESSAGE=MOVEXFR^@
DIRMESSAGE=W:\FAULTLIBRARY\STATIONS
TXPERIOD=120
TXDELAY=-101
```

```
[XMITFILES TO BRIDGE]
DRIVER#=133
TYPE=ASCII
ATMESSAGE=MOVEXFR
TXFILE=C:\SDCSAVE\*.SLH W:\FAULTLIBRARY\HISTORY /MOVE
TXFILE=C:\SDCSAVE\*.3EH W:\FAULTLIBRARY\HISTORY /MOVE
TXFILE=C:\SDCSAVE\*.3TH W:\FAULTLIBRARY\HISTORY /MOVE
TXFILE=C:\SDCSAVE\*.SLS W:\FAULTLIBRARY\SUMMARY /MOVE
TXFILE=C:\SDCSAVE\*.DLS W:\FAULTLIBRARY\SUMMARY /MOVE
TXFILE=C:\SDCSAVE\*.30S W:\FAULTLIBRARY\SUMMARY /MOVE
TXFILE=C:\SDCSAVE\*.SOP W:\FAULTLIBRARY\SUMMARY /MOVE
TXFILE=C:\SDCSAVE\*.SLP W:\FAULTLIBRARY\SUMMARY /MOVE
TXFILE=C:\SDCSAVE\*.SEL W:\FAULTLIBRARY\EVENT /MOVE
TXFILE=C:\SDCSAVE\*.OSC W:\FAULTLIBRARY\EVENT /MOVE
TXFILE=C:\SDCSAVE\*.30X W:\FAULTLIBRARY\EVENT /MOVE
TXFILE=C:\SDCSAVE\*.DFR W:\FAULTLIBRARY\EVENT /MOVE
TXFILE=C:\SDCSAVE\*.X01 W:\FAULTLIBRARY\EVENT /MOVE
TXFILE=C:\SDCSAVE\*.EOP W:\FAULTLIBRARY\EVENT /MOVE
TXFILE=C:\SDCSAVE\*.FLP W:\FAULTLIBRARY\EVENT /MOVE
TXFILE=C:\SDCSAVE\*.TLR W:\FAULTLIBRARY\EVENT /MOVE
TXFILE=C:\SDCSAVE\*.DXF W:\FAULTLIBRARY\STATIONS /MOVE
TXFILE=C:\SDCSAVE\*.DN* W:\FAULTLIBRARY\STATIONS /MOVE
TXFILE=C:\SDCSAVE\*.OK* W:\FAULTLIBRARY\STATIONS /MOVE
TXFILE=C:\SDCSAVE\*.BSV W:\FAULTLIBRARY\LOADPROFILE /MOVE
```

Driver # 131, [MONITOR PATH & XMITFILES] sets a message telling driver # 133 [XMITFILES TO BRIDGE] to execute. Also, driver number 133 must be included in driver's 131 DRIVER# field for the 133 driver to execute, DRIVER#=130 & 133.

The subdirectories defined on the master station computer in driver # 133 must remain fixed and cannot be changed (C:\). The destination drive for the files on the server can be changed. Change the drive letter (W:\) to the mapped driver letter for the connected server. All files with the listed extensions are moved from the polling computers C:\SDCSAVE directory to the specified directories on the server.

NOTE: Make sure the above directories exist on the server before starting the polling process.

SCRIPT COMMAND DEFINITIONS

All available script commands are defined below. In the definitions below there are references to Escape Sequence Commands. The escape sequence commands are used to access system and user variables. The “^”, “[” and “]” characters specify the use of an escape sequence command. To insert a carriage return and a line feed after an ASCII TXCOMMAND insert ^[13;10] after the ASCII characters to transmit to the device. For example to transmit an SEL meter command, insert the following command in the drivers TXCOMMAND field: meter^[13;10].

ESCAPE CODE COMMANDS

Available Escape Code Commands. The following commands are reserved system variables. Their names cannot be used for user variables.

- 13: Carriage Return
- 10: Line Feed
- Y: 2 Digit Year (Current Date & Time from the System Clock)

- YR: 4 Digit Year
- MON: Month
- DAY: Day
- HR: Hour
- MIN: Minute
- SEC: Second
- HSEC: Hundredth of a Second
- ID: Device Number
- PID: Port Number
- HDR: Device Name
- ADDR: Device Address
- SID: Station Number
- STN: Station Name
- VER: Program's Version Number
- CRCSATEC: Proprietary SATEC Meter 8-Bit Checksum
- CRCMDAR: Proprietary ABB MDAR Relay 16-Bit CRC Checksum
- CRCBI: Proprietary BiTRONICS Meter 8-Bit Checksum
- CRCDLP: Proprietary DLP Relay 16-Bit CRC Checksum
- CRCHYDRAN: Proprietary Hydran CRC Checksum
- CRCHATH: Proprietary Hathaway DFR I, II and IIB CRC Checksum
- CRCDPU: Proprietary DPU Modbus CRC Checksum
- CRCPASS: Creates a 6 character random password.
- P#: Pause # of Seconds (Maximum Delay is 99 Seconds)
- #: Any 1 Byte integer Number in Decimal (0 to 255)
- ^X^Y: The Variable Name "X" From Device# "Y"
- %#:N: The text # will be left justified with blanks to the length specified in N.
- \$FILE:N: Read Nth line in the file specified in "FILE" and insert in the command.
The file specified in the "FILE" field must be in the Wavewin directory.
- CMND: The first parameter in the "EscSeq Command" Field.
- CMND1: The second parameter in the "EscSeq Command" Field.
- CMND2: The third parameter in the "EscSeq Command" Field.
- CMND3: The fourth parameter in the "EscSeq Command" Field.
- CMND4: The fifth parameter in the "EscSeq Command" Field.
- CMND5: The sixth parameter in the "EscSeq Command" Field.
- CMND6: The seventh parameter in the "EscSeq Command" Field.

DRIVER DEFINITION COMMANDS

[...]:

The "Driver Name" is assigned between brackets. Each driver must be assigned a unique name. The driver name is displayed in the device record's "Driver" drop down list. A maximum of 24 characters is permitted. Up to 255 drivers is supported.

DRIVER#:

Each driver must have a unique ID number assigned (range 1 to 255). A driver is used to automatically transmit a predefined sequence of characters or bytes ("TXSTART"+"TXCOMMAND"+"TXEND") to an external device, then capture the response, parse and display the response (RXSTRIP) and/ or save the parsed data (LOGCOMMAND).

If a unique driver number is assigned then the driver is loaded into memory and the driver's name is added to the driver drop down list in the device record dialog.

Other drivers can also be included by using the "&" character followed by the driver number. For example: "DRIVER#=2 &7 &1" will cause drivers 2, then 7 then 1 to execute. The maximum number of included drivers is 64. Included drivers can also include other drivers. Below is an example where included drivers can be used, there are 5 driver defined:

SEL **Logon** driver defined at Driver # 1.
SEL **History** driver defined at Driver # 2.
SEL **Events** driver defined at Driver 3.
SEL **Meter** driver defined at Driver # 4.
SEL **Logout** driver defined at Driver # 5.

To execute each driver for an SEL device create and new driver at Driver # 5 and include the top five drivers: **DRIVER#=6, &1, &2, &3, &4, &5**. Below is an example of Driver #6.

```
[SEL, POLL SEL-351/311]  
DRIVER#=6 &1 &2 &3 &4 &5
```

Drivers are executed in the order that they are included. In general there are six different ways to execute a driver:

- PERIODICALLY: "TXPERIOD=4" will execute once every 4 seconds.
- 2) DAILY: "TXPERIOD=T1830" will execute once @ 6:30 p.m.
- 3) WEEKLY: "ONDOW=7" will execute on Sunday @ the defined "TXPERIOD".
- 4) MONTHLY: "ONDAY=14" will execute on the 14th @ the defined "TXPERIOD".
- 5) CONDITIONALLY: Using "SETMESSAGE", "ATMESSAGE" and "M" commands.
- 6) MANUALLY: By selecting from the "Control" options menu.

Periodically executed drivers are called interrogation drivers and are executed when the "TXPERIOD" elapses. Manually executed drivers ("TXPERIOD=0" AND "TXDELAY=0") are called "Control Menus" and are executed from the "Control Menu" list in the DXF display window. Refer to the examples below on how to create control drivers.

TYPE:

Defines the type of data specified in the "TX" & "LOG" commands. The two available types are "ASCII" or "Hexadecimal".

SYSTEM COMMANDS

REPORTIF:

A sequence of characters to search for (ASCII or Hex) in the captured data. If the sequence is found then the captured data is saved to a file using the IEEE long file naming convention and transmitted to a remote computer. A file transmit driver must exist for the reportif file to be sent. The maximum Reportif length is 255 characters. The reportif can also include escape sequence commands.

SETPORT:

A command used to reinitialize the port configuration dynamically. Use this command to reinitialize a port's baud rate, byte size, parity and stopbits before the driver is executed. This feature is useful when switching between different devices connected via the same port. For example if 2 SEL 2030 with different port configurations are being polled from the same modem or direct connection then setport will insure the proper port configuration for both SEL 2030s.

SETSYSVAR:

An internal command use to change the value of any one of the 7 EscSeq internal variables. The EscSeq variables are defined in the device record. The command sequence is

SETSYSVAR=ExistingVarName NewVarName. This feature was created for the "Change Password" feature but can be used for any one of the EscSeq variables defined. The example below changes the password defined in the 3rd EscSeq variable defined in the device record with a randomly generate 6 character password. The "CRCPASS" Escape Code Command creates a 6 character randomly generated string. The device record in the database (CFG_SHOT.DTB) and on screen is updated with the variable string. The maximum length is 80 characters and escape code sequence commands are allowed.

Example: SETSYSVAR ^[^CMND2] ^[CRCPASS]

LOG COMMANDS

LOGPERIOD:

The save cycle in seconds (an integer number up to 2 million). For example, if "LOGPERIOD=90" was specified in a driver then the variables and text that are specified in the "LOGCOMMAND" will be saved to disk once every 90 seconds. The saved data is stored in text format in the filename specified in the "LOGFILE=" command to the save directory defined in the "Save and Archive" dialog. If "LOGPERIOD=0" was specified then these actions will not occur unless "LOGDELAY>0" was specified in which case the driver will execute one time only. If "LOGPERIOD=T0800" was specified then the driver will execute at 08:00 am every day. T commands are specified in military time.

LOGDELAY:

The duration in seconds to wait before the Log cycle begins. For example, if "LOGDELAY=3" was specified then only the first occurrence of "LOGPERIOD" is delayed by 3 seconds (LOGPERIOD+LOGDELAY). In the previous example the first period will occur after 93 seconds, all others will occur 90 seconds apart. To have the log cycle begin immediately set "LOGPERIOD=-89 (90+-89). If "LOGPERIOD=0" was specified than specifying "LOGDELAY" will cause the driver to execute one time only (this is useful for writing headers to the log file).

LOGFILE:

The path and file name of the text file that will contain the outputs of the "LOGCOMMAND=". If the path is not specified than the default save path (save path specified in the "Save & Archive" dialog) is used. If the command "LOGFILE" is not included than the system will automatically assign an IEEE long file name with a ".CSV" extension. The maximum length is 255 character and escape code commands are allowed.

LOGRENAME:

Automatically renames the specified "LOGFILE=" file to an IEEE long file name with a ".CSV" extension. The specified file must exist in the specified path (path defined in the "LOGFILE" command or the save path define din the "Save & Archive" dialog). If the path is not specified in the "LOGFILE=" command than the default save path is used. This command is required in order to transfer files that are being periodically appended. LOGRENAME occurs upon TXPERIOD and not upon LOGPERIOD. The maximum length is 255 characters and escape code commands are allowed.

LOGCOMMAND:

Specifies a sequence of characters to save (ASCII OR BINARY) to the "LOGFILE=" when the "LOGPERIOD" command expires. The maximum length is 1024 characters and escape code commands are allowed. For example the following LOGCOMMAND:

```
^[10;13;YR;MON;DAY;HR;MIN;SEC;HSEC;ID;HDR;ADDR;SID;STN;VER;^TOTMW^2]
```

Will cause a carriage return, line feed, 4 digit year, month, day, hour, minute, second, hundredth of second, device number, device name, device address, station number, station name, version and the values of the user variable "TOTMW" from device # 2, to be saved to the log file.

WARNING: Using a Pause command in this escape sequence will generate errors. Pause command are mainly used in TXCOMMANDS

LOGHEADER:

Specifies a sequence of characters to save as the first line upon, creation of the log file specified in the "LOGFILE" COMMAND. The maximum length is 1024 characters and escape code commands are allowed.

Example driver with LOG commands defined:

```
[GE-DLP VALUES]
DRIVER#=125
TYPE=ASCII
ATMESSAGE=[^STN],[^SID],RUN
RXSTAY=2
;SCAN
RXSTRIP=N00, C00, X52, Y1, H6, "      Scan GE-DLP Relay"
RXSTRIP=N00, C06, X52, Y3, H1, "      Time:", %^DTM
RXSTRIP=N00, C14, X52, Y4, H1, "      Status:", %^STS
RXSTRIP=N00, C02, X52, Y6, H0, "Total to Download:", %^TOT
RXSTRIP=N00, C01, X52, Y7, H0, "      At Event:", %^ATF
;METER
RXSTRIP=N00, C14, X01, Y1, H1, "      DLP METER: ", %^DDT
RXSTRIP=N00, C14, X01, Y2, H1, "      -----"
RXSTRIP=N00, C14, X05, Y3, H1, "IA: ", %^IA
RXSTRIP=N00, C14, X15, Y3, H1, "Angle: ", %^AIA
RXSTRIP=N00, C14, X05, Y4, H1, "IB: ", %^IB
RXSTRIP=N00, C14, X15, Y4, H1, "Angle: ", %^AIB
RXSTRIP=N00, C14, X05, Y5, H1, "IC: ", %^IC
RXSTRIP=N00, C14, X15, Y5, H1, "Angle: ", %^AIC
RXSTRIP=N00, C14, X05, Y6, H1, "IN: ", %^IN
RXSTRIP=N00, C14, X15, Y6, H1, "Angle: ", %^AIN
RXSTRIP=N00, C14, X28, Y3, H1, "VA: ", %^VA
RXSTRIP=N00, C14, X40, Y3, H1, "Angle: ", %^AVA
RXSTRIP=N00, C14, X28, Y4, H1, "VB: ", %^VB
RXSTRIP=N00, C14, X40, Y4, H1, "Angle: ", %^AVB
RXSTRIP=N00, C14, X28, Y5, H1, "VC: ", %^VC
RXSTRIP=N00, C14, X40, Y5, H1, "Angle: ", %^AVC
RXSTRIP=N00, C14, X05, Y7, H1, "P(MWatt): ", %^PW
RXSTRIP=N00, C14, X05, Y8, H1, "Q(MVar): ", %^QV
;DUN FILE
LOGFILE=C:\SDCSAVE\[^STN].ZNN
LOGHEADER=STATION#(6/INFO), DEVICE#(6/INFO), HDRONOFF(6/INFO),
LOGHEADER= DATE(0/DATE), TIME(1/TIME), (4/DATE), (4/PORT),
LOGHEADER= Va(4/kV), Vb(4/kV), Vc(4/kV),
LOGHEADER= Ia(4/Amp), Ib(4/Amp), Ic(4/Amp),
LOGHEADER= P(4/Mwatt), Q(4/Mvars), (4/EVENTS), (4/STATUS),
TITLE(6/INFO)^[13;10]
LOGCOMMAND=[^SID], ^[ID], ^[CMND1],
LOGCOMMAND= ^[MON]/^[DAY]/^[YR], ^[HR]:^[MIN]:^[SEC], ^[DTM], ^[PID],
LOGCOMMAND= ^[VA], ^[VB], ^[VC],
LOGCOMMAND= ^[IA], ^[IB], ^[IC],
```

LOGCOMMAND= ^[^PW], ^[^QV], ^[^TOT], ^[^STS], ^[HDR]^[13;10]

****Multiple LOGHEADER and LOGCOMMAND fields are concatenated together to form one LOGHEADER and one LOGCOMMAND.**

FILE COMMANDS

RENAME:

Automatically renames an existing file to a new name. The command sequence is RENAME=path+existing file name | new file name. The specified file must exist in the specified path. The pipe sign is used as a separator between the old path & filename and the new path & file name. RENAME executes upon a "TXPERIOD" command or upon an "ATMESSAGE" command. The maximum length is 255 characters and escape code commands are allowed.

Example: RENAME=C:\TEMP\^[^CMND].CSV | C:\TEMP\^[^CMND1].CSV

DELETE:

Automatically deletes the specified file. The command sequence is DELETE=path+filename. DELETE executes upon a "TXPERIOD" command or upon an "ATMESSAGE" command. The maximum length is 255 characters and escape code commands are allowed.

Example: DELETE=C:\TEMP\^[^CMND].CSV

RUNFILE:

Runs the specified file and passes the defined command line parameters to the specified application. The command sequence is RUNFILE=path+existing file name | command line parameters. If the path is not in the system environment then the path is required. If command line parameters are used then they must have a pipe sign preceding the command line parameters. RUNFILE executes upon a "TXPERIOD" command or upon an "ATMESSAGE" command. The maximum length is 255 characters and escape code commands are allowed.

Example: RUNFILE=C:\TEMP\FTP_SCRIPT.EXE | "C:\TEMP\ACTIVE_SCRIPT"

DUNRENAME:

Automatically renames all files with a ".ZUN" extension to the same file name with a ".DUN" extension. Also, all files with a "*.ZN*" extension are renamed with a "*.DN*" extension. The command sequence is DUNRENAME=path. The path is the file path where all *.ZUN" and "*.ZN*" are located on disk. DUNRENAME executes upon a "TXPERIOD" command or upon an "ATMESSAGE" command. The maximum length is 255 characters and escape code commands are allowed.

Example: DUNRENAME=C:\SDCSAVE\^[^STN]

MESSAGE COMMANDS

SETMESSAGE:

Sequence of characters sent as a message to all loaded drivers. All drivers that have an "ATMESSAGE=" command matching the sent message will be executed in the order defined in the device manager table. The maximum length is 255 characters. The system can handle up to 32 messages per second. For example the command "SETMESSAGE=DIAL,LOGON,HANGUP^2" will send the messages 'DIAL' & 'LOGON' to all loaded drivers and will send the message 'HANGUP' to the drivers on device #2 only. The maximum length for each message in the sequence is 24 characters.

ATMESSAGE:

Sequence of characters that will cause the driver to execute if it is equal to the received "SETMESSAGE=" command string. The "SETMESSAGE=" and "ATMESSAGE=" commands can appear together in the same driver as long as they are not equal. This is useful for organizing drivers in a link list and executing them in order. If the "SETMESSAGE=" and "ATMESSAGE=" are equal in the same driver than the system will fall into an endless loop. The maximum length for each "ATMESSAGE" is 24 characters.

Example drivers with "SETMESSAGE=" and "ATMESSAGE=" commands defined:

```
[INITIATE SDC POLLING]
DRIVER#=143
TYPE=ASCII
SETMESSAGE=RUN
TXPERIOD=300
TXDELAY=-250

[SEL SWITCH LOGON]
DRIVER#=10 &127
TYPE=ASCII
ATMESSAGE=[^STN],[^SID],RUN
TXCOMMAND=[P2]ACC^[13;P3;^CMND1;13]
RXSTAY=30
RXEND=*>
RXWAIT=4
RXQUIT=SDCEND^[^SID]
;CHK
RXSTRIP=N00, %NoRsp, @STS
RXSTRIP=N01, B01, X01, Y03, D00, C07, H07, "", V=ACC, P0, JC0, J01
RXSTRIP=N00, %Done, @STS
;MID
RXSTRIP=N01, S01, T40, X01, Y04, D00, C14, H11, "", @D3
RXSTRIP=N02, S01, T40, X01, Y05, D00, C08, H11, "", @D4
RXSTRIP=N00, C14, H01, X01, Y07, "PORT-ID:", %^PID, @PORT
RXSTRIP=N00, C06, H01, X01, Y08, "DIAL-AT:", %^[MON]/^[DAY]/^[YR]-,
%^[HR]:^[MIN]:^[SEC], @CALL
;LOG
LOGFILE=PORT-^[^PID].SOE
LOGCOMMAND=[Mon]/^[Day]/^[Yr]-^[Hr]:^[Min]:^[Sec]> [^STN]([^SID]),
SEL-SWITCH LOGON, STS=[^STS;13;10]
```

DIRMESSAGE:

The name of a directory path for the system to monitor. If any "*.MSG" files are detected then the name portion of the filenames will be used as messages to the system as in "SETMESSAGE".

TRANSMIT (TX) COMMANDS**TXFILE:**

Copies or moves one or more files from a specified source folder to a destination folder. The format is "TXFILE=SOURCE_PATH\WHICH_FILES DESTINATION_PATH /MOVE (optional)".

All specified file names must include fully qualified path strings. When the "TXFILE" command is used the "TXCOMMAND" is ignored. The ";" character is reserved and should not be used in this command, the software uses the ";" to separate between multiple "TXFILE" commands. All of the

listed "TXFILE" commands are concatenated to a single data buffer of 1024 characters maximum length.

FILE TRANSFER PROTOCOL:

The protocol is very simple, designed to be quick and highly dependent on the quality of the communication link. First, the transmit end sends: (START BLOCK)+(FILE CONTENTS)+(END BLOCK) and then upon "END BLOCK" the receive-end sends: (ACK BLOCK).

In the event that the "END BLOCK" terminator was not received then the receive-end will terminate and reset in 30 seconds from the time that the last byte was received. The block formats are as follows (all values, messages and parameters are enclosed by parenthesis and all messages are case sensitive):

Start Block:

BYTE 1-2:	The values (TEN)+(ELEVEN)
BYTE 3-23:	The message (File Transfer Enable:)
BYTE 24:	The value (TEN)
BYTE 25--:	The parameters (DESTINATION PATH)+(;)+(FILE NAME)+(;)+(SIZE)+(;)+(PACKED FILE-DATE&TIME BORLAND FORMAT)+(;)+(ASCII TRANSMIT-DATE&TIME)+(;)+(OPTIONAL FIELD=LONG TSD FILE NAME)
BYTE LAST:	The values (TEN)+(ELEVEN)

File Contents:

The actual file contents starting from the first to the last byte.

End Block:

BYTE 1:	The value (SEVEN)
BYTE 2-7:	The message (Crc:=)
BYTE 8-11:	The parameter (16-bit CRC calculated for the file contents block only. The mask is 8408 hex and the CRC is shipped in ASCII hex format where 4 characters make a word - HI Byte first - The CRC is initialized to FFFF and is not flipped at the end and must be in uppercase HEX notation).
BYTE 12-13:	The values (SEVEN)+(TEN)

Ack Block:

BYTE 1-2:	The values (TEN)+(ELEVEN)
BYTE 3-21:	The message (File Transfer Done:)
BYTE 22:	The value (TEN)
BYTE 23-27:	The message (Crc:)
BYTE 28-31:	The parameter (16-bit CRC calculated for the received file block only. The mask is 8408 hex and the CRC is shipped in ASCII hex format where 4 characters make a word - HI byte first – the CRC is initialized to FFFF and is not flipped at the end and must be in uppercase hex notation).
BYTE 32:	The value (TEN)
BYTE 33--:	A duplicate of the "Byte 25--" section of the received "START BLOCK".
BYTE LAST:	The values (TEN)+(ELEVEN)

Example:

For example the exact protocol to transfer a 2 byte file named HELLO.TXT containing the word "HI" is as follows (the skipped lines are transmitted line feeds (VALUE=10)):

```
TX ->|
      | File Transfer Enable:
      | C:\TEMP;HELLO.TXT;000000002;645175976;4/10/2001 19:54:50;
      | HICrc:= A7DB
      |
RX <-|
      | File Transfer Done:
      | Crc: A7DB
      | C:\TEMP;HELLO.TXT;000000002;645175976;4/10/2001 19:54:50;
      |
```

TXDIAL:

This command is only valid when "TXFILE" is specified. If "TXFILE" finds files to transfer then the sequence of characters specified in "TXDIAL" will be transmitted first. The maximum sequence length is 255 characters. Example: TXDIAL=[13;P1]ATDT 1,123-456-7899[13;P60].

Note: The "P60" (pause 60 seconds) above will be aborted when "CONNECT" is detected.

TXHANGUP:

This command is only valid when "TXFILE" is specified. When "TXFILE" file transfer is complete the sequence of characters in the "TXHANGUP" command will be transmitted. The maximum sequence length is 255 characters.

Example driver with "TXDIAL", "TXFILE" and "TXHANGUP" commands defined:

```
[TRANSMIT FILES EXAMPLE]
DRIVER#=11
TYPE=ASCII
TXDIAL=AT^[13;10;P2]ATDT 1,700-555-1234^[13;10;P45]
TXFILE=C:\FAULTLIB\MEHTA\SHIP\*.SCF S:\SYSPROT\RECORDS\DFR
TXFILE=C:\FAULTLIB\MEHTA\SHIP\*.X01 S:\SYSPROT\RECORDS\DFR
TXHANGUP=[P2]+++^[P2]ATH0^[13;10;P3]AT&F^[13;10;P2]ATS0=1^[13;10;P2]
TXPERIOD=900
TXDELAY=5
```

If no files are present in the source directory then the driver is not executed.

TXSTART:

Sequence of characters to transmit (ASCII OR BINARY) before "TXCOMMAND" and "TXLOGON" ("TXSTART" is inserted at the beginning of these commands). The "TXSTART" + "TXLOGON" + "TXCOMMAND" definitions are concatenated together to form the final transmit command sent to the device upon a "TXPERIOD" or upon "ATMESSAGE". The maximum length for TXSTART is 1024 characters and escape code commands are allowed.

TXLOGON:

A sequence of characters to transmit (ASCII or Binary) when the driver is loaded for the first time. The maximum sequence length is 255 characters. TXLOGON will only work from the parent driver. Escape code sequences are allowed.

TXCOMMAND:

A sequence of characters to transmit (ASCII or Binary) upon "TXPERIOD" or upon "ATMESSAGE" or by request by the control options menu. The maximum length is 1024 characters and escape code commands are allowed. For example, to request a meter command from a DLP relay use the following driver to transmit the TXCOMMAND:

```

02^[ADDR]35CA00^[CRCDLP;P1]05FA^[P1]06F9^[P1]06F9

[DLP METER]
DRIVER#=69
TYPE=HEX
ATMESSAGE=^[^STN],^[^SID],RUN
TXCOMMAND=02^[ADDR]35CA00^[CRCDLP;P1]05FA^[P1]06F9^[P1]06F9
RXSTAY=5
RXEND=04FB
RXWAIT=3
RXSTRIP=N01, S11, T20, D0, C8, X01, Y1, H8, "      DLP METER: ", @DDT
RXSTRIP=N00,      D0, C8, X01, Y2, H8, "      -----"
RXSTRIP=N01, S31, T6, D0, C8, X05, Y3, H8, "IA: ", @IAV
RXSTRIP=N01, S37, T4, D0, C8, X15, Y3, H8, "Angle: ", @AIA
RXSTRIP=N01, S41, T6, D0, C8, X05, Y4, H8, "IB: ", @IBV
RXSTRIP=N01, S47, T4, D0, C8, X15, Y4, H8, "Angle: ", @AIB
RXSTRIP=N01, S51, T6, D0, C8, X05, Y5, H8, "IC: ", @ICV
RXSTRIP=N01, S57, T4, D0, C8, X15, Y5, H8, "Angle: ", @AIC
RXSTRIP=N01, S61, T6, D0, C8, X05, Y6, H8, "IN: ", @INV
RXSTRIP=N01, S67, T4, D0, C8, X15, Y6, H8, "Angle: ", @AIN
RXSTRIP=N01, S71, T5, D0, C8, X28, Y3, H8, "VA: ", @VAV
RXSTRIP=N01, S76, T4, D0, C8, X40, Y3, H8, "Angle: ", @AVA
RXSTRIP=N01, S80, T5, D0, C8, X28, Y4, H8, "VB: ", @VBV
RXSTRIP=N01, S85, T4, D0, C8, X40, Y4, H8, "Angle: ", @AVB
RXSTRIP=N01, S89, T5, D0, C8, X28, Y5, H8, "VC: ", @VCV
RXSTRIP=N01, S94, T4, D0, C8, X40, Y5, H8, "Angle: ", @AVC
RXSTRIP=N01, S98, T6, D0, C8, X05, Y7, H8, "P: (MWatt): ", @PMW
RXSTRIP=N01, S104, T6, D0, C8, X05, Y8, H8, "Q: (MVar): ", @QMV

```

The DLP meter TXCOMMAND will transmit a hex 02 byte, the address stored in the device's record, the hex values 35 CA 00, and the DLPCRC values. It will then pause for 1 second then transmit the hex values 05 FA pause again for 1 second then transmit the 06 F9, pause for 1 second and transmit the 06 F9 again.

Another example is the terminate modem connection command:

```
^[10;13;P1]+++^[P3]ATH0^[13;10]
```

There are a number of pre-canned drivers used for downloading events, summaries, histories, RTU-SOE points, DNP status points, and for time synchronizing the devices. The pre-canned drivers are called via the "TXCOMMAND". Refer to the following on how to call the pre-canned drivers.

"TXCOMMAND=RTU-SOE"

The RTU-SOE command executes the precoded SES-92 binary protocol for reading SOE points from the RTU. The command executes upon a "TXPERIOD" or "ATMESSAGE".

REQUIREMENTS:

TYPE=BINARY

RXSTAY=2

Use the "D0" data type with the "RXSTRIP" commands.

"TXCOMMAND=RTU-ANALOG"

The RTU-ANALOG command executes the precoded SES-92 binary protocol for reading analog dumps from the RTU. The command executes upon a "TXPERIOD" or "ATMESSAGE".

REQUIREMENTS:

TYPE=BINARY

RXSTAY=2

Use the "D0" data type with the "RXSTRIP" commands.

"TXCOMMAND=RTU-STATUS"

The RTU-STATUS command executes the precoded SES-92 binary protocol for reading status dumps from the RTU. The command executes upon a "TXPERIOD" or "ATMESSAGE".

REQUIREMENTS:

TYPE=BINARY

RXSTAY=2

Use the "D0" data type with the "RXSTRIP" commands.

"TXCOMMAND=SEL-351FM"

The SEL-351FM (fast meter) command executes the precoded SEL-351 binary protocol for fast meter operations. The command executes upon a "TXPERIOD" or "ATMESSAGE".

REQUIREMENTS:

TYPE=BINARY

RXSTAY=2

Use the "D0" data type with the "RXSTRIP" commands.

"TXCOMMAND=SEL-EVENTS"

The SEL-EVENTS command executes the precoded SEL EVE ASCII protocol for automatic event capture. The latest raw events files are downloaded and saved in separate files using the IEEE long file naming convention with the extension ".SEL". Summary files for each event is also saved in separate files using the IEEE long file naming convention with the extension ".SLS" and a history file is created if there are new events to download. The history file is also saved using IEEE long file naming convention with the extension ".SLH". The command executes upon a "TXPERIOD" or "ATMESSAGE".

REQUIREMENTS:

TYPE=ASCII

RXSTAY=30

RXEND==>

RXWAIT=4

Example Summary File:

SEL FAULT REPORT

```

Date = 06/25/02
Time = 17:25:59.18
Station = SEAVILLE SW
Device = A-521
Event = AG
Location = +1.76
LineLen = 4.70
Targets = COMM ZONE2 EN G 50

```

Example History File:

=>HIST 12

SEAVILLE SW A-521 Date: 12/05/02 Time: 12:29:47.012

#	DATE	TIME	EVENT	LOCAT	GRP	TARGETS
1	12/04/02	14:50:42.202	CG	+22.90	1	EN
2	11/25/02	17:10:03.189	CG 64	1	EN	
3	07/20/02	09:12:28.082	AG	+21.84	1	EN

4	07/20/02	09:12:27.874	AG	+40.53	1	EN
5	07/02/02	17:01:51.200	BG	+22.09	1	EN
6	07/02/02	16:57:56.713	BG	+34.93	1	EN
7	06/25/02	17:25:59.180	AG	+1.76	1	INST ZONE1 EN A G
8	04/01/02	04:43:19.558	ER	\$\$\$\$\$\$	1	EN
9	03/14/01	00:28:36.139	BG	+4.85	1	EN
10	00/00/01	00:03:11.753	BG	-0.02	1	INST ZONE1 EN B G
11	00/00/01	00:03:07.501	BG	+16.05	1	EN
12	00/00/01	00:03:03.062	BG	+16.00	1	EN

"TXCOMMAND=SYNC-ARB"

The STNC-ARB command executes the precoded ARBITRAR ASCII protocol for reading the GPS clock's time and sets the PC'S system clock. The command executes upon a "TXPERIOD" or "ATMESSAGE".

REQUIREMENTS:

TYPE=ASCII

RXSTAY=4

RXEND

RXPLUS in this case are reserved for internal use.

"TXCOMMAND=SYNC-TRUE"

The SYNC-TRUE command executes the precoded TRUE TIME ASCII protocol for reading the GPS clock's time and sets the PC'S system clock. The command executes upon a "TXPERIOD" or "ATMESSAGE".

REQUIREMENTS:

TYPE=ASCII

RXSTAY=4

RXEND

RXPLUS in this case are reserved for internal use.

"TXCOMMAND=DNP-ANALOG"

The DNP-ANALOG command executes the precoded DNP 3.0 protocol for reading analog values from the connected devices. The analog values can be referenced by line number in the RXSTRIP commands. For example, analog value 1 is located in line 1, analog value 2 is in line 2 and so on. The line values are stored as ASCII characters. The command executes upon a "TXPERIOD" or "ATMESSAGE".

REQUIREMENTS:

TYPE=BINARY

RXSTAY=4

Use the "D0" data type with the "RXSTRIP" commands.

"TXCOMMAND=HATH-DFR"

The HATH-DFR command executes the precoded HATHAWAY DFR-II protocol for downloading the latest records and saving them to separate files using the IEEE long file naming convention with the extension ".DFR". The command executes upon a "TXPERIOD" or "ATMESSAGE".

REQUIREMENTS:

TYPE=BINARY

RXSTAY=15

RXEND=1B 03 FF

RXPLUS=1

"TXCOMMAND=REL-30X"

The REL-30X command executes the precoded ABB REL30X protocol for downloading the latest event records, target files and history files for the events and targets. All downloaded data is saved to separate files using the IEEE long file naming convention. The event files have the extension ".30X", the summary files have the extension ".30S" and the event history files have

the extension ".3EH" and targets history files have ".3TH". The command executes upon a "TXPERIOD" or "ATMESSAGE".

REQUIREMENTS:

TYPE=HEX

RXSTAY=4

RXPLUS in this case is reserved for internal use.

Example Target File:

REL 301/302 FAULT REPORT

```

-----
      MODEL = REL 301/302
STATION ID = SEAVILLE SW
      LINE ID = B43 (REL-302)
      DATE = 09/04/03 03:14:11.830
FAULT TYPE = BG Fault
      TARGET = Z3 Pickup

BK1 = NO      SEND = NO
BK2 = NO      RX1 = NO
Z1G = NO      RX2 = NO
Z1P = NO      WFT = NO
Z2P = NO      ITP = NO
Z2G = NO      ITG = NO
Z3P = NO      CIF = NO
Z3G = NO      LLT = NO
PLTG = NO      GB = NO
PLTP = NO

      Z = 7.04 Ohms
FANG = 68°
DMI = 30.00 Miles
DKM = 48.20 kilometers

PFLC = 1.50 Amps
PFLV = 68.00 Volts
LP = 3°
VPA = 63.20 Volts      ANG = 0°
VPB = 55.20 Volts      ANG = -117°
VPC = 62.80 Volts      ANG = 128°
V1 = 60.30 Volts      ANG = 3.69°
V2 = 5.11 Volts      ANG = -51.15°
3V0 = 0.10 Volts      ANG = 0°
IPA = 5.90 Amps      ANG = -21°
IPB = 8.00 Amps      ANG = 176°
IPC = 3.10 Amps      ANG = 33°
I1 = 5.14 Amps      ANG = -53.50°
I2 = 3.11 Amps      ANG = 39.38°
3I0 = 0.18 Amps      ANG = 46.01°
IPN = 0.00 Amps      ANG = 0°

```

Example Target History File:

-- REL TARGET HISTORY --

```

-----
STATION ID = SEAVILLE SW
      LINE ID = 115 (REL-302)
      DATE = 05/13/2004 01:06:18 PM

```

#	TRIG DATE	TRIG TIME	F-TYPE	TRIGGER	DIST	EVENT#
10	10/31/2003	19:48:06.100	BG Fault	Z3 Pickup	279	210
09	06/24/2003	10:05:42.900	CA Fault	Z3 Pickup	340	1
08	05/25/2003	09:04:34.990	AG Fault	Trip	128	15
07	05/25/2003	09:04:34.970	AG Fault	Z2 Pickup	128	223
06	05/25/2003	09:03:46.100	AG Fault	Trip	1	14
05	05/25/2003	09:03:42.720	AG Fault	Trip	1	253
04	05/25/2003	09:03:16.560	AG Fault	Trip	128	76
03	05/25/2003	09:03:16.550	AG Fault	Z2 Pickup	128	172
02	05/25/2003	09:02:51.670	AG Fault	Trip	174	219
01	05/25/2003	09:00:02.730	AG Fault	Trip	174	10
16	05/25/2003	08:59:46.990	AG Fault	Trip	175	169
15	05/25/2003	08:53:55.620	AG Fault	Trip	175	216
14	05/25/2003	08:53:43.840	AG Fault	Trip	174	7
13	05/25/2003	08:51:44.750	AG Fault	Trip	174	246
12	05/25/2003	08:51:34.800	AG Fault	Trip	172	5
11	05/25/2003	08:51:21.200	AG Fault	Trip	174	20

Example Event History File:

```
-- REL EVENT HISTORY --
```

```
-----
STATION ID = SEAVILLE SW
LINE ID = B43 (REL-302)
DATE = 05/13/2004 01:18:05 PM
```

#	EVE-DATE	EVE-TIME	COUNTER	TRIGGER
09	05/07/2004	10:23:19.100	0000	N / A
08	04/23/2004	18:28:19.450	0008	Trip
07	04/23/2004	18:28:18.970	0007	Z3 Pickup
06	04/01/2004	19:17:02.240	0006	Z3 Pickup
05	02/28/2004	15:25:57.580	0005	Z3 Pickup
04	10/15/2003	16:53:15.370	0004	Z3 Pickup
03	09/04/2003	03:14:12.100	0003	Z3 Pickup
02	09/04/2003	03:14:11.840	0002	Z3 Pickup
01	09/04/2003	03:14:11.710	0001	Z3 Pickup
16	00/00/2000	00:00:00.000	0000	N / A
15	00/00/2000	00:00:00.000	0000	N / A
14	00/00/2000	00:00:00.000	0000	N / A
13	00/00/2000	00:00:00.000	0000	N / A
12	00/00/2000	00:00:00.000	0000	N / A
11	00/00/2000	00:00:00.000	0000	N / A
10	00/00/2000	00:00:00.000	0000	N / A

"TXCOMMAND=REL-30X-M"

The REL-30X-M command executes the precoded ABB REL30X-M protocol for downloading the latest meter values. The command executes upon a "TXPERIOD" or "ATMESSAGE".

REQUIREMENTS:

TYPE=HEX

RXSTAY=4

RXPLUS in this case is reserved for internal use.

Meter Values Extracted:

Date and Time

LOP - Loss of Potential
LOI - Loss of Current
IA and Angle
IB and Angle
IC and Angle
VA and Angle
VB and Angle
VC and Angle

"TXCOMMAND=DLP-EVENTS"

The DLP-EVENTS command executes the precoded GE DLP-EVENTS protocol for downloading the latest event records and summaries. All downloaded data is saved to separate files using the IEEE long file naming convention. The event files have the extension ".OSC" and the summary files have the extension ".DLS". The command executes upon a "TXPERIOD" or "ATMESSAGE".

REQUIREMENTS:

TYPE=HEX
RXSTAY=10
RXPLUS in this case is reserved for internal use.

Example Summary File:

DLP FAULT REPORT

```
-----  
      MODEL: DLP1512GC  
      STATION ID: SEAVILLE SW  
      LINE ID: X2250 (DLP)  
  
      TRIP DATE: 6/27/04      TRIP TIME: 14:33:55.890  
  
      FAULT TYPE:  AG      DISTANCE: 003.2  
      TRIP TYPE:  Z1      OPERATING TIME: 00023  
  
      PREFault      FAULT  
      Ia: 548.00 A      Ia: 4380.0 A  
      Ib: 012.00 A      Ib: 008.00 A  
      Ic: 012.00 A      Ic: 012.00 A  
      In: 372.00 A      In: 4368.0 A  
  
                        Va: 000.4 KV  
                        Vb: 134.0 KV  
                        Vc: 134.0 KV
```

"TXCOMMAND=DPU-MODBUS "

The DPU-MODBUS command executes the precoded ABB DPU-MODBUS protocol for downloading the latest event records. All downloaded data is saved to separate files using the IEEE long file naming convention. The event files have the extension ".DPU". The command executes upon a "TXPERIOD" or "ATMESSAGE".

REQUIREMENTS:

TYPE=HEX
RXSTAY=10
RXEND=[13;10]
RXPLUS in this case is reserved for internal use.

"TXCOMMAND=ROCH-DFR"

The ROCH-DFR command executes the precoded Rochester DFR protocol for downloading the latest event records. All downloaded data is saved to separate files using the Rochester naming

convention. The event files have the extension ".0##". The command executes upon a "TXPERIOD" or "ATMESSAGE".

REQUIREMENTS:

TYPE=HEX

RXSTAY=8

RXPLUS in this case is reserved for internal use.

"TXCOMMAND=GE-D60"

The GE-D60 command executes the precoded GE-D60 protocol for downloading the latest event records. All downloaded data is saved to separate files using the IEEE long file naming convention. The event files are in the Comtrade format and have the extension ".CFG", ".DAT". The command executes upon a "TXPERIOD" or "ATMESSAGE".

REQUIREMENTS:

TYPE=HEX

RXSTAY=8

RXPLUS in this case is reserved for internal use.

"TXCOMMAND=FTP-EVENTS"

The FTP-EVENTS command executes the standard FTP protocol for downloading the latest event records from the connected FTP server. All downloaded data is saved to separate files using either the IEEE long file naming convention or maintaining the original file name. The event files are in the manufacturer allocated format. The command executes upon a "TXPERIOD" or "ATMESSAGE".

REQUIREMENTS:

TYPE=ASCII

RXSTAY=4

RXPLUS in this case is reserved for internal use.

"TXCOMMAND=FTP-SEND"

The FTP-SEND command executes the standard FTP protocol for sending event files to the connected FTP server. The command executes upon a "TXPERIOD" or "ATMESSAGE".

REQUIREMENTS:

TYPE=ASCII

RXSTAY=4

RXPLUS in this case is reserved for internal use.

TXEND:

A sequence of characters to transmit (ASCII OR BINARY) after the "TXCOMMAND" and "TXLOGON" commands ("TXEND" is inserted at the end of these commands). The maximum length is 1024 characters and escape code commands are allowed.

TXPERIOD:

The transmit cycle in seconds (an integer number integer number up to 2 to 2 million). For example, if "TXPERIOD=4" was specified then the "TXSTART", "TXCOMMAND", and "TXEND" strings are concatenated and transmitted once every 4 seconds. If "TXPERIOD=0" was specified then these actions will not occur unless "TXDELAY>0" was specified in which case the driver will execute one time only. If "TXPERIOD=T0800" was specified then the driver will execute at 08:00 am. All "T" periods are defined in military time.

TXDELAY:

The duration in seconds to wait before the transmit cycle begins. For example, if "TXDELAY=3" was specified then only the first occurrence of "TXPERIOD" is delayed by 3 seconds. In the previous example the first period occurs after 7 seconds (TXPERIOD+TXDELAY) and all others will occur 4 seconds apart. If "TXPERIOD=0" was specified then specifying "TXDELAY" will cause the driver to execute only one time (useful for logon procedures).

TXBREAK:

This command sends a number of break signals to the connected device. The sequence runs by first calling the WinAPI SetCommBreak function to suspend character transmission for the specified communications device and places the transmission line in a break state until the ClearCommBreak function is called. It then waits the specified break time then calls the WinAPI ClearCommBreak function to restore character transmission for the specified communications device and places the transmission line in a non-break state. It then pauses the specified pause time before repeating the sequence. This sequence is repeated the number of times specified in the command break parameters. The calling scheme is TXBREAK=# of times to repeat sequence, time interval in milliseconds between SetCommBreak and ClearCommBreak, time interval between sequence calls.

Example: TXBREAK=2,500,250

ONDAY:

The driver commands will be processed on the specified day of each month for the duration of that day or once during that day. The range of values is 1 to 31. Use this command in combination with the military time "TXPERIOD" command to perform monthly functions.

ONDOW:

The driver commands will be processed on the specified day of each week for the duration of that day or once during that day. The range of values is 1 to 7 (1=Monday to 7=Sunday). Use this command in combination with the military time "TXPERIOD" command to perform weekly functions.

RECEIVE (RX) COMMANDS**RXSTART:**

A sequence of characters received from the device that indicates the "Start of Response" (STX). The maximum length for "RXSTART" is 255 characters. This string is used to synchronize with the start of a response. For example, the numeric value 2 (02 Hex) is used by some devices to indicate the start byte of the response. In this case use "RXSTART=[02]" for "TYPE=ASCII", or "RXSTART=02" for "TYPE=HEX".

RXEND:

A sequence of characters received from the device indicating "End the Response" (ETX). The maximum length for "RXEND" is 255 characters. This string is used to indicate that the driver has received the full response. Upon "RXEND" the system will process the "RXSTRIP" commands to parse and display the data and when complete the driver is unloaded so other drivers (that are defined at the same port) can execute. Also upon "RXEND" the "RXSTAY" delay is aborted.

For example: the numeric value 3 (03 Hex) is used by some devices to indicate the end of a response. In this case use "RXEND=[03]" for "TYPE=ASCII", or "RXEND=03" for "TYPE=HEX".

Another example is connecting to a modem. The connection is established when the modem sends a connect signal (CONNECT 14400/ARQ). For modem connection drivers set "RXEND=Connect".

RXPLUS:

Some devices transmit a check sum or CRC code after "RXEND". In this case, the "RXEND" no longer indicates the physical end of the response. Use "RXPLUS" to define the total number of bytes received beyond "RXEND". For example, if "RXEND=1B 03 FF" is set and the actual response end in "1B 03 FF 83" then use "RXPLUS=1".

RXSTAY:

There is a delay between the time that a command is transmitted and the time the response arrives. Also, there are breaks during transmission where the responding device may pause and then continue to transmit. Such delays and pauses should be timed using terminal mode to study the response time of a device. Use the "RXSTAY" command to record the largest delay encountered. If "RXSTAY=4" is defined the system will initiate an internal counter to count up to 4 seconds from the time that last byte was received. If new bytes arrive during the "RXSTAY" counter then the internal counter is initialized. The default value is "RXSTAY=3". Once the internal counter reaches "RXSTAY" then the system will unload the driver so other driver (on the same port) can execute. When "RXEND" is encountered, "RXSTAY" aborts.

RXWAIT:

If "RXEND" is known and the number of bytes received after the defined "RXEND" is unknown use "RXWAIT" to wait a number of seconds before ending the driver. For example, when a modem connects it sends a "Connect" signal. The number of bytes it sends after the "Connect" signal varies. Set "RXWAIT=" to delay the driver from being unloaded. This ensures that all the data remaining to be received goes to the proper device file "DEV_###.DTB". Refer to the example modem driver below.

RXQUIT:

If "RXEND" is not detected set "RXQUIT" to send message commands. For example, in the modem driver below if the "Connect" signal is not detected then the RXQUIT can be used to set a message "REDO" to execute the driver again.

RXCLEAR:

The receive buffer will not be cleared upon TXPERIOD and will be allowed to build up to the total number of fields (RXSTRIP Lines). Use "RXCLEAR" to hold only the last polled values. The range of values for RXCLEAR is 0 or 1 (default=0). This is useful for creating scrollable information.

RXSAVE:

The receive data is buffered into link list with 256 characters per link. To save the buffered data to a text or binary file (depends on the type setting) use RXSAVE=filename. For example, the Optimho driver buffers the data then when complete it saves the buffered data to a file. The maximum length is 255 characters and escape code commands are allowed. The following example saves the received data to a text file called RX-Device#.BUF (RX-2.BUF) in the c:\SDCSave directory.

```
RXSAVE=C:\SDCSAVE\RX-^[ID].BUF
```

Examples: The following drivers use the **RXSTAY**, **RXEND**, **RXWAIT**, **RXQUIT** and **RXPLUS** commands.

```
[HATHAWAY DFR PROTOCOL]
DRIVER#=71
TYPE=BINARY
TXCOMMAND=HATH-DFR
TXPERIOD=0
TXDELAY=1
RXSTAY=15
RXEND=1B 03 FF
RXPLUS=1
RXSTRIP=N00,                X1,Y1,H6,"      Scan Hathaway DFR"
RXSTRIP=N00,%^ADDR,         X1,Y2,H1,"      DAU ID:"
RXSTRIP=N00,%^[MON]/^[DAY]/^[YR], X1,Y3,H1,"      Date:"
RXSTRIP=N00,%^[HR]:^[MIN]:^[SEC], X1,Y4,H1,"      Time:"
RXSTRIP=N03,S1,T40,D0,C14,    X1,Y5,H1,"      LstRsp:"
RXSTRIP=N04,S1,T40,D0,C02,    X1,Y6,H1,"      NxtCmnd:"
RXSTRIP=N01,S1,T40,D0,C01,    X1,Y7,H0,"      LstFault:"
```

```

RXSTRIP=N02,S1,T40,D0,C01,          X1,Y8,H0,"      Time:"

[DIAL MODEM]
DRIVER#=2
TYPE=ASCII
ATMESSAGE=[^STN],[^SID],RUN
TXCOMMAND=[P2]ATDT ^[^CMND;13;10;P4]
RXSTAY=90
RXEND=CONNECT
RXWAIT=4
RXQUIT=SDCEND[^SID],REDO[^STN]
RXSTRIP=N01, S01, T40, X01, Y01, D00, C08, H11, "", @D1
RXSTRIP=N03, S01, T40, X01, Y02, D00, C14, H11, "", @D2

```

RXSTRIP:

Sequence of characters or bytes to strip from the received data and displayed on screen [up to 512 RXSTRIP commands per driver]. The RXSTRIP commands are executed following the sequence in which they appear. Also, the RXSTRIP commands are the last commands executed when the driver is complete.

- N# = Line number to strip or block number for binary [positive #]
If "NO" is specified then the field is a header field only.
Header fields can be used to display variables defined or calculated using the @, +, -, *, /, &, |, >, or < commands.
- S# = Starting character or byte number to strip [from 1 to 512].
- T# = Total number of characters or bytes to strip [ASCII=1 to 75, Binary=1 to 4].
- B# = The Nth non-blank sequence of characters to strip.
For example, to strip "Viny" from "My name is Viny" use the "B4" command.
- BC# = The Nth comma sequence of characters to strip.
For example to strip "Viny" from "My,,name,is,,,Viny" use the "BC7" command.
- D# = Type of data to display. The available types are:
0: ASCII (read each byte as an ASCII code),
1: INTEGER (convert 1, 2 or 4 bytes to an integer string),
2: HEX (convert 1 byte to a hexadecimal string),
3: REAL (4 byte IEEE single float to a real string),
4: ASCII-HEX (convert 1, 2 or 4 hex characters to decimal),
5: ASCII-DECIMAL (read ASCII string as decimal).
6: ASCII-CODED-DECIMAL (convert hex string to ASCII code).
- "" = Contains the header to display ahead of the stripped data [max 24 characters].
- H# = Color to display the header [from 0 to 15].
- X# = X column offset to display the header and the stripped data [from 1 to 75].
- Y# = Y row offset to display the header and the stripped data [from 1 to 8].
- C# = Color to display the stripped data [from 0 to 15].
- V# = Compare the parsed data with a string/value and show the defined header if equal.
- V=# = Compare the parsed data with a string/value and show the defined header if equal.
- V># = Compare the parsed data with a string/value and show the defined header if greater.
- V<# = Compare the parsed data with a string/value and show the defined header if less).
- V~# = Compare the parsed data with a string/value and show the defined header if not equal.
- U# = Upper offset for the V trigger (V+U Hysteresis (default=0)).
- L# = Lower offset for the V trigger (V-L Hysteresis (default =0))
- P# = Persistence (# of true readings before trigger (default=1, disable=0)).
- M"" = If the V command triggered then set a message in for all drivers "".
- MF"" = If the V command triggered then set the message to the forward drivers only.
- JC# = If V triggered bypass the next # of RXSTRIPS (jump conditional).
- J# = Bypass the next # of RXSTRIP COMMANDS (JC# over rides J#).

*# = Multiply the parsed data by a constant value (ASCII-DECIMAL).
 /# = Divide the parsed data by a constant value (ASCII-DECIMAL).
 +# = Add a constant value to the parsed data (ASCII-DECIMAL).
 -# = Subtract a constant value from the parsed data (ASCII-DECIMAL).
 &# = And the parsed data (1 byte) with a hex value (Hex = 00 to FF).
 |# = Or the parsed data (1 byte) with a hex value (Hex = 00 to FF).
 <# = Shift left (1 byte) a number of bits (ASCII-DECIMAL 1 to 8).
 ># = Shift right (1 byte) a number of bits (ASCII-DECIMAL 1 to 8).
 = = Set a variable to a defined value.
 FE = Exponential of the parsed data.
 FL = Logarithm of the parsed data.
 FS = Sin in radians of the parsed data.
 FC = Cos in Radians of the parsed data.
 FA = Arc Tangent in radians of the parsed data.
 FQ = Square of the parsed data.
 FR = Square root of the parsed data.
 FT = Truncate the parsed data to an integer values.
 %# = Set data to a constant text string.
 @NAME = Put the parsed data in a variable named "NAME" (maximum length is 12 characters).
 The reserved system variable defined in the beginning of this Appendix names cannot
 be used. System and user variables can be accessed using the "^NAME^DEVICE"
 commands.
 ^NAME = Get the parsed data (maximum 80 characters) stored in the variable name.
 (@/^)NAME^# = Applies only to the variable "NAME" attached to the device# "#".
 If "@" was in place instead of the # then the number of the parent device will be
 used.
 E"" = Same as "", but for the DXF display only [maximum 24 characters].
 ES# = Same as S#, but for the DXF display only [from 1 to 512].
 ET# = Same as T#, but for the DXF display only [same range as T#].
 EH# = Same as H#, but for the DXF display only [from 0 to 15].
 EX# = Same as X#, but for the DXF display only [from -255 to 255].
 EY# = Same as Y#, but for the DXF display only [from -255 to 255].
 EC# = Same as C#, but for the DXF display only [from 0 to 15].

NOTES:

The "," comma is reserved as the separator between the RXSTRIP commands.
 The maximum number of variables allowed per file is 10,000.

* Available Colors:

- 00: Black
- 01: Blue
- 02: Green
- 03: Cyan
- 04: Red
- 05: Magenta
- 06: Brown
- 07: Lightgray
- 08: Darkgray
- 09: Lightblue
- 10: Lightgreen
- 11: Orange
- 12: Lightred
- 13: Lightmagenta

- 14: Yellow
- 15: White

EXAMPLES:

[SEL-LOGON EXAMPLE]

```
DRIVER#=1
TYPE=ASCII
TXSTART=[13;10]
TXCOMMAND=acc^[13;10]OTTER
TXEND=[13;10]
TXPERIOD=0
TXDELAY=1
```

[ASCII RESPONSE EXAMPLE]

```
DRIVER#=2 &1
TYPE=ASCII
TXSTART=[13]
TXCOMMAND=[02;10;10;10;10;10]
TXCOMMAND=METER
TXEND=[13;03]
TXPERIOD=8
TXDELAY=1
RXSTART=2
RXEND=3
RXSTRIP=X1, Y1, "Any Label For The Window", H1
RXSTRIP=N06,S1,T49,D0,C08,X1,Y3,H1,"N06: "
RXSTRIP=N08,S1,T49,D0,C07,X1,Y4,H6,"N08: "
RXSTRIP=N09,S1,T49,D0,C12,X1,Y5,H6,"N09: "
RXSTRIP=N10,S1,T49,D0,C07,X1,Y6,H6,"N10: "
RXSTRIP=N12,S1,T24,D0,C10,X1,Y7,H1,"N12: "
RXSTRIP=N13,S1,T24,D0,C10,X1,Y8,H1,"N13: "
RXSTRIP=ES12,ET3,EC12,EX-15,EY2,EH12,E" I(A):"
RXSTRIP=ES12,ET3,EC10,EX-15,EY3,EH10,E"P(kV):"
RXSTRIP=ES12,ET3,EC10,EX-15,EY4,EH10,E"Q(kV):"
```

[TRANSMIT FILES EXAMPLE]

```
DRIVER#=3
TYPE=BINARY
TXFILE=C:\EVENTS\TEMP\*. * J:\EVENT\MASTER1 /MOVE
TXFILE=C:\SDCSAVE\*.OK C:\SDCHOLD /MOVE
TXFILE=C:\PECO\DATABASE\*. * C:\TEMP
TXFILE=C:\BP\BIN\DATAPORT\CREATE.HLP C:\TEMP
TXFILE=C:\SDCSAVE\PORT_001.DTB C:\TEMP
TXDIAL=[13]ATDT 1,123-456-7899^[13]
TXHANGUP=+++ATH0^[13]
TXPERIOD=0
TXDELAY=5
```

[RTU-SOE POINTS DUMP]

```
DRIVER#=4
TYPE=HEX
TXCOMMAND=RTU-SOE
TXPERIOD=5
TXDELAY=0
```

```

RXSTRIP="FIN ",      H1, X41, Y1, T1, D0, C8
RXSTRIP="ALE ",      H1, X41, Y2, T1, D0, C8
RXSTRIP="ATT ",      H1, X41, Y3, T1, D0, C8
RXSTRIP="ERR ",      H1, X41, Y4, T1, D0, C8
RXSTRIP="SOE ",      H4, X41, Y5, T1, D0, C8
RXSTRIP="ACC ",      H1, X41, Y6, T1, D0, C8
RXSTRIP="ALG ",      H1, X41, Y7, T1, D0, C8
RXSTRIP="STS ",      H1, X41, Y8, T1, D0, C8
RXSTRIP="SYNC-BYTE ", H1, X48, Y1, T2, D0, C8
RXSTRIP=" RTU-ID ",  H1, X48, Y2, T2, D0, C8
RXSTRIP=" GROUP-ID ", H1, X48, Y3, T2, D0, C8
RXSTRIP="FRAME-LEN ", H1, X48, Y4, T2, D0, C8
RXSTRIP=" MESSAGE ", H1, X48, Y5, T2, D0, C8
RXSTRIP=" FUNCTION ", H4, X48, Y6, T2, D0, C8
RXSTRIP=" DATA-LEN ", H4, X48, Y7, T2, D0, C8
RXSTRIP=" END-FLAG ", H1, X48, Y8, T2, D0, C8
RXSTRIP="CRC-HI ",   H1, X63, Y7, T2, D0, C8
RXSTRIP="CRC-LO ",   H1, X63, Y8, T2, D0, C8
RXSTRIP=X1, Y1, T38, D0, C1, N1, S2
RXSTRIP=X1, Y2, T38, D0, C7, N2, S2
RXSTRIP=X1, Y3, T38, D0, C7, N3, S2
RXSTRIP=X1, Y4, T38, D0, C7, N4, S2
RXSTRIP=X1, Y5, T38, D0, C7, N5, S2
RXSTRIP=X1, Y6, T38, D0, C7, N6, S2
RXSTRIP=X1, Y7, T38, D0, C7, N7, S2
RXSTRIP=X1, Y8, T38, D0, C7, N8, S2

```


A P P E N D I X B



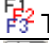




System Keys

This section lists the function keys, cursor keys, and menu buttons available in the device manager, query fields and DXF display.

Device Manager

Function Keys	Description
F1	Display the device manger's help file.
F2	Edit the device record at the cursor position.
F3	Test the device's port at the cursor positon using the loop back plug detection test.
F4	Create a new device.
F5	Create or edit the terminal function keys for the device at the cursor position.
F6	View the data stored in the device buffer.
F7	Run the MID interrogation interface for all or marked devices assigned a device driver.
F8	Run the DXF interrogation interface for all devices assigned a device driver.


Cursor Keys	Description
Left Arrow	Move the cursor bar to the left one position.
Right Arrow	Move the cursor bar to the right one position.
Up Arrow	Move the cursor bar up one position.
Down Arrow	Move the cursor bar down one position.
Page Up	Display the devices on the previous page.
Page Down	Display the devices on the next page.
Home	Move the cursor to the first column in the port table.
End	Move the cursor to the last column in the port table.
Ctrl+Home	Move the cursor to the first device in the table.
Ctrl+End	Move the cursor to the last device in the table.
Tab	Move the cursor from the device table to the query fields.
Delete	Delete all the marked devices in the table.
Enter	Run the terminal display for the selected device.

Menu Buttons	Description
 Configure	Edit the device at the cursor position
 New	Create a new device.
 TermKeys	Create or edit the terminal function keys for the device at the cursor position.
 Terminal	Run the terminal display for the selected device.
 EventFile	View the data stored in the device buffer.
 MID	Run the MID interrogation display for all or marked devices assigned device drivers.
 DXF	Run the DXF interrogation display for all devices assigned device drivers.

Query Fields

Function Keys	Description
F1	Display the query help file.
F5	Query all the marked devices in the active configuration.
F6	Query all the devices in the active configuration.
F7	Query all the unmarked devices in the active configuration.
F8	Clear the query criteria and set all the query operators to “=”.
F9	Toggle through the available query operators for the active query field.









Cursor Keys	Description
Up Arrow	Return the cursor to the device table.
Right Arrow	Move the cursor one position to the right, wraps to next field at the end.
Left Arrow	Move the cursor one position to the left, wraps to next field at the beginning.
Tab	Move the editor to the next query field.
Shift+Tab	Move the editor to the previous query field.
Enter	Process the query criteria for all devices in the active configuration.

Menu Button	Description
 Query	Query all devices in the active configuration.

DXF Display

Function Keys	Description
F1	Display DXF mode's help window.
F2	Display the “Drawing Properties” dialog.


Cursor Keys	Description
Up Arrow	Move the viewing area of the drawing up 40 pixels.
Down Arrow	Move the viewing area of the drawing down 40 pixels.
Right Arrow	Move the viewing area of the drawing to the right 40 pixels.
Left Arrow	Move the viewing area of the drawing to the left 40 pixels.
Ctrl+Right	Move the viewing area of the drawing to the right by one screen.
Ctrl+Left	Move the viewing area of the drawing to the left by one screen.
Page Up	Move the viewing area of the drawing up by one screen.
Page Down	Move the viewing area of the drawing down by one screen.
Home	Display the far left portion of the drawing.
End	Display the far right portion of the drawing.
Ctrl+Home	Display the top left portion of the drawing.
Ctrl+End	Display the bottom right portion of the drawing.
Tab	Move to the next DXF drawing tab
Shift+Tab	Move to the previous DXF drawing tab
+ key	Increase the drawing's resolution.
- key	Decrease the drawing's resolution.














Menu Buttons	Description
 Original	Display the drawing in the original coordinates.
 Fit in Win	Fit the full drawing to fit in the screen area.
 Zoom-In	Increase the drawing's resolution.
 Zoom-Out	Decrease the drawing's resolution.
 Print	Print the DXF drawing in the selected DXF tab.
 Const	Set the drawing properties for the active DXF drawing.
 Refresh	Refresh the polled values in the selected DXF drawing.
 Control	Display the control dialog to send control commands to the connected devices.

File Manager

Function Keys	Description
F1	Display the file table's help file.
F2	Display the file, at the cursor position in text format: ASCII Editor.
F3	Display the file, at the cursor position in hexadecimal format: Hex Editor.
F4	Display a list of the DAU-DEF station titles found in the active directory.
F5	Display the command line dialog to run an application.
F7	Change the active path to the specified destination path.
F8	Copy the marked files to the destination path.
F9	Move the marked files to the destination path.
F11	Display a sequence of events table for all the marked waveform files.
F12	Refresh the folder tree and the current directory

Cursor Keys	Description
Left Arrow	Move the cursor bar to the left one position.
Right Arrow	Move the cursor bar to the right one position.
Up Arrow	Move the cursor bar up one position.
Down Arrow	Move the cursor bar down one position.
Page Up	Display the files on the previous page.
Page Down	Display the files on the next page.
Home	Move the cursor to the first column in the file table.
End	Move the cursor to the last column in the file table.
Ctrl+Home	Move the cursor to the first file in the file table.
Ctrl+End	Move the cursor to the last file in the file table.
Tab	Move the cursor from the file table to the query fields.
Delete	Delete all the marked files and empty directories.
Enter	Run the driver at the cursor position.
Backspace	Change the active path to the previous directory.
Character keys	Move to the next row in the active column that starts with the entered character.

Menu Buttons	Description
 Folder Tree	Show / Hide the Folder Tree












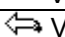
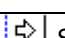

 Email	Email all marked files and their support files.
 Refresh	Refresh the current directory from disk.
 ChDir	Change the active path to the specified destination path.
 Previous Dir	Change to the previous directory.
 Last Dir	Change to the last navigated directory.
 Copy	Copy the marked files to the destination path.
 Move	Move the marked files to the destination path.
 Mark	Mark/Unmark all visible files.
 Query	Query all files in the active directory.
 Plot	Plot the data contents for the highlighted file.
 Summary	Display the waveform summary for the file at the cursor position.
 Edit	Edit the contents of the file at the cursor position: ASCII Editor
 Load Analysis	Perform load analysis on the marked files.







Analysis

Function Keys	Description
F1	Display the data help file.
F2	Display the analog and digital channel information.
F3	Generate a max/min peak chart and an EN/SR summary log.
F4	Toggle between the available analog views.
F5	Display the software analog channel dialog.
F6	Turn channel amplitude auto scaling ON or OFF.
F7	Turn super imposing ON/OFF for all or marked channels.
F8	Mark or unmark all the visible analog/digital channels.
F9	Toggle between the available digital views (All or Triggered).
F11	Display the harmonics table.

Cursor Keys	Description
Left Arrow	Move the data bar to the left one sample.
Right Arrow	Move the data bar to the right on sample.
Ctrl+Right Arrow	Move the data bar to the next peak for the first display channel or the first marked channel.
Ctrl+Left Arrow	Move the data bar to the previous peak for the first display channel or the first marked channel.
Shift+Ctrl+Right Arrow	Move the data bar ahead one cycle for the first displayed channel or the first marked channel.
Shift+Ctrl+Left Arrow	Move the data bar back one cycle for the first displayed channel or the first marked channel.
Shift+Left Arrow	Shift the analog information table to the left by one column.
Shift+Right Arrow	Shift the analog information table to the right by one column.
Page Up	Page up through the data.
Page Down	Page down through the data.
Home	Move the data bar to the first data sample.

End	Move the data bar to the last data sample.
Ctrl+Up Arrow	Increase the amplitude for all or marked channels.
Ctrl+Down Arrow	Decrease the amplitude for all or marked channels.
Ctrl+Page Up	Expand the time scale for all visible channels.
Ctrl+Page Down	Condense the time scale for all visible channels.
Tab	Toggle between the analog and digital channels.
Up Arrow	Move the cursor up one channel.
Down Arrow	Move the cursor down one channel.
Shift+Page Up	Display the analog/digital channels on the previous page.
Shift+Page Down	Display the analog/digital channels on the next page.
Ctrl+Home	Display the first page of the analog/digital channels.
Ctrl+End	Display the last page of the analog/digital channels.
Spacebar	Mark or Unmark the channel at the cursor position.
Shift+Up Arrow	Mark or Unmark a group of channels while moving the cursor up.
Shift+Down Arrow	Mark or Unmark a group of channels while moving the cursor down.
Insert	Display the hidden channels that were removed by the delete keys.
Delete	Hide the marked channels and respace the unmarked channels.
Enter	Hide the unmarked channels and respace the marked channels.
Esc	Display all the hidden channels or exit the data window.
Backspace	Display all the hidden channels.
+	Shift all the marked channels up one position.
-	Shift all the marked channels down one position.
Ctrl-A	Move the reference bar to the sample at the cursor bar.
Ctrl-Z	Move the RMS bar to the sample at the reference bar.

Menu Buttons	Description
 Reopen File	Reopen a previous viewed waveform file.
 Email Active File	Email the active file and any support files needed.
 View Raw Data	View the waveform's raw data file in an ASCII or binary editor.
 Summary	View the Analog/Digital Summary of the active displayed file.
 Recorder Chans	Display the waveform's analog/digital channel headers and scale factors.
 Inc	Magnify the amplitude of the marked channels.
 Dec	Attenuate the amplitude of the marked channels.
 ASV	Turn auto scaling ON/OFF for all visible channels.
 In	Condense the time scale of the visible channels.
 Out	Expand the time scale of the visible channels.
 View Marked	Hide the unmarked channels and respace the marked channels.
 View All	Replot all the hidden channels.
 Set Ref Bar	Move the reference bar to the sample at the cursor bar.
 SetRMS Bar	Move the RMS bar to the sample at the reference bar.

 Properties	Display the Window Properties dialog.
 Restore Original	Restores the samples to the original raw samples stored in the file.
 Change Freq.	Change the frequency of the active display file.
 Duplicate Cyc.	Duplicate the cycle and number of times at the data bar.
 Resize Sliding Window	Resize the RMS sliding window.
 Select Views	Select a specific line or view from the drop down list.

Index

A

activation	3
active topic-help	195
adaptive learning model	116
address.....	69, 72
adjust file time	179, 195
align channel data	190, 195
ALPS	12
amplitude	
decrease	157
increase	157
analog combination	162
analog mark/unmark all	195, 196
analog table.....	162
analog table.....	196
analog view	143, 159
append log files	131, 197
append open files	164, 197
append waveform files.....	198
append/merge	162
as status field	199
ascending sort	198
ascii editor	120, 198
new file	242
open file	243
paste text	244
ASCII event file.....	199
copy text.....	210
cut text	211
delete text	213
print.....	247
save as.....	253
ASCII terminal mode	199
at file.....	200
atmessage -Appendix A	8
atrec	200
attab	200
audio wave driver	200
auto detect.....	200
auto scale	157, 200
auto scale multiplier.....	157

B

background color.....	201
channels.....	205
baud rate	70, 72
binary event file	201
print.....	247
save as.....	253
save as text.....	254
binary terminal mode	201
Bpro.....	59
buffer	74

C

cad-dxf	
animated display.....	82
display constants	
background color	132
filename.....	132
max x pixels.....	132
max y pixels.....	132
viewer	131
zooming.....	132
calibration report	129, 202
change device configuration	203
change dxf files	203
change frequency.....	169, 204
change passwords	204
change path	101, 203
change query operator	205
changes	274
channel information.....	205, 261
channels	
colors	163
decrease amplitude	157
decrease time scale	157
delete	156
increase amplitude.....	157
increase time scale	157
mark.....	156
reposition	158
restore	156
scale	157
super impose	163
sync data cursors.....	163
virtual channels.....	180
zoom.....	157
circular chart.....	148
clear analog colors	206
clear query criteria.....	206
colors	162
combination view.....	161, 206
combine log files	131, 206
command line parameter	90
command line parameters.....	100
comname properties	99, 207
comname(s) rename	98, 108, 207
company name.....	73, 208
compress comtrade files	107, 208
comtrade	162, 208, 244
condense time.....	209
configure devices	72
copy device records	209
copy files	103, 104, 209
copy text.....	210
cr/lf	70, 73
create devices	72

create directory.....	210
cumulative values	118
cursor bars	
data	152
fault	152
horizontal	152
reference	152
rms	152
cursor keys-Appendix B	
data display	4
device manager	1
dxf display	2
file table	3
query fields	2
customize dispatch table	95
customizing	
analog combination	162
analog table	162
append/merge	162
colors	162
comtrade	162
data display	162
device manager	76
display settings	162
driver data type	162
file manager	106
filters	162
values file	162
cut files	104
cut text	211
cut/copy/paste files	209
cycle hop	151, 152, 211

D

d&t status field	211
data bar	152, 211
data bits	70, 72
data captures	
solicited	82
unsolicited	82
data display	108, 143
adjust file time	179, 195
align channel data	190, 195
analog mark/unmark all	195, 196
analog table	196
analog view	143, 159
append open files	164, 197
as status field	199
auto scale	157, 200
auto scale multiplier	157
change frequency	169, 204
channel background color	205
channel colors	163
channel information	205, 261
circular chart	148
clear analog colors	206
combination view	161, 206
condense time	209
cursor bars	152
data	152
fault	152

horizontal	152
reference	152
rms	152
customizing	162
cycle hop	151, 152, 211
d&t status field	211
data bar	211
decrease amplitude	212
delete channels	156
delta x	153, 213
delta y	213
digital mark/unmark all	214
digital view	143, 161
driver data type	149, 217
duplicate cycles	173, 217
email active file	151, 222
expand time	223
fault bar	223
fault reference time bar	163, 224
formats	108
freq status field	226
group marked analog channels	227
harmonic vectors	228
harmonics table	144, 228
hide marked channels	229
histogram	145, 230
horizontal bars	230
increase amplitude	232
instpeak column	232
instval column	232
mark change in sign	176, 235
mark peaks	175, 235
mark raw samples	174, 236
mark/unmark all	235
mark/unmark channels	156
maxpeak column	236
maxval column	237
maxwin column	237
medium display	237
merge open files	164, 238
by sample	164
by time	164
manually	164
select frequency	165
minpeak column	238
minval column	239
move reference bar to data bar	240
move rms bar to reference bar	239
navigating	151
oscillograph records	108
peak hop	151, 152
periodic viewer	147
phasor/circular chart scale multiplier	244
phasors	144
pixsdisp column	245
play channel audio	189
predefined views	157, 256
primary values	177, 245
print	158, 246
recorder channels	248
reference bar	248
reference phase angles	164

refval column.....	249
reopen waveform file.....	150, 249
reposition channels.....	158
resize sliding window.....	152, 250
restore channels.....	156, 250
restore original file.....	174, 251
rms bar.....	251
rmsval column.....	251
sample based.....	163, 252
save as comtrade.....	158
save displayed values.....	153, 254
save user views.....	255
save view.....	192
scale channels.....	157
secondary values.....	177, 256
select lines/views.....	256
select user views.....	257
select view.....	192
set opening frequency.....	259
set rms.....	153
shift marks down.....	259
shift marks up.....	260
show all digital.....	260
show all hidden channels.....	261
single ended fault location.....	185, 261
software analog channels.....	263
software digital channels.....	263
super impose.....	163, 265
sync data cursors.....	163, 266
thiran filter.....	190
time based.....	163, 268
total harmonics distortion.....	268
trace scale multiplier.....	270
truerms.....	271
truncate cycles.....	171, 271
user views.....	192
valid channels.....	159
view mark(s).....	272
view raw data file.....	272
virtual channels.....	180
waveform summary.....	273
window properties.....	162, 274
zoom channels.....	157
data filters.....	118
data type.....	69, 72, 111
database viewer.....	
comma delimited.....	133, 207
double quoted comma delimited.....	133, 216
tab delimited.....	133, 266
date of fault.....	88
dau-def.....	
analog channels.....	112
analog full scale.....	112
analog name.....	112
analog prefix.....	112
analog unit.....	112
event #.....	112
event channels.....	112
event name.....	113
event nonc.....	113
sensor #.....	113
sensor channels.....	113

sensor name.....	113
sensor nonc.....	113
telephone.....	112
dau-def editor.....	112
db-recs.....	89
decrease amplitude.....	212
default display frequency.....	111
delete channels.....	156, 229
delete devices.....	76, 96, 212
delete files.....	212
delete text.....	213
delfile -Appendix A.....	7
delta x.....	153, 213
delta y.....	213
descending sort.....	213
device.....	
data type.....	111
default display frequency.....	111
header directory.....	111
device configuration.....	111
address.....	69, 72
baud rate.....	70, 72
cr/lf.....	70, 73
data bits.....	70, 72
data type.....	69, 72
device drivers.....	69, 72
device number.....	69, 72
escseq command.....	69, 72
flow control.....	70, 72
inter char delay.....	71, 73
local echo.....	70, 73
parity.....	70, 72
port number.....	70, 72
print.....	69, 72
station ID.....	69, 72
station name.....	69, 72
stop bits.....	70, 72
time code.....	69, 72
title.....	69, 72
device drivers.....	69, 72, 82
atmessage-Appendix A.....	8
delfile-Appendix A.....	7
dirmesssage-Appendix A.....	8
driver name-Appendix A.....	3
driver number-Appendix A.....	3
driver type-Appendix A.....	4
drivers.ini-Appendix A.....	1
dunrename-Appendix A.....	7
escape code commands-Appendix A.....	2
examples-Appendix A.....	22
file locations.....	1
logcommand-Appendix A.....	5
logdelay-Appendix A.....	5
logfile-Appendix A.....	5
logheader-Appendix A.....	6
logperiod-Appendix A.....	5
logrename-Appendix A.....	5
onday-Appendix A.....	18
ondow-Appendix A.....	18
polling drivers.....	1
polling times.....	1
renfile-Appendix A.....	7

reportif-Appendix A	4
runfile-Appendix A	7
rxclear-Appendix A	19
rxend-Appendix A	18
rxplus-Appendix A	18
rxquit-Appendix A	19
rxsave-Appendix A	19
rxstart-Appendix A	18
rxstay-Appendix A	19
rxstrip-Appendix A	20
rxwait-Appendix A	19
script commands-Appendix A	2
setmessage-Appendix A	7
setport-Appendix A	4
setsysvar-Appendix A	5
txcommand	
dlp-events-Appendix A	16
dnp-analog-Appendix A	13
dpu-modbus-Appendix A	16
ftp-events	17
ftp-send	17
ge-d60	17
hath-dfr-Appendix A	13
rel-30x-Appendix A	14
rel-30x-m-Appendix A	15
roch-dfr	17
rtu-analog-Appendix A	11
rtu-soe-Appendix A	11
rtu-status-Appendix A	12
sel-351fm-Appendix A	12
sel-events-Appendix A	12
sync-arb-Appendix A	13
sync-true-Appendix A	13
txcommand-Appendix A	10
txdelay-Appendix A	17
txdial-Appendix A	10
txend-Appendix A	17
txfile-Appendix A	8
txhangup-Appendix A	10
txlogon-Appendix A	10
txperiod-Appendix A	17
txstart-Appendix A	10
device field	214
device manager	68
ALPS	12
animated cad-dxf	82, 83, 197
ASCII event files	199
ASCII terminal mode	79, 199
atrec	200
bianry event file	201
binary terminal mode	80, 201
Bpro	59
change device configuration	203
change dxf files	203
change passwords	204
configure devices	72
copy device records	209
create devices	72
customzing	76
data captures	82
delete devices	76, 96, 212
device drivers	82

device record	72
dispatch table	85
display dialog	214
DPU2000R	55
duplicate device	73, 218
dxf animated cad	219
edit device	220
Ethernet Star	42
event file	81
export	75, 223
flip marks	225
ftp44, 61, 64, 67	
ftp connection	226
function keys	77, 227
GE D60	30
GE DLP	16
Hathaway DFR	53
import	75, 231
Ip 47, 49	
Lpro	65
mark/unmark devices	76
MDAR	8
Mehta Transcan	14
Modem Multidrop	14
multiport interrogation display	82, 240
navigating	75
new configuration	241
new device	241
Optimho	36
Orion	48
Orion Quit	57
paste device records	243
query	77
reset modems	6
resize columns	250
RS232 Star	6
save and archive dialog	73, 252
script language	82
SEL 187	51
SEL 2030	22
SEL 2030 Quit	40
SEL 287	28
SEL 311	10
SEL 321	50
SEL 351	6
SEL 352	38
SEL 387	18
SEL 421	45
SEL 501	26
SEL 551	34
SEL 587	20
SEL PRTU	24
SEL PRTU Quit	32
sort	213
sort devices	76, 264
sort field	264
sort marked rows	264
start polling	6
stop modems	68
system services	68
tcp/ip connection	267
test devices	268

totfiles status field	269
Tpro	62
un/mark	271
unmark marks	272
device number	69, 72, 88
device summary	119
devices	
configure	72
create	72
delete	76, 96
duplicate	73
hang-up	6
sort	76
dev-name	88
digital mark/unmark all	214
digital state	274
digital view	143, 161
changes	162
cursor state	162
Fst	162
fst-change	162
Lst	162
lst-change	162
title	162
dirmesssage -Appendix A	8
dispatch	
command line	90
customize	95
date of fault	88
db-recs	89
delete devices	96
device number	88
dev-name	88
district	88
event files	89
events	93
line-len	88
location	88
mark/unmark devices	96
master station.txt	87
meter	93
open	89
poll	91, 93
poll completed at	89
poll devices	89
poll requested at	89
query	95
refresh	94
save devices	96
sort	96
sort devices	96
station	88
status	89, 92
time of fault	89
type	88
dispatch poll	91, 93
dispatch table	85, 87
display dialog	214
display settings	162
district	88
disturbance report	136, 215
buttons	141

destination file	138
destination folder	138
filters	138
source folders	138
table	140
dlp1/dlp3	215
dlp-events -Appendix A	16
dnp-analog -Appendix A	13
DPR2000R	55
dpu-modbus -Appendix A	16
drawing properties	216
driver	
audio wave	200
driver column	216
driver configuration	217
driver data type	149, 162, 217
driver name -Appendix A	3
driver number -Appendix A	3
driver type -Appendix A	4
drivers	
abb wye/delta load profile	111
ametec	111
ascii	110, 198
auto detect	111, 200
bpro	111
comma delimited table	207
comtrade	110, 208
configuration	217
DFR	110
dfr I II IIB	196, 214, 232
dlp	110
dlp1/dlp3	215
double quotes/comma delimited table	216
dx	110, 220
emax long term	111
faxtrax	110
faxtrax & director	224
fluke	111
fpro	111
ge sr745	110
hexadecimal	110, 229
lpro	111
mdar/rel	110
mdar/rel 301/302	237
pm295	110
replay plus	111
RFL	111, 251
rochester	110
sdc log	111
sel	110
sel load profile	256
sel lpd	110, 111
sel meter	110
sel relay	256
tab delimited	266
table	110
tesla 110, 111, 202, 222, 225, 233, 249, 264, 267, 269	
tis 268	
TIS	111
tpro	111
tpu/dpu/gpu	110

tpu/dup/gpu	270
transcan	270
transcan	110
dunrename -Appendix A	7
duplicate cycles	173, 217
duplicate device	73, 218
dvreport.dtb	202
dxf animated cad	219
animated display	83, 197
control points	83
zooming	84
attab	200
background color	201
change dxf files	203
drawing properties	216
dxf control	219
max x pixels	236
max y pixels	236
print	246
set drawing properties	258
size to original	262
size to window	263
tottabs	269
zoom in	275
zoom out	275
zoom x, y resolution constant	276
zooming	275
dxf control	219
dxf display	220

E

edit dau-def	220
edit device	220
email active file	151, 222
email files	105, 222
emaulators	
ascii	79
binary	80
function keys	77
equal to	222
escape code commands-Appendix A	2
escseq command	69, 72
Ethernet star	42
event files	89
expand time	223
expert system model	115
export	75, 223

F

fault bar	152, 223
fault date column	224
fault information	273
fault location	185, 261
fault reference time bar	163, 224
fault time	273
fault time column	224
faxtrax & director	224
file association	109
abb load profile	109
abb tpu/dpu/gpu	109
access files	110

ametec files	110
application files	110
applications	109
ascii	110
bpro files	110
comtrade	109
DFR	109
directories	109
dlp	109
dxf	110
emax long term files	110
excl documents	110
faxtrax/director	109
fpro files	110
ge sr745	109
image files	110
lpro files	110
mdar/rel	109
nxtphase files	110
pdf files	110
power point presentations	110
replay plus files	110
rochester TR16*	109
sdg log files	110
sel	109
sel lpd	109
tesla files	110
tesla*	109
tis files	110
tpro files	110
transcan	109
web pages	110
word documents	110
zip files	110
file locations	1
file manager	97
append log files	131, 197
append waveform files	198
ascii driver	198
ascii editor	120, 198
at file	200
audio wave driver	200
auto detect driver	200
cad-dxf viewer	131
calibration report	129, 202
change path	101, 203
combine log files	131, 206
comname properties	99, 207
comname(s) rename	98, 108, 207
company column	208
compress comtrade files	208
compression	107
comtrade driver	208
copy files	103, 104, 209
create directory	210
cumulative values	118
customizing	106
cut files	104
cut/copy/paste files	209
data display	108
data filters	118
database viewer	133

dau-def editor	112
delete files	212
device column	213
device configuration	111
device summary	119
dfr I II IIB & 2000 driver	196, 214, 232
disturbance report	136, 215
dlp1/dlp3 driver	215
driver column	216
driver configuration	217
drivers	
abb wye/delta load profile	111
ametec	111
ascii	110
auto detect	111
bpro	111
comtrade	110
DFR	110
dlp	110
dxf	110
emax long term	111
faxtrax	110
fluke	111
fpro	111
ge sr745	110
hexadecimal	110
lpro	111
mdar/rel	110
pm295	110
replay plus	111
RFL	111
rochester	110
sdc log	111
sel	110
sel lpd	110, 111
sel meter	110
table	110
tesla	110, 111
TIS	111
tpro	111
tpu/dpu/gpu	110
transcan	110
dxf driver	220
edit dau-def	220
email files	105, 222
fault date column	224
fault time column	224
faxtrax & director driver	224
file association	109
file name column	224
folder tree	101, 225
free status field	226
f-type column	223
group marked rows	227
hexadecimal driver	229
hexadecimal editor	121, 229
IEEE long file naming format	71, 98
imbalance	117
inefficiency	117
load analysis	114
mark all	234
mark/unmark files	103

mark/unmark rows	235
mdar/rel 301/302 driver	237
merge waveform files	126, 238
move files	103, 239, 245
mrksize status field	240
navigating	101
open all marked files	124
open all marked waveform files	243
open selected file	124
optional columns	243
overload	117
paste files	104
print	106, 246
query	135
ratings	115
refresh directory	102, 248
refresh folders	102
rename file	249
reports	
append log files	131
calibration	129, 202
combine log files	131
sequence of events	129
sequence of events summary	130
RFL9300 driver	251
run applications	108, 252
save as comtrade	107, 253
save date column	254
save time column	255
sel load profile driver	256
sel relay driver	256
sequence of events	129
sequence of events summary	130
set sort field	259
show/hide channel titles	134, 260
size column	262
size status field	262
soe list	257
soe summary	258
sort files	103
specialized copy/move	104
station summary	119
system summary	119
tab delimited driver	266
tesla driver	202, 222, 225, 233, 249, 264, 267, 269
tesla files	113
tis driver	268
totfiles status field	269
totmarks status field	269
tpu/dup/gpu driver	270
transcan driver	270
type column	271
update directory	102
waveform file	273
waveform summary	122, 273
zip files	105, 275
file name column	224
file size	273
filename	273
filters	162
flip marks	225
flow control	70, 72

folder tree	101, 225
formats	
abb load profile	108
abb relays	108
ametek	109
bpro	109
comtrade	108
dlp1&3	108
dranetz	108
emax	108
emax long term	109
fluke	109
fpro	109
hathaway	108
lpro	109
mehta	108
nxtphase	109
replay plus	109
RFL	108
rochester	108
satec	108
sdc log	109
sel lpd	109
sel short/long	108
sr489	109
sr745	109
tesla	109
TIS	109
tpro	109
free status field	226
freq status field	226
Fst	226, 274
fst-change	226, 274
ftp44, 61, 64, 67	
ftp connection	226
ftp-events	17
ftp-send	17
f-type column	223
function keys	227
escape sequences	78
name	78
transmit	78
function keys-Appendix B	
data display	4
device manager	1
dxf display	2
file table	3
query fields	2

G

GE D60	30
GE DLP	16
ge-d60	17
group marked analog channels	227
group marked rows	227

H

hang-up	6
hardware requirements	1
harmonics	
histogram	145, 230

table	145, 228
vectors	228
harmonics table	144
Hathaway DFR	53
hath-dfr -Appendix A	13
header directory	111
help	195, 228
hexadecimal editor	121, 229
hide marked channels	229
histogram	230
horizontal bars	152, 230
hp-dif	230
hpeak-dn	231, 273
hpeak-up	231, 273

I

IEEE long file name	73, 231
IEEE long file naming format	71, 98
IEEE long filename	
company	98
company	71
date	71, 98
device	71, 98
fault type	71, 98
file tag	71, 98
line len	71, 98
location	71, 98
substation	71, 98
tcode	71, 98
time	98
time	71
imbalance	117
import	75, 231
increase amplitude	232
inefficiency	117
insert channels	250
installation	1
instpeak column	232
instval column	232
inter char delay	71, 73
lp 47, 49	

L

latitude field	233
less than	233
line len	88
load analysis	114
adaptive learning model	116
cumulative values	118
data filters	118
device summary	119
expert system model	115
imblance	117
inefficiency	117
overload	117
process & create summaries	118
process & save as comtrade	118
process & update	118
ratings	115
station summary	119
system summary	119

local echo	70, 73
location	88
log files	
append	197
combine	206
logcommand -Appendix A	5
logdelay -Appendix A	5
logfile -Appendix A	5
logheader -Appendix A	6
logperiod -Appendix A	5
logrename -Appendix A	5
long file name	
company field	208
device field	214
latitude field	233
start date field	265
start time field	265
substation field	265
system files	266
tcode field	267
long file naming format	71, 98
long filename	
company	98
company	71
company column	208
date	71, 98
device	71, 98
device column	213
fault type	71, 98
file tag	71, 98
line eln	71, 98
location	71, 98
optional columns	243
substation	71, 98
tcode	71, 98
time	71, 98
lp-dif	233
lpeak-dn	233, 273
lpeak-up	233, 273
Lpro	65
Lst	234, 274
lst-change	234, 274

M

mark all rows	234
mark change in sign	176, 235
mark peaks	175, 235
mark raw samples	174, 236
mark/unmark	
channels	156
files	103
mark/unmark all channels	235
mark/unmark devices	76, 96
mark/unmark rows	235
master station.txt	87
max x pixels	236
max y pixels	236
maxpeak column	236
maxval column	237
maxwin column	237
MDAR	8

mdar/rel 301/302	237
medium display	237
Mehta Transcan	14
menu buttons-Appendix B	
data display	5
device manager	1
dxf display	3
file table	3
query fields	2
merge open files	
by sample	164
by time	164
manually	164
select frequency	165
merge open files	164
merge open files	238
merge waveform files	126, 238
message path	74
meter information	93
mid	82
minpeak column	238
minval column	239
Modem Multidrop	14
move files	103, 239, 245
move reference bar to data bar	240
move rms bar to reference bar	239
mrksize status field	240
multiport interrogation display	82, 240

N

navigating	
cycle hop	151, 152
data display	151
device manager	75
file manager	101
peak hop	151, 152
new configuration	241
new device	241
new file	242

O

onday -Appendix A	18
ondow -Appendix A	18
onebit	243, 273
open all marked waveform files	243
open all marked waveform files	124
open dispatch table	89
open file	243
open selected file	124
Optimho	36
Orion	48
Orion Quit	57
oscilloscope	
formats	108
records	109, 143
summary	123
overload	117

P

parity	70, 72
--------------	--------

password	74
paste device records	243
paste files	104
paste text	244
path/filename (no ext.)	244
peak hop	151, 152
period	74
periodic load file	143
periodic viewer	147
phasor diagram	144
phasor/circular chart scale multiplier	244
pixsdisp	244, 270
pixsdisp column	245
play channel audio	189
poll completed at	89
poll devices	89
poll requested at	89
polling drivers	1
polling times	1
port number	70, 72
predefined views	157, 256
prefault time	273
primary values	177, 245
print	69, 72
ascii event file	247
binary event file	247
data display	158, 246
dxf animated cad	246
file manager	106, 246
printer setup	246
printer setup	246
process time	273
pU	273

Q

query	
all devices	77, 96
all files	136
criteria	77, 95, 135
device manager	77
dispatch	95
file manager	135
marked devices	77, 96
marked files	136
operators	77, 95, 135
add to (+)	135
equal to (=)	77, 95, 135
greater than (>)	77, 95, 135
less than (<)	77, 95, 135
unmarked devices	77, 96
unmarked files	136
wild cards	77, 95, 135
query all rows	247
query fields	
change query operator	205
clear query criteria	206
equal to	222
less than	233
query all rows	247
query marked rows	247
query unmarked rows	247

query marked rows	247
query unmarked rows	247

R

ratings	115
recorder channels	248
reference bar	152, 248
reference time bar	163, 224
refresh	94
refresh directory	102, 248
refresh folders	102
refval column	249
rel-30x -Appendix A	14
rel-30x-m -Appendix A	15
rename file	249
renfile -Appendix A	7
reopen waveform file	150, 249
reportif -Appendix A	4
reports	
append log files	131, 197
calibration	129, 202
combine log files	131, 206
sequence of events	129
sequence of events summary	130
soe list	257
soe summary	258
reposition channels	158, 259, 260
reset modems	6
resize columns	250
resize sliding window	152, 250
restore channels	156, 250
restore original file	174, 251
RFL	251
rms bar	152, 251
rmsval column	251
roch-dfr	17
RS232 Star	6
rtu-analog -Appendix A	11
rtu-soe -Appendix A	11
rtu-status -Appendix A	12
run applications	108
run dialog	252
runfile -Appendix A	7
rxclear -Appendix A	19
rxend -Appendix A	18
rxplus -Appendix A	18
rxquit -Appendix A	19
rxsave -Appendix A	19
rxstart -Appendix A	18
rxstay -Appendix A	19
rxstrip -Appendix A	20
rxwait -Appendix A	19

S

sample based display	163, 252
save and archive dialog	73, 252
buffer	74
company name	73
message path	74
password	74
period	74

save path	74
station ID	73
station name	73
save as	253
save as comtrade	107
data display	158, 253
file manager	107, 253
path/filename (no ext.)	244
save as text	254
save date column	254
save devices	96
save displayed values	153, 254
arrange analog channels	154
clear values file	155
default format	155
mark & save	154
new format files	156
open format files	156
open values file	154
select analog channels	154
select analog columns	154
setup the values file	154
user defined formats	156
save path	74
save time	273
save time column	255
save user views	255
save view	192
scale channels	157
scaling	209, 212, 223, 232
script commands-Appendix A	2
script language	82
secondary values	177, 256
SEL 187	51
SEL 2030	22
SEL 2030 Quit	40
SEL 287	28
SEL 311	10
SEL 321	50
SEL 351	6
SEL 352	38
SEL 387	18
SEL 421	45
SEL 501	26
SEL 551	34
SEL 587	20
sel load profile driver	256
SEL PRTU	24
SEL PRTU Quit	32
sel relay driver	256
sel-351fm -Appendix A	12
select lines/views	256
select user views	257
select view	192
sel-events -Appendix A	12
sequence of events	129
sequence of events summary	130
set drawing properties	258
set opening frequency	259
set rms	153
set sort field	259
setmessage -Appendix A	7

setport -Appendix A	4
setsysvar -Appendix A	5
show all channels	261
show all digital channels	260
show/hide channel titles	134, 260
single ended fault location	185, 261
size column	262
size status field	262
size to original	262
size to window	263
soe list	257
soe summary	258
software analog channels	263
software digital channels	263
sort	198, 213
sort devices	76, 96, 264
sort field	264
sort files	103
sort marked rows	264
specialized copy/move	104
start date field	265
start polling	6
start time field	265
station	88, 273
station ID	69, 72, 73
station name	69, 72, 73
station summary	119
status	89, 92
stop bits	70, 72
stop modems	68
substation field	265
super impose	163, 265
sync data cursors	266
by time	163
manually	163
reference phase angles	164
sync-arb -Appendix A	13
sync-true -Appendix A	13
system	
activation	3
hardware requirements	1
installation	1
technical support	3
system files	266
system keys-Appendix B	1
data display	4
device manager	1
dxr display	2
file table	3
query fields	2
system services	68
system summary	119

T

tcode field	267
tcp/ip connection	267
technical support	3
tesla	
delete original	114
long name convention	114
tesla driver	202, 222, 225, 233, 249, 264, 267, 269

tesla files	113
test devices	268
thiran filter	190
time based display	163, 268
time code	69, 72
time of fault	89
time scale	
decrease	157
increase	157
tis driver	268
title	69, 72
total harmonics distortion	268
toffiles status field	269
totmarks status field	269
tottabs	269
Tpro	62
tpu/dup/gpu driver	270
trace scale multiplier	270
transcan driver	270
trigger time	271, 274
truerms (samples)	271
truncate cycles	171, 271
txcommand	
dlp-events -Appendix A	16
dnp-analog -Appendix A	13
dpu-modbus -Appendix A	16
ftp-events	17
ftp-send	17
ge-d60	17
hath-dfr -Appendix A	13
rel-30x -Appendix A	14
rel-30x-m -Appendix A	15
roch-dfr	17
rtu-analog -Appendix A	11
rtu-soe -Appendix A	11
rtu-status -Appendix A	12
sel-351fm -Appendix A	12
sel-events -Appendix A	12
sync-arb -Appendix A	13
sync-true -Appendix A	13
txcommand -Appendix A	10
txdelay -Appendix A	17
txdial -Appendix A	10
txend -Appendix A	17
txfile -Appendix A	8
txhangup -Appendix A	10
txlogon -Appendix A	10
txperiod -Appendix A	17
txstart -Appendix A	10
type	88
type column	271

U

un/mark file	271
unmark marked files	272
update directory	102
user views	192

V

valid channels	159
values file	162

view events	93
view marked channels	272
view raw data file	272
virtual channels	
absolute value	181
addition	180
analog	180
and	181
angle	180
constants	180
digital	180
division	180
envelope	180
functions	
- seq	181
+ seq	181
0 seq	181
absolute value	182
addition	181
and	182
division	181
envelope	181
half cycle envelope	181
harmonics	181
multiplication	181
OR	182
over-trigger	182
subtraction	181
under-trigger	182
half cycle envelope	180
harmonics	181
multiplication	180
new	184
open	184
OR	181
over-trigger	180
prefix	181
SAC	181
save	184
save as	184
SDC	181
subtraction	180
terminator	181
under-trigger	180
unit	181

W

waveform file	273
waveform files	
append	198
waveform summary	273
changes	123, 274
description	123, 273
digital state	274
end date & time	122, 273
fault information	273
dlp	123
sel	123
transcan	123
fault time	122
file duration	123, 273

file manager	122
file size	122, 273
filename	122, 273
Fst	123, 226, 274
fst-change	123, 226, 274
hp-dif	230
hpeak-dn	231, 273
hpeak-up	231, 273
line frequency	123, 273
lp-dif	233
lpeak-dn	123, 233, 273
lpeak-up	233, 273
Lst	123, 234, 274
lst-change	123, 234, 274
onebit	123, 243, 273
prefault time	122, 273
process time	122, 273
PU	123, 273
sampling frequency	123, 273

save time	122, 273
start date & time	122, 273
state	123
station	122, 273
trigger time	123, 271, 274
wild cards	77, 95, 135
window properties	162
window properties	274

Z

zip files	105, 275
zoom	
dxf animated cad	275
zoom channels	157
zoom in	275
zoom out	275
zoom x, y resolution constant	276

Notes

Notes

Notes

Notes
